


FTBFBF-0005
FTBFBF-0006
FTBFBF-0007

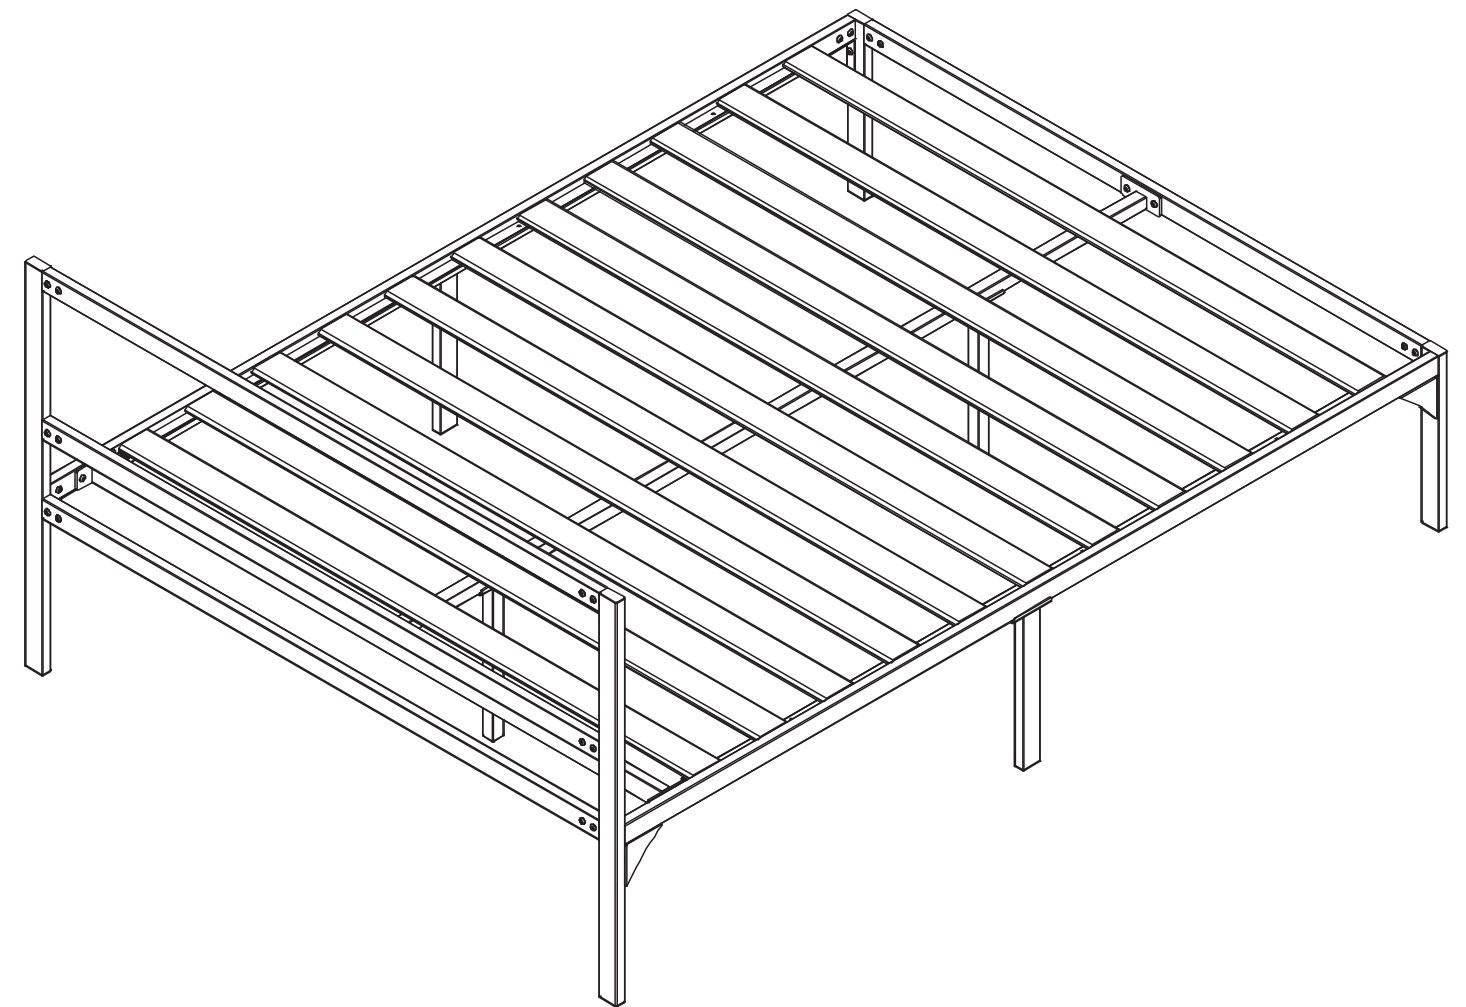

CONTACT US:

If you have any questions about the installation of YITAHOME products, just contact us at +1 (888) 717-8084 from Mon-Fri 8:00 AM-4:30 PM PST / Sat. 8:00 AM-12:00 PM PST or e-mail us at after-sale.cs@hotmail.com

Alternative method to contact us (amazon.com orders only)

1. Log into your Amazon account
2. Go to "Your Orders" and find the purchase
3. Click on "Contact Seller"


**METAL BED FRAME WITH HEADBOARD AND
WOODEN SLATS (FULL/QUEEN/KING)**



- ⚠
1. Two or more people are required for the assembly.





2. To avoid squeaking, fix the bolts tight until they can no longer turn.




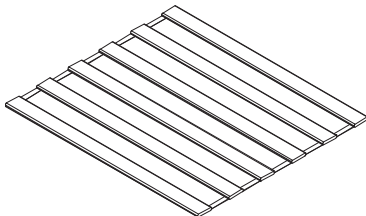
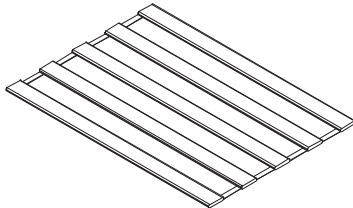

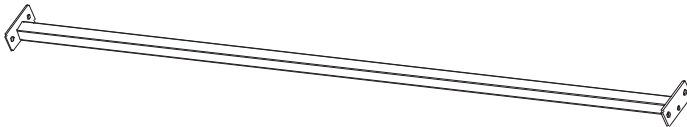
An electric drill is recommended for the assembly.




Tools Required For Assembly




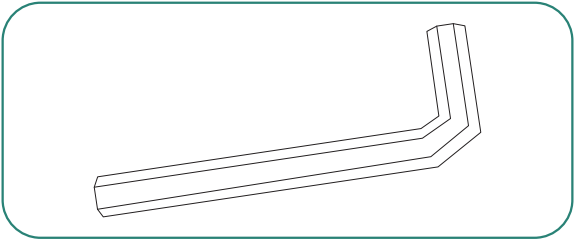

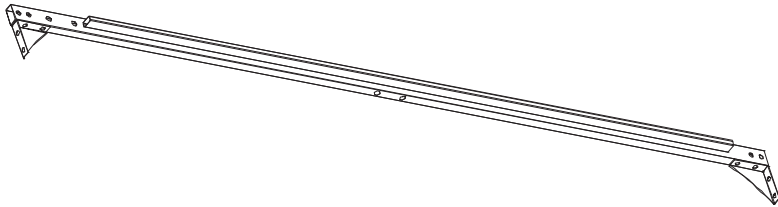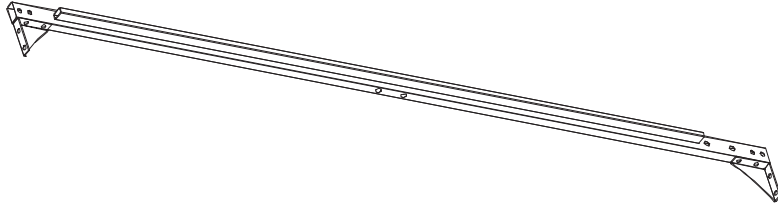
| Item no. | Reference Image | Qty. |
|----------|---|------|
| A |  | X 1 |
| A1 |  | X 1 |


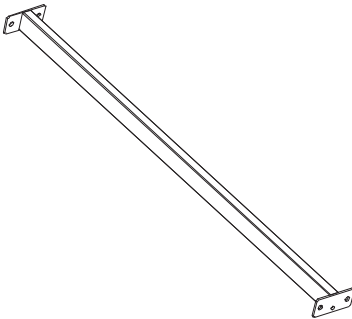
| Item no. | Reference Image | Qty. | Item no. | Reference Image | Qty. |
|----------|---|------|----------|---|------|
| B |  | X 1 | C |  | X 2 |
| B1 |  | X 1 | D |  | X 1 |

| Item no. | Reference Image | Qty. |
|----------|---|------|
| E |  | X 3 |
| F |  | X 1 |
| G |  | X 48 |
| H |  | X 1 |
| I |  | X 1 |
| J |  | X 1 |
| K |  | X 1 |

| Item no. | Reference Image | Qty. | Item no. | Reference Image | Qty. | Item no. | Reference Image | Qty. |
|----------|---|------|----------|---|------|----------|---|------|
| L |  | X 2 | M |  | X 1 | N |  | X 1 |

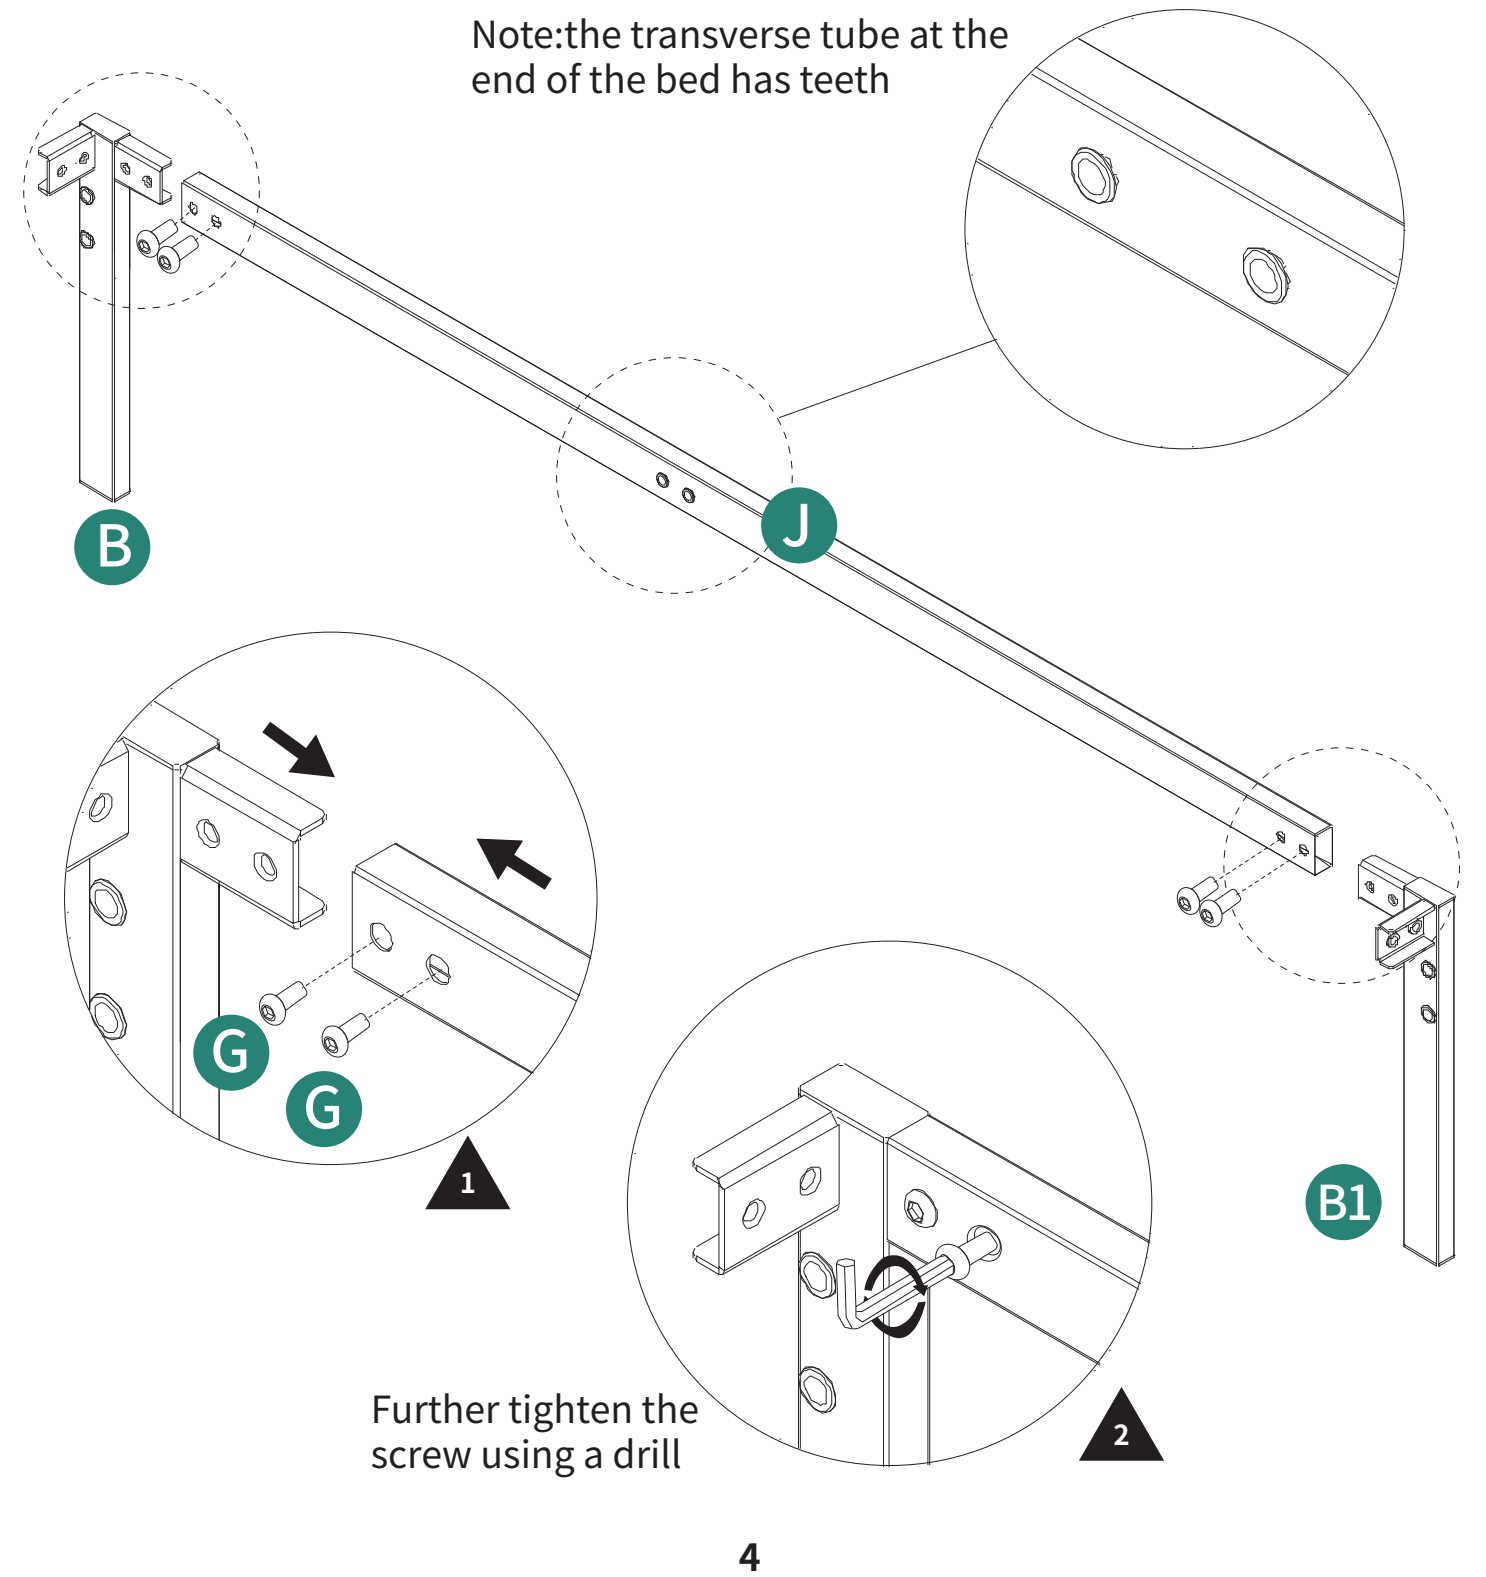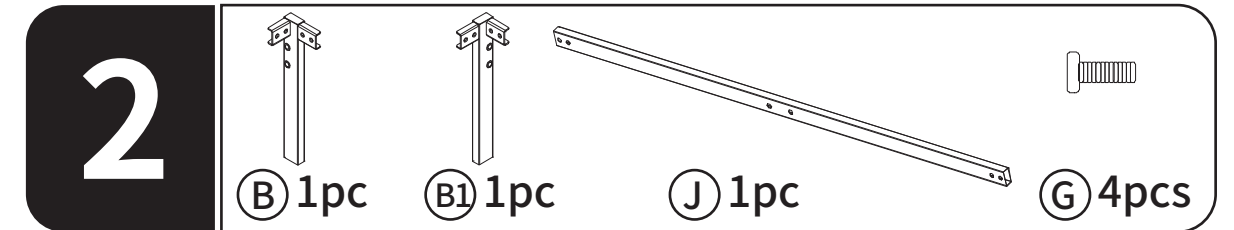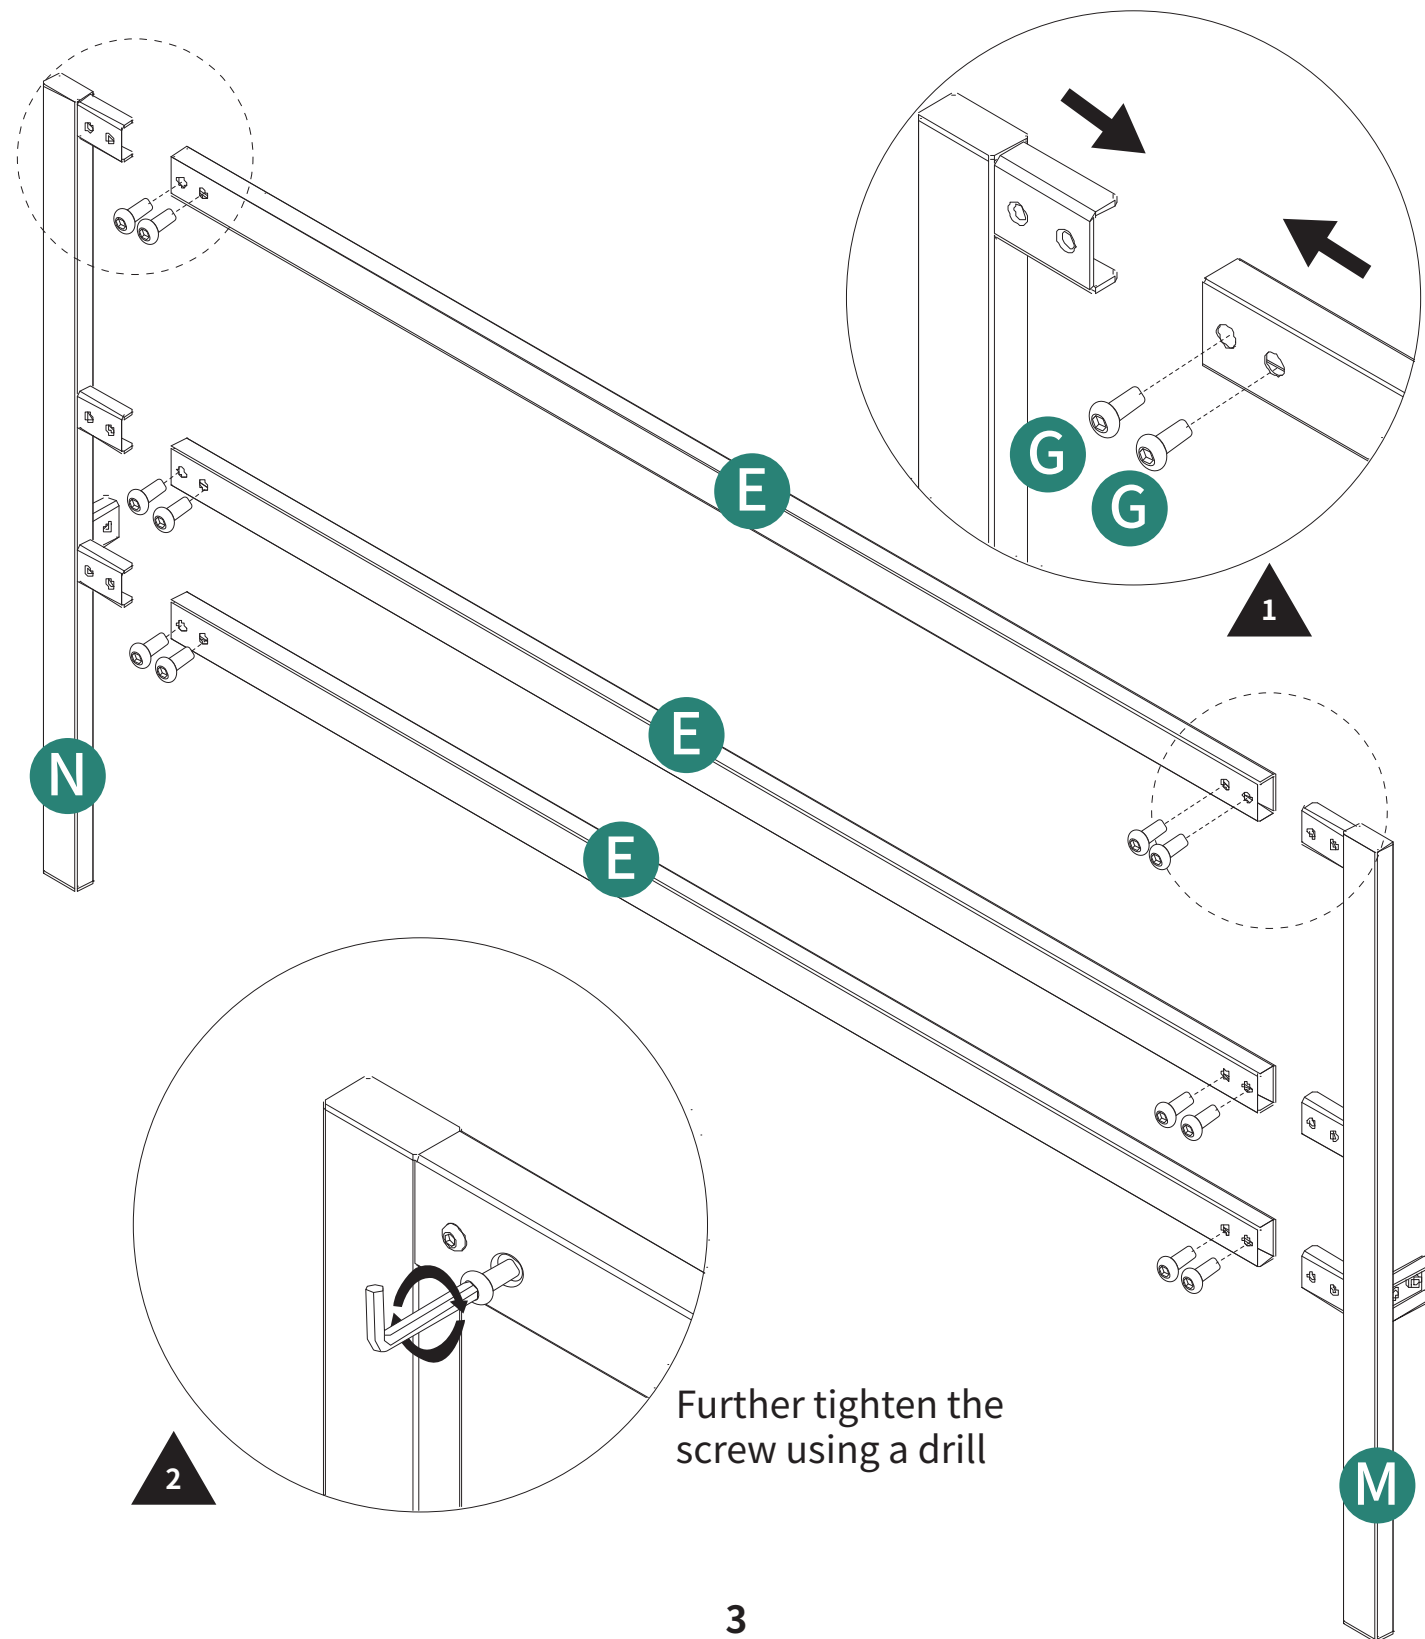
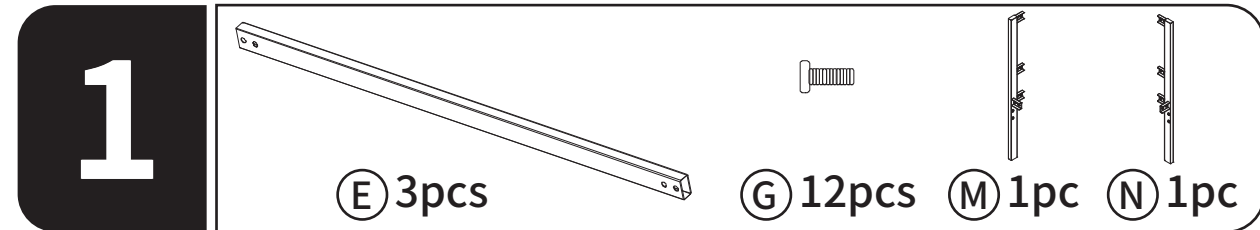


3

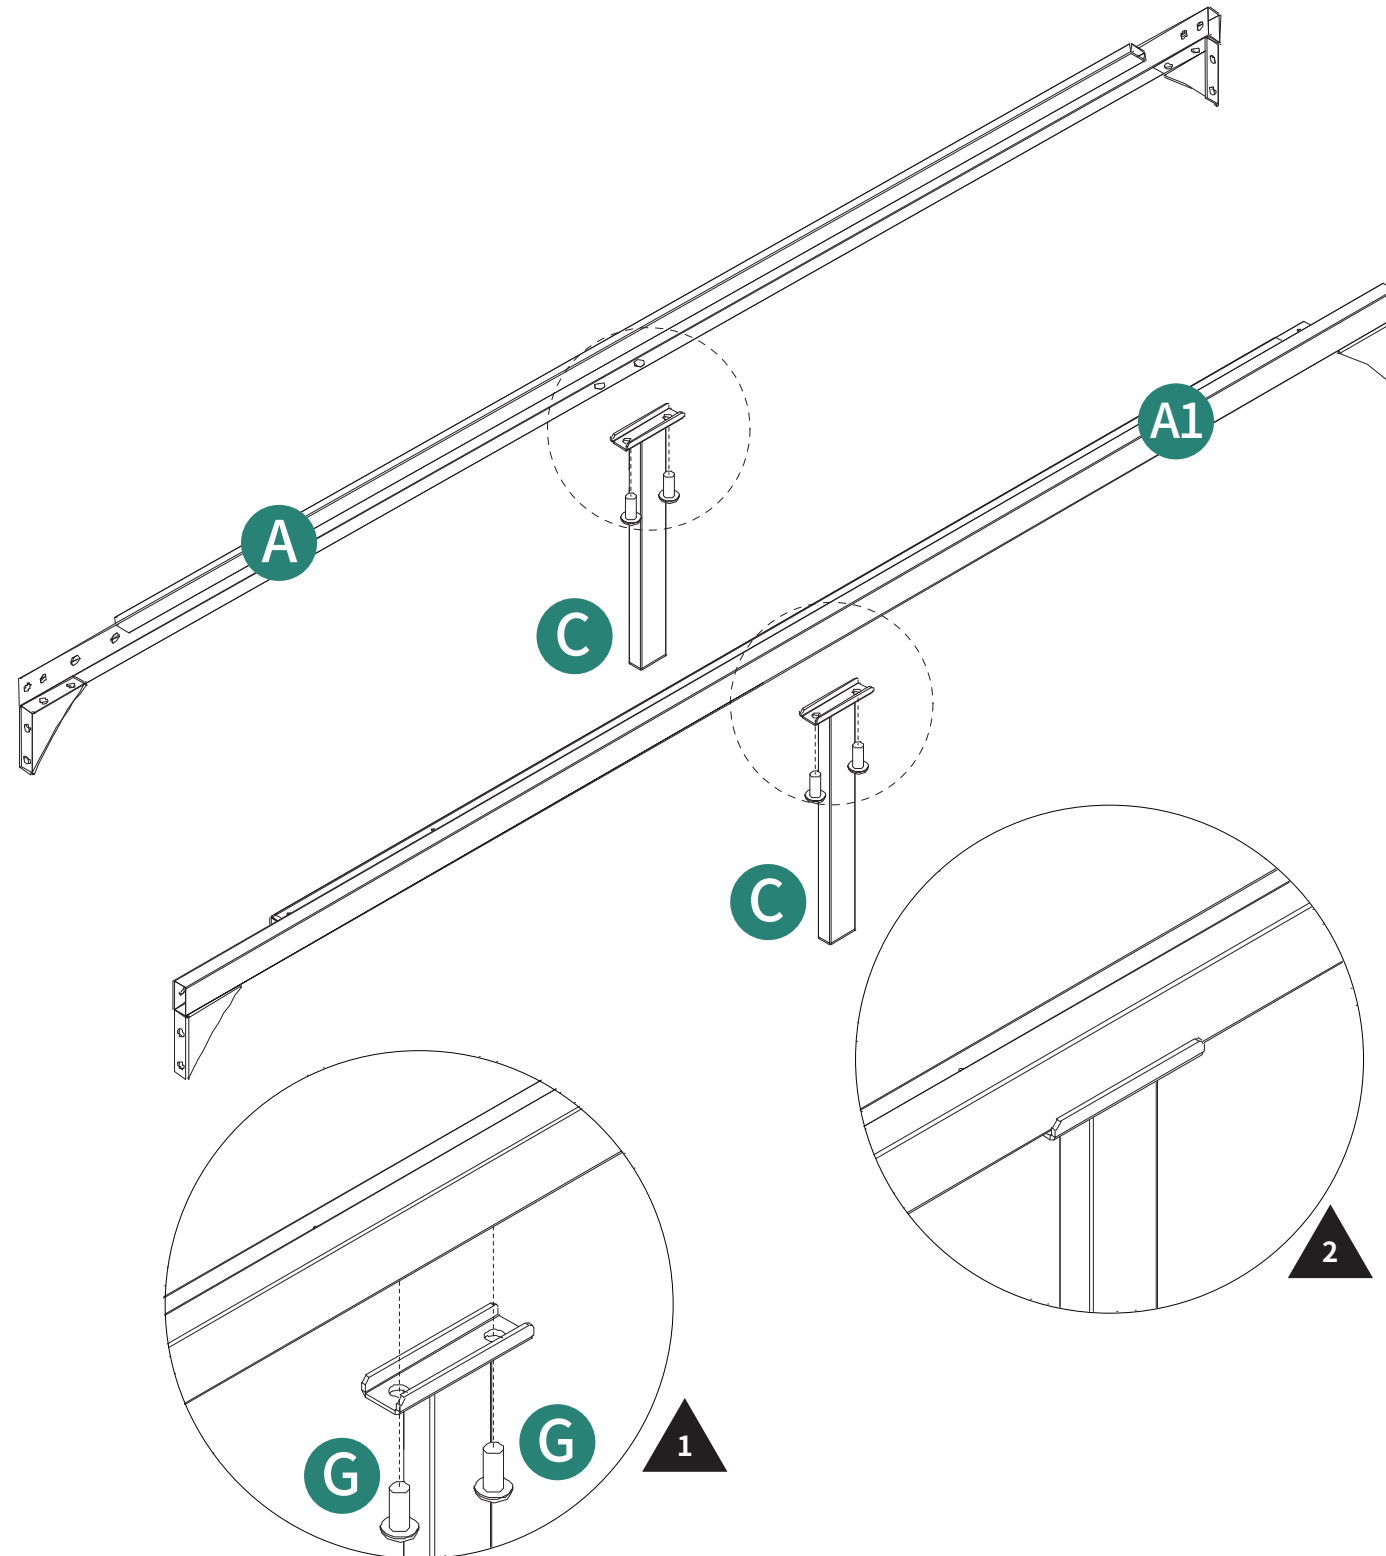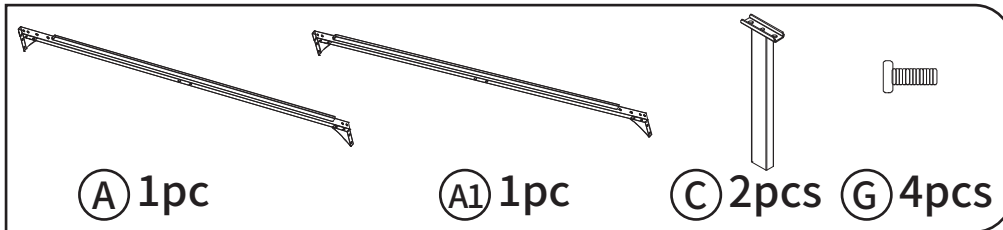


5

4

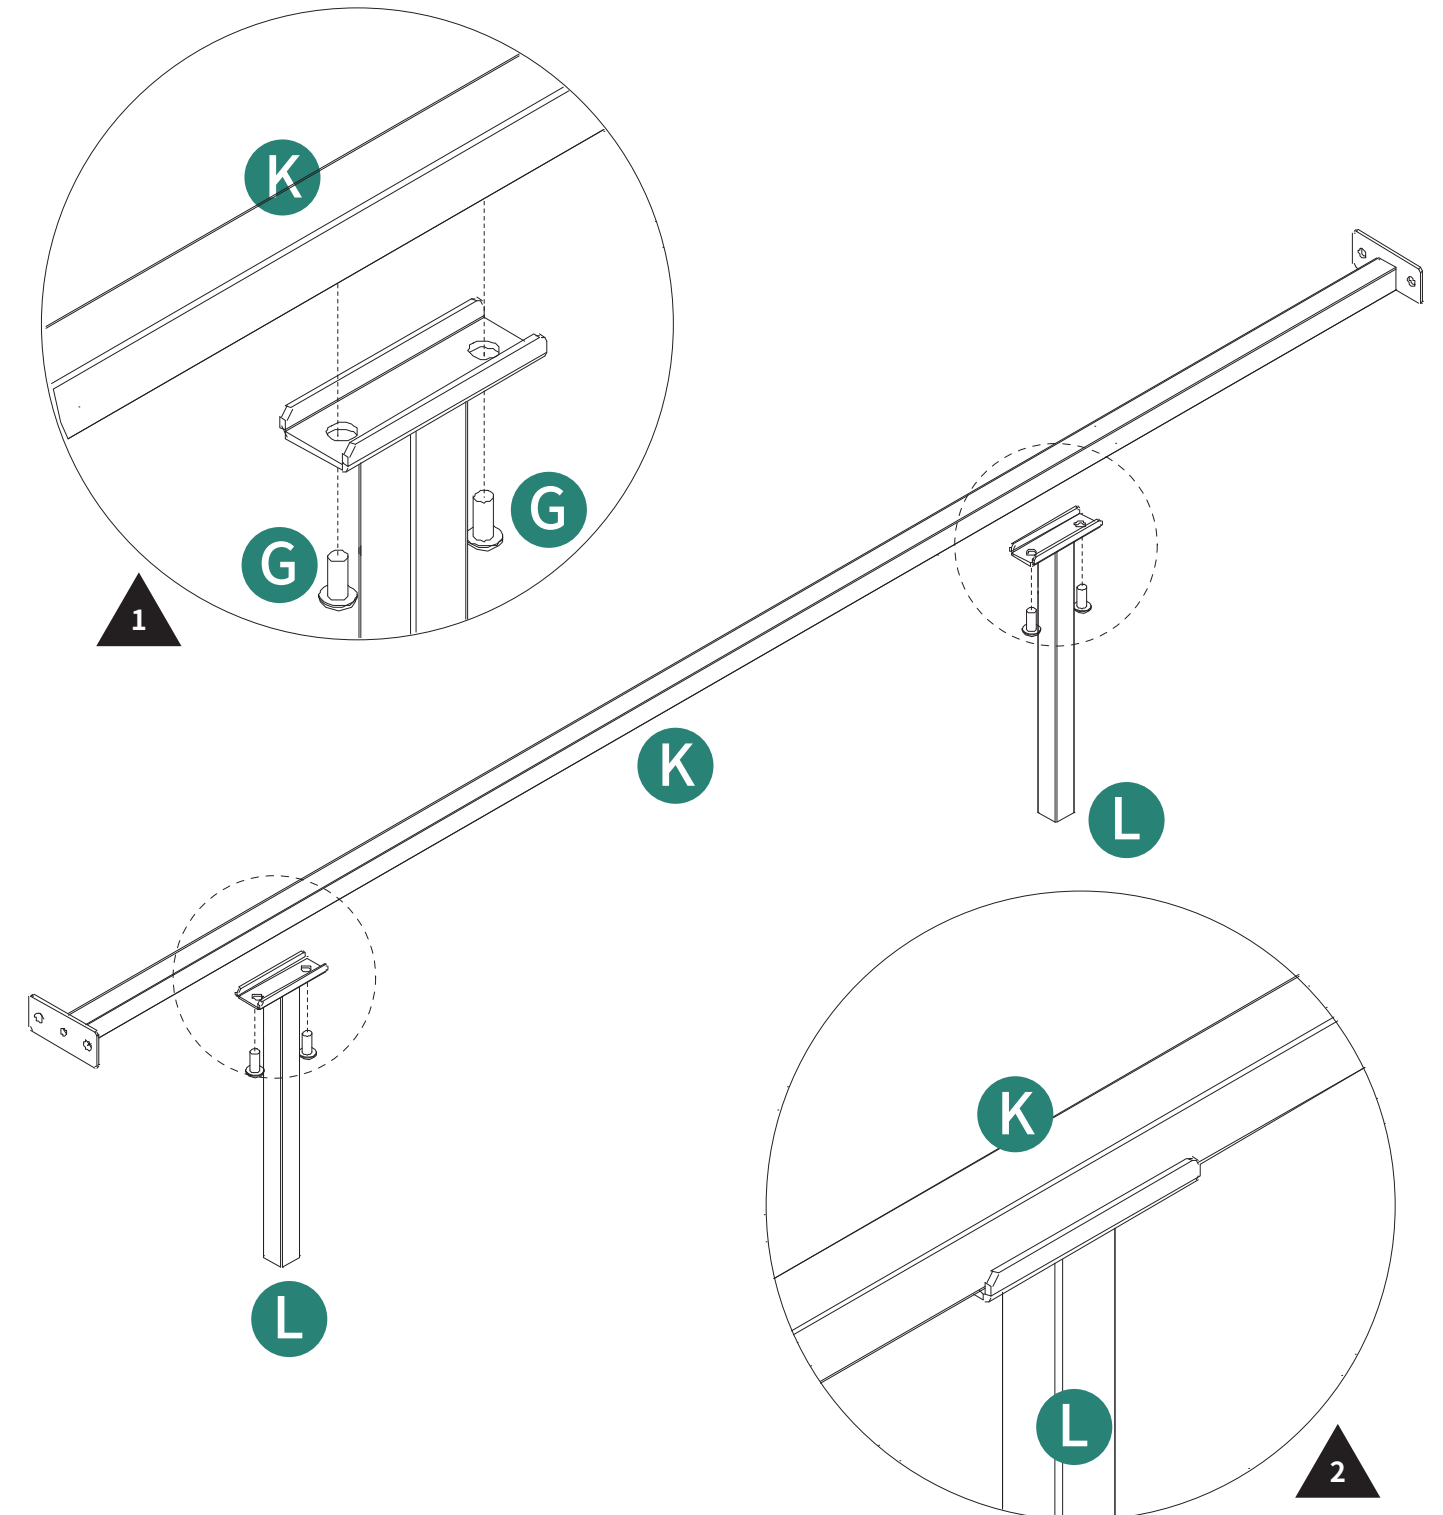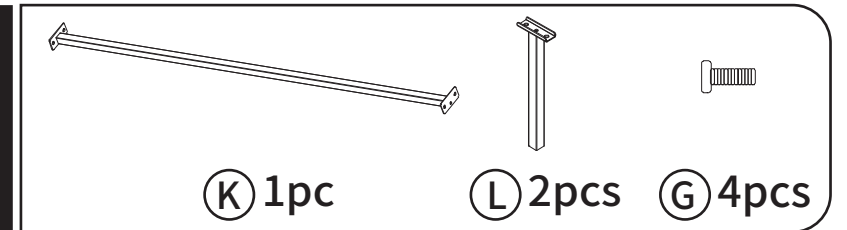


6

5

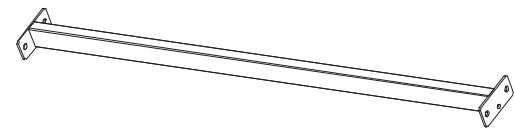

Ⓓ 1pc

Ⓔ 20pcs


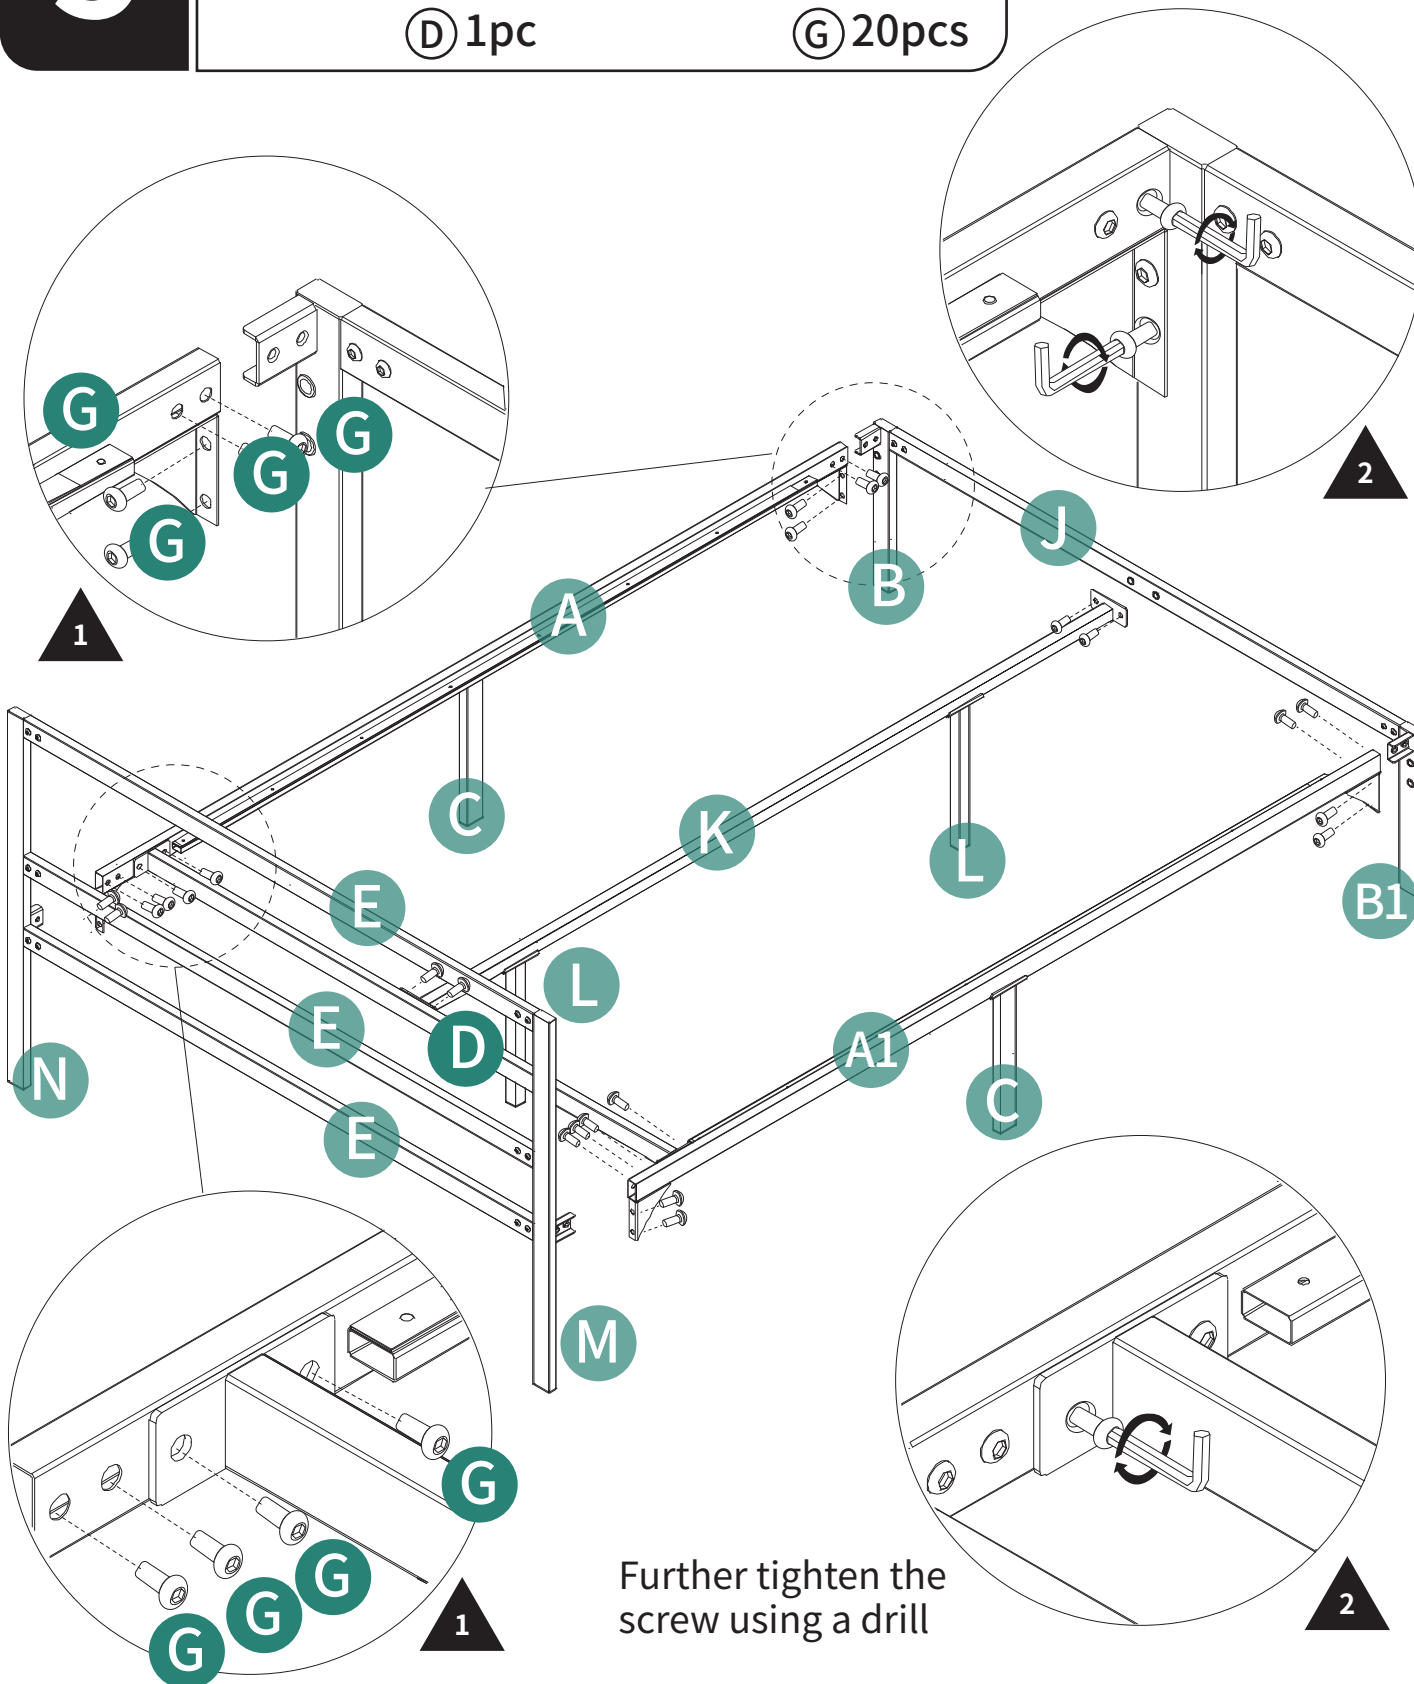


Further tighten the screw using a drill


6



Ⓔ 4pcs

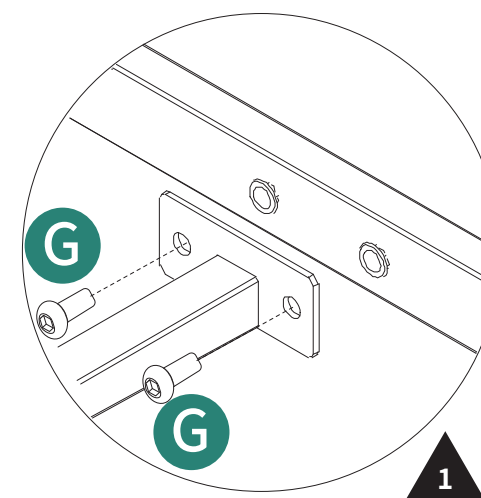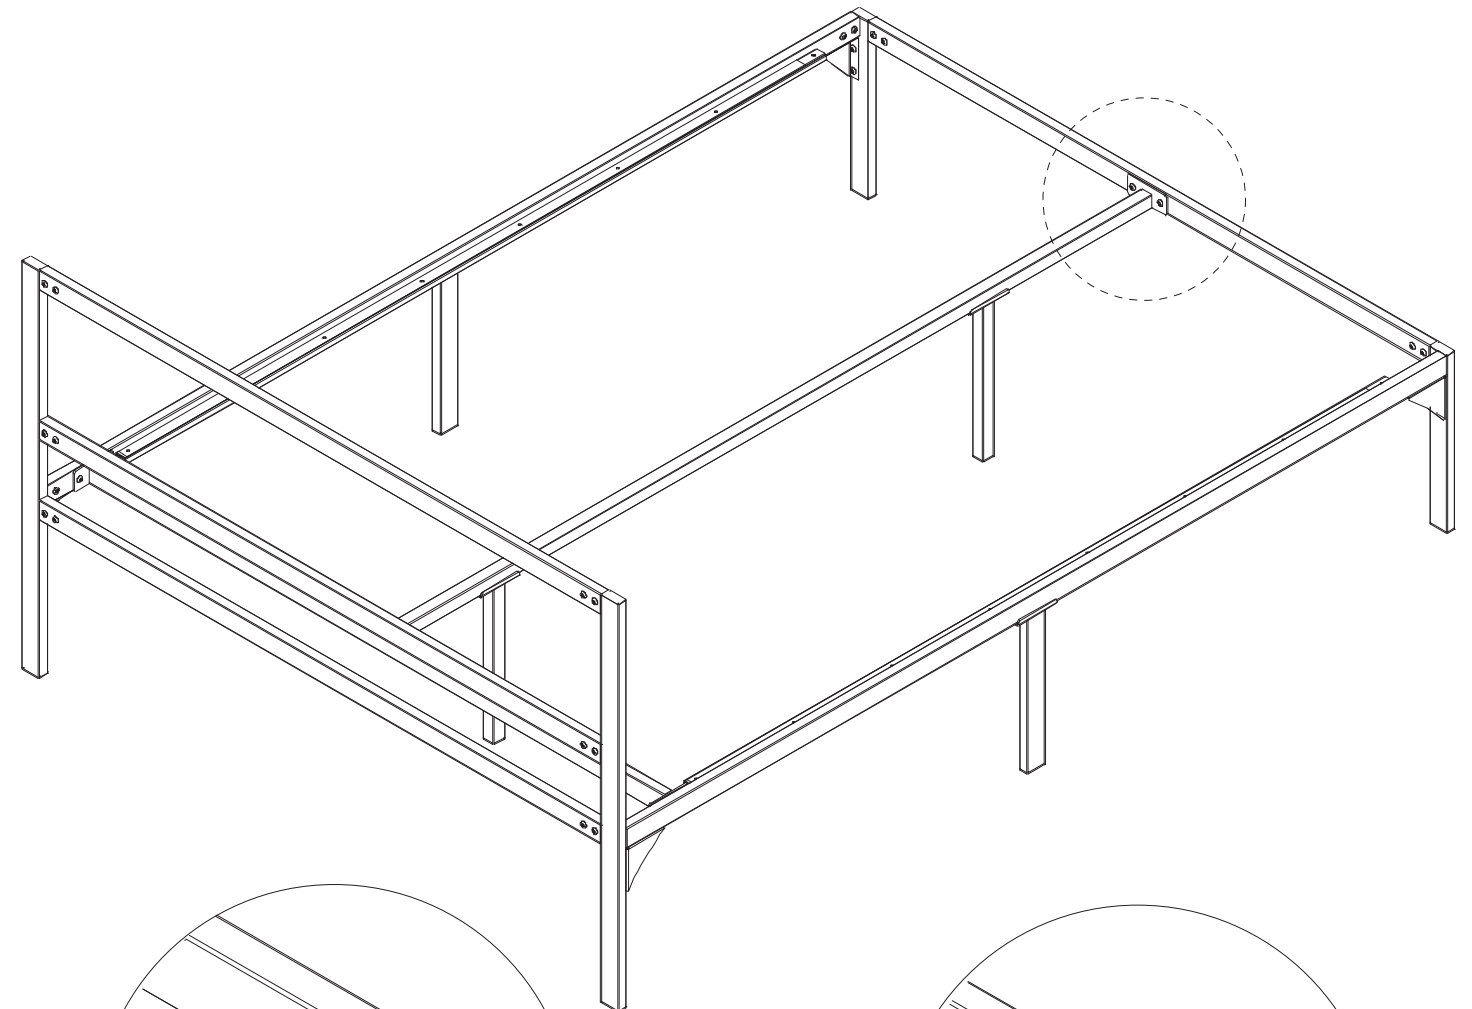



1

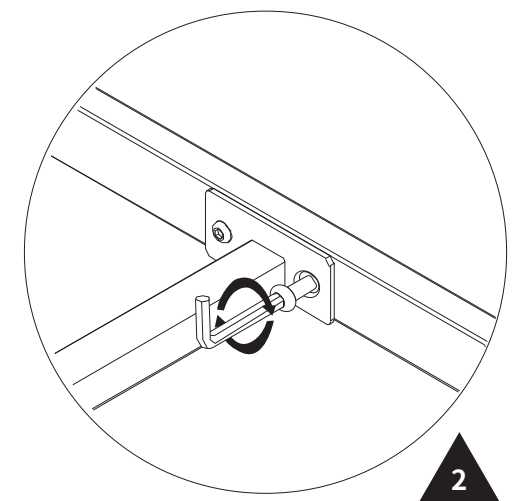

2


Further tighten the screw using a drill

7

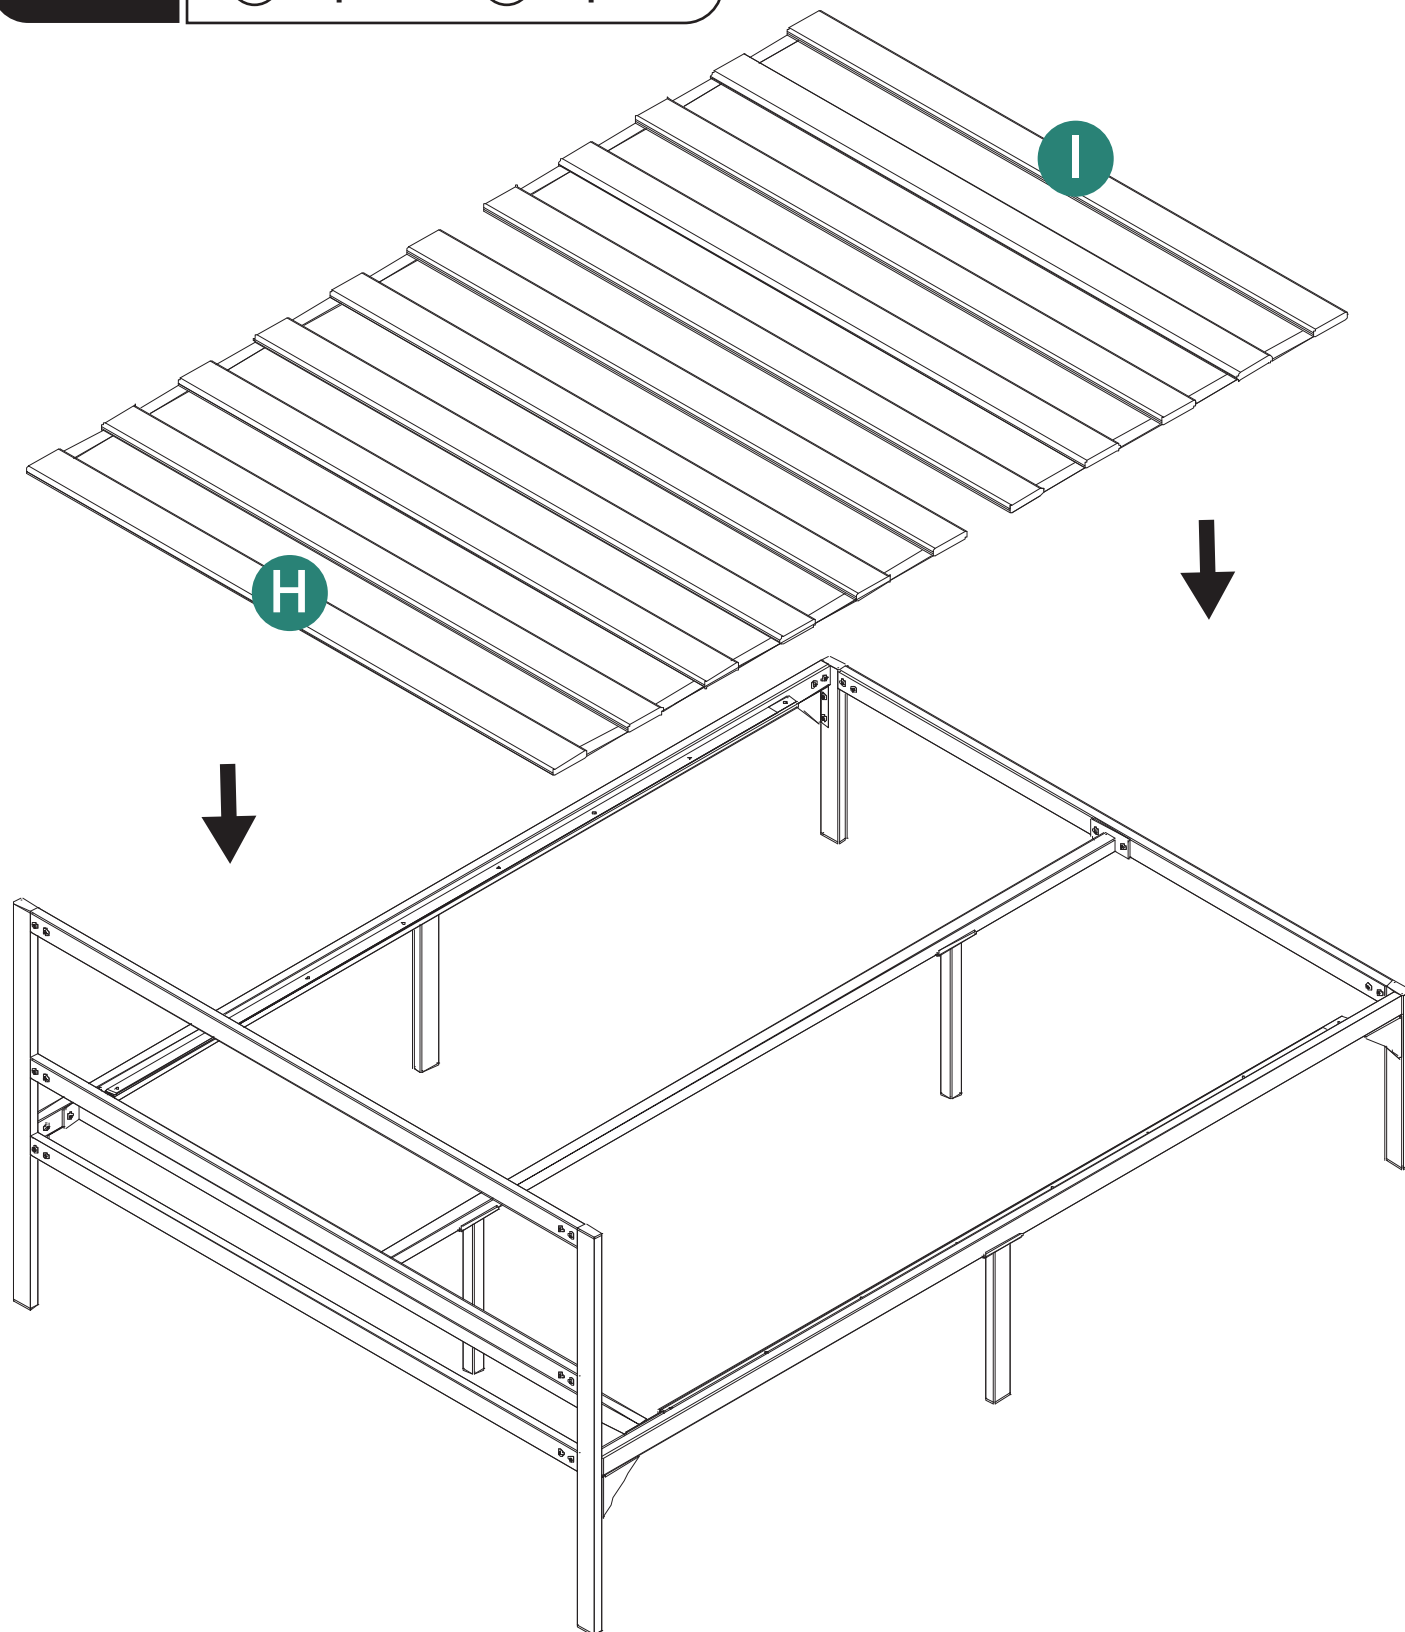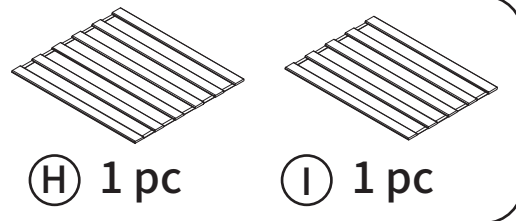

9

8

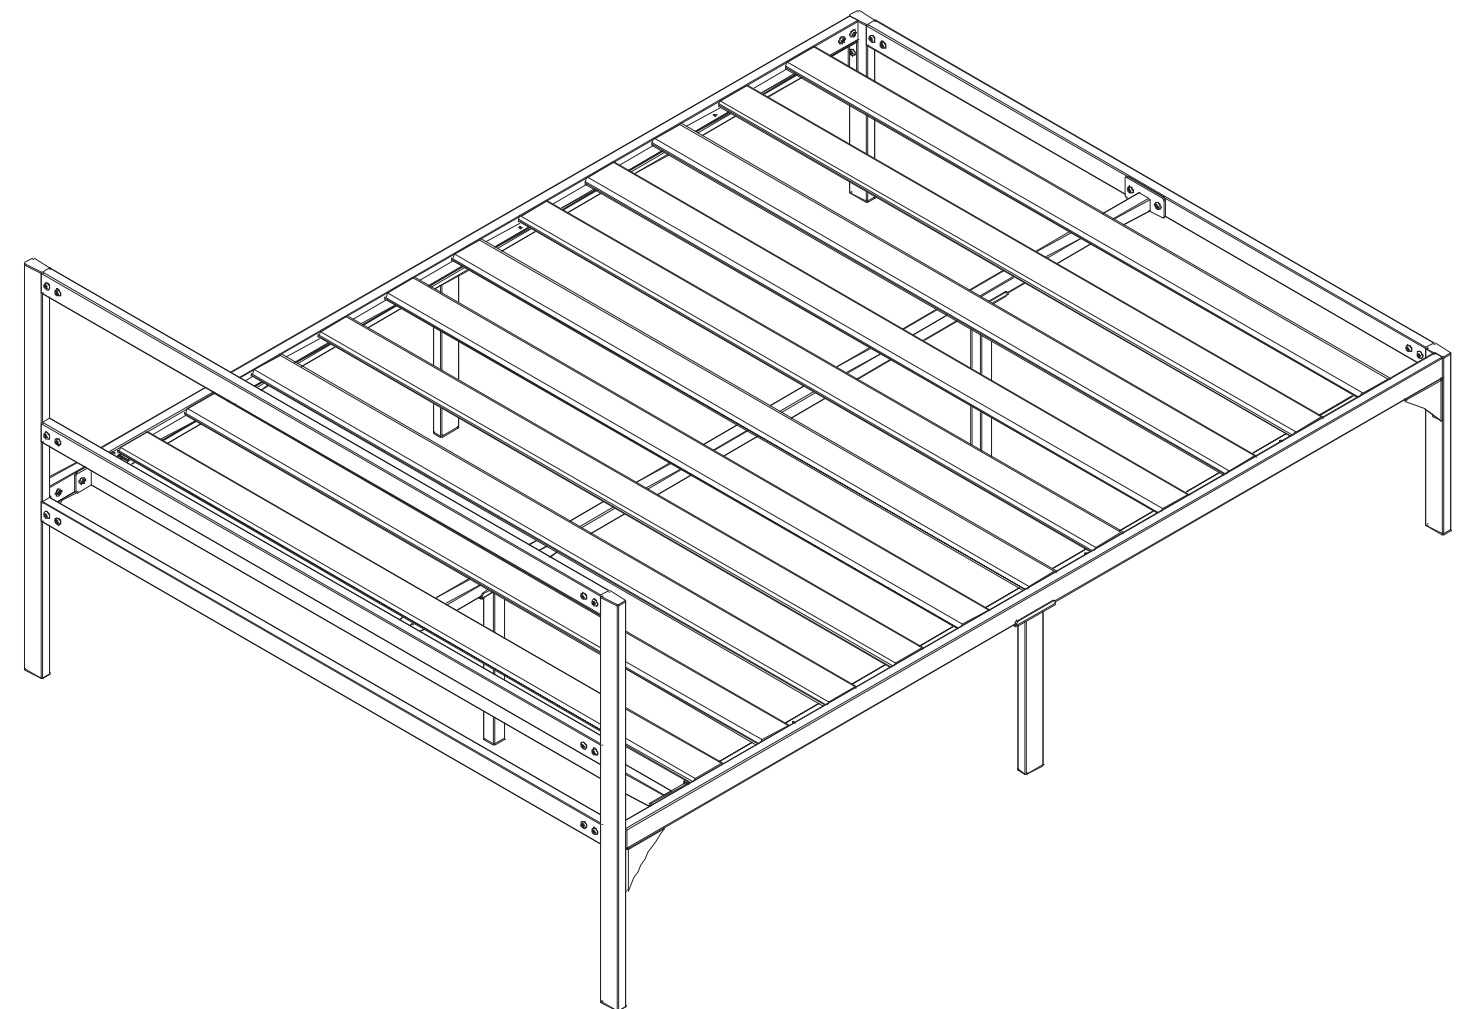

Complete Installation

10