


FTLFCT-0005  
FTLFCT-0006

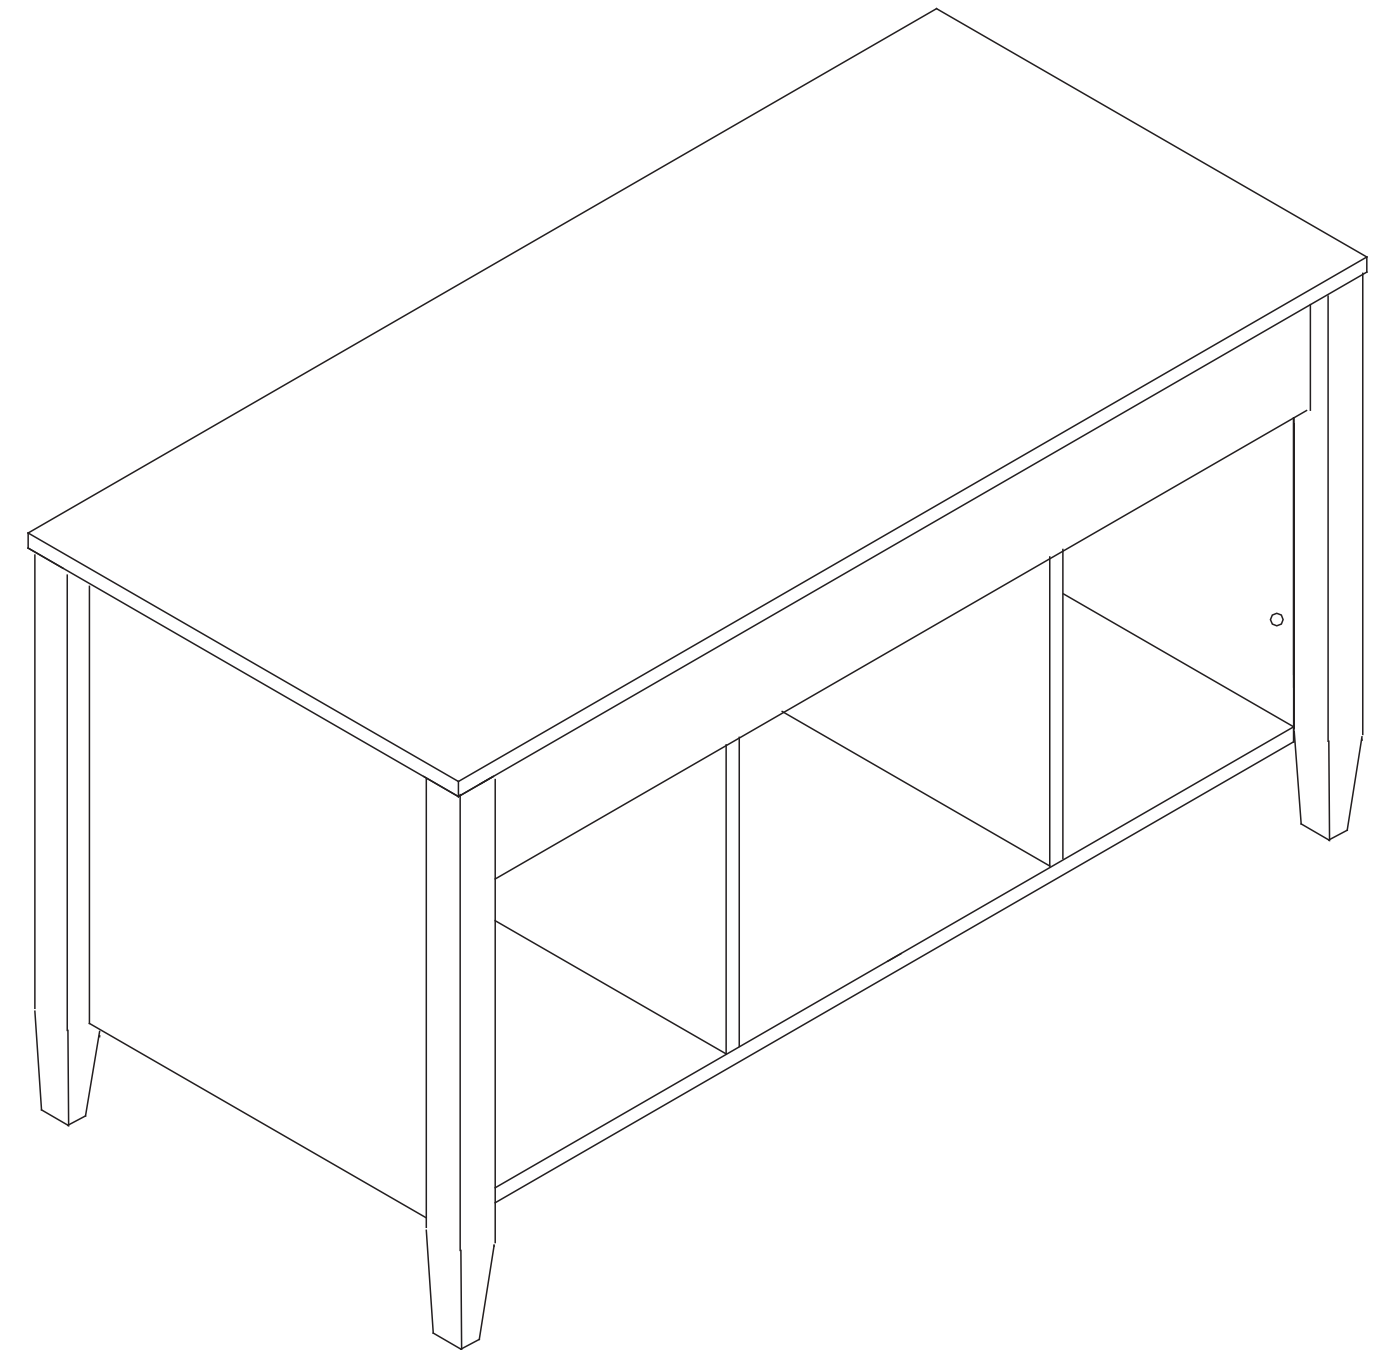

**COFFEE TABLE**











### CONTACT US:





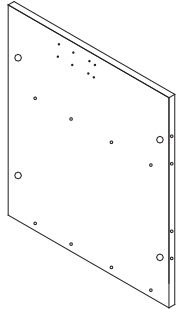
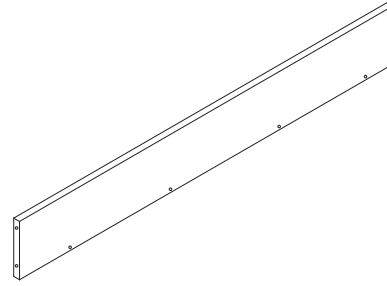
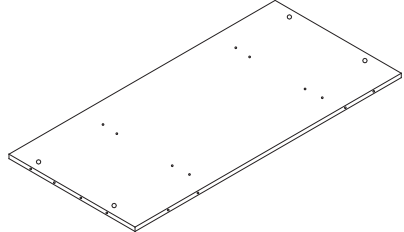
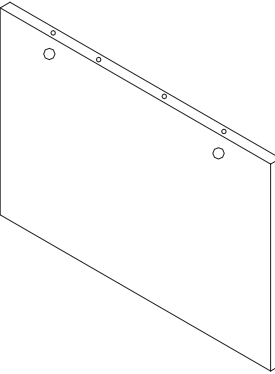

If you have any questions about the installation of YITAHOME products, just contact us at +1 (888) 717-8084 from Mon-Fri 8:00 AM-4:30 PM PST / Sat. 8:00 AM-12:00 PM PST or e-mail us at [after-sale.cs@hotmail.com](mailto:after-sale.cs@hotmail.com)

Alternative method to contact us (amazon.com orders only)

1. Log into your Amazon account
2. Go to "Your Orders" and find the purchase
3. Click on "Contact Seller"


- ⚠ 1. Gather and organize all required parts prior to assembly.  
2. Assemble on a flat, clean and soft surface.  
3. Two or more people are needed for the assembly.

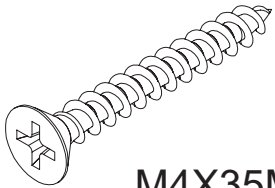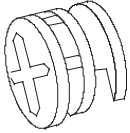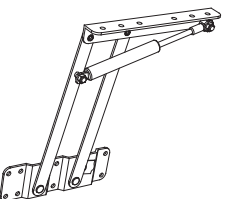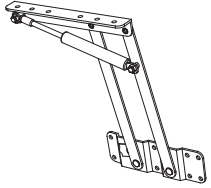Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A	 M4X35MM	X4	F	 Bumper Pad	X6
B		X32	G		X1
C		X32	H		X1
D		X28	I		X4
E	 M4X12MM	X28	J		X1

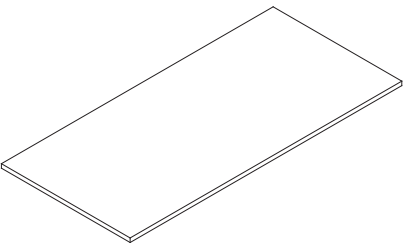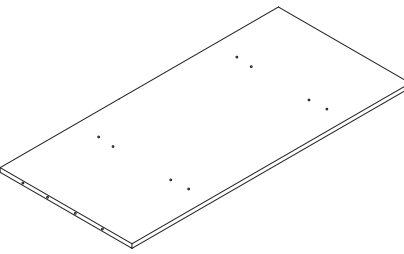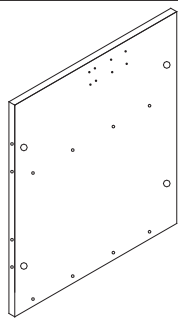
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		X1	6		X1
2		X1	7		X2
3		X1	8		X2
4		X1	9		X2
5		X2			

### Use the Cam Lock and Eccentric Wheel ECCENTRIC WHEEL




Tighten the bolt until the shoulder is aligned with the panel.  
Be sure not to tighten too much or too little.

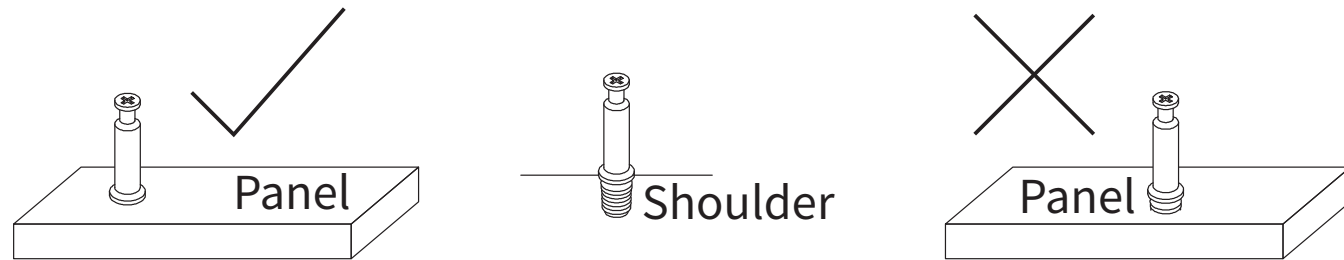



The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

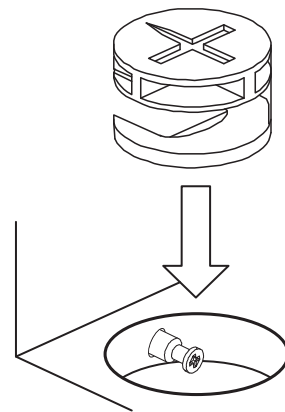

Turn the cam lock clockwise to tighten.

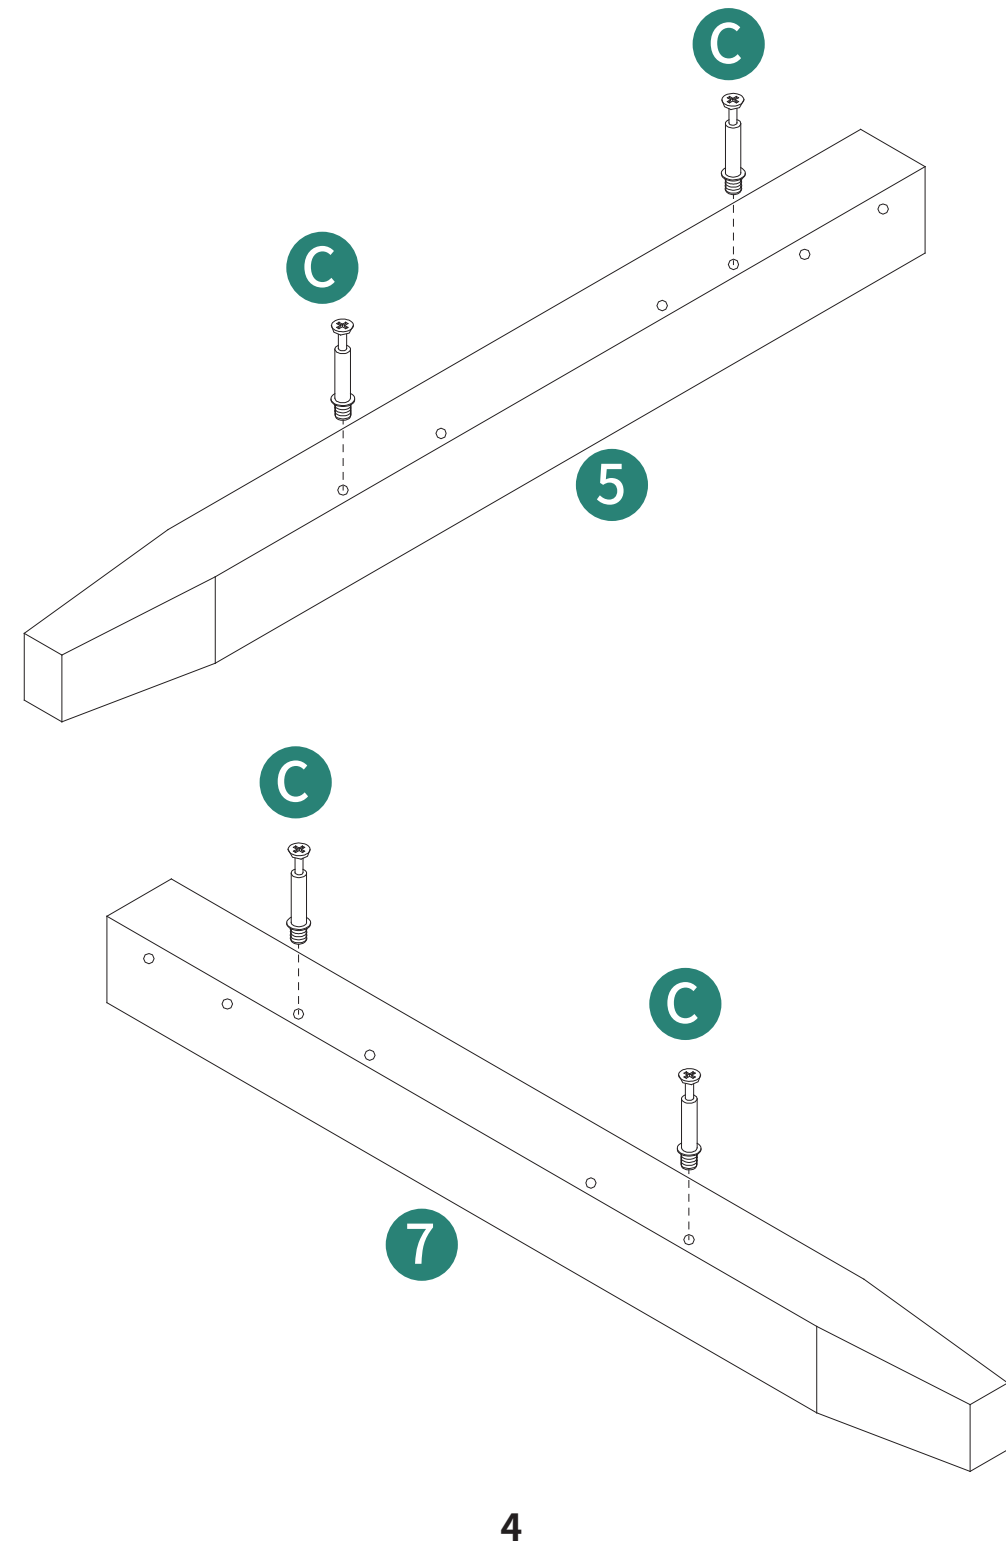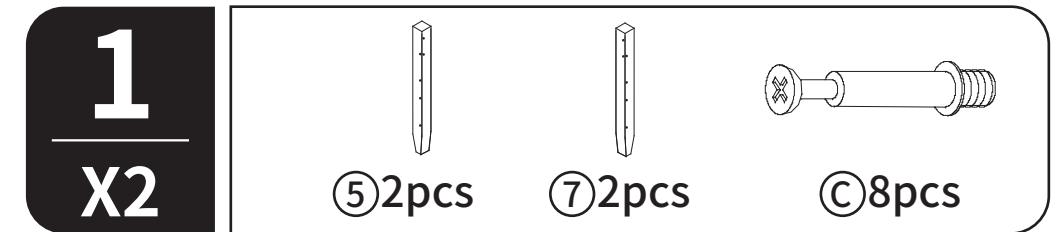
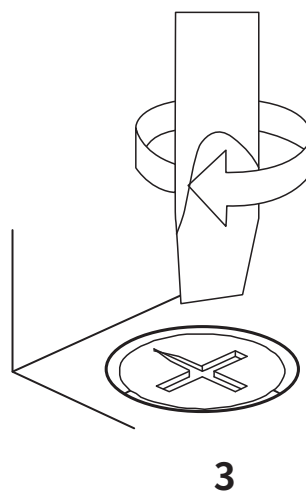


### 2

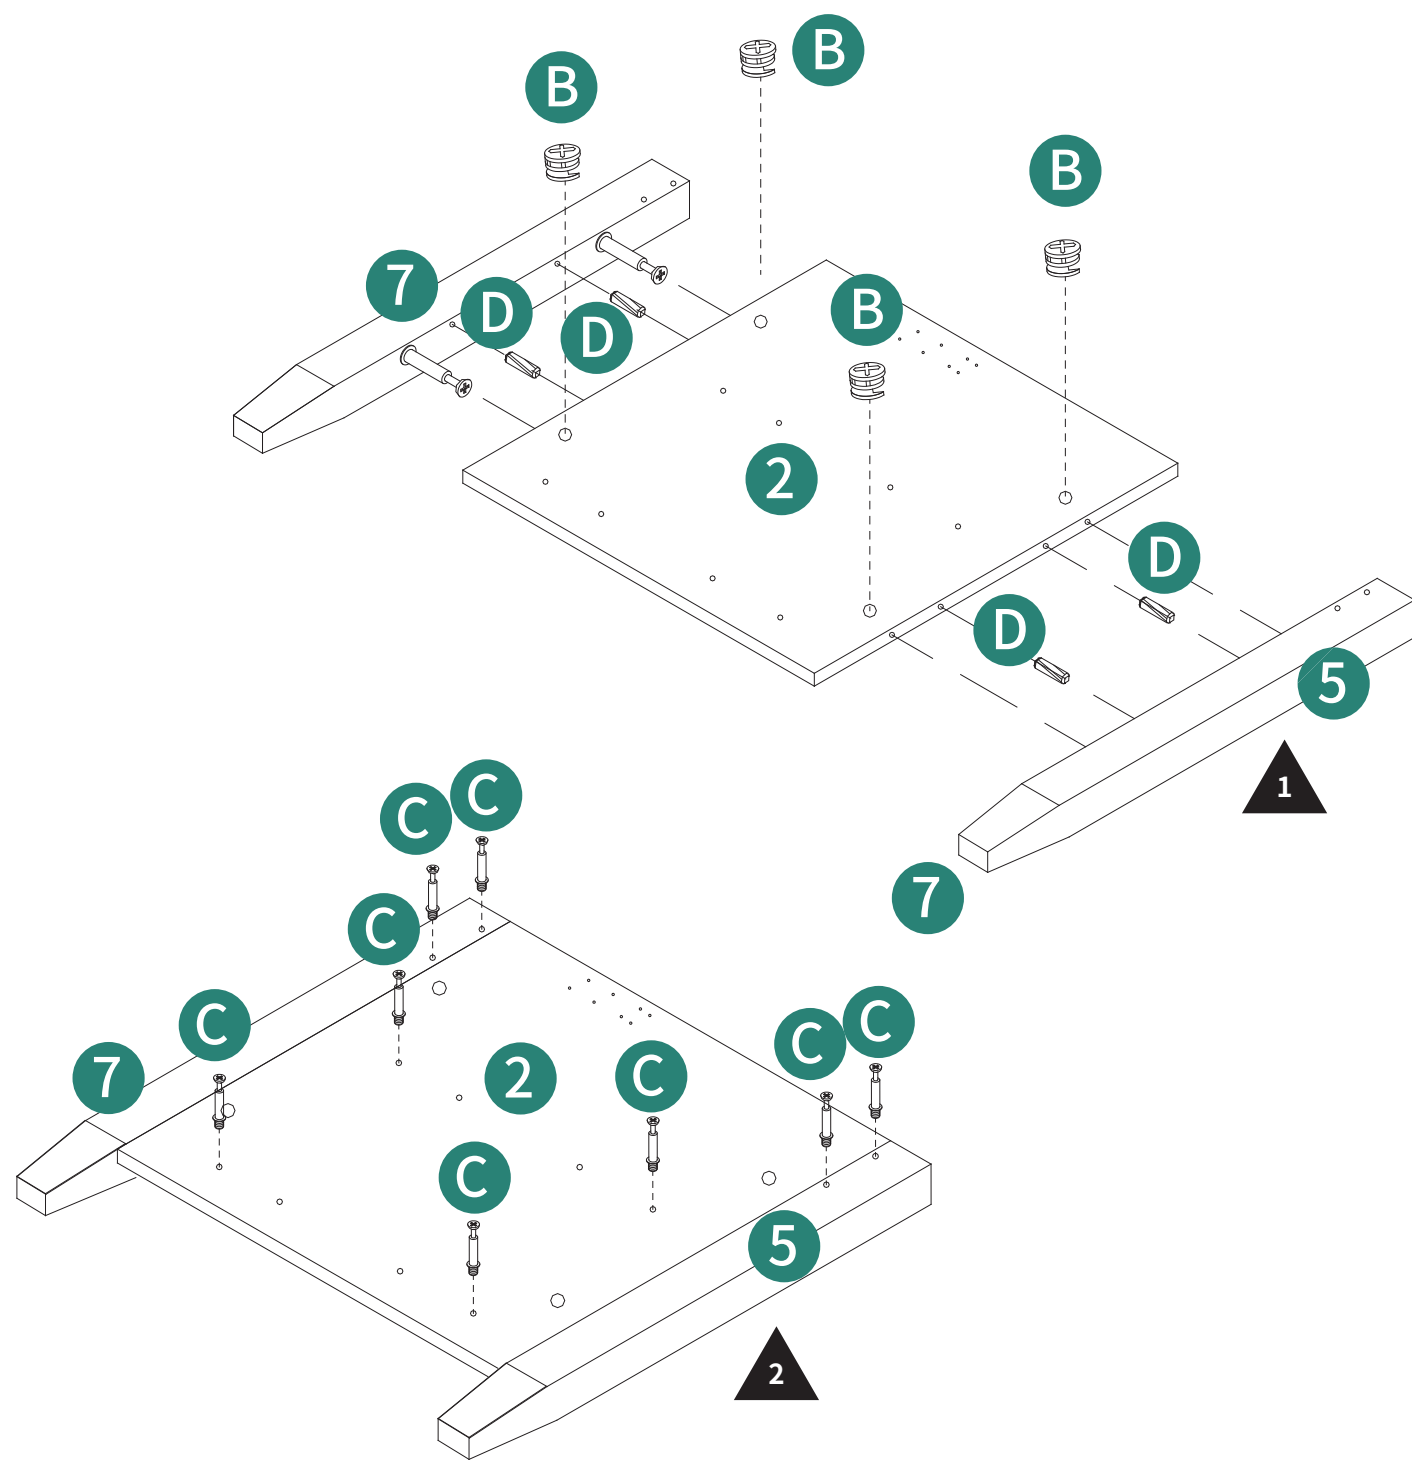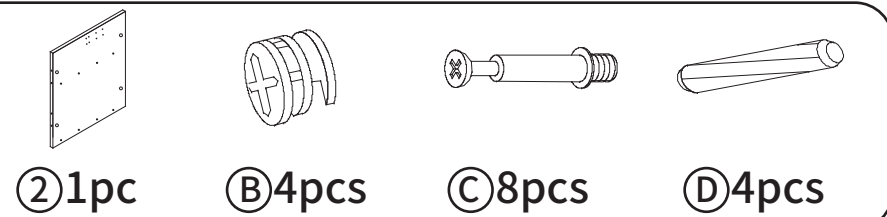


5

### 3

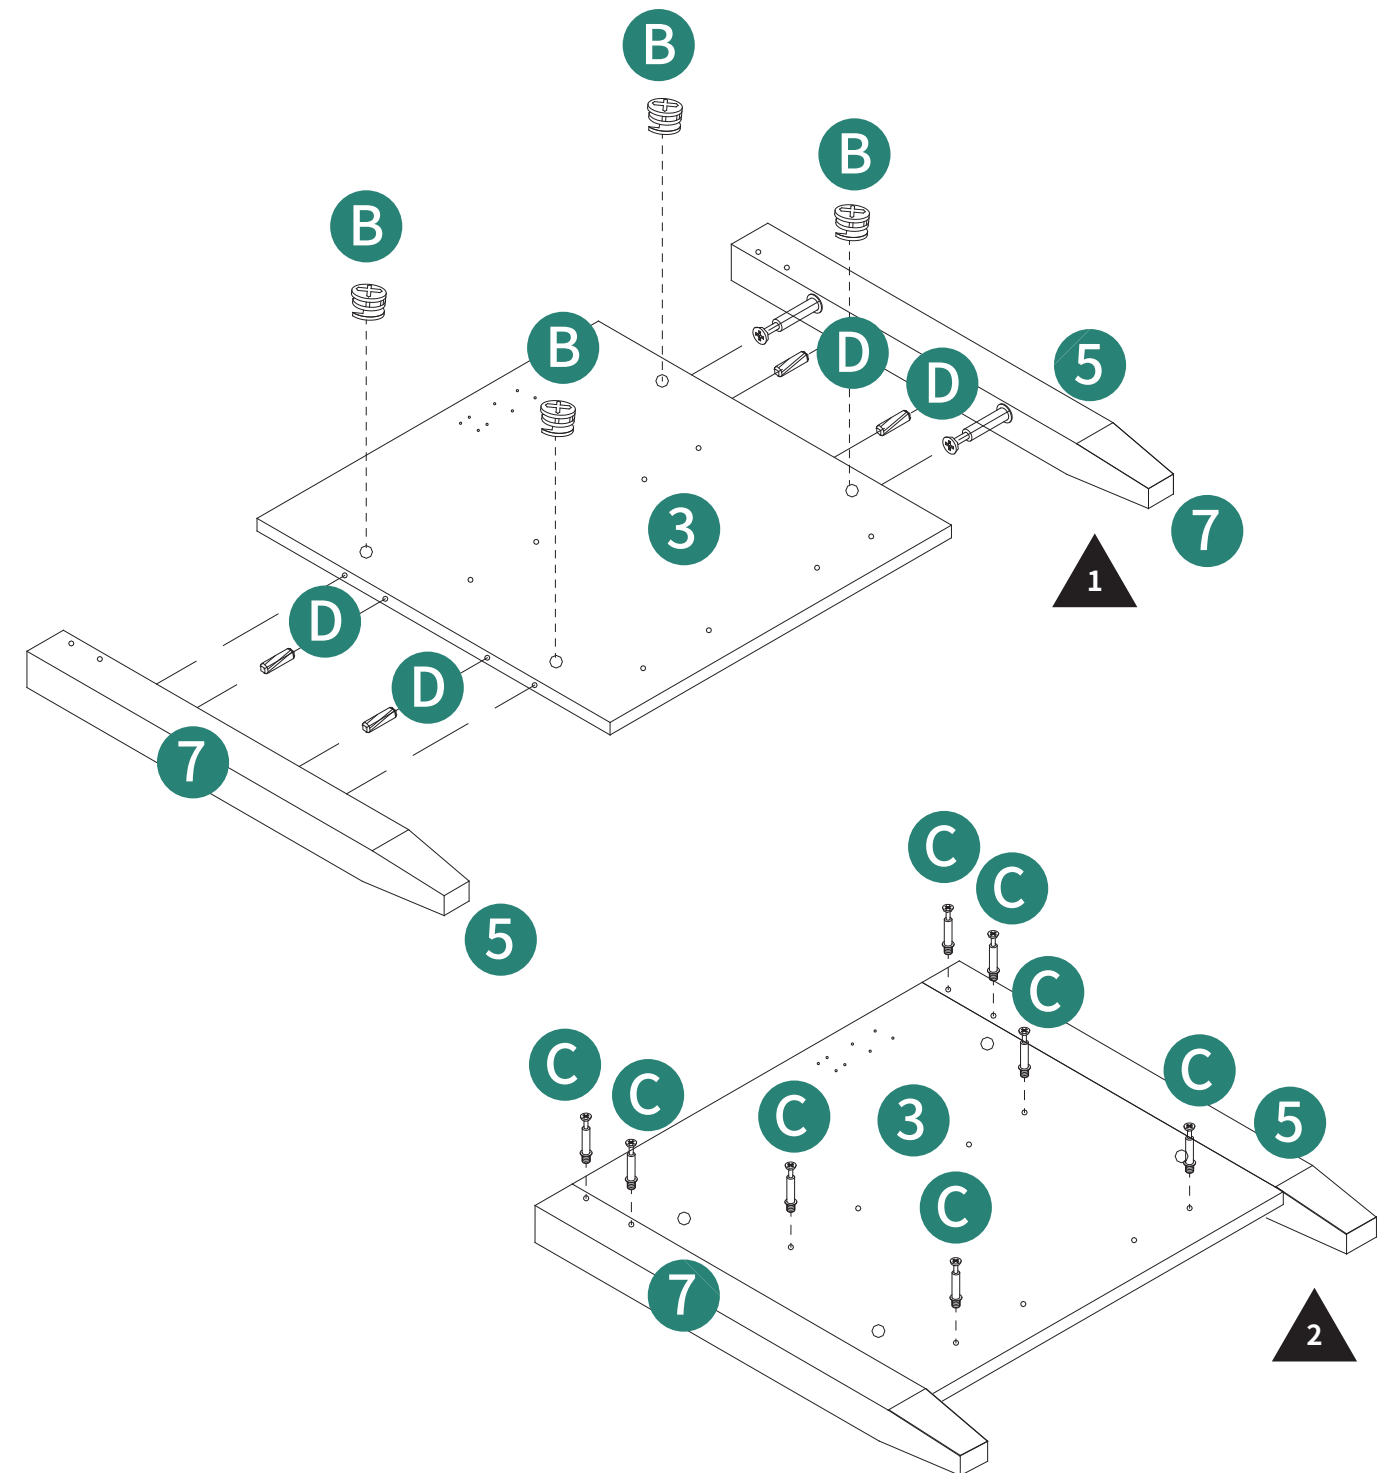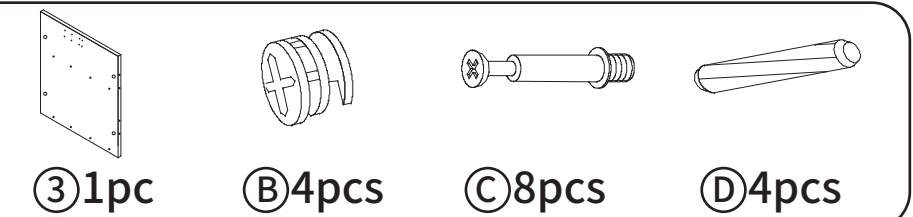

6



### 4

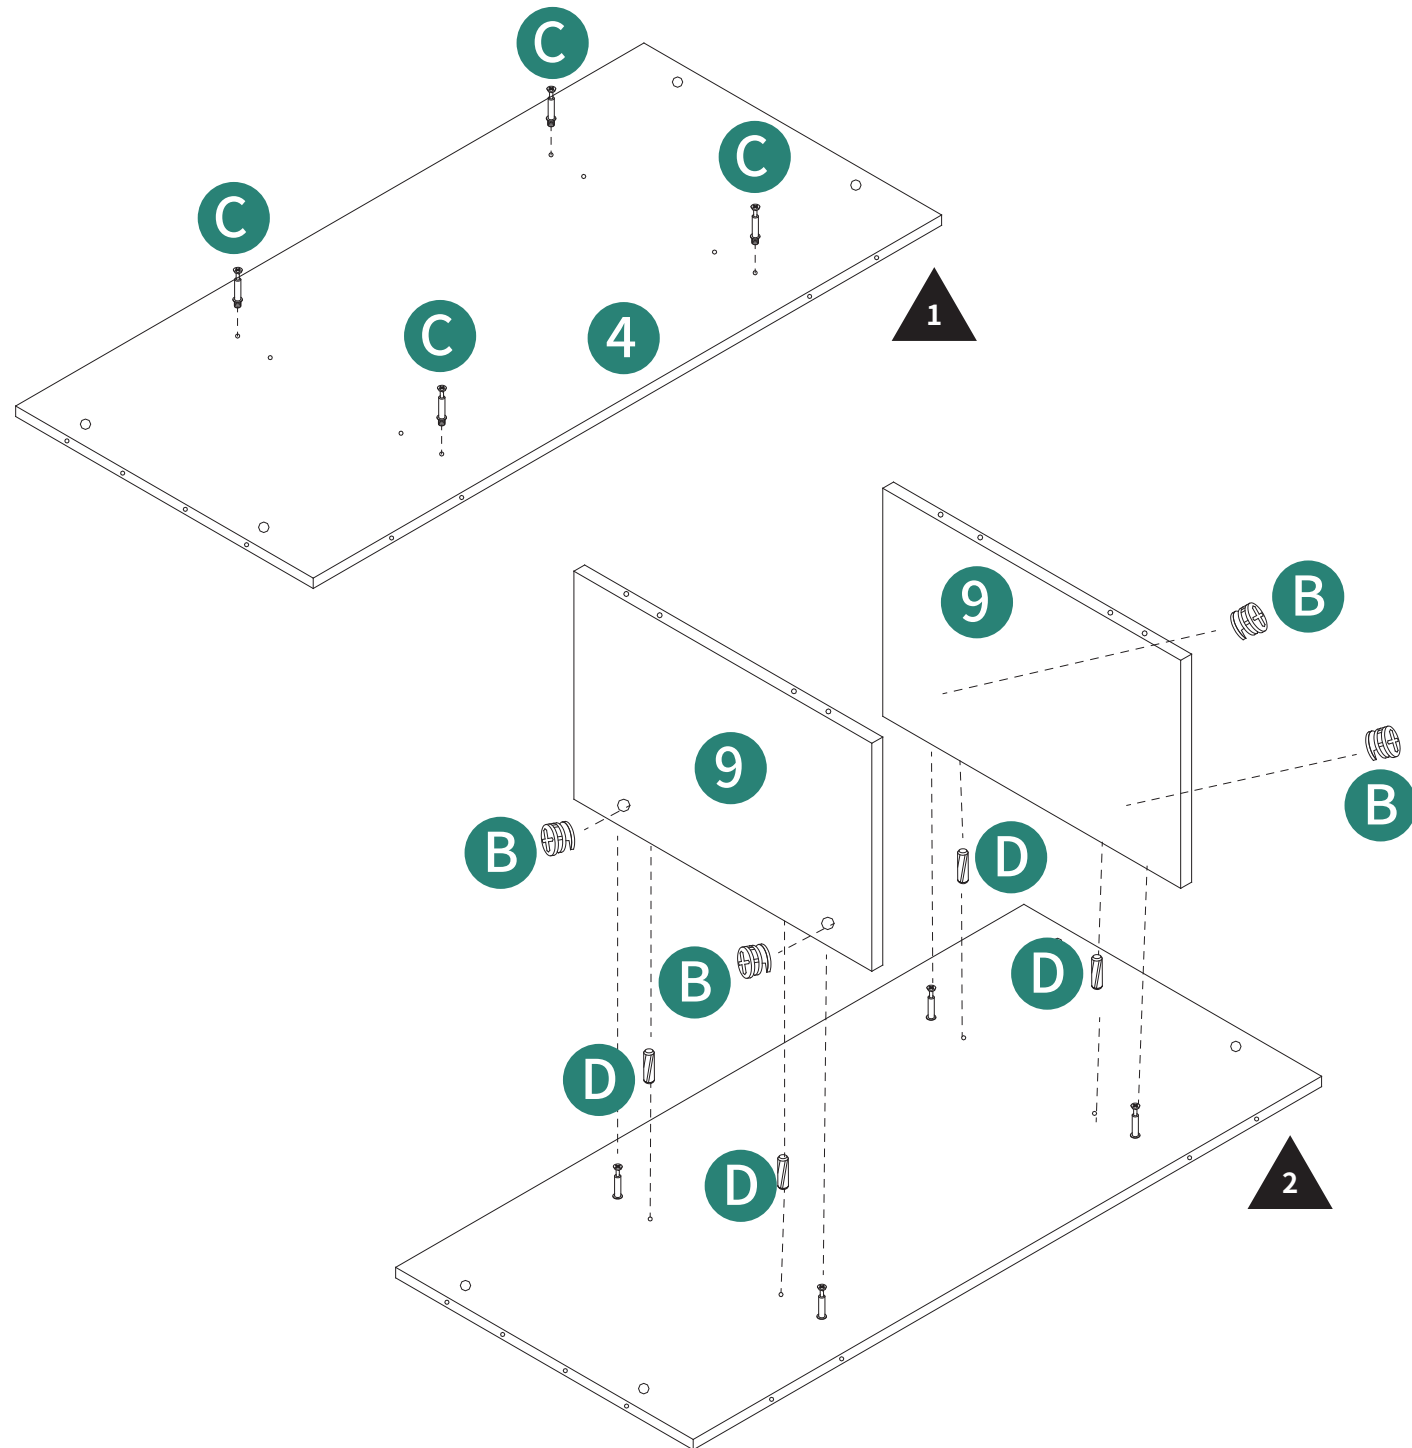

7


### 5

### X2

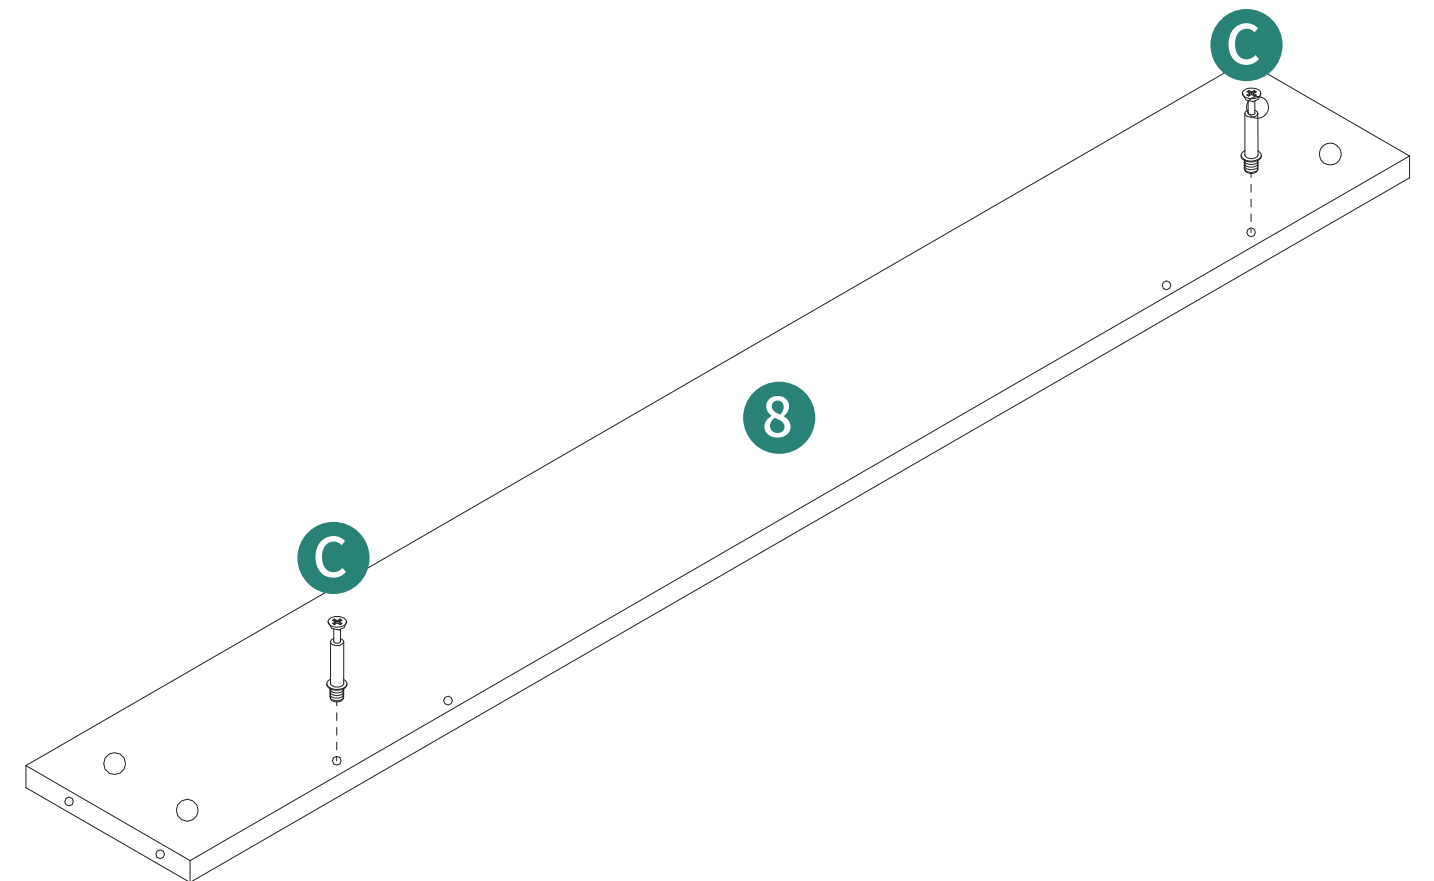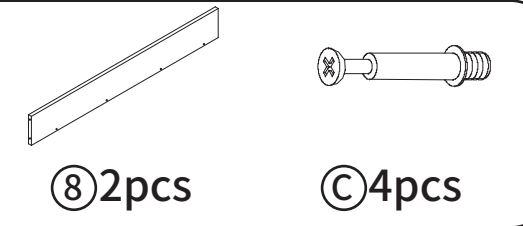

8


### 6



Ⓑ4pcs




Ⓓ4pcs

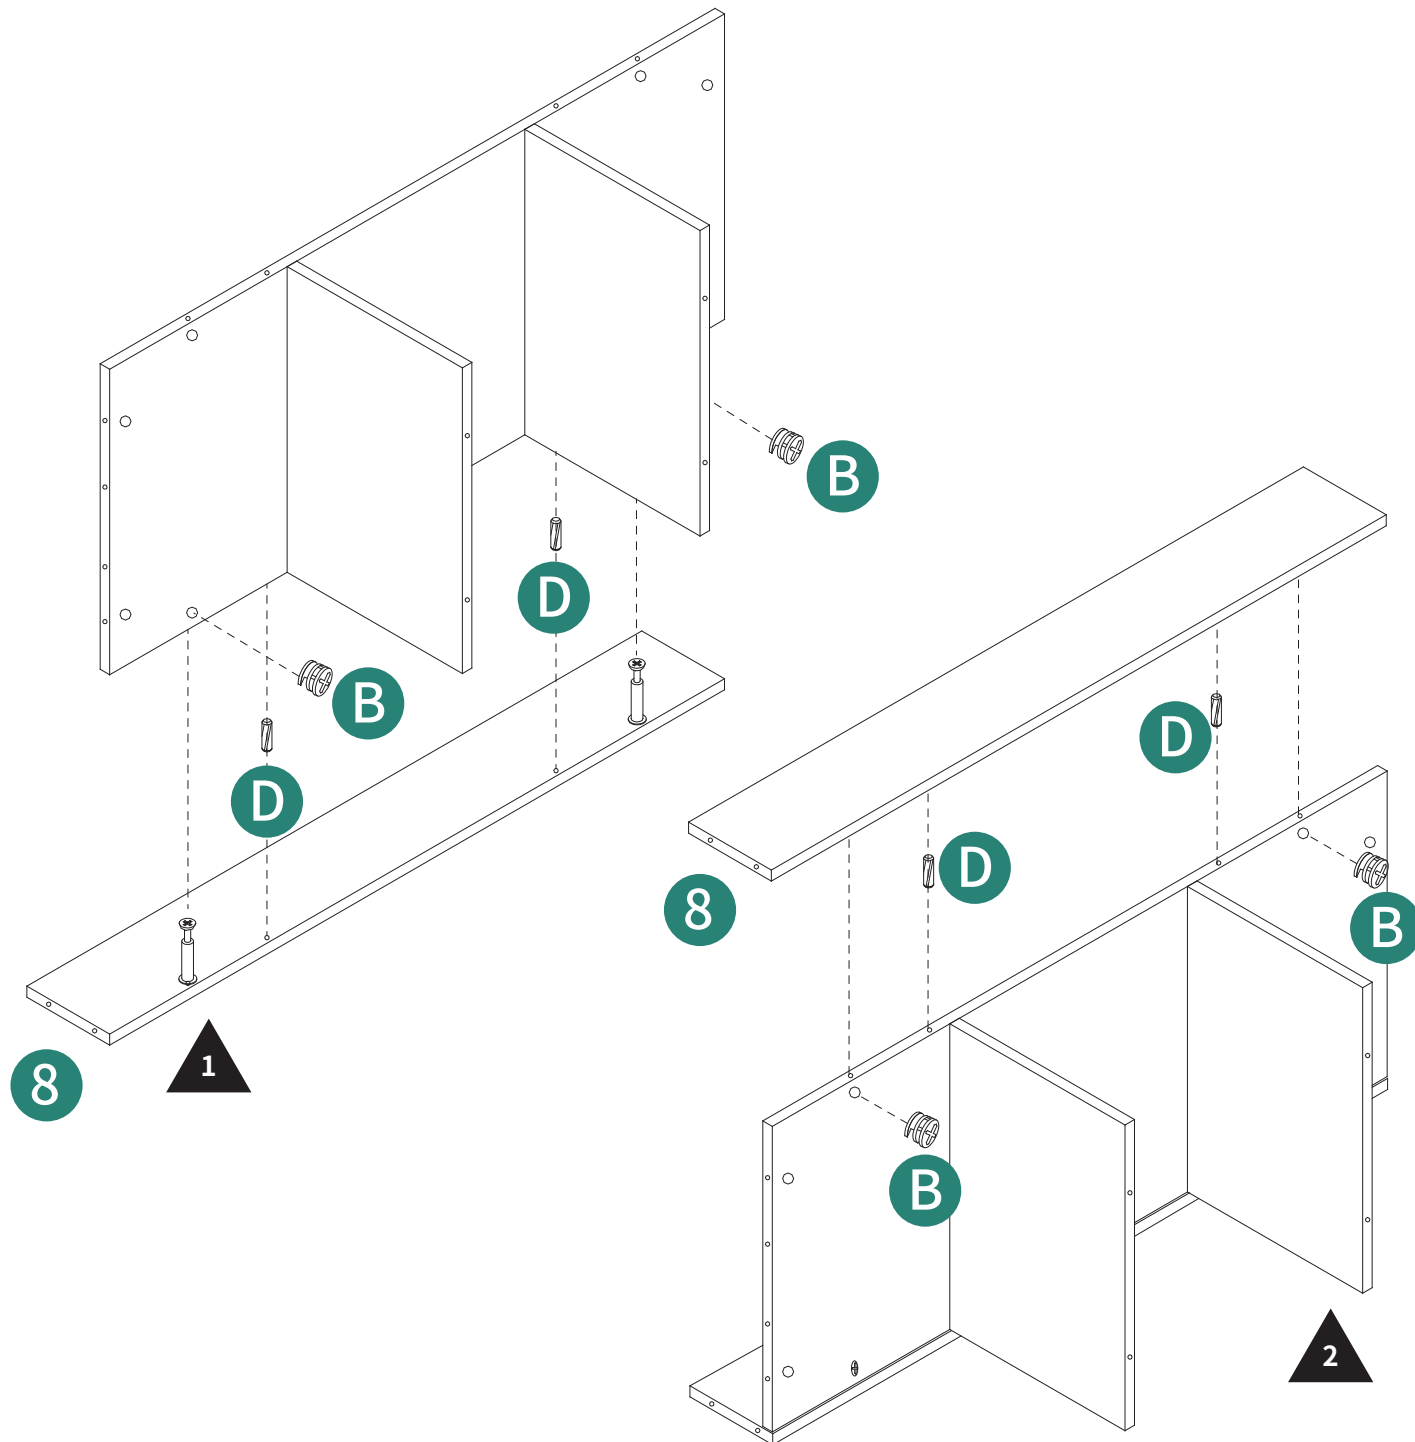


9

### 7

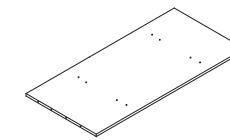


Ⓔ1pc

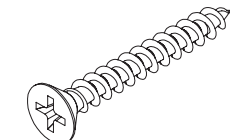

Ⓐ4pcs




Ⓓ4pcs

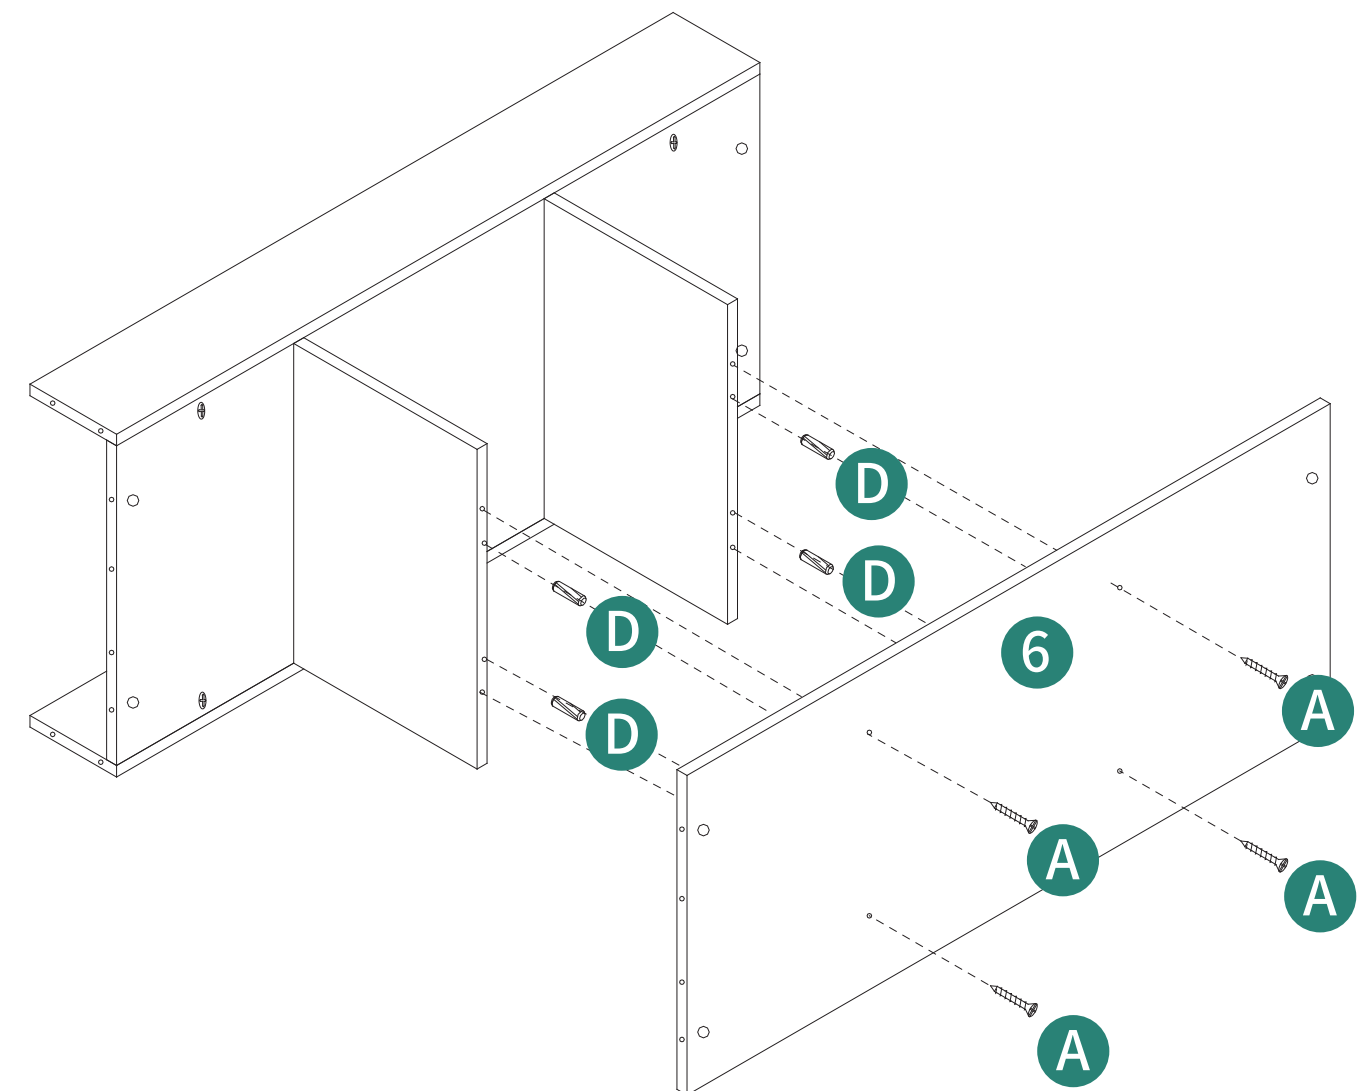


10


# 8



ⓑ4pcs




ⓓ4pcs

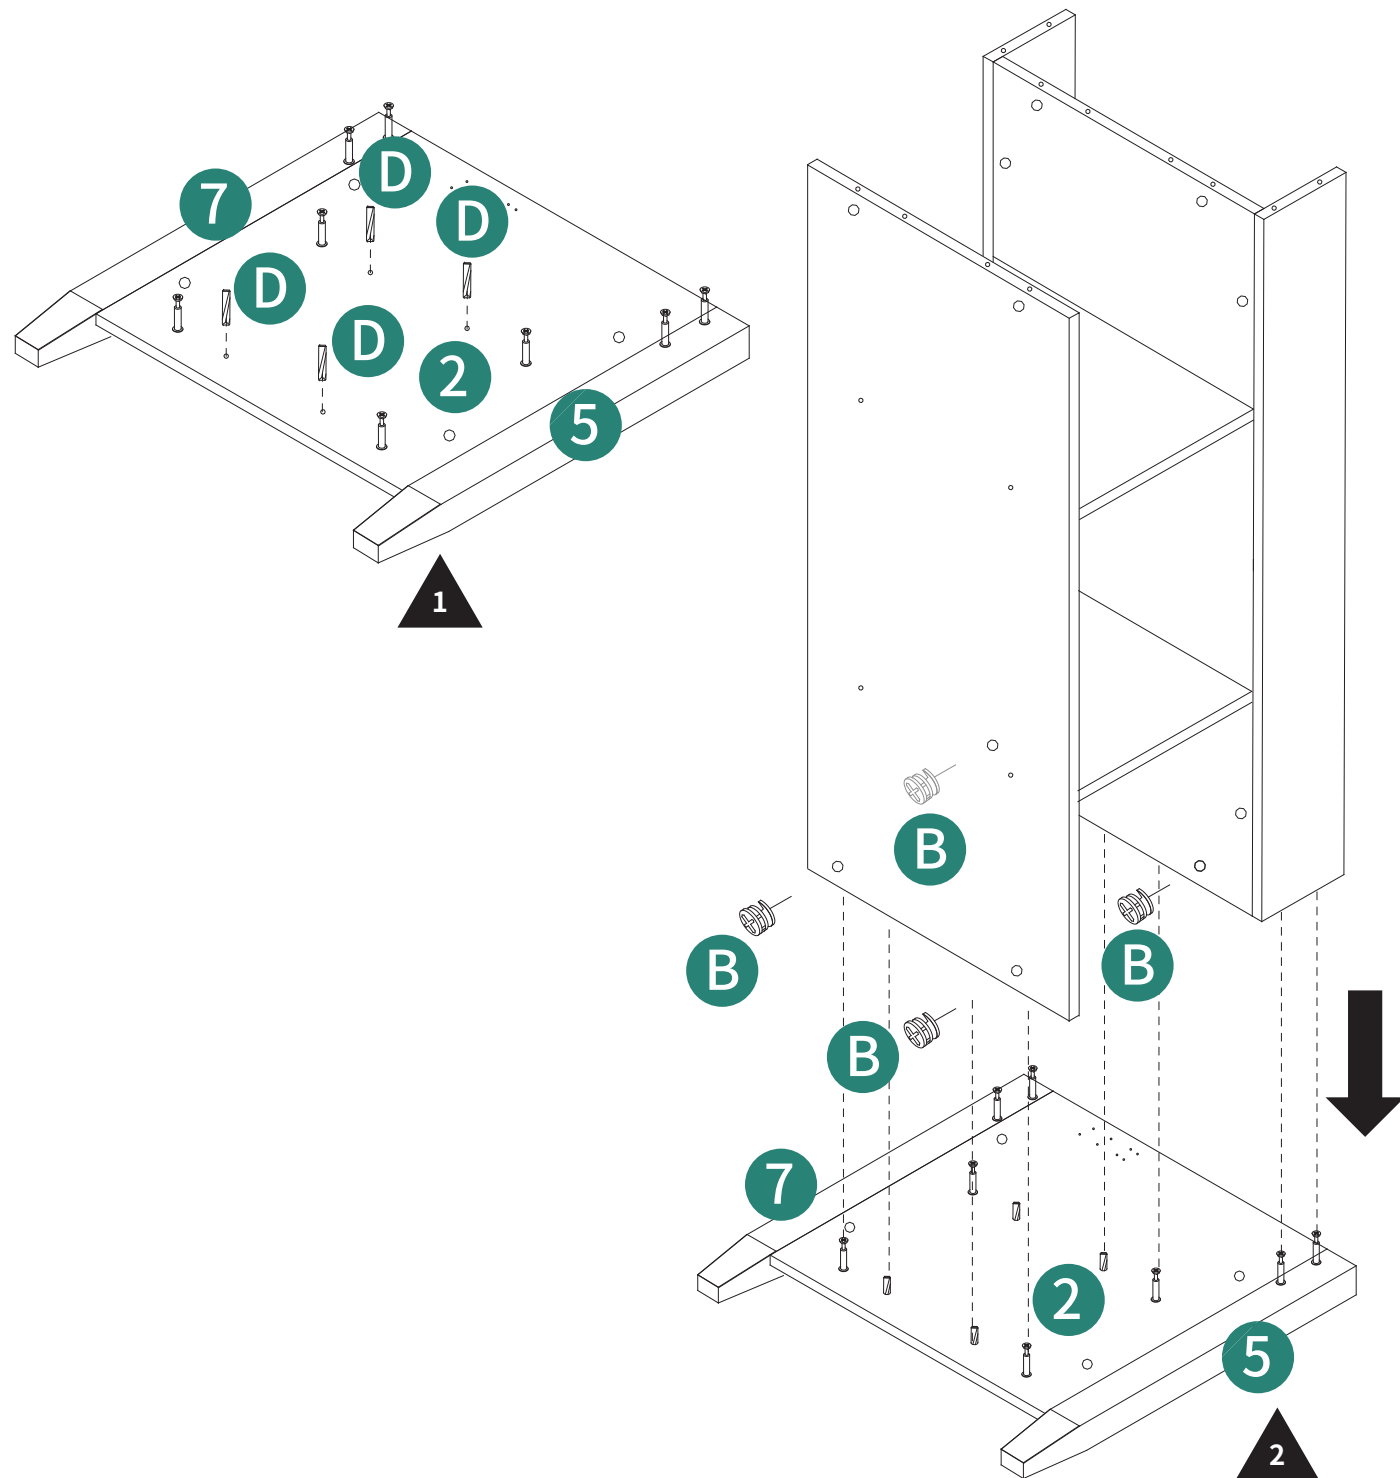


11




# 9





ⓓ4pcs

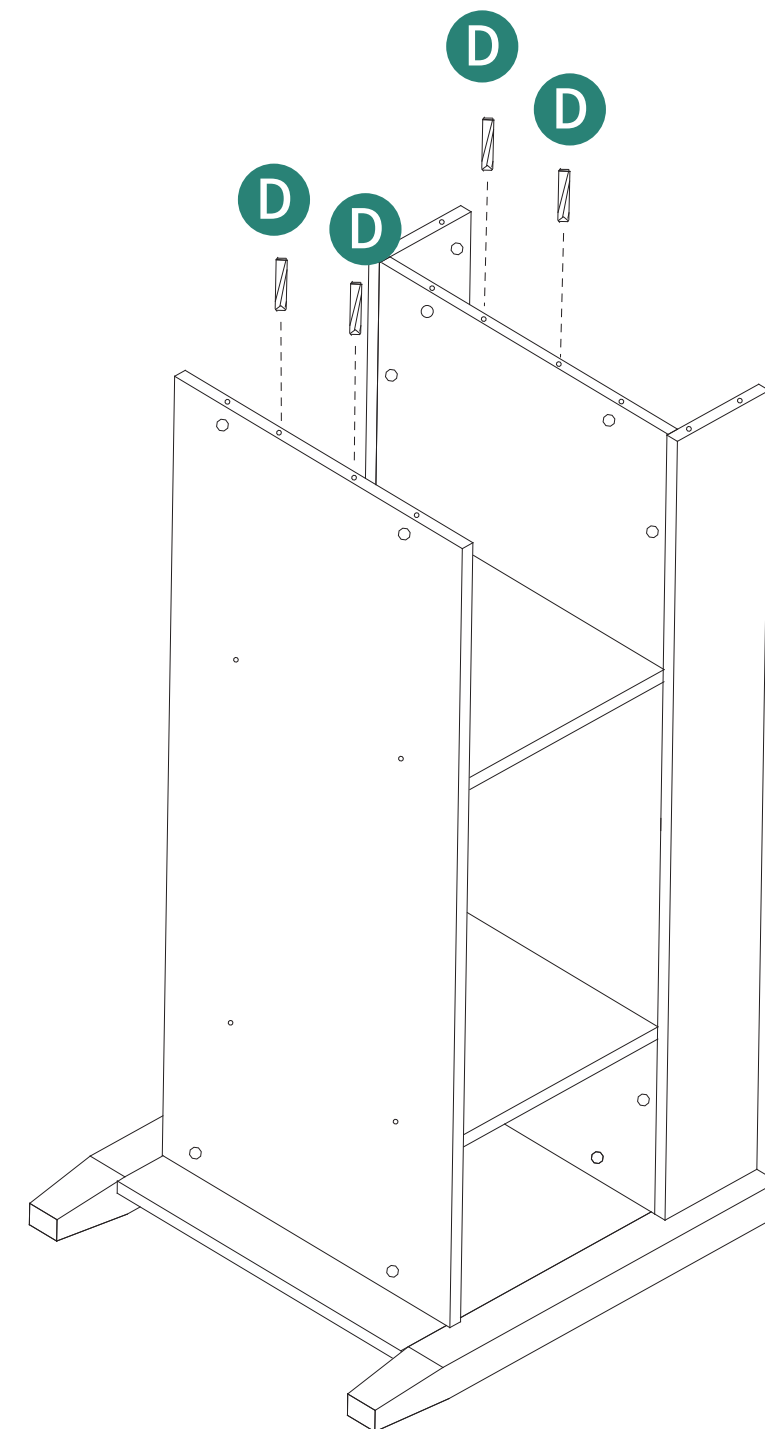

12

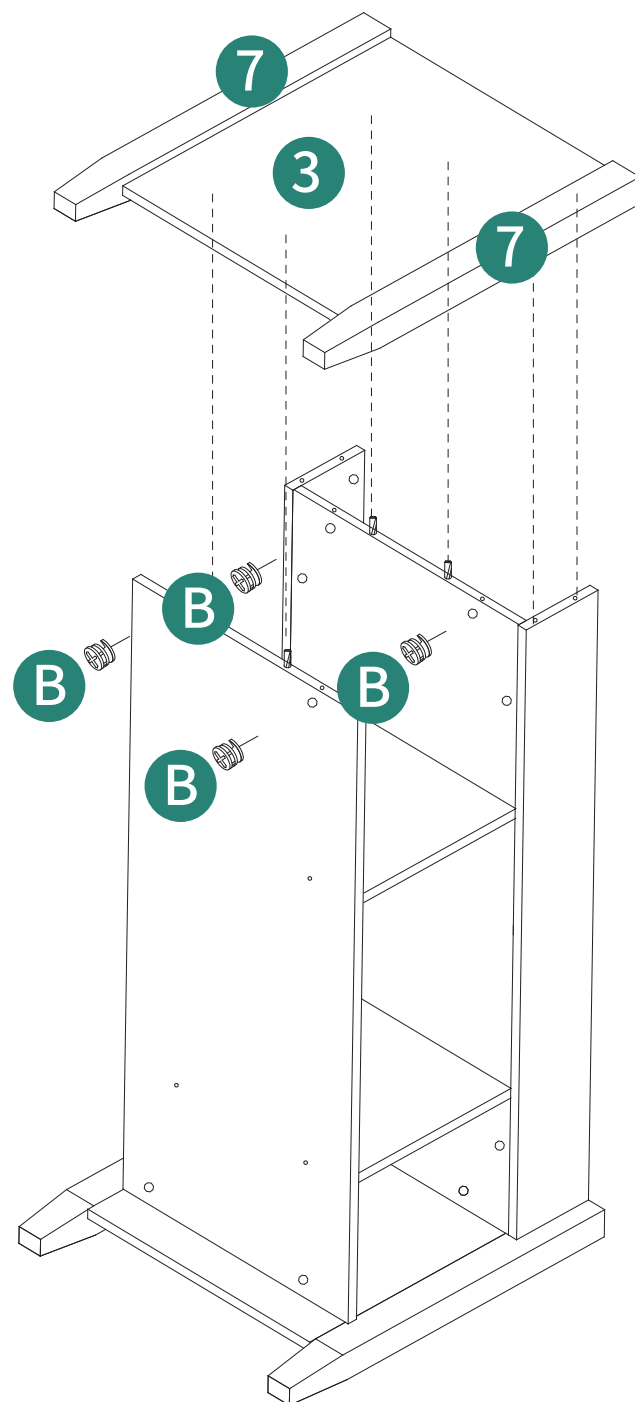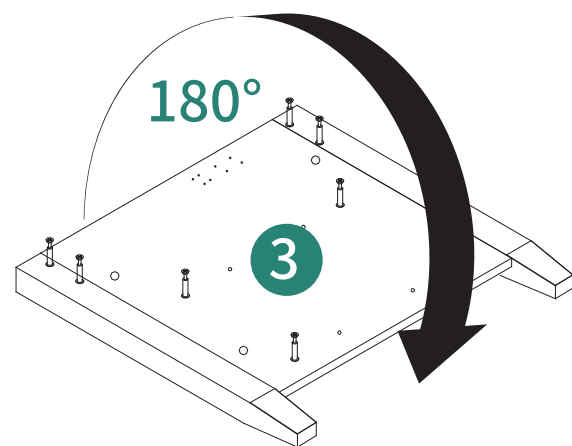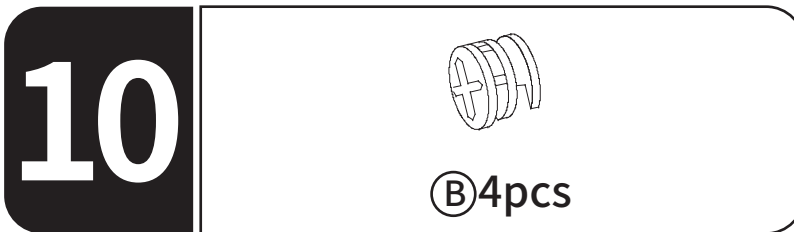


13

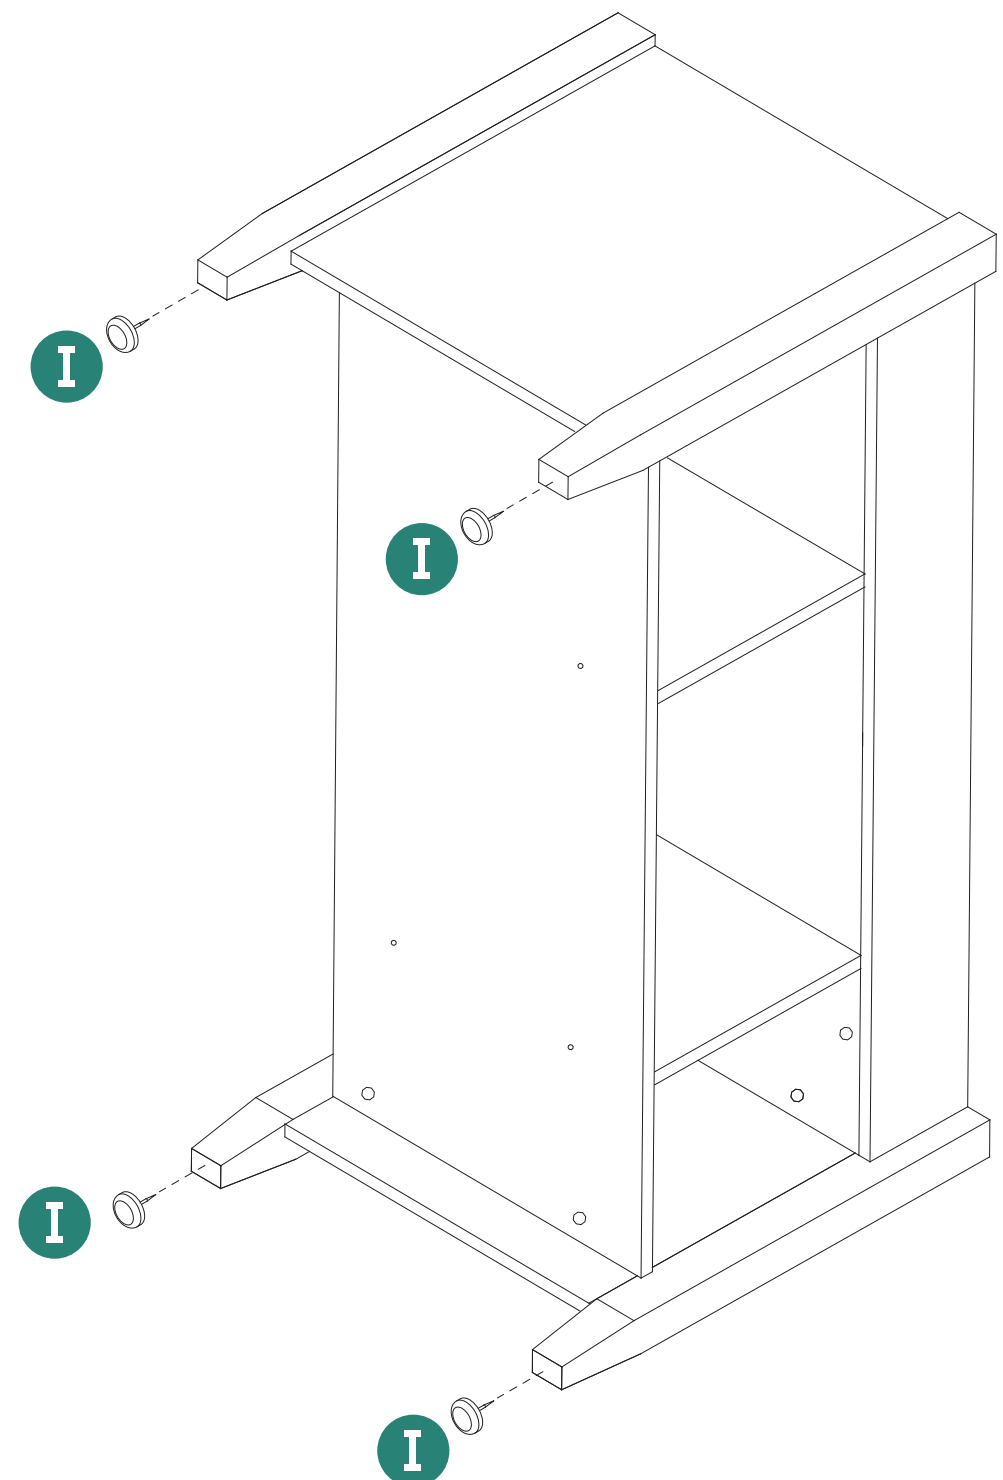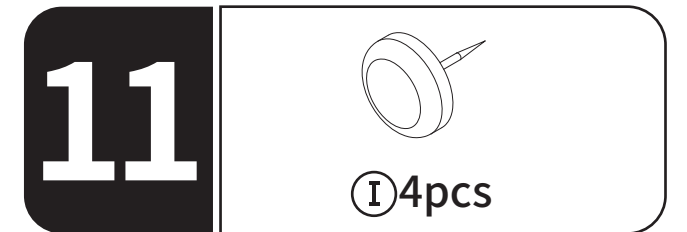


14



12




Ⓑ8pcs

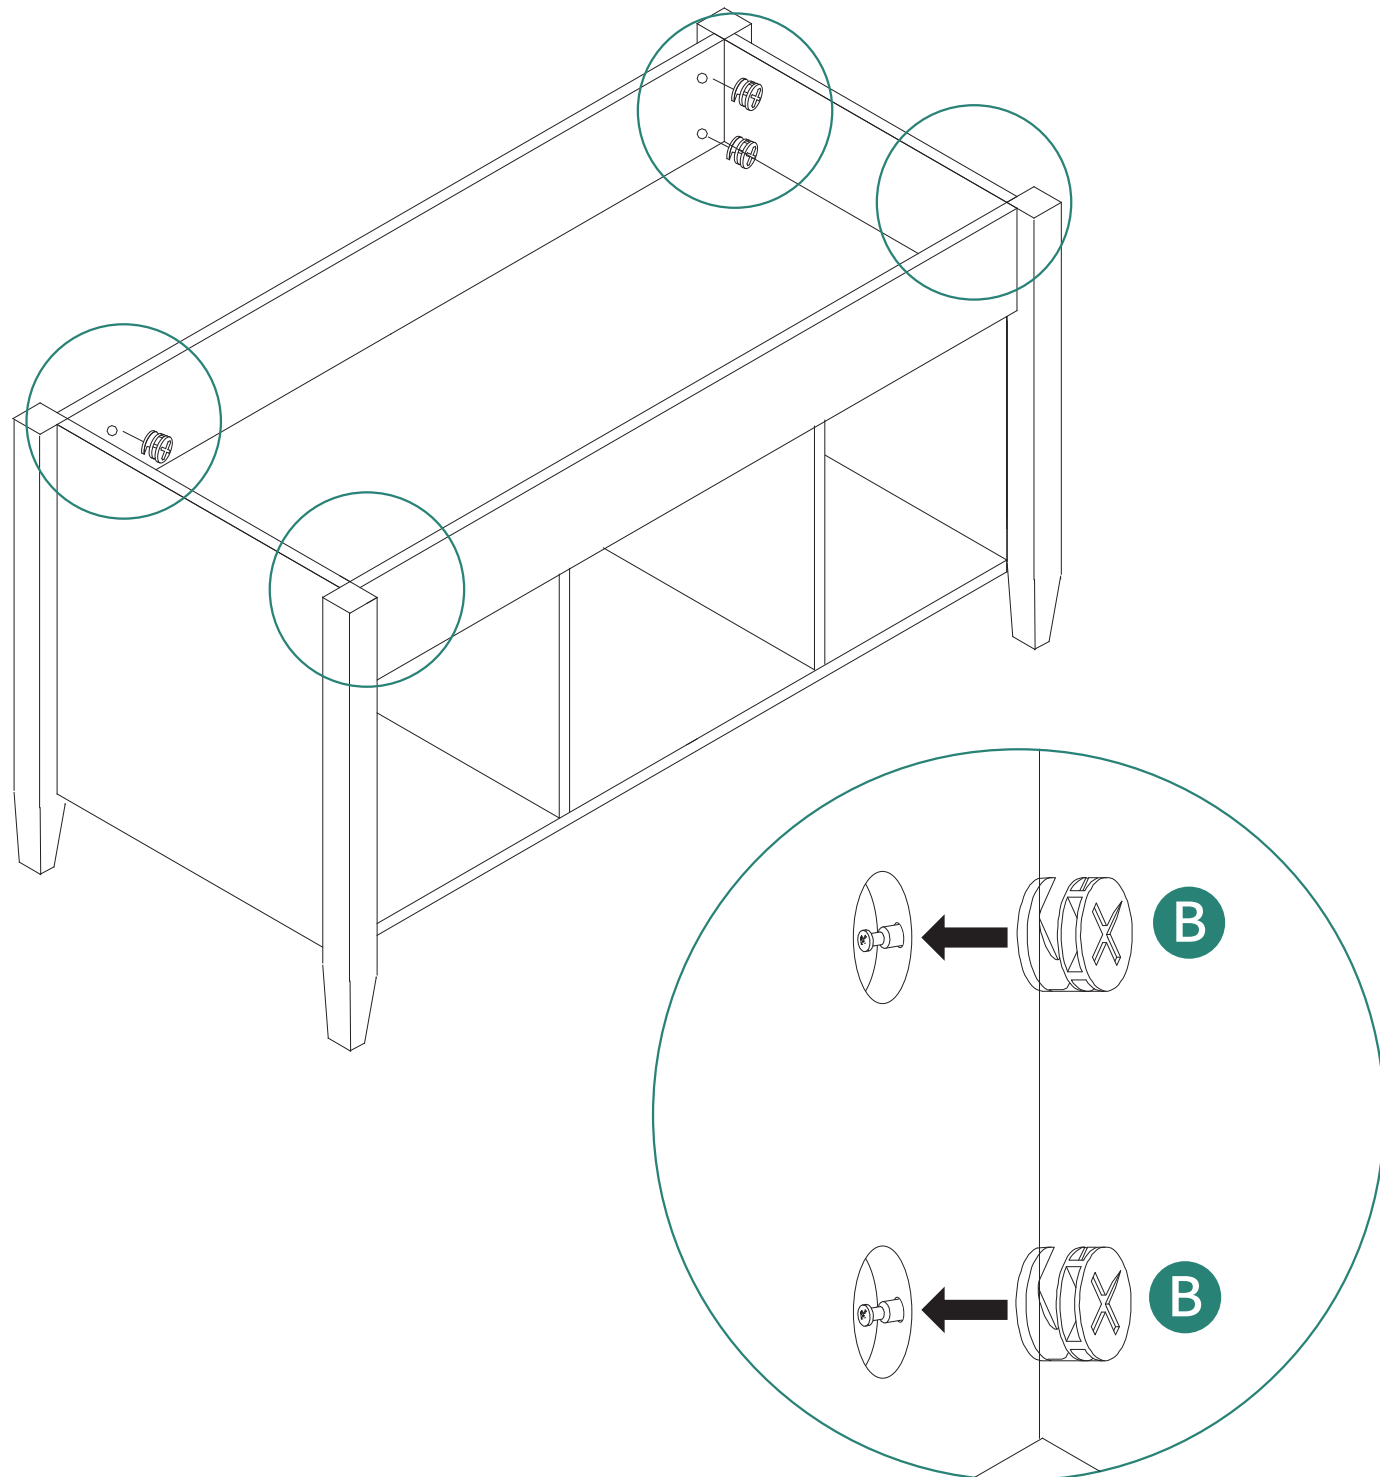


15





13




Ⓕ6pcs

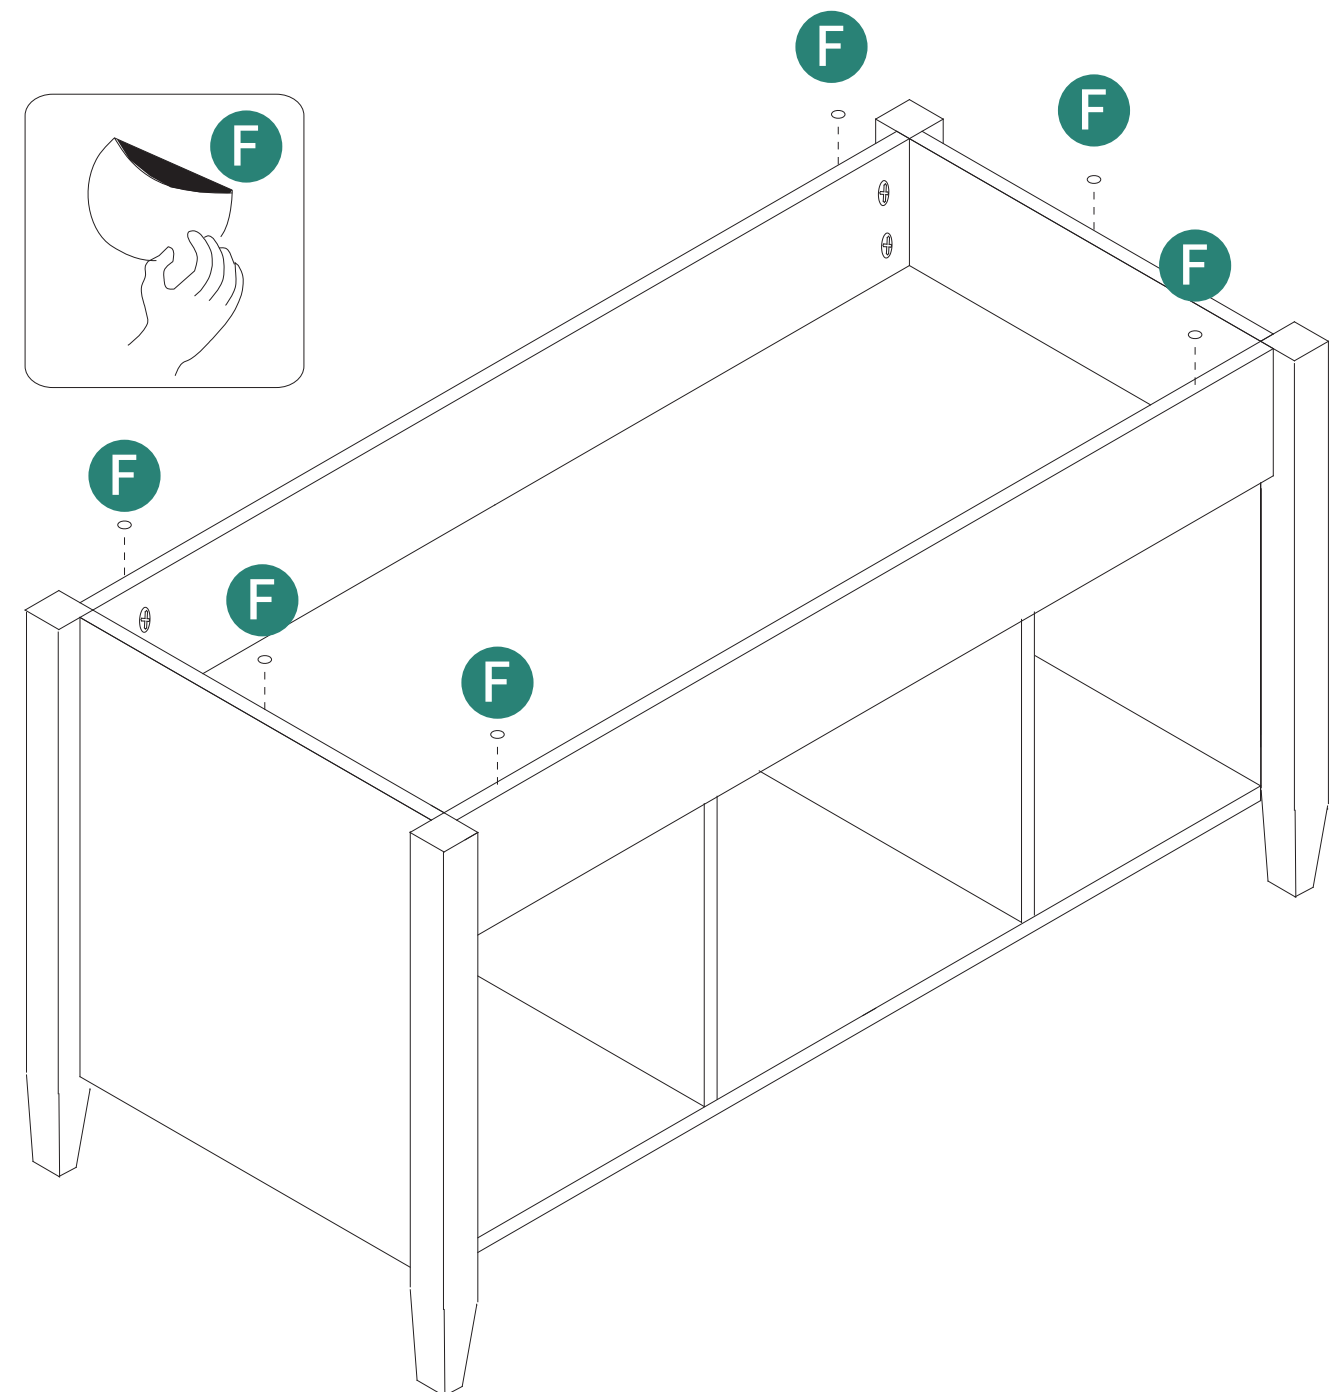

16

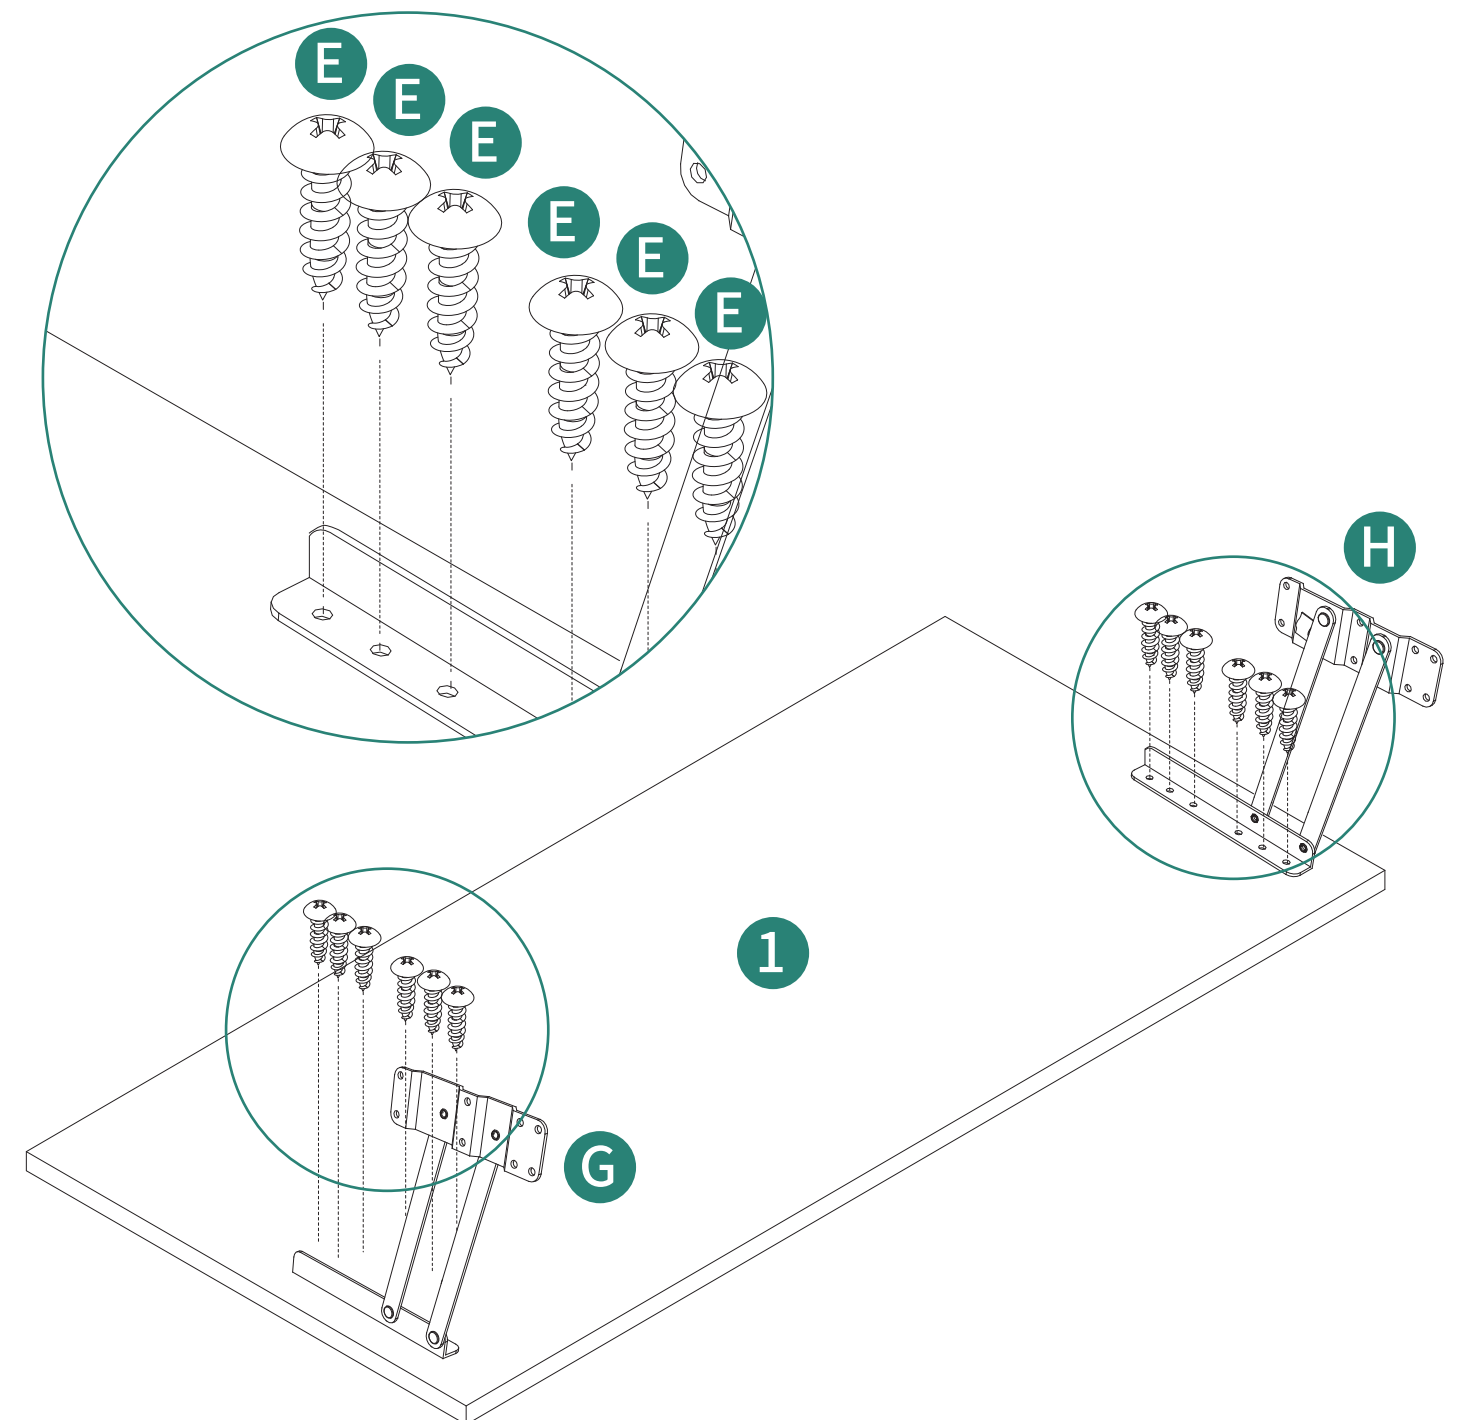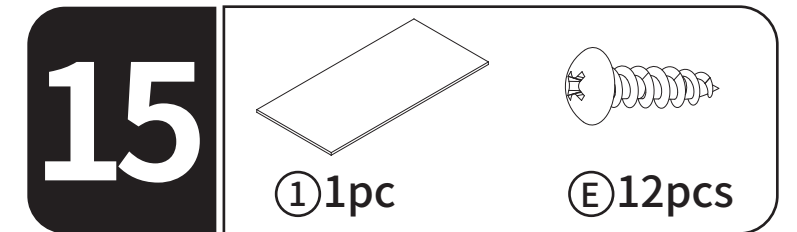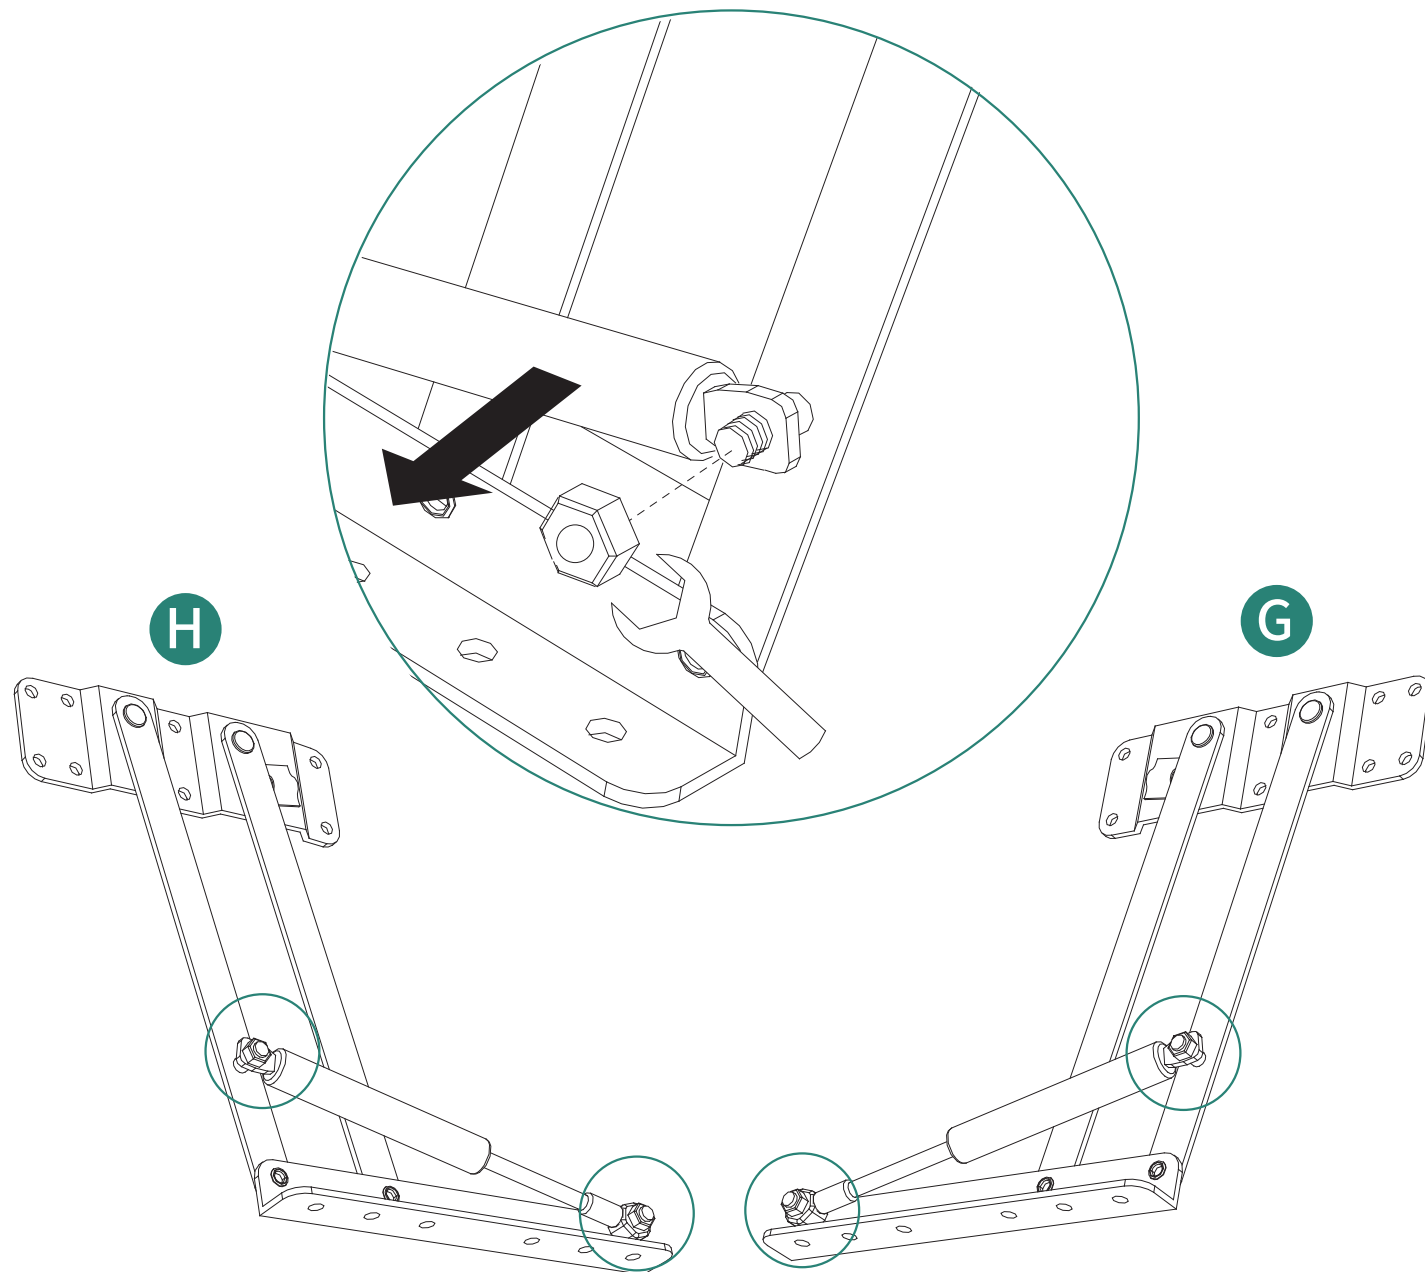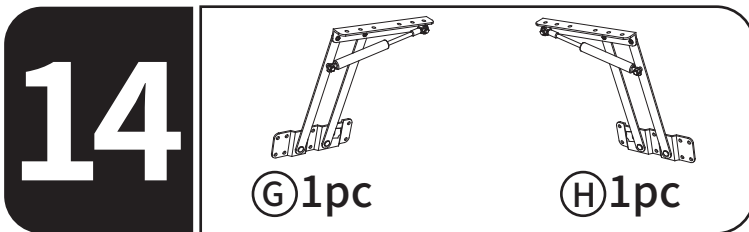


16




ⓔ16pcs

Ensure that parts are assembled correctly! Part G should be attached to part 2 and part H to part 3.

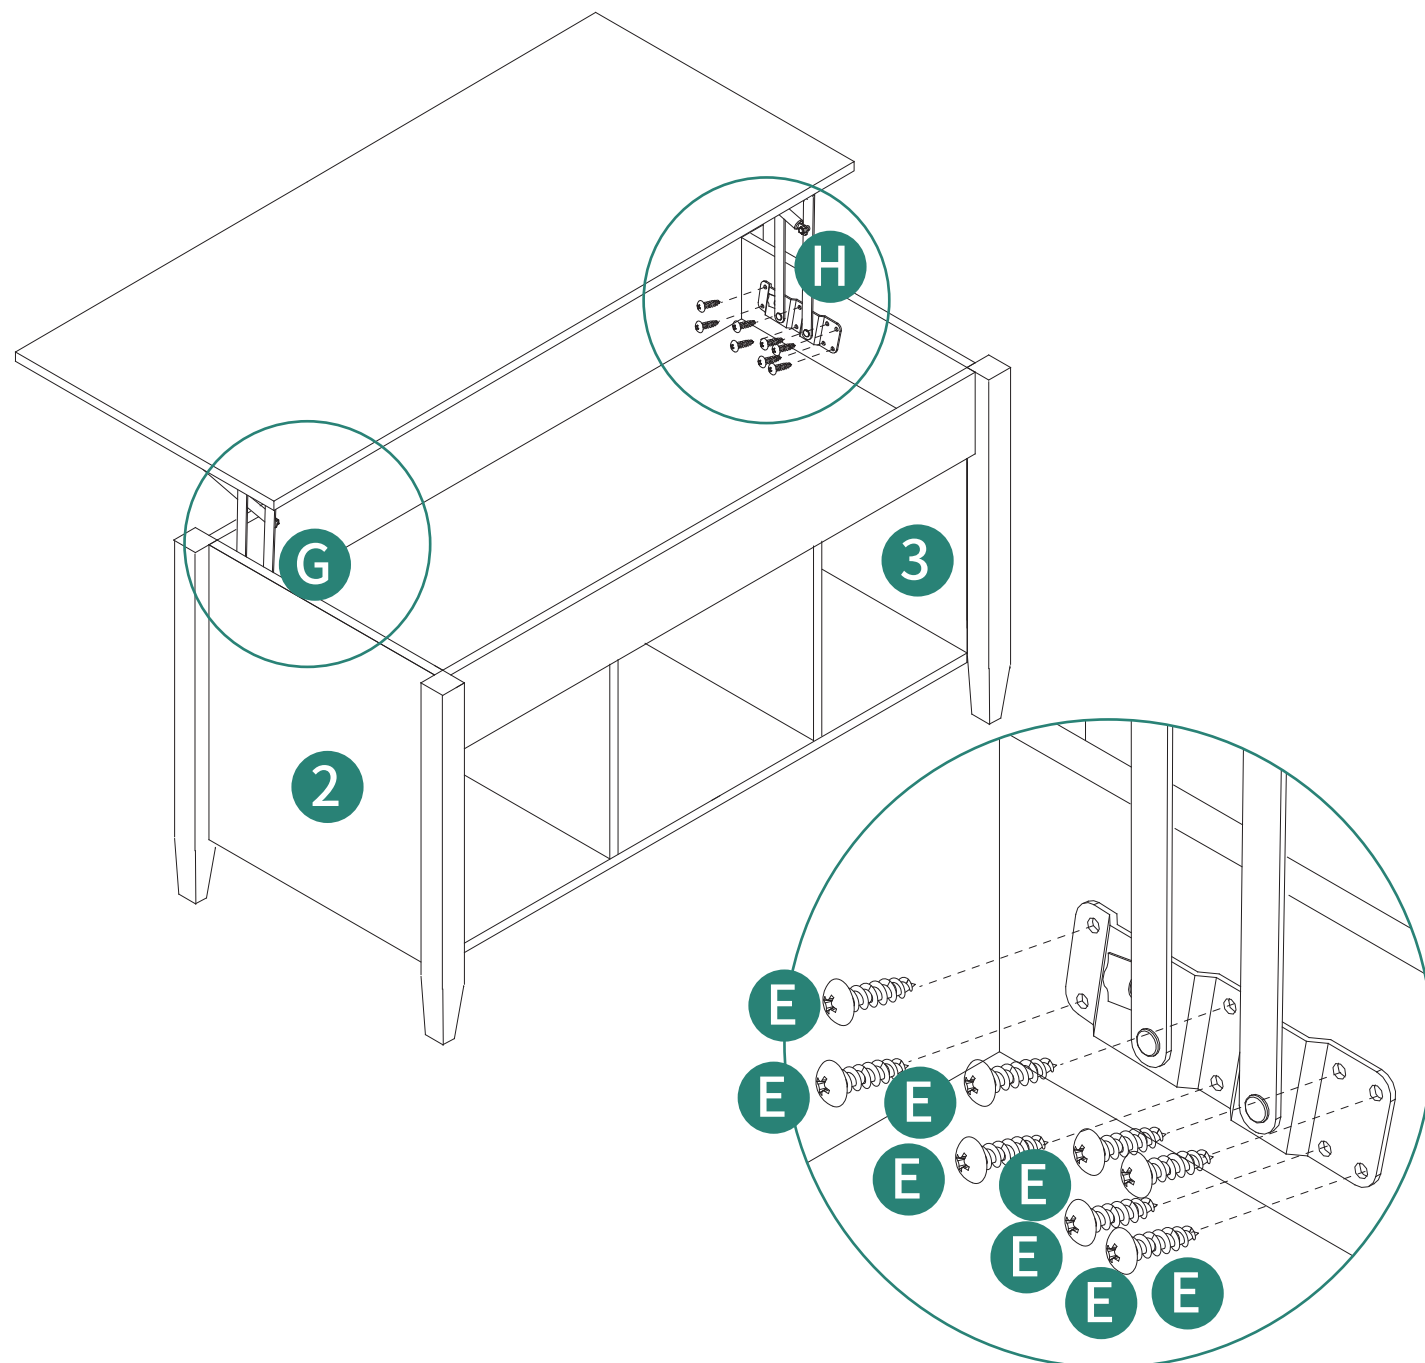


19

17

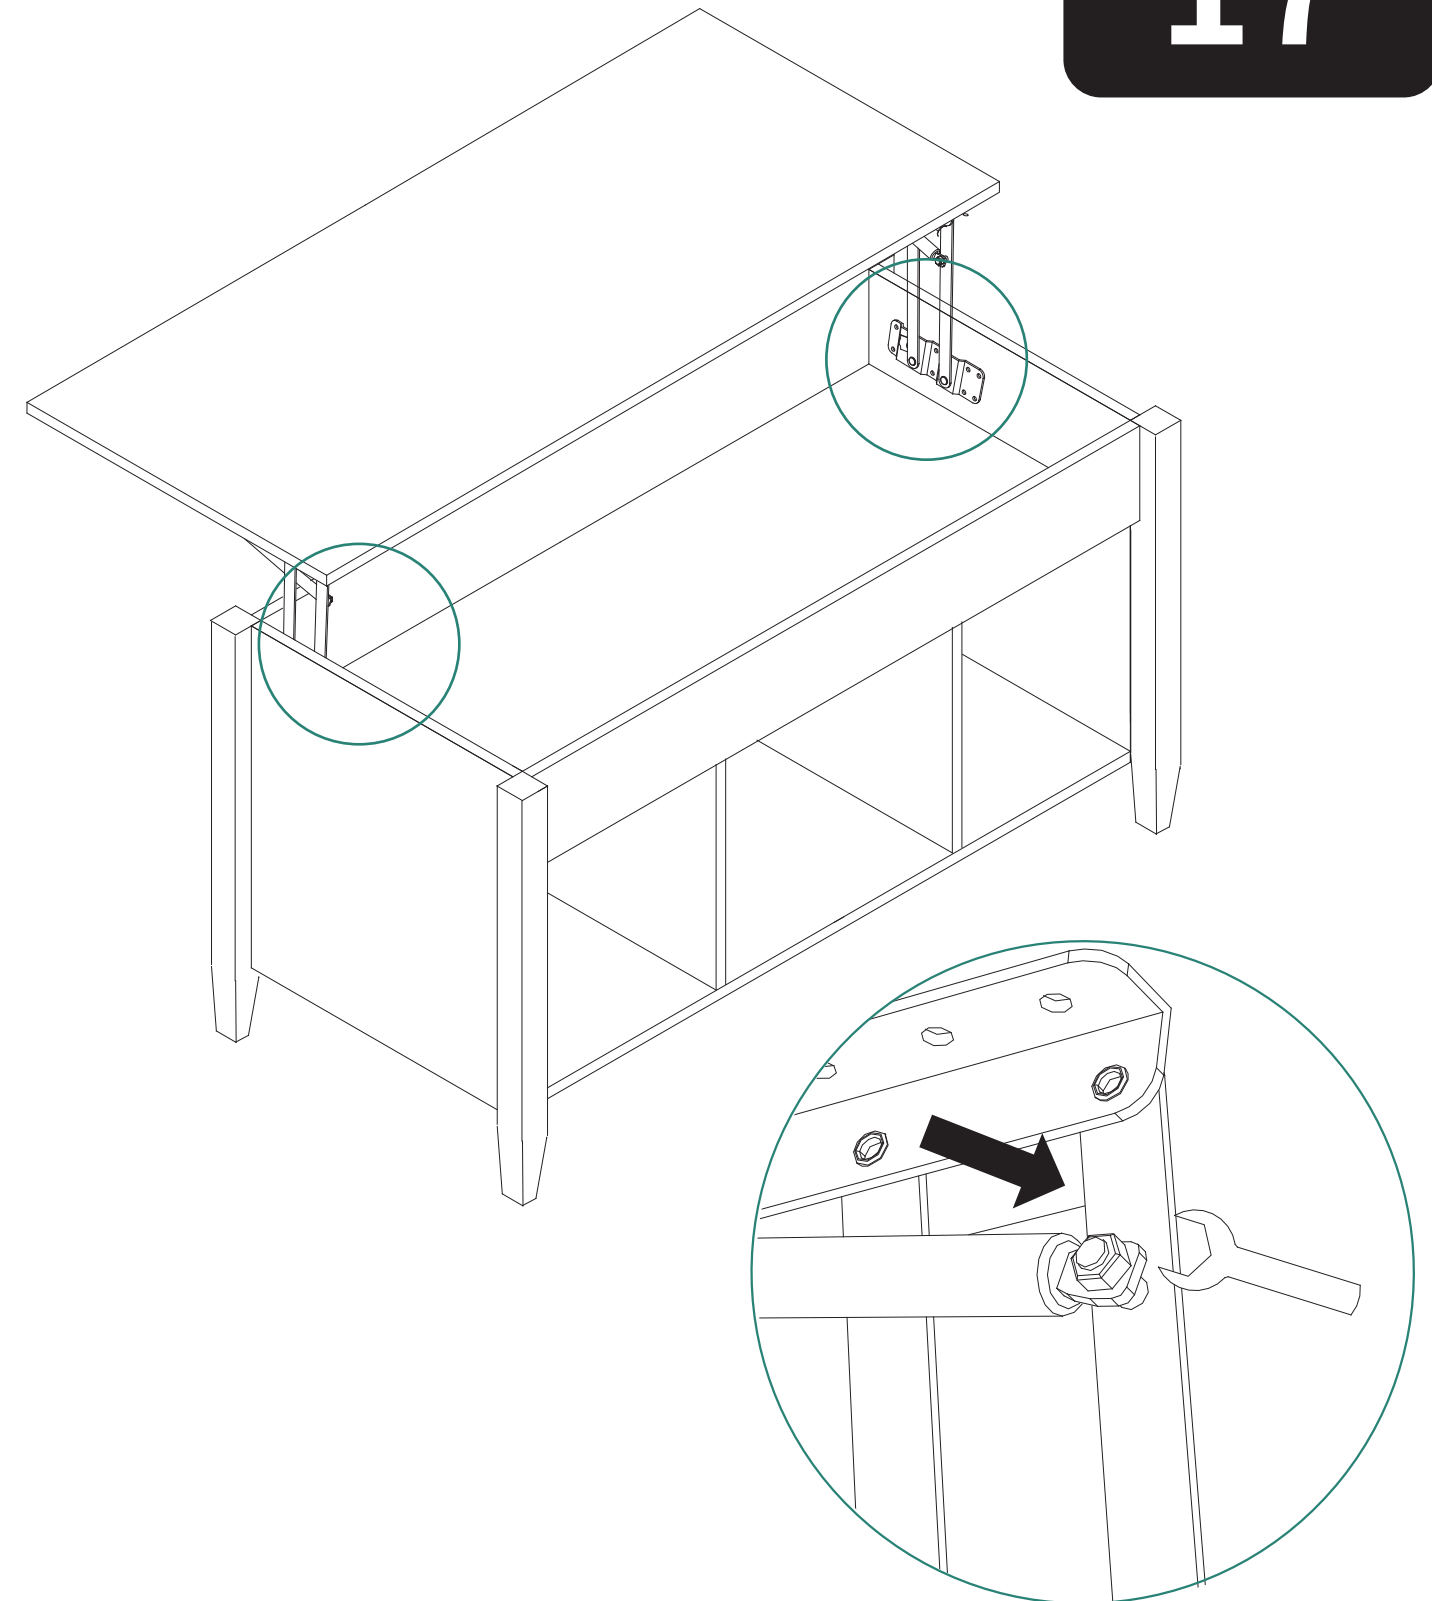


20

18

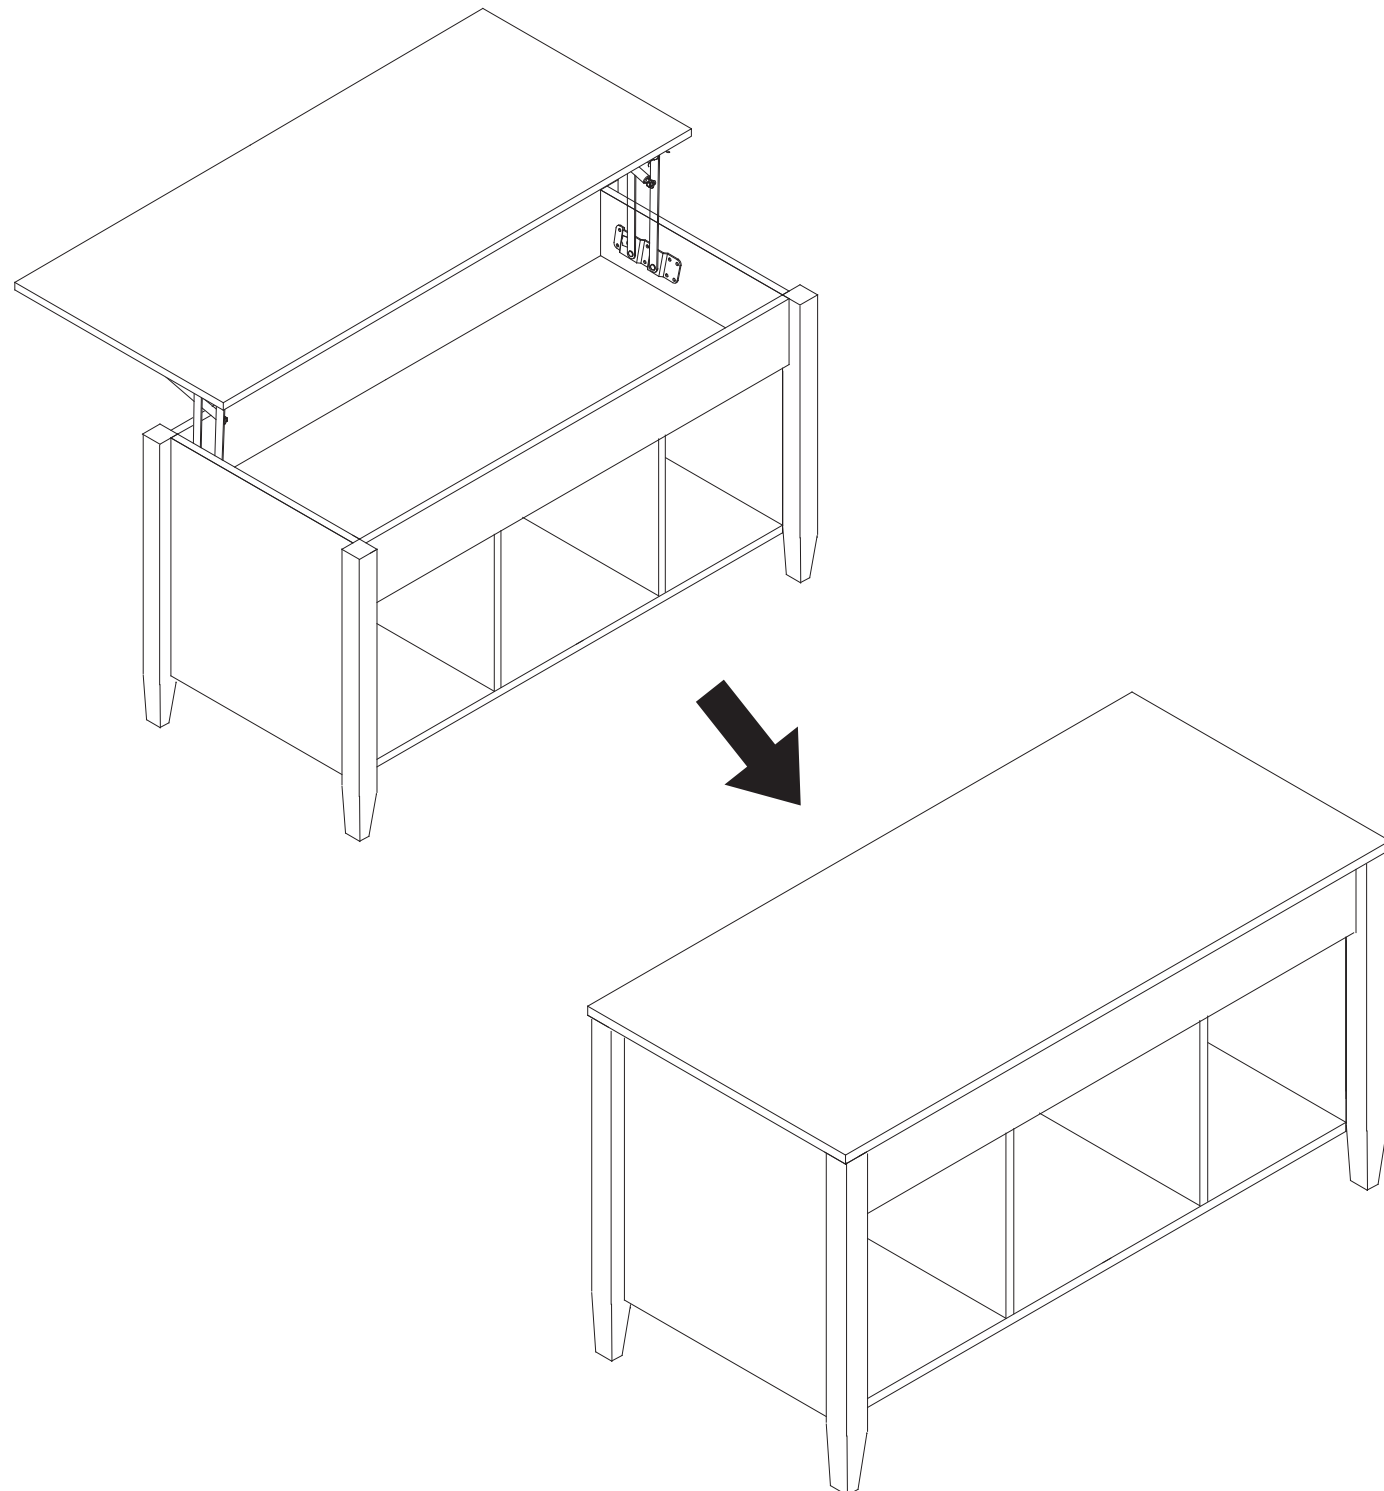

21

19

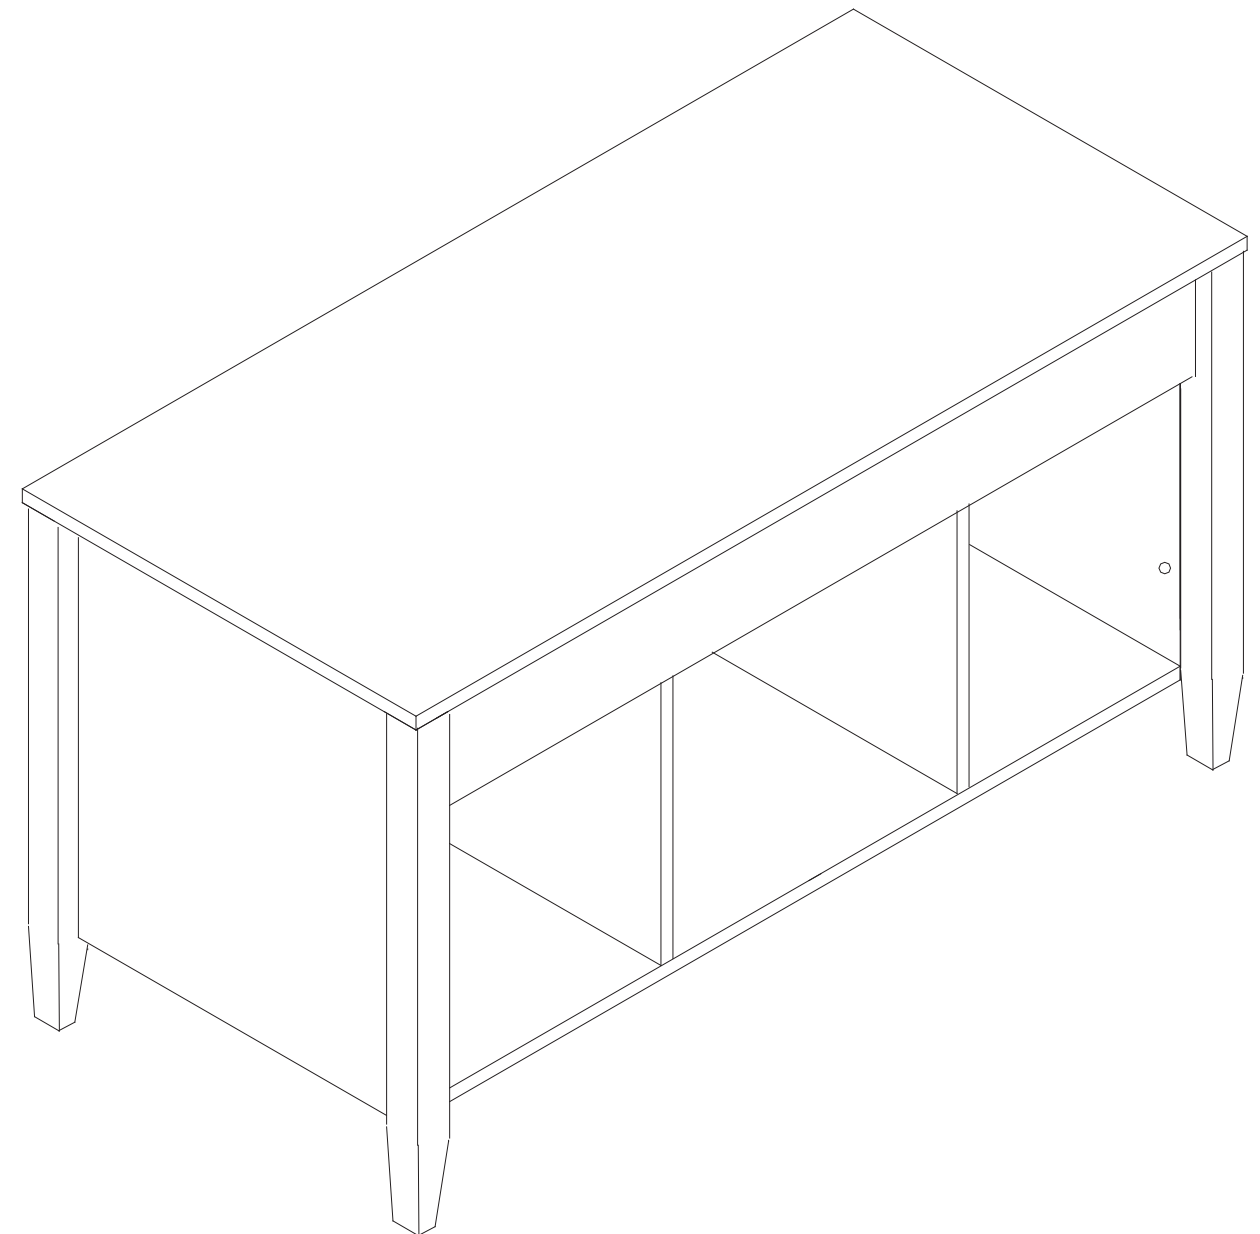

Installation Completed

22