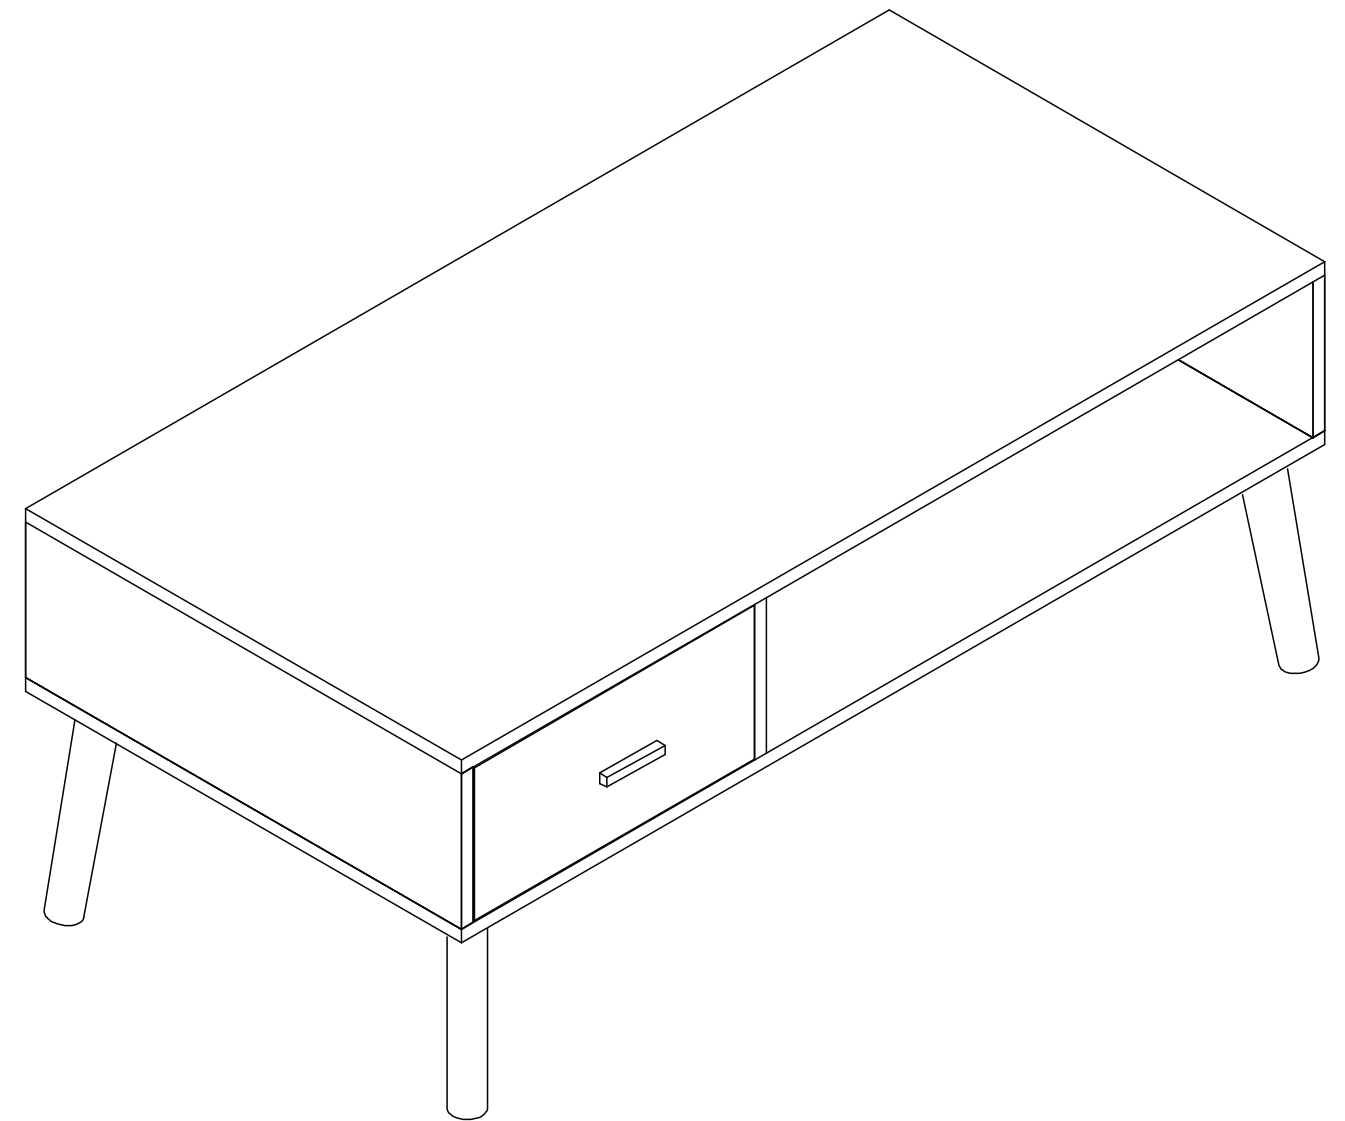


FTLFCT-0007
FTLFCT-0008



COFFEE TABLE

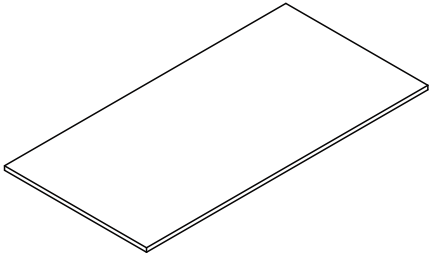
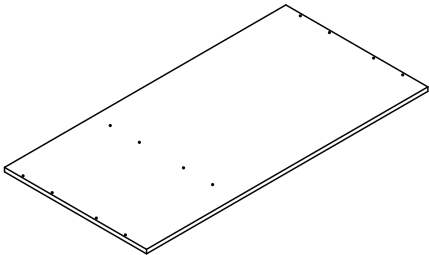
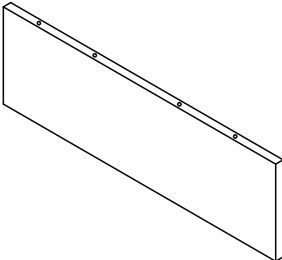
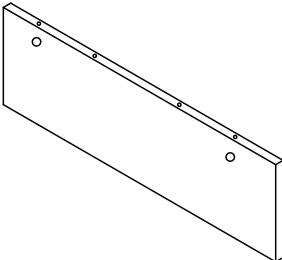
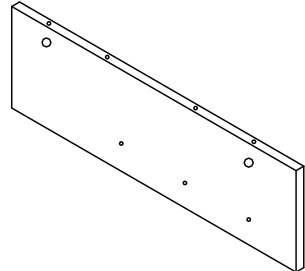
CONTACT US:







If you have any questions about the installation of YITAHOME products, just contact us at +1 (888) 717-8084 from Mon-Fri 8:00 AM-4:30 PM PST / Sat. 8:00 AM-12:00 PM PST or e-mail us at after-sale.cs@hotmail.com







Alternative method to contact us (amazon.com orders only)








1. Log into your Amazon account
2. Go to "Your Orders" and find the purchase
3. Click on "Contact Seller"

- ⚠ 1. Gather and organize all required parts prior to assembly.
2. Assemble on a flat, clean and soft surface.

| Item no. | Reference Image | Qty. |
|----------|---|------|
| 1 |  | X1 |
| 2 |  | X1 |
| 3 |  | X1 |
| 4 |  | X1 |
| 5 |  | X1 |

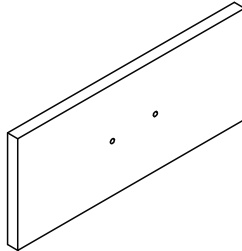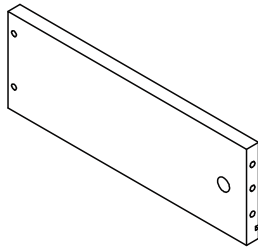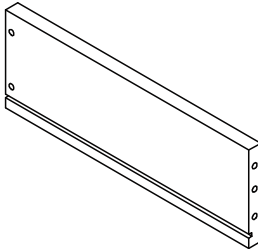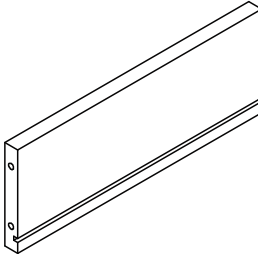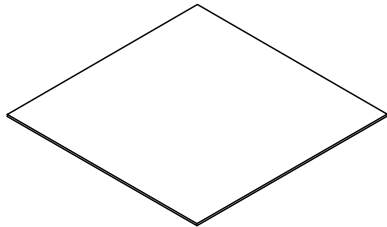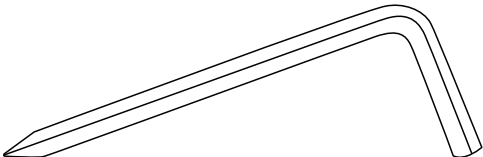
| Item no. | Reference Image | Qty. |
|----------|---|------|
| 6 |  | X1 |
| 7 |  | X1 |
| 8 |  | X1 |
| 9 |  | X1 |
| 10 |  | X1 |
| 11 |  | X1 |
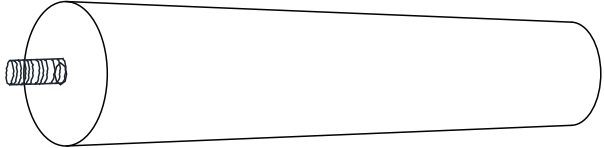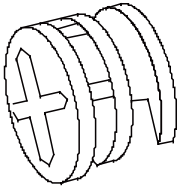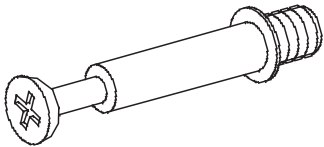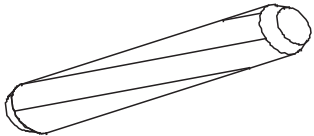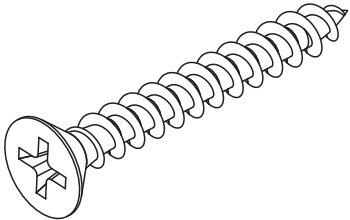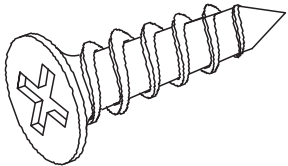
| Item no. | Reference Image | Qty. |
|----------|--|------|
| A |  | X4 |
| B |  | X8 |
| C |  | X8 |
| D |  | X16 |
| E |  M4 X 35MM | X10 |
| F |  M3.5 X 12MM | X12 |

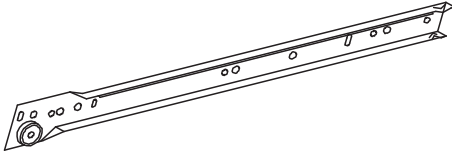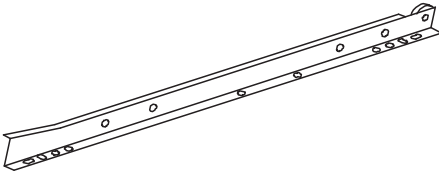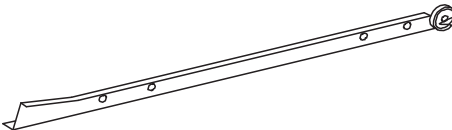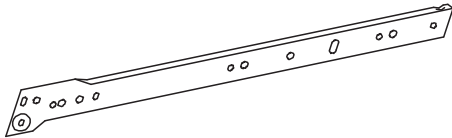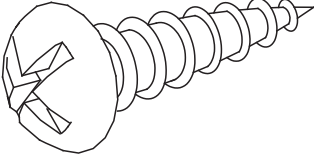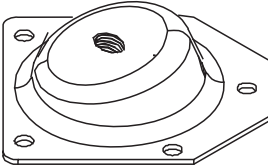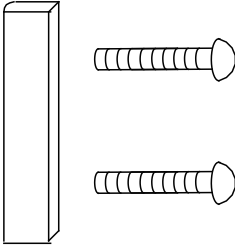
| Item no. | Reference Image | Qty. |
|----------|--|------|
| G |  CL | X1 |
| |  DL | X1 |
| |  DR | X1 |
| |  CR | X1 |
| H |  M4 X 12MM | X20 |
| I |  | X4 |
| J |  | X1 |

ECCENTRIC WHEEL

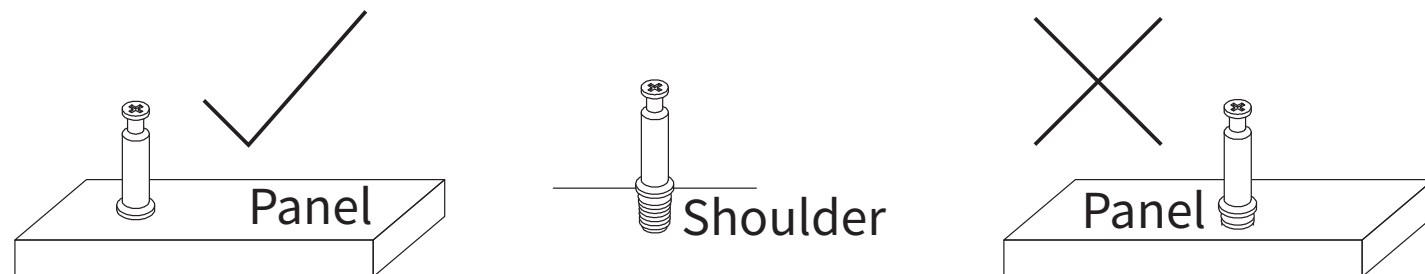
Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.



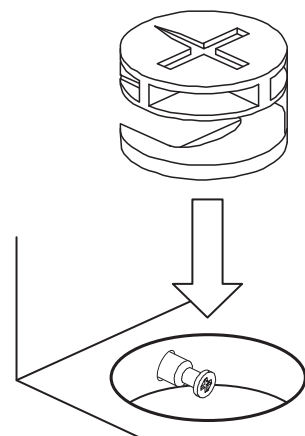The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.




Turn the cam lock clockwise to tighten.

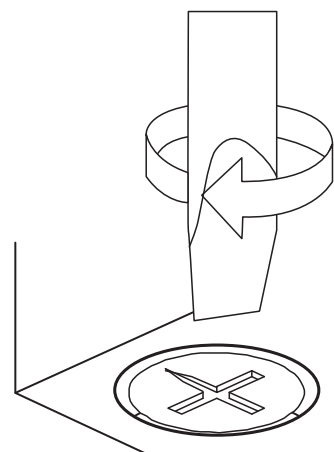


5


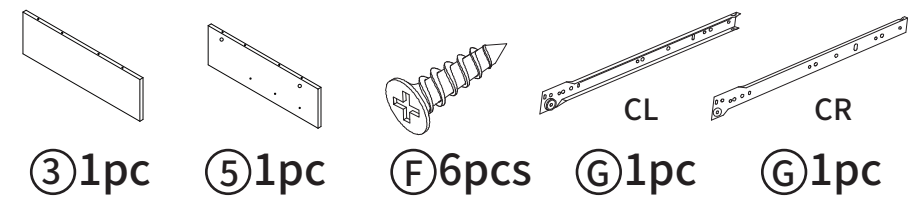
1



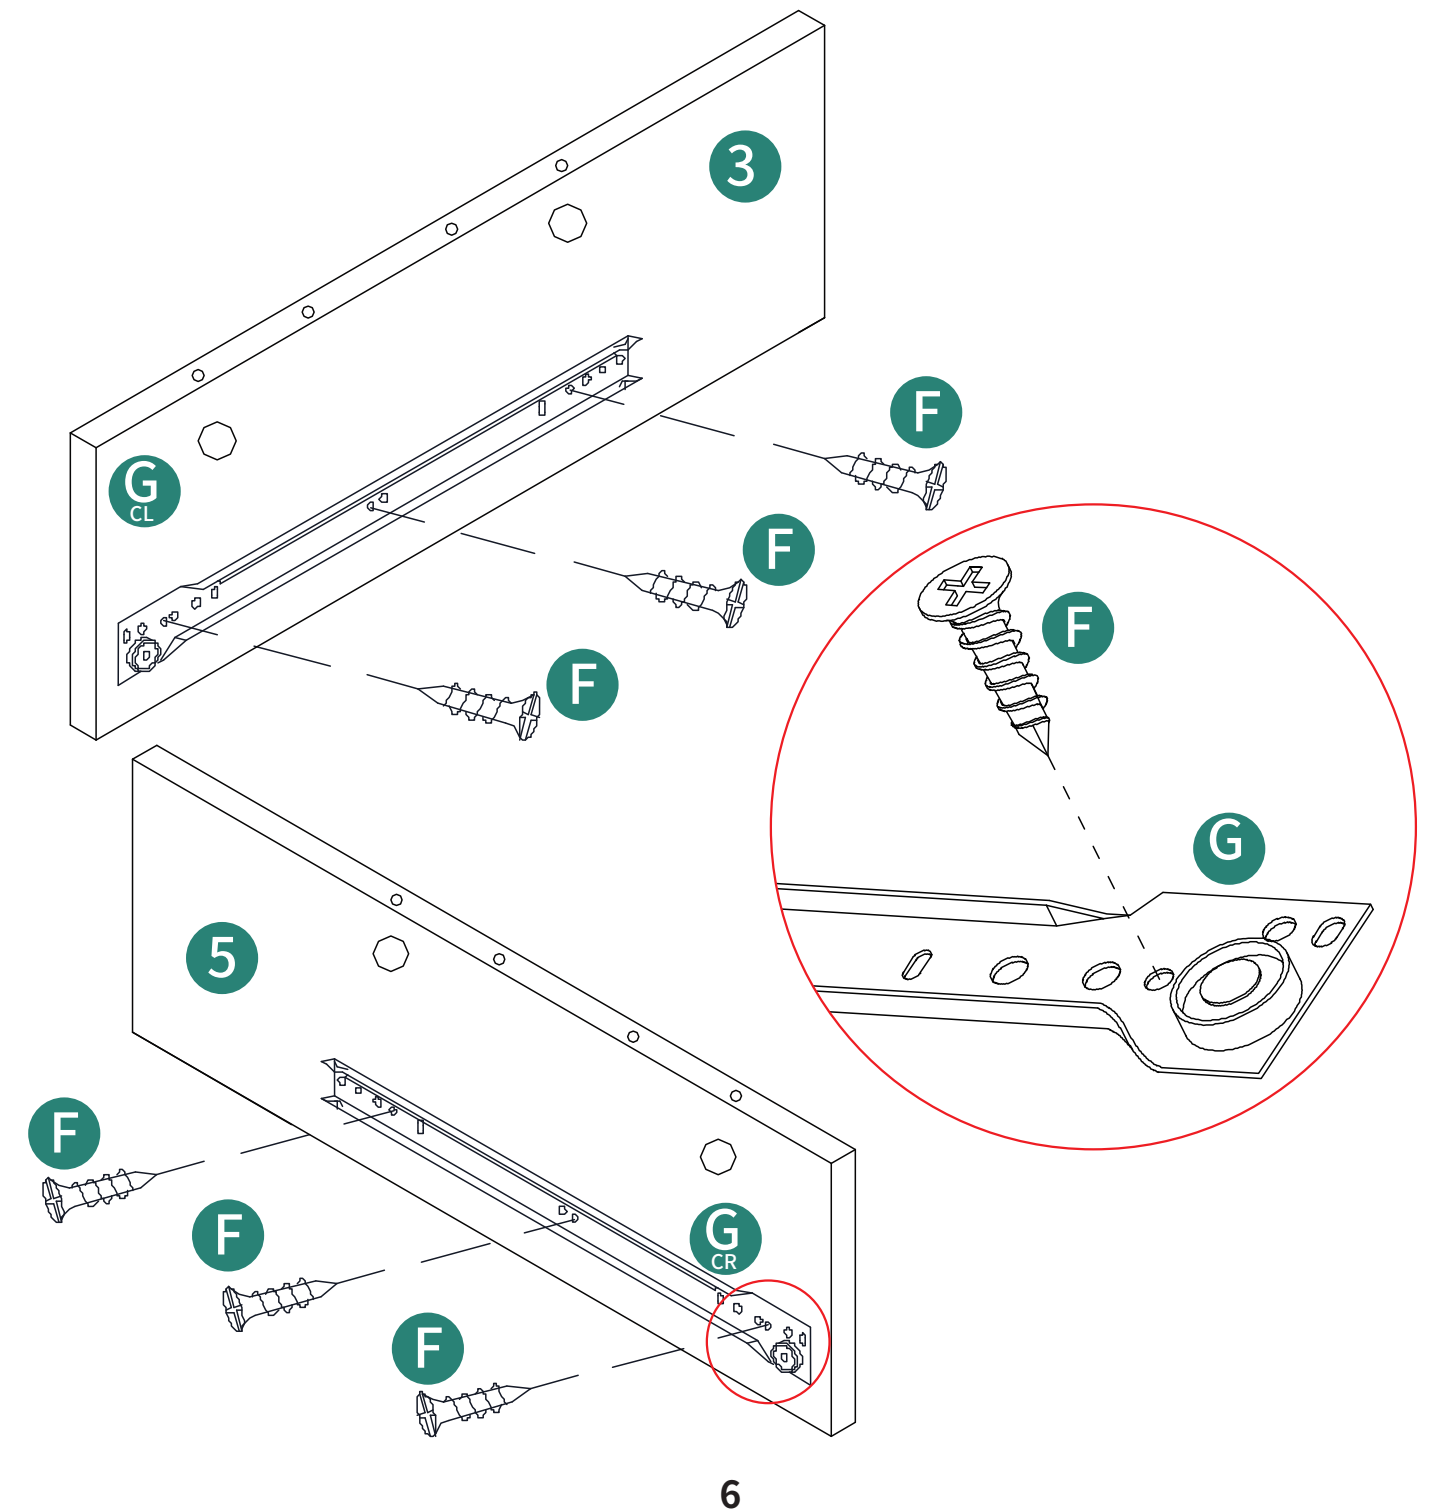Do not tighten all the screws until after completing step 1.





2

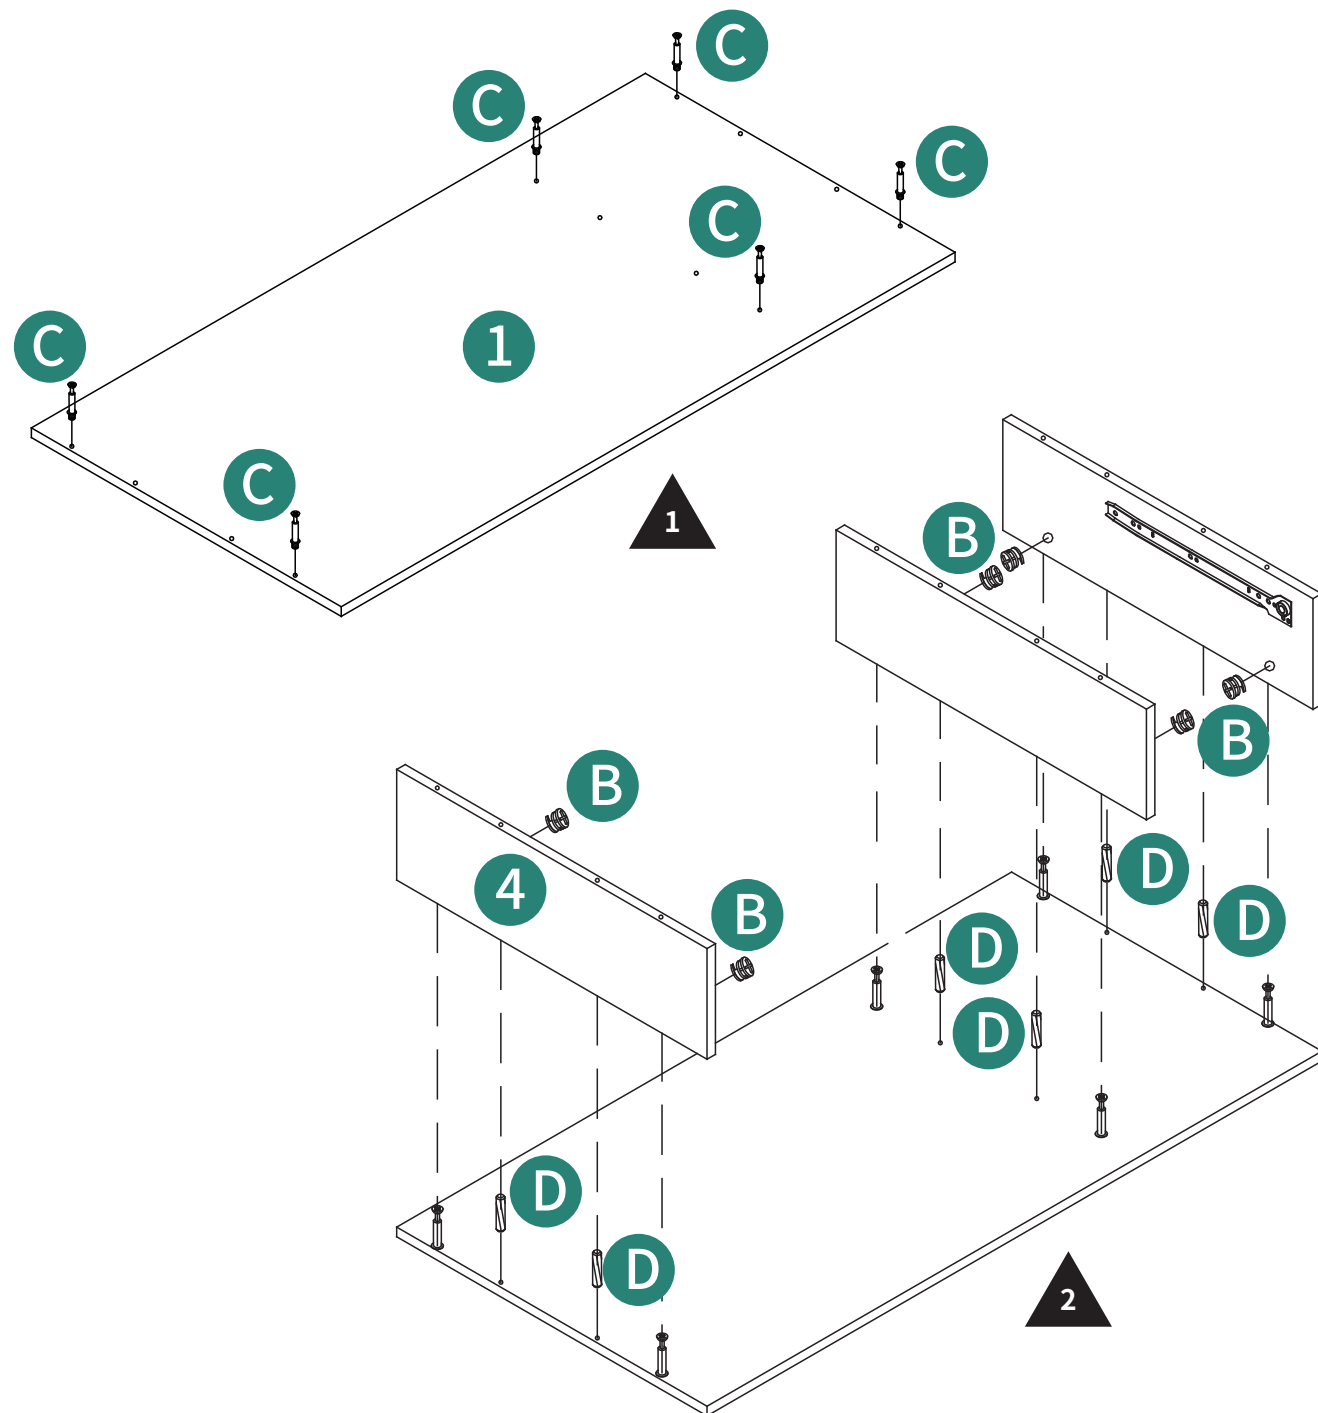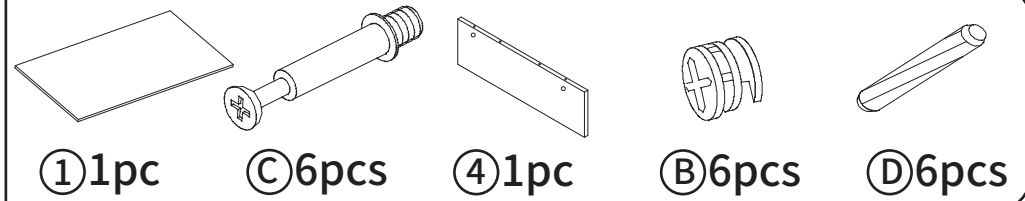


7

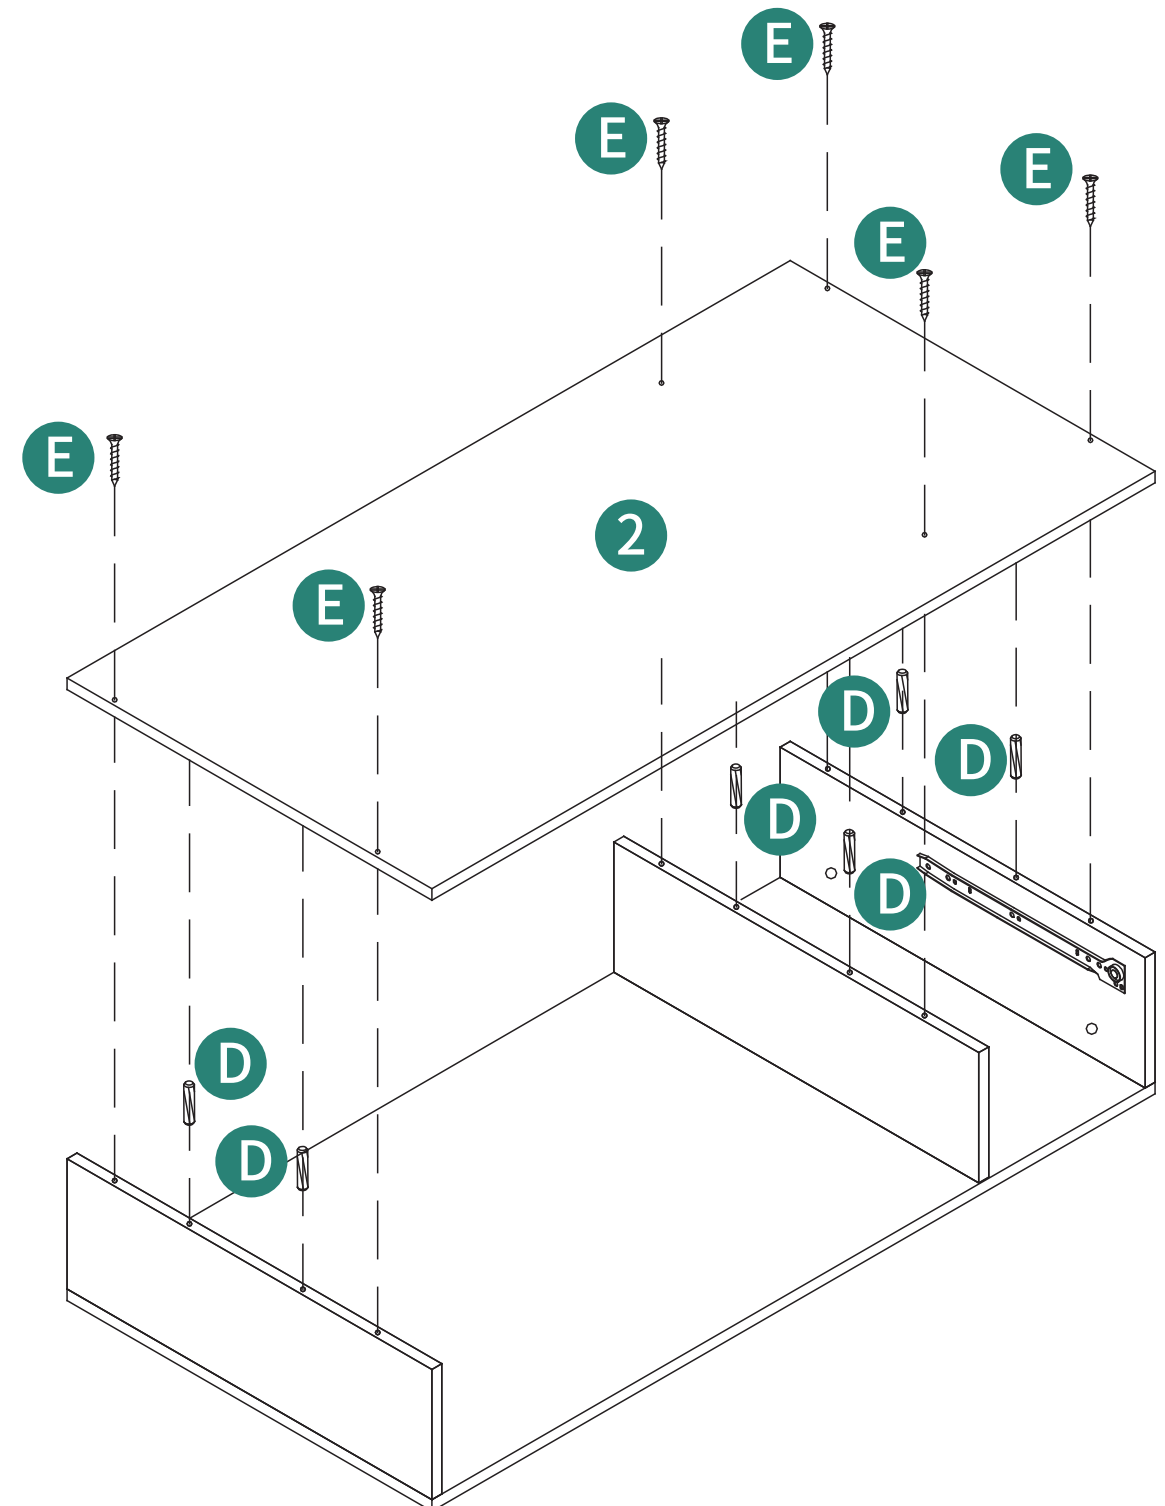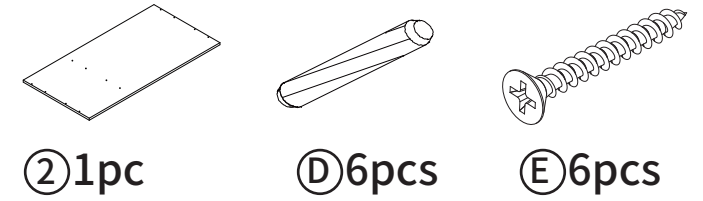3




8


4




Ⓜ20pcs




Ⓢ4pcs

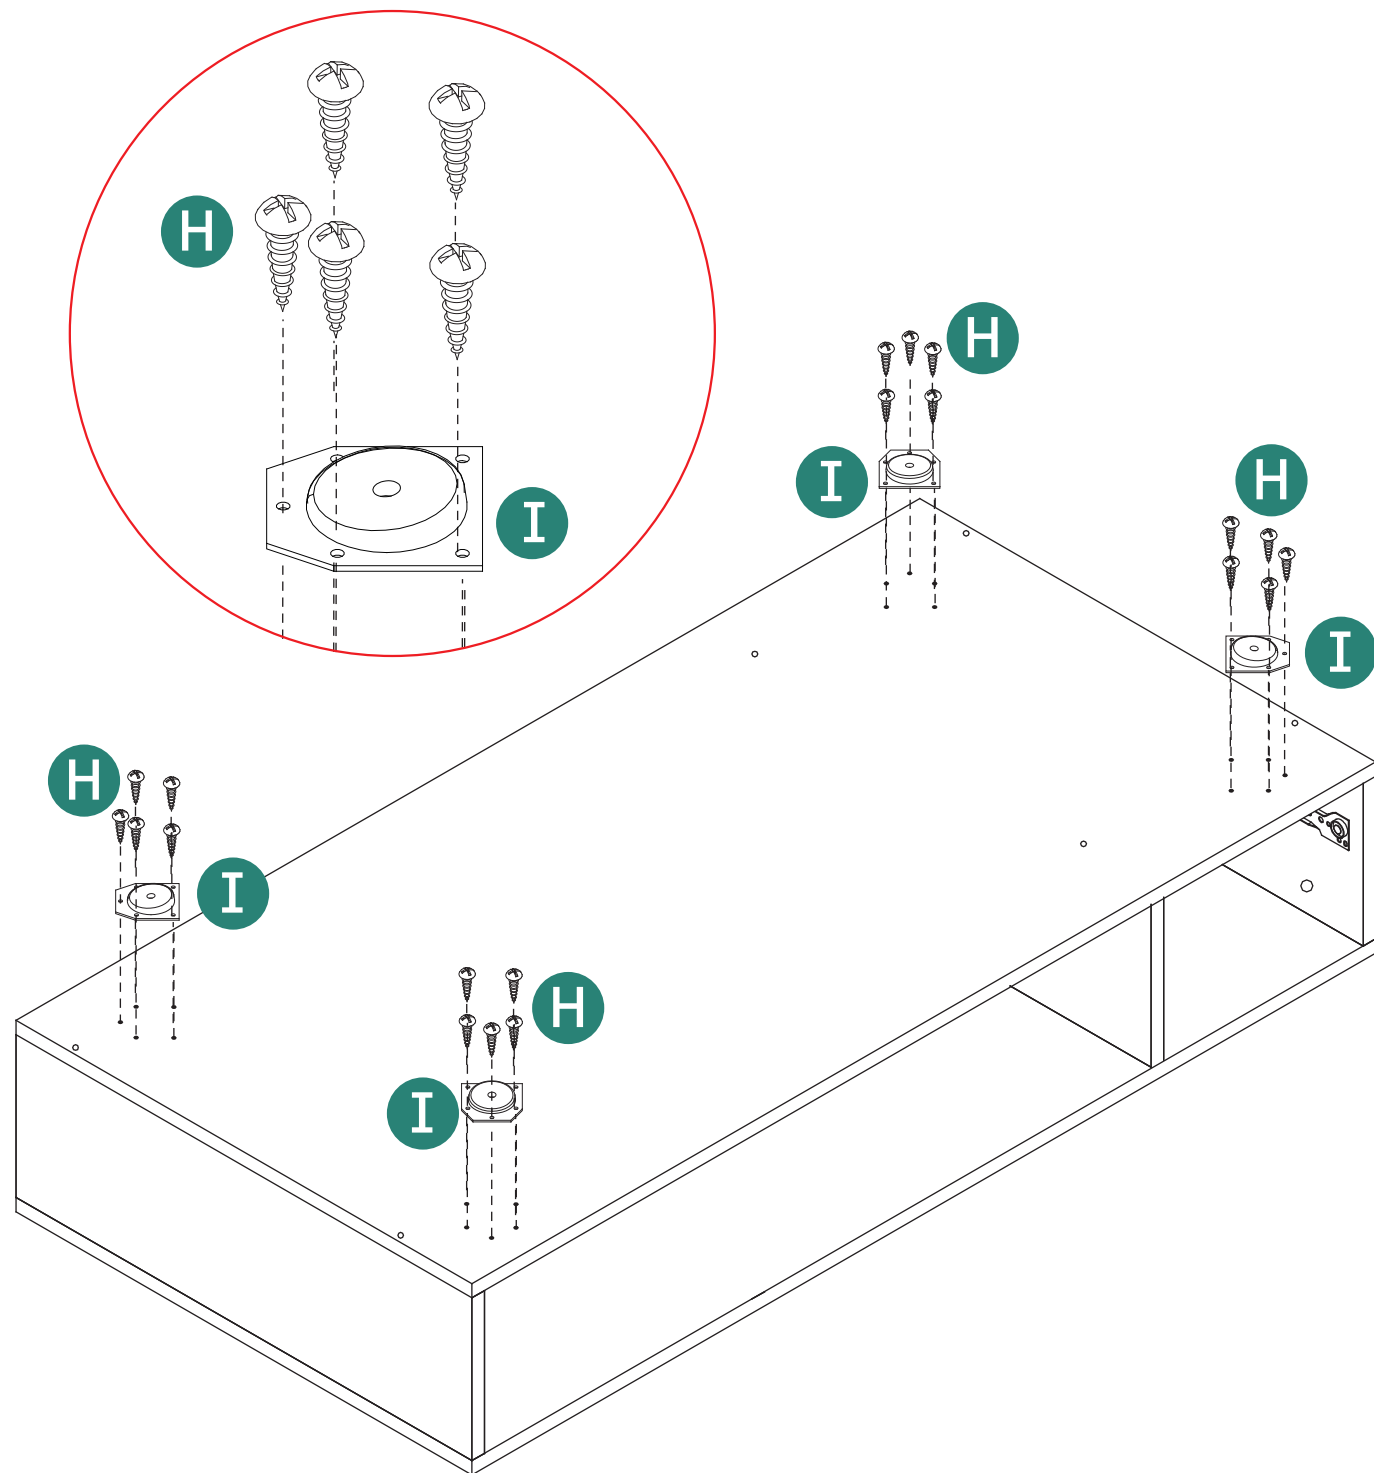


5



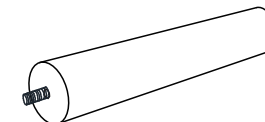


Ⓐ4pcs



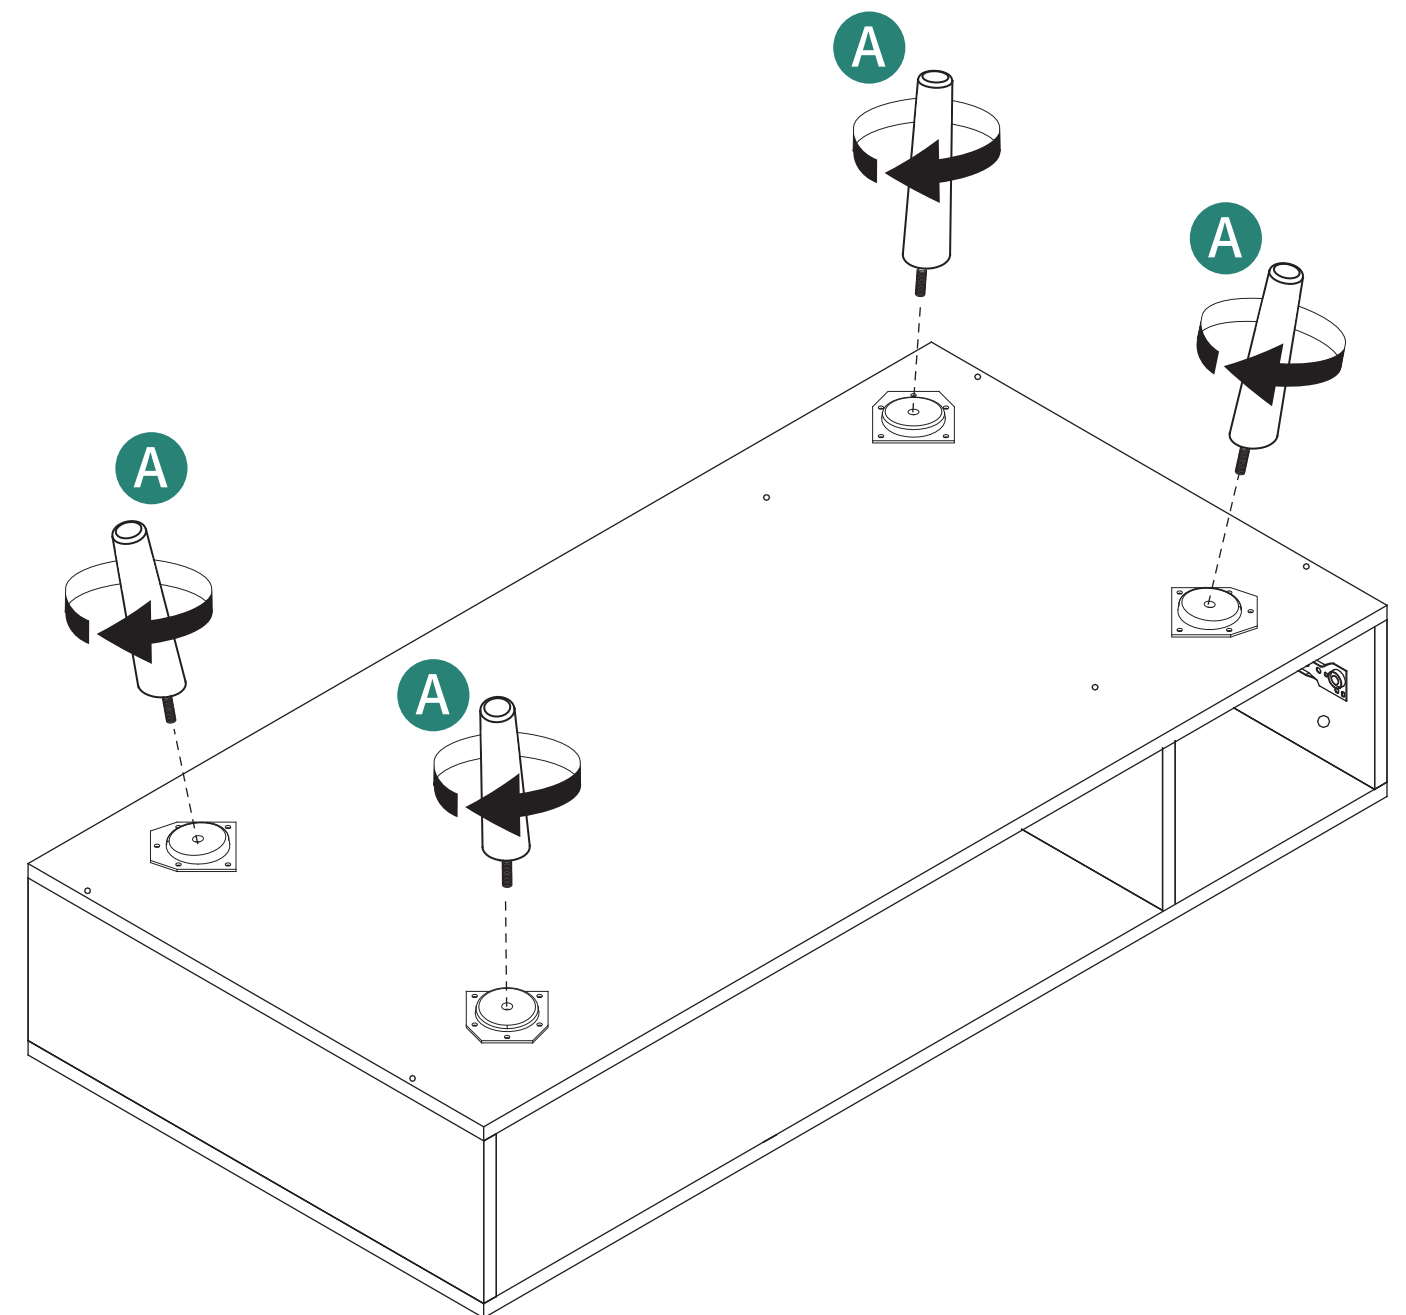


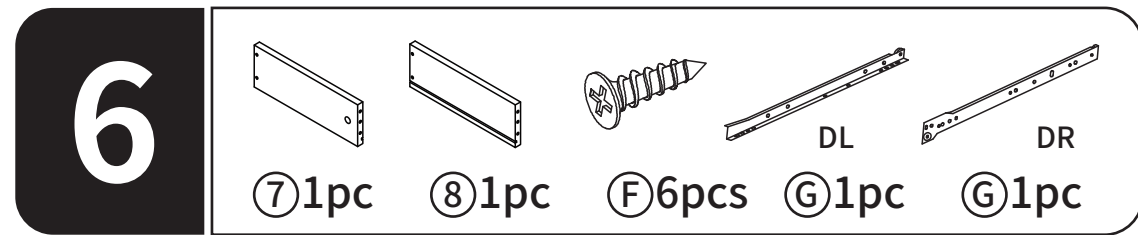

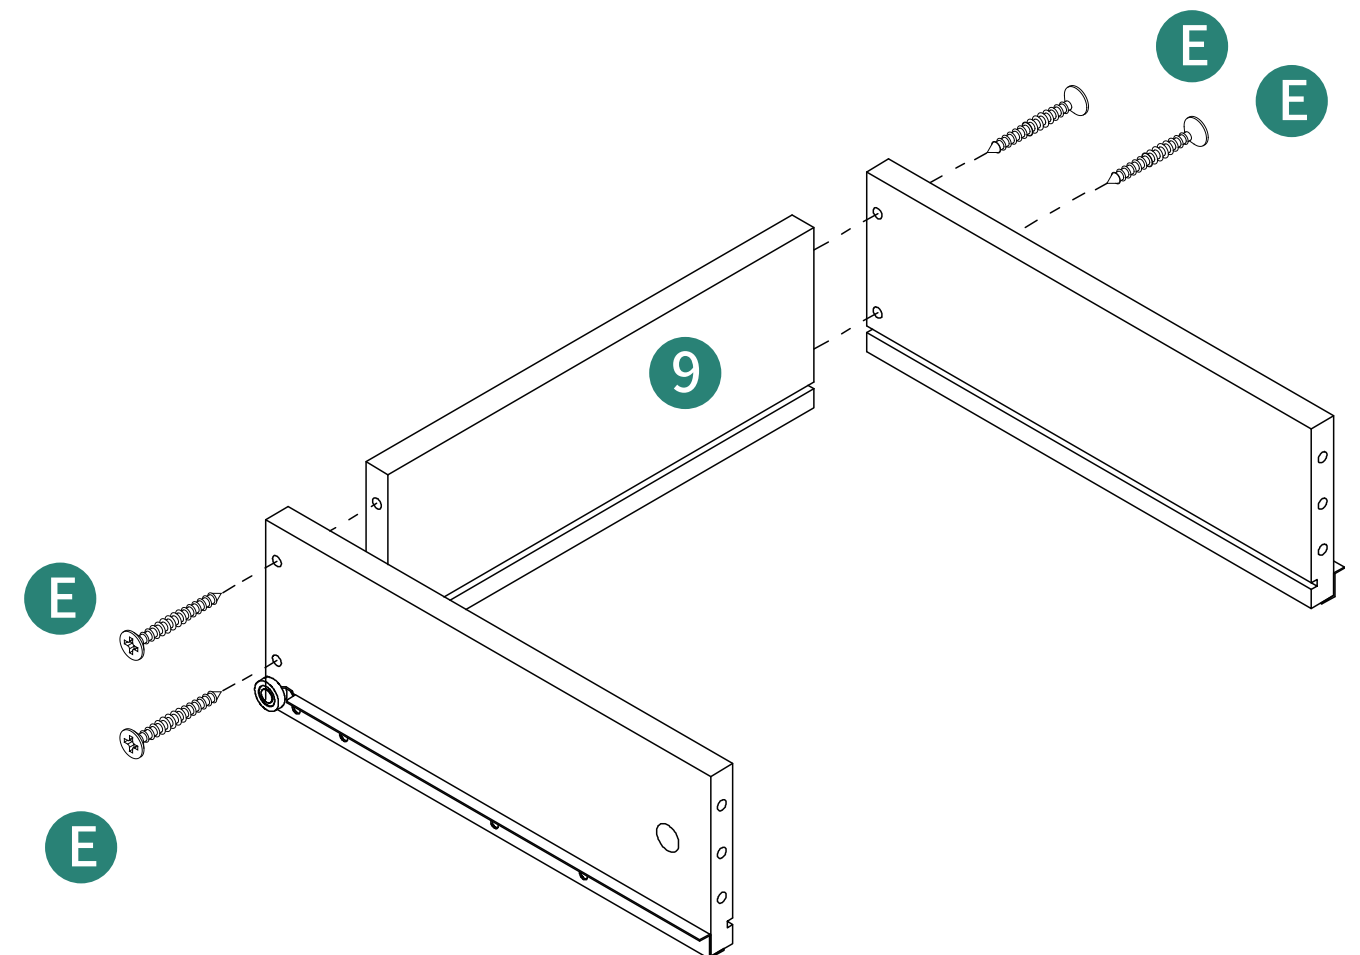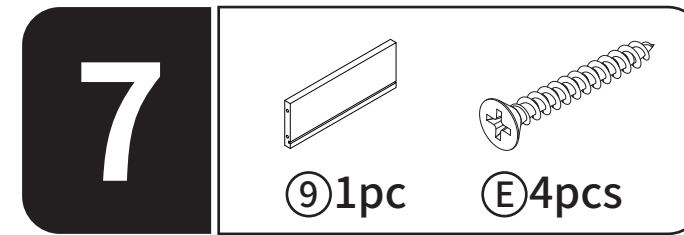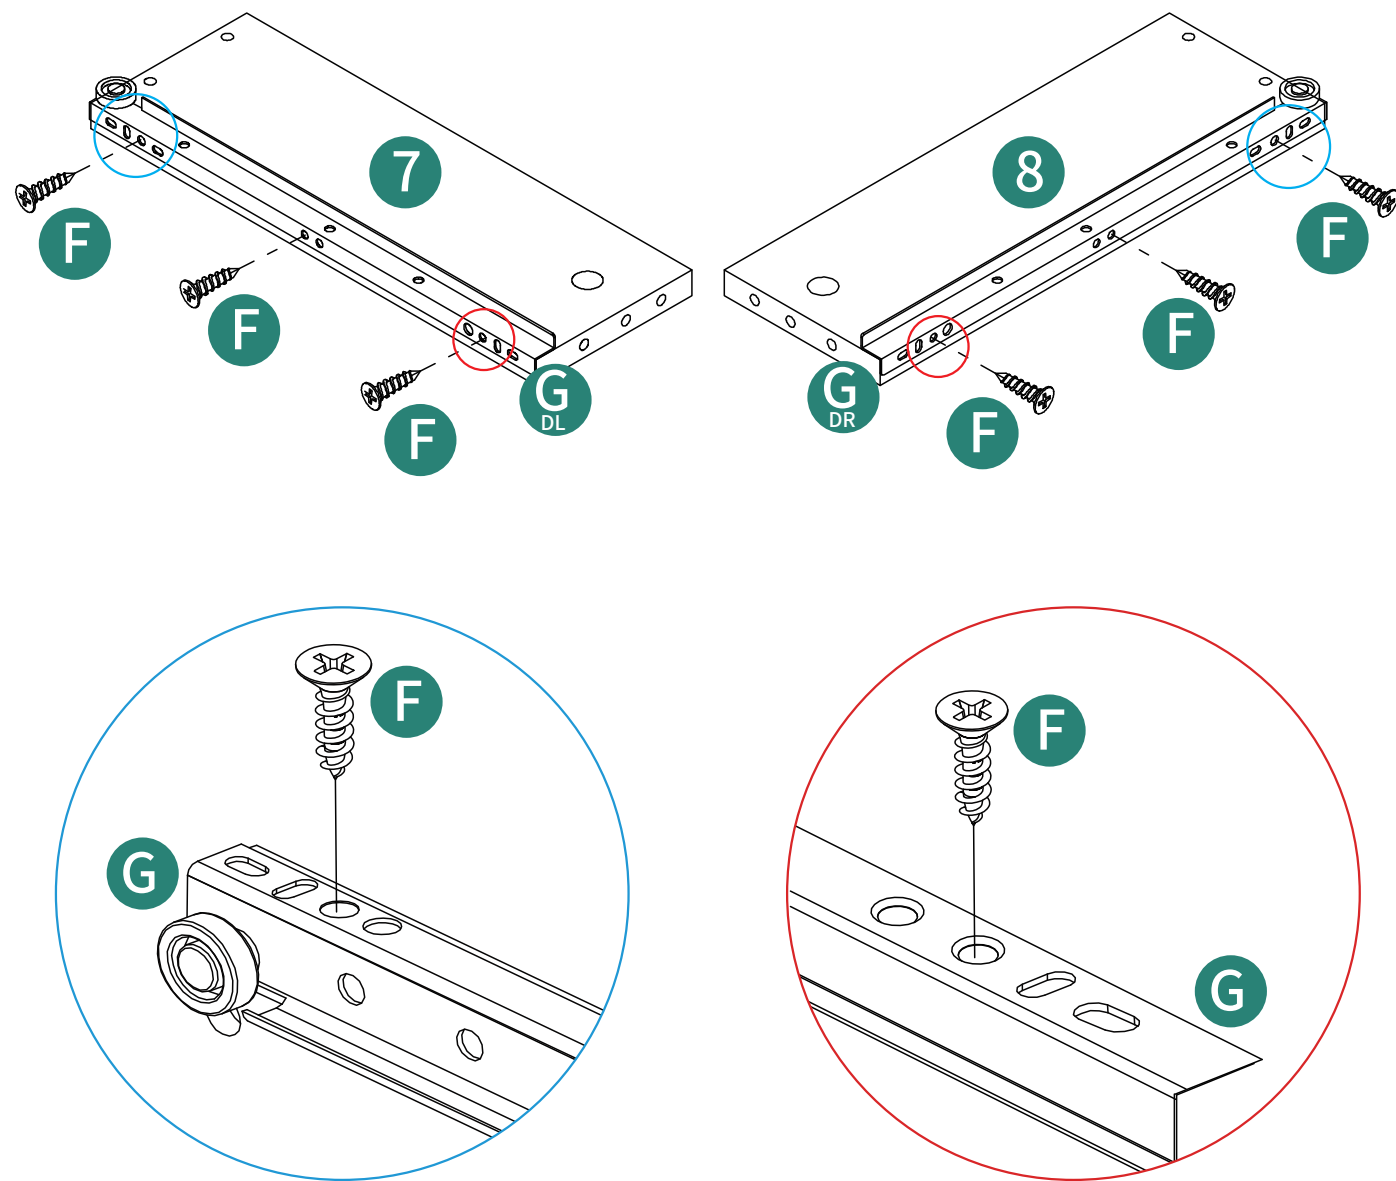Do not tighten all the screws until after completing step 6.




8

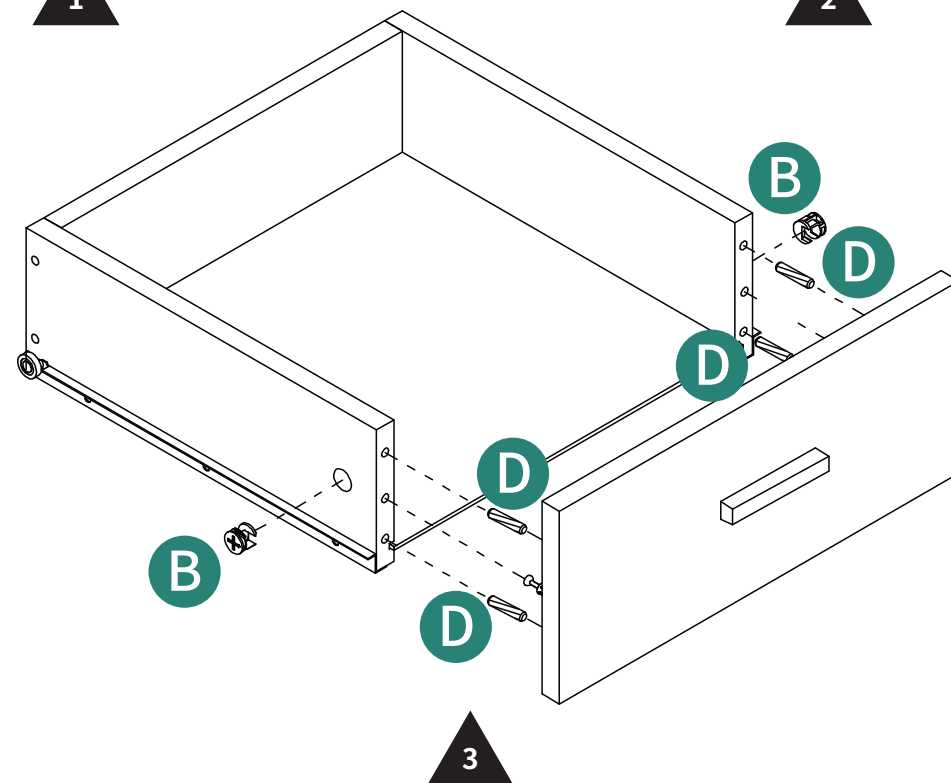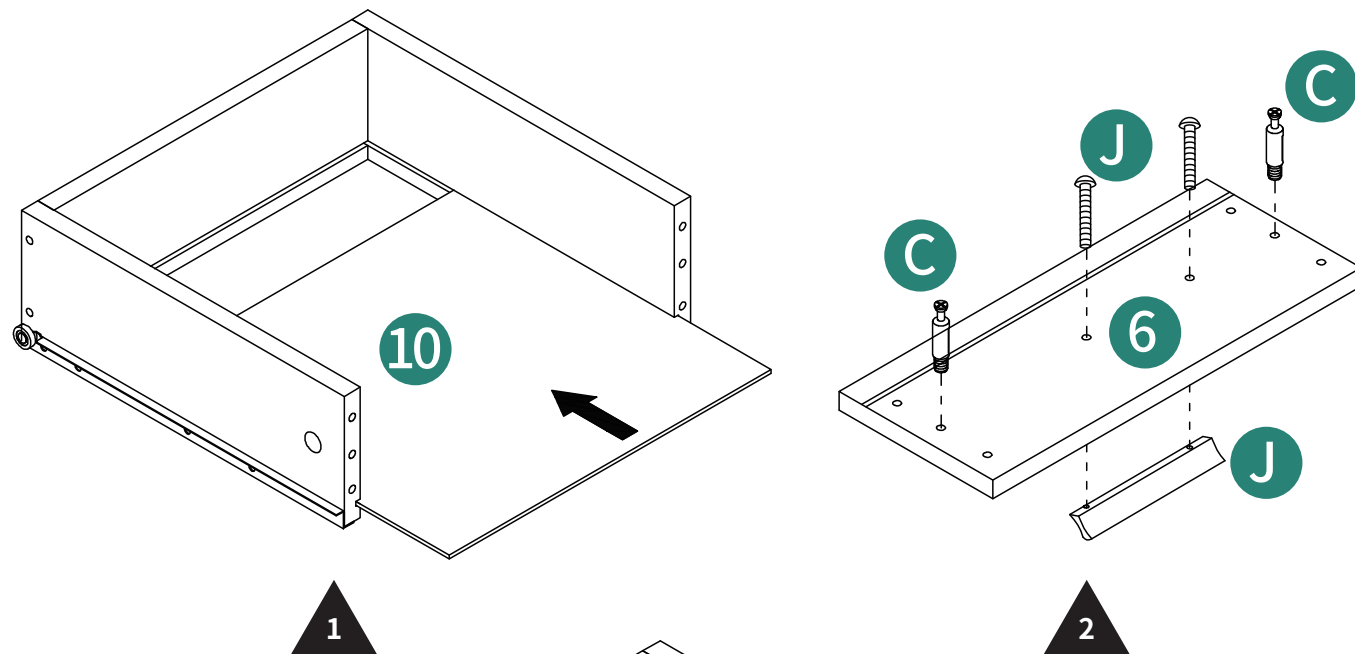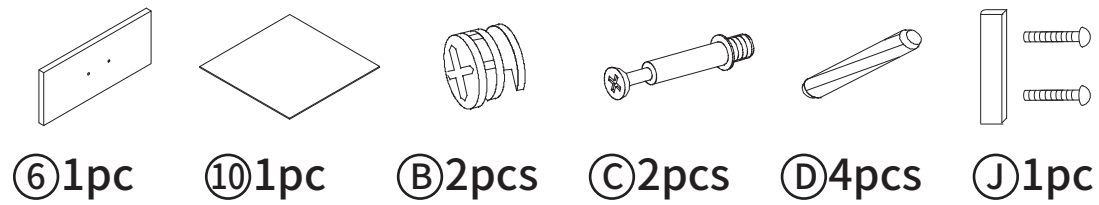

13

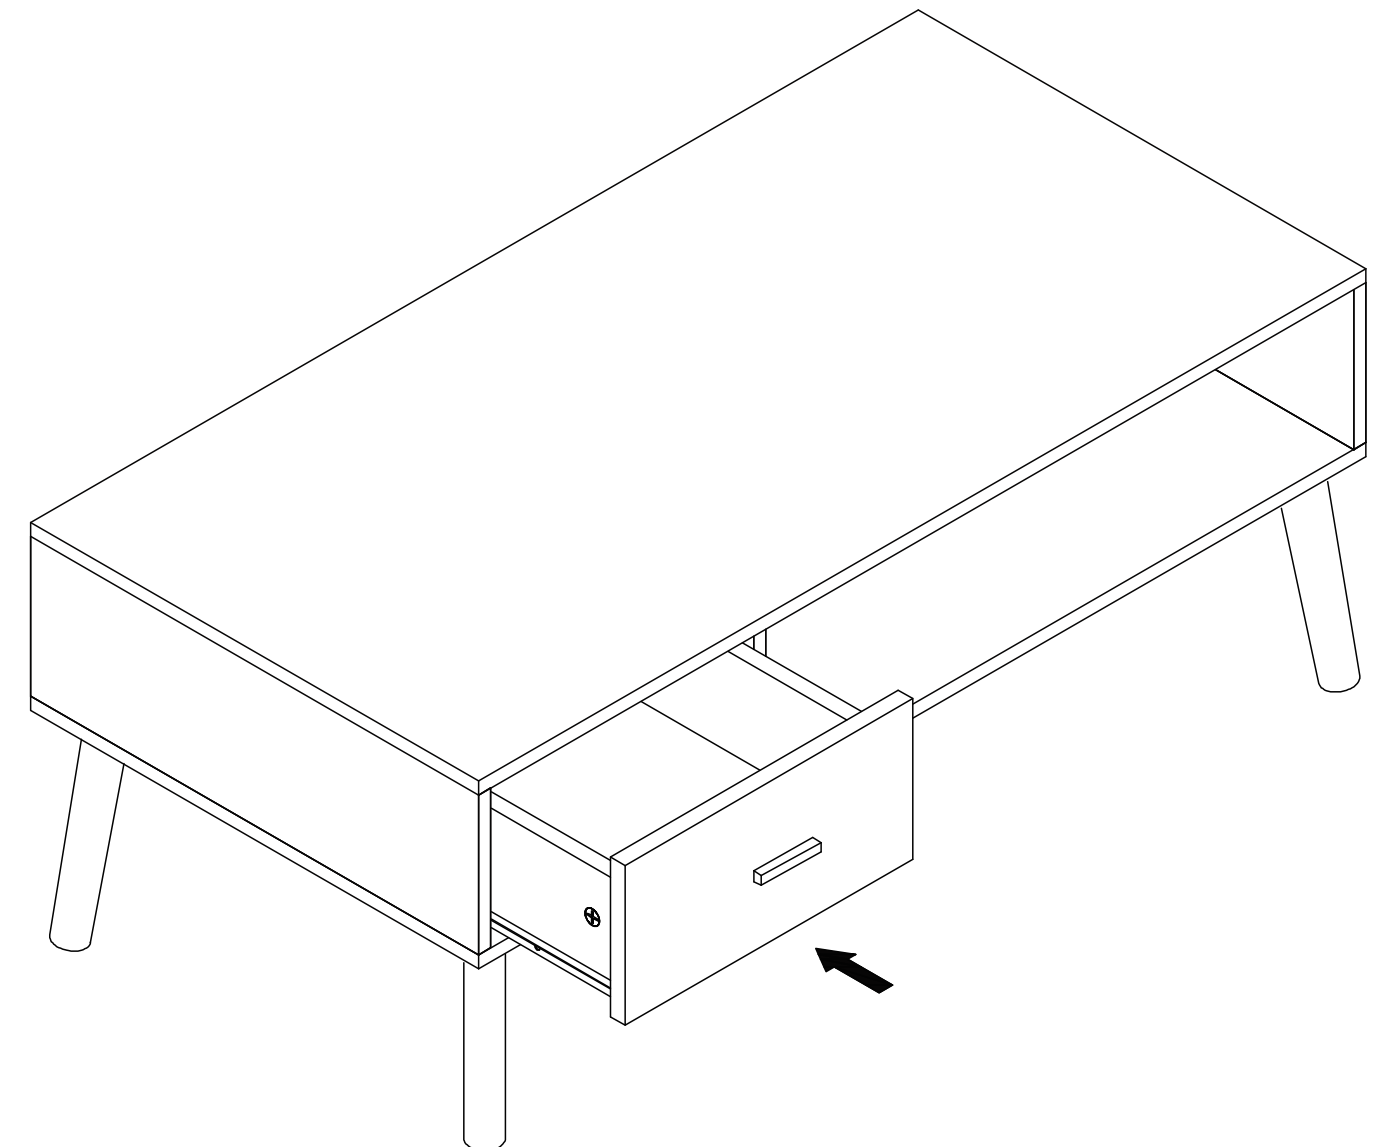9



Installation Completed

14