

FTOFWF-0000  
FTOFWF-0001






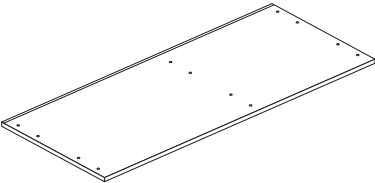

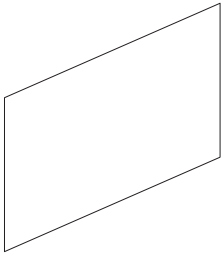

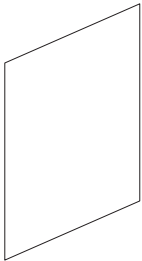
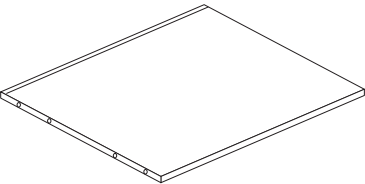
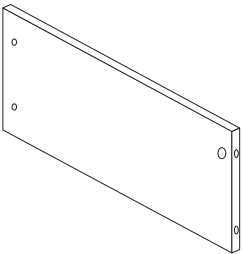
### CONTACT US:












If you have any questions about the installation of YITAHOME products, just contact us at +1 (888) 717-8084 from Mon-Fri 8:00 AM-4:30 PM PST / Sat. 8:00 AM-12:00 PM PST or e-mail us at [after-sale.cs@hotmail.com](mailto:after-sale.cs@hotmail.com)







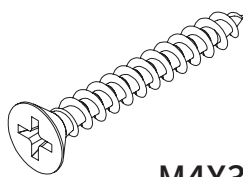
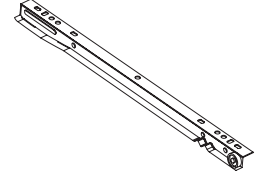
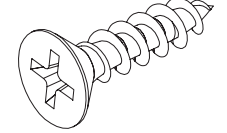
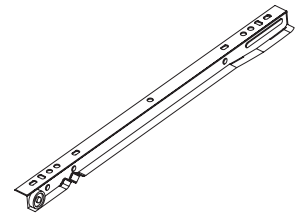
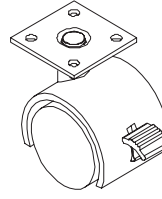
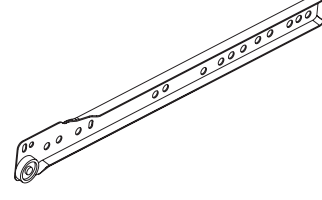
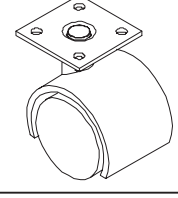
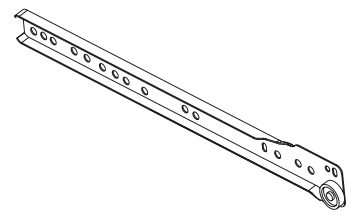
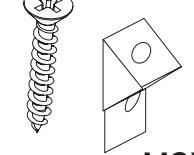
Alternative method to contact us (amazon.com orders only)

1. Log into your Amazon account
2. Go to "Your Orders" and find the purchase
3. Click on "Contact Seller"

### MOBILE 3-DRAWER LATERAL FILING CABINET

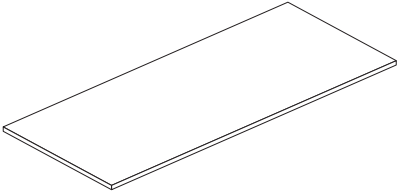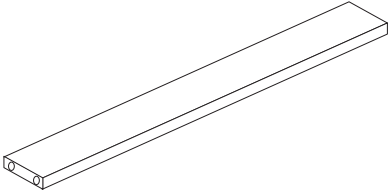
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		X 1	F		X2
B		X1	G		X1
C		X1	H		X1
D		X1	I		X1
E		X1	J		X2

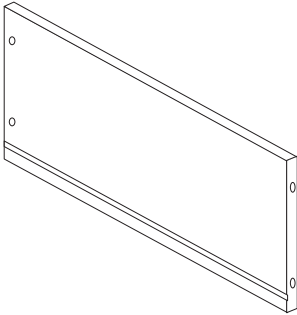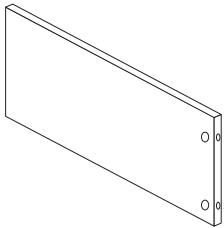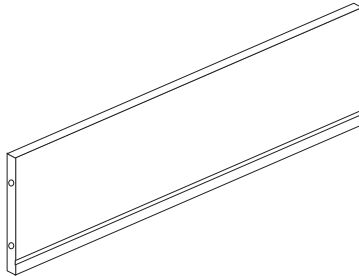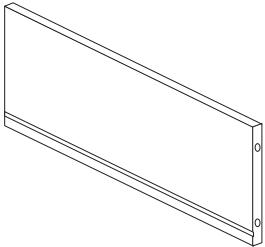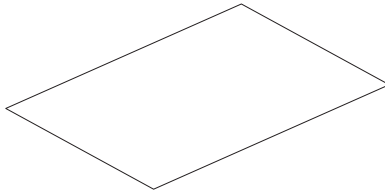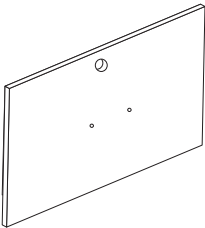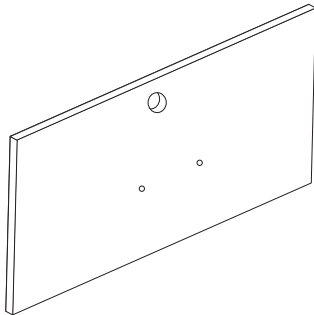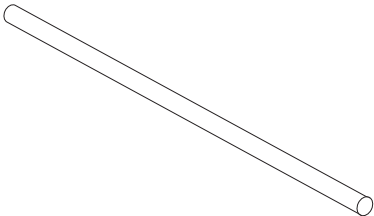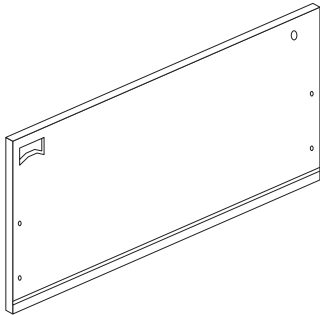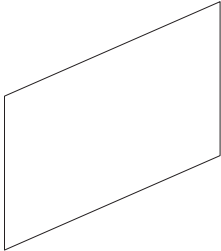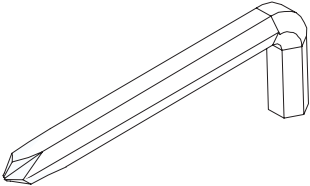Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
K		X2	P		X1
L		X2	Q		X1
M		X3	R		X1
N		X2	S		X2
O		X1	T		X1
			U		X1

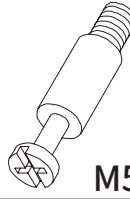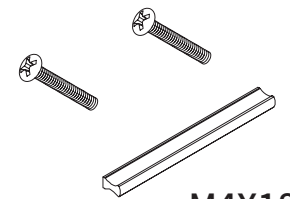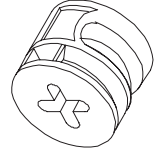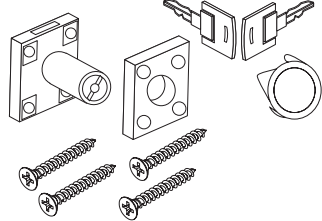
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
a	 M5X35mm	X22	i	 M4X18mm	X3
b	 M15X9.5mm	X22	j		X3
c	 M6X30mm	X24	k	 M4X12mm	X20
d	 M4X35mm	X18	DL		X3
e	 M3X12mm	X30	DR		X3
l		X2	CL		X3
g		X3	CR		X3
h	 M3X16mm	X8			

### Use the Cam Lock and Eccentric Wheel ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.  
Be sure not to tighten too much or too little.

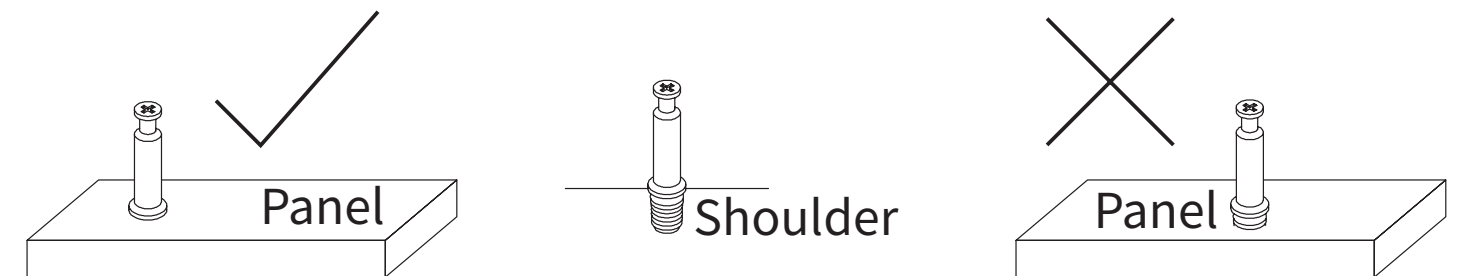



The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

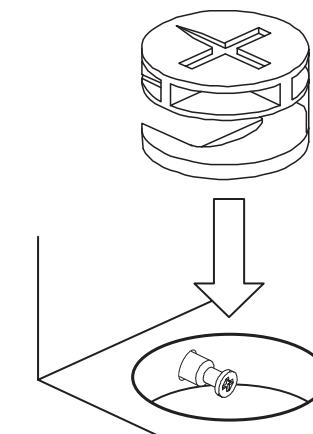

Turn the cam lock clockwise to tighten.


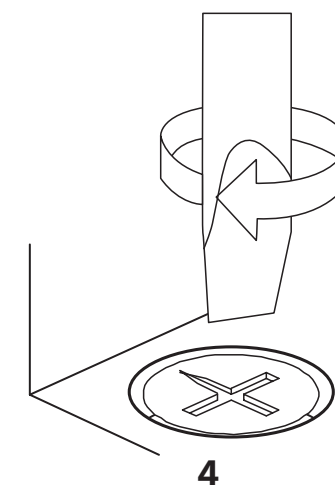


# 1

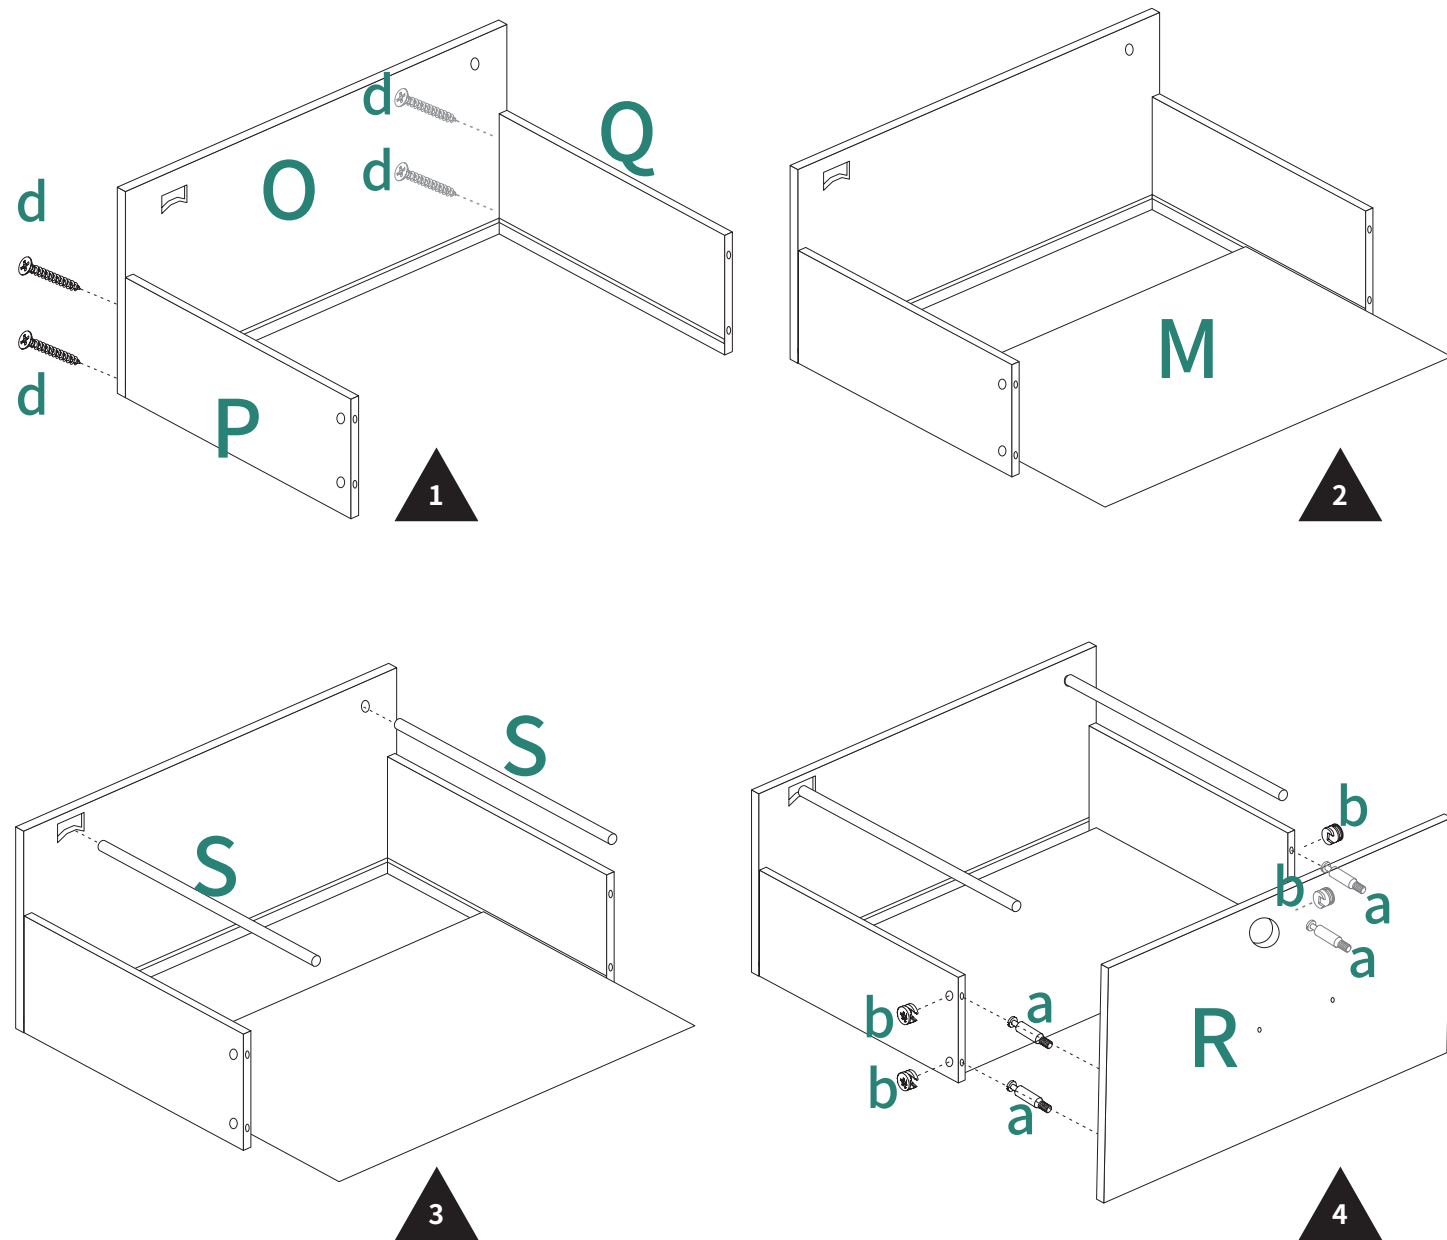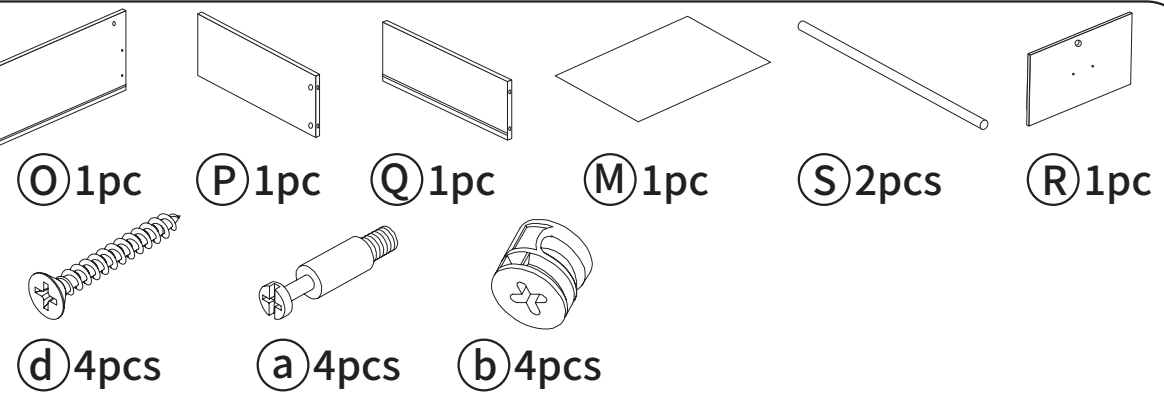

5



# 2

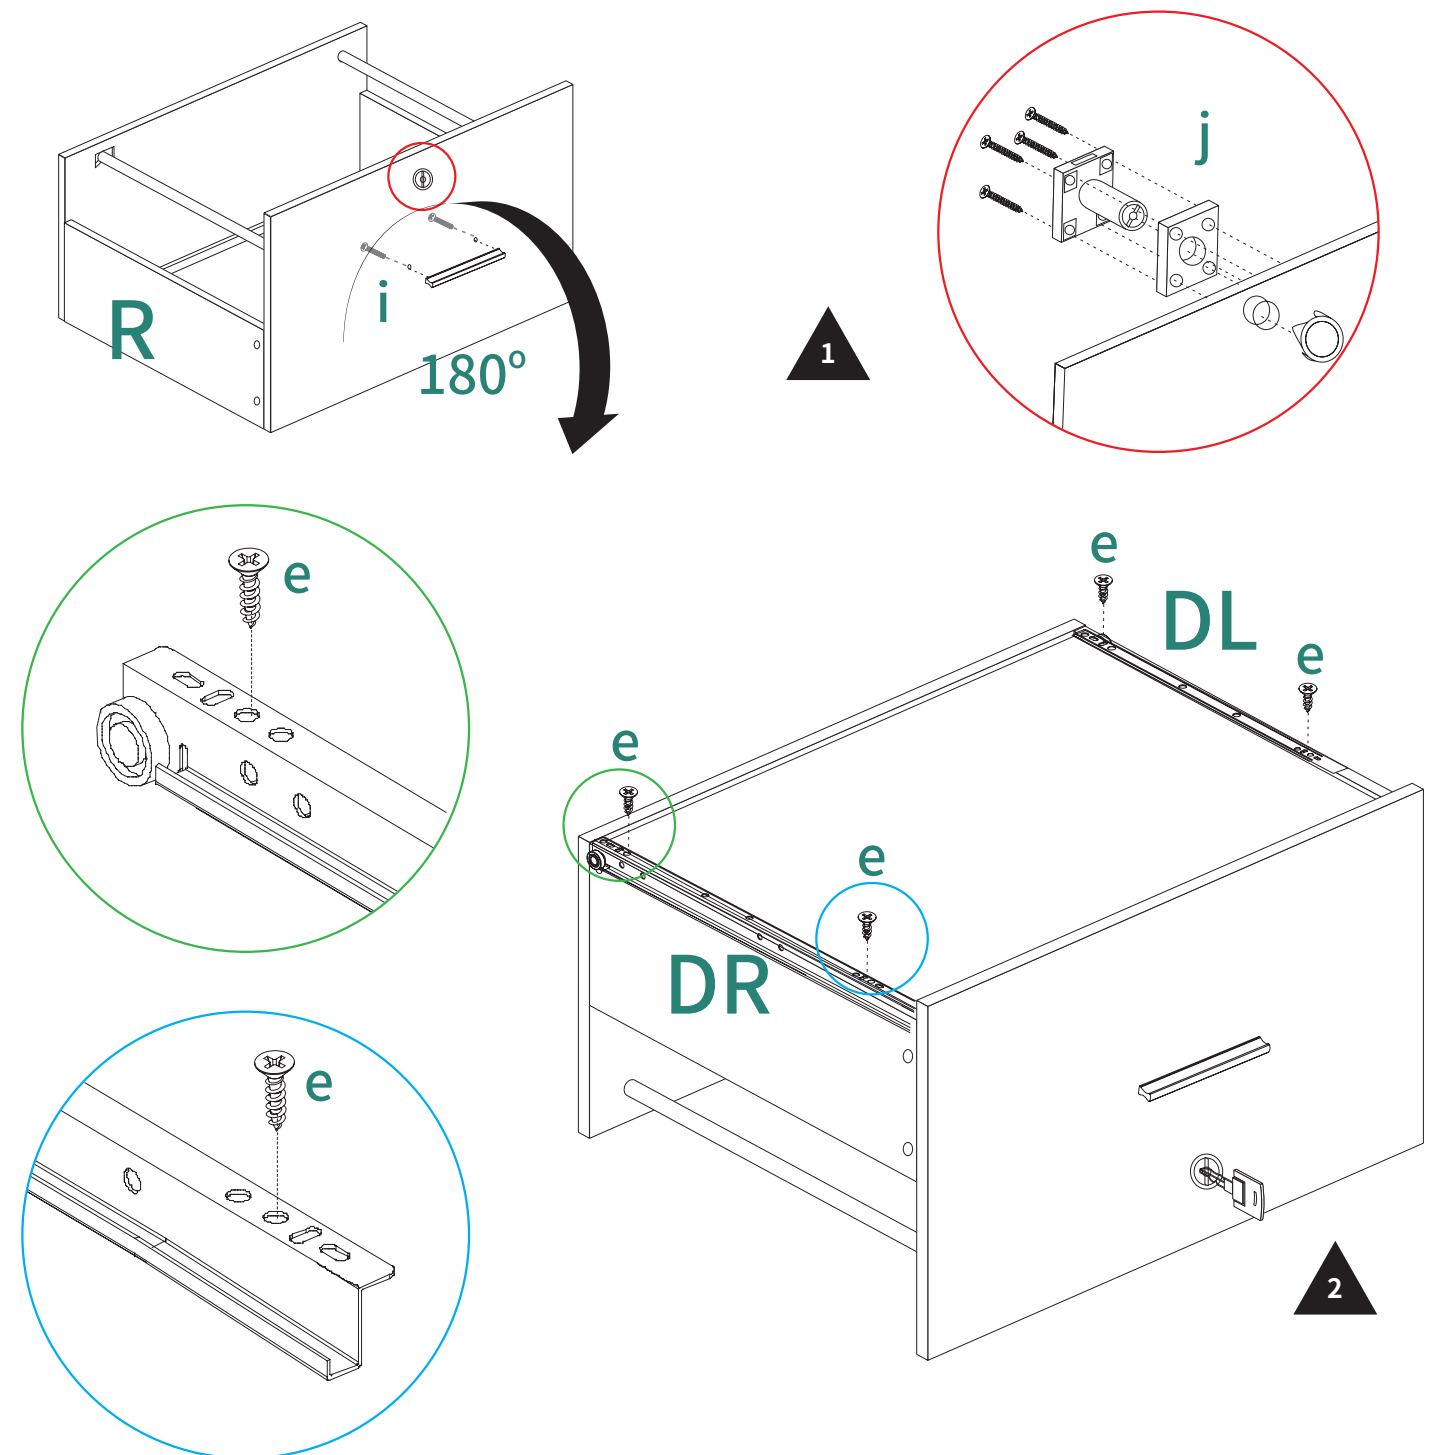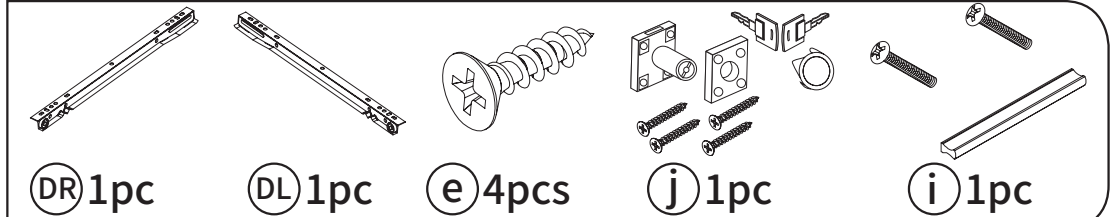

6



### 3

### X2

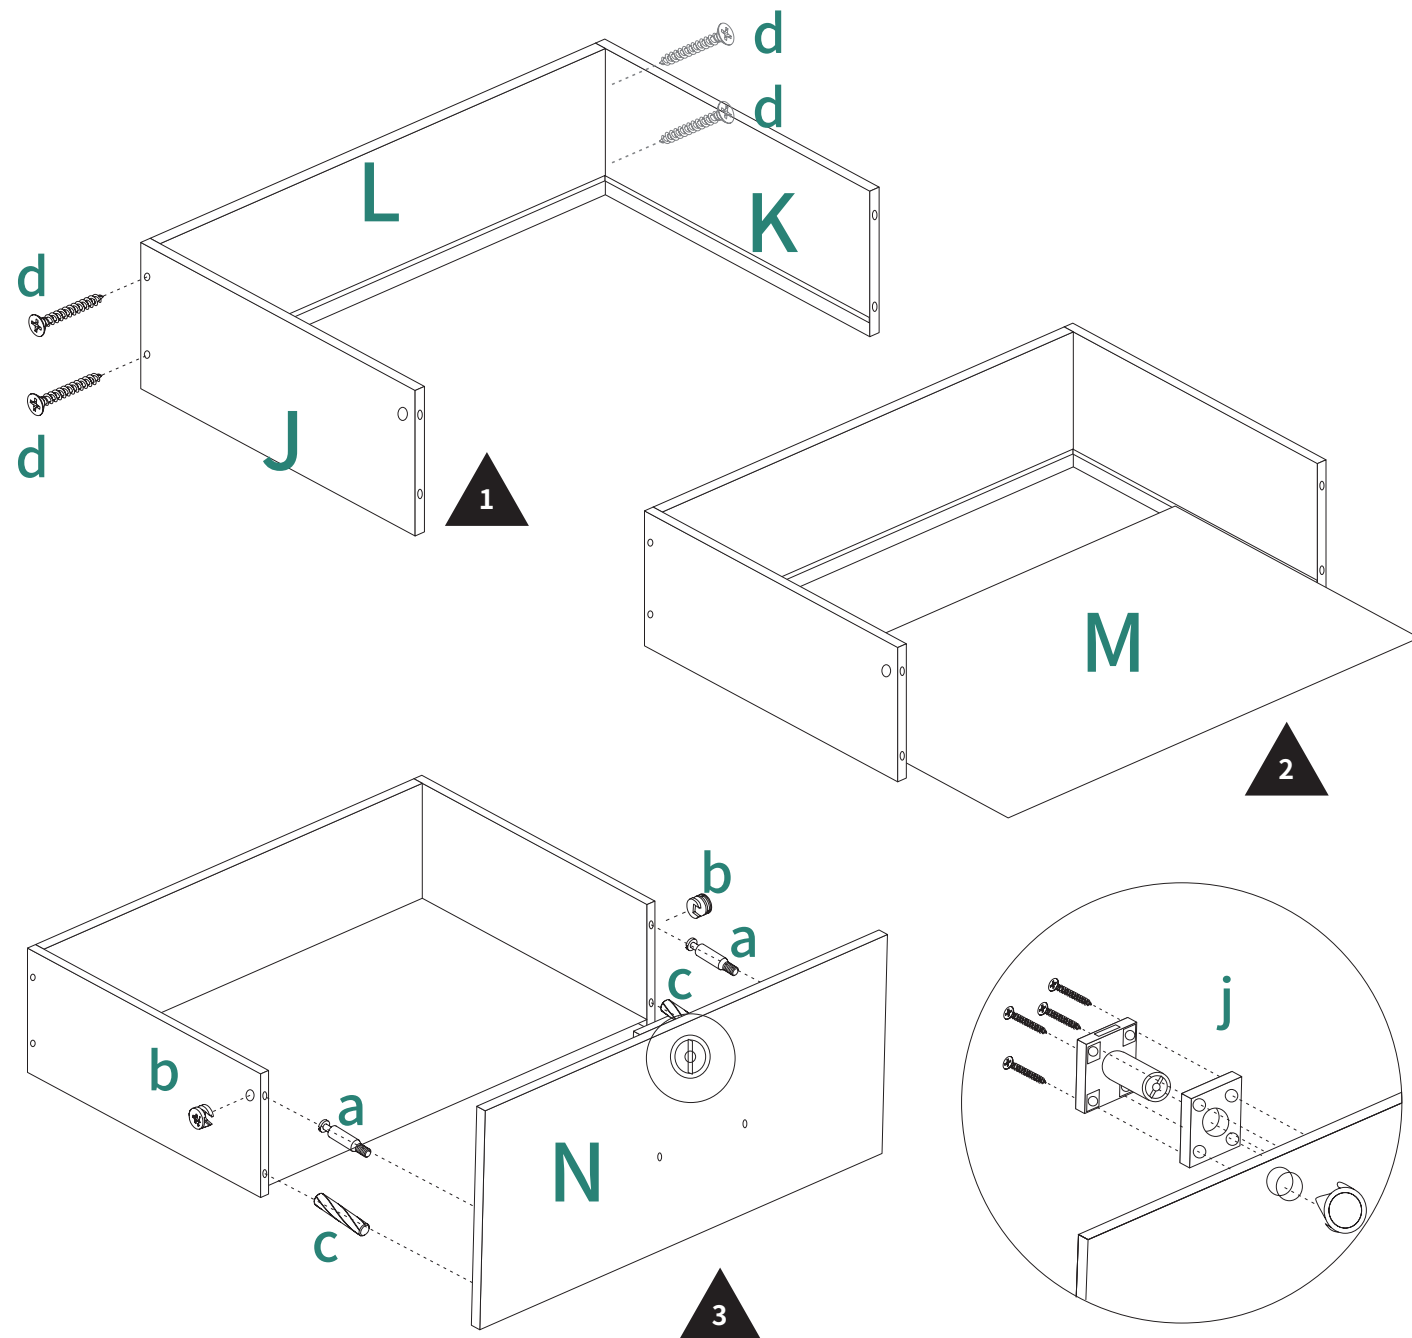
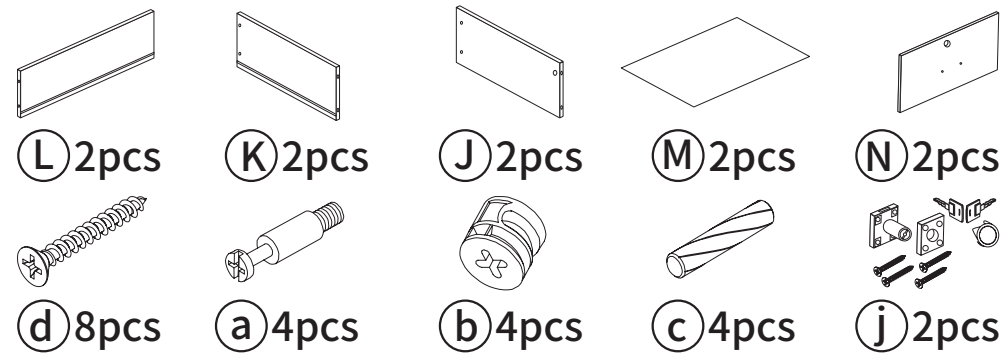


### 4

### X2

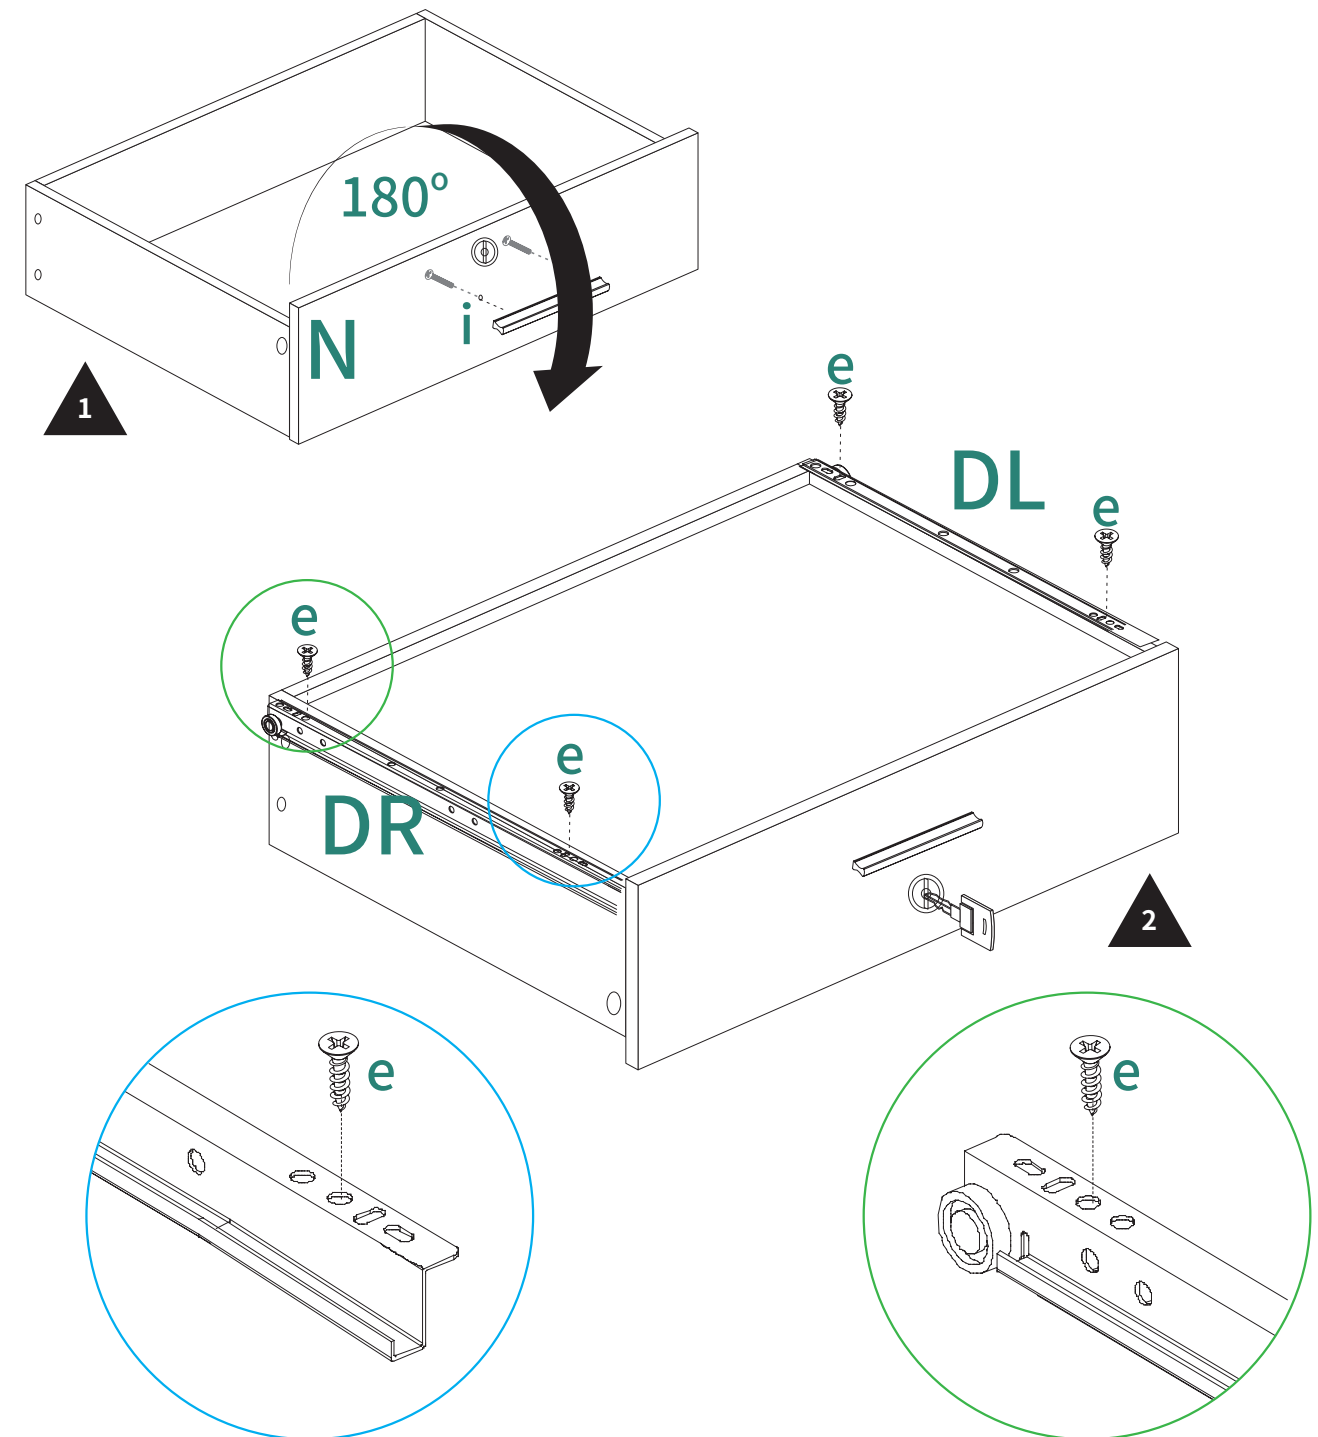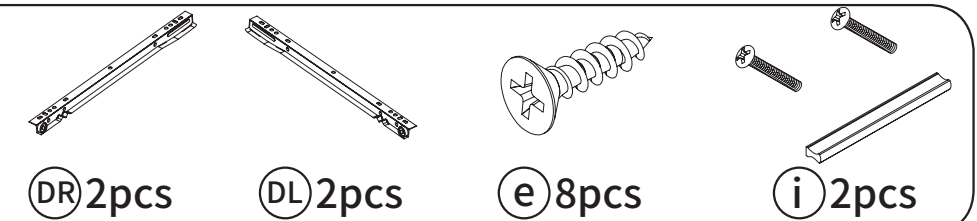


### 5

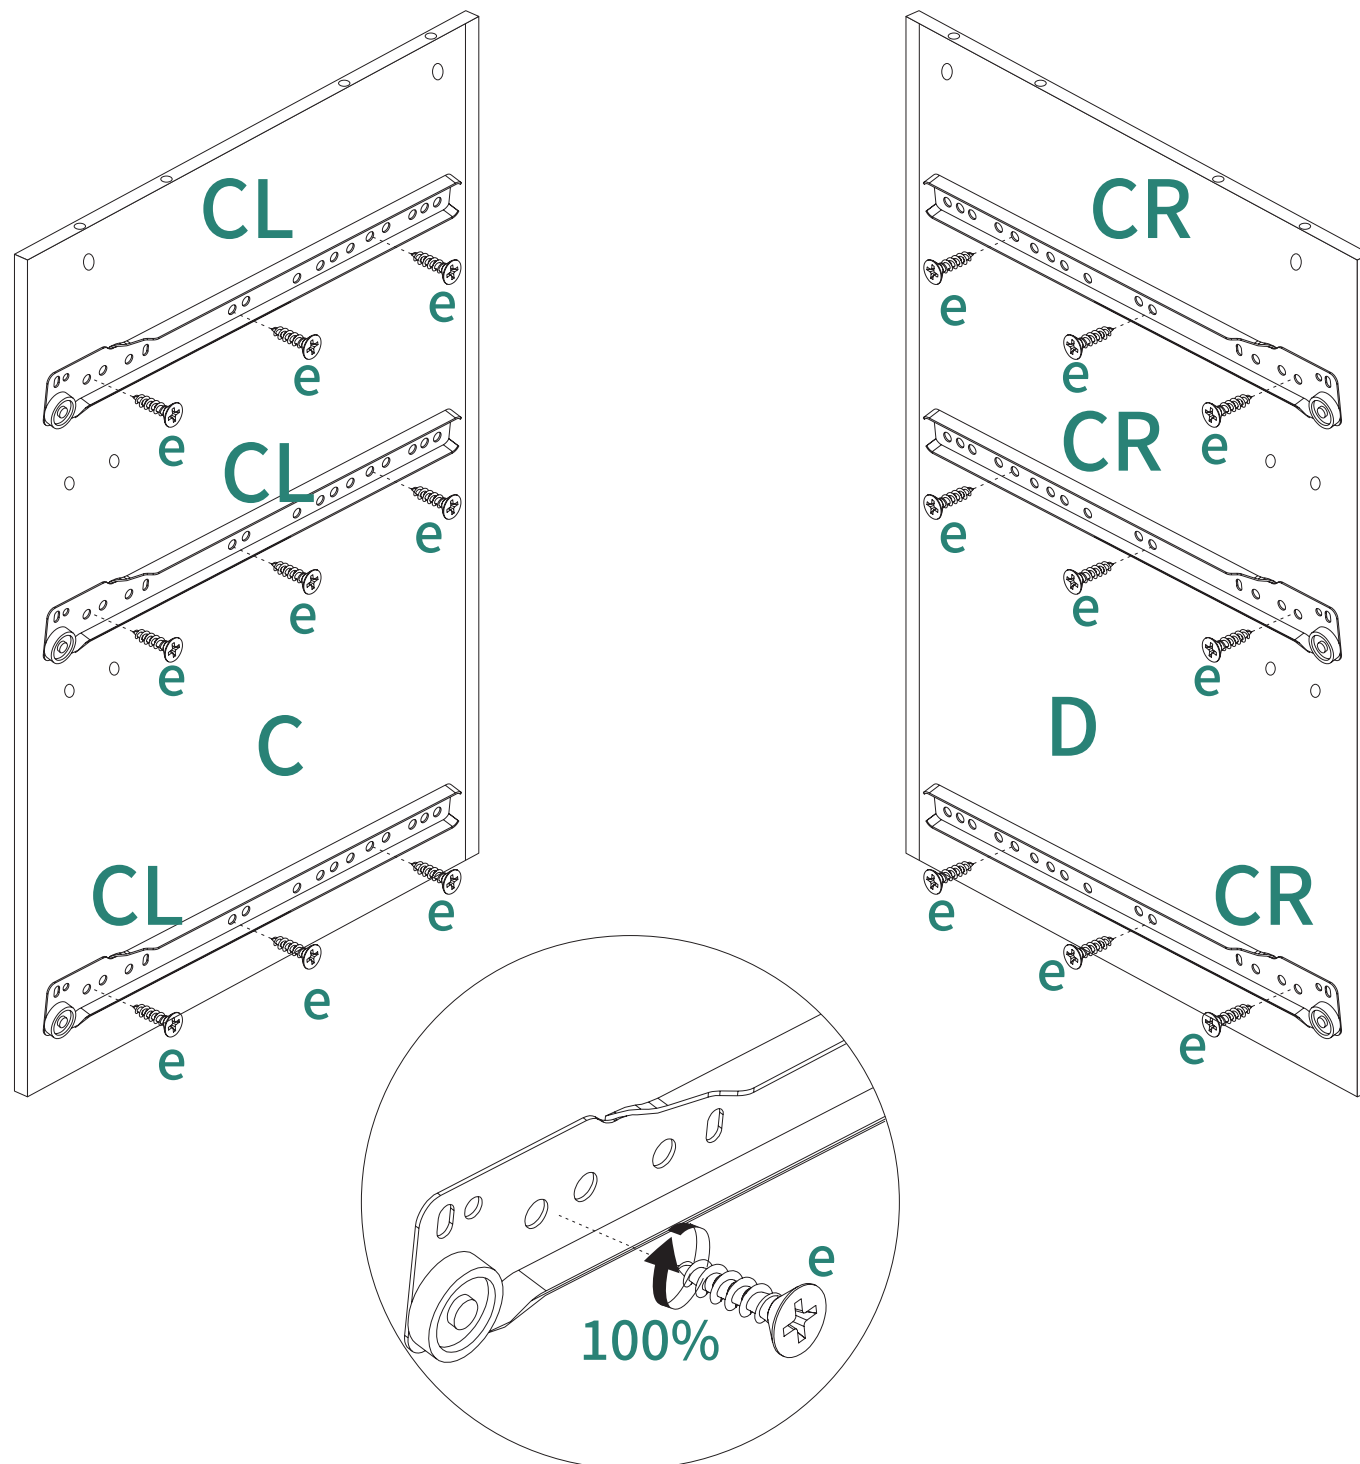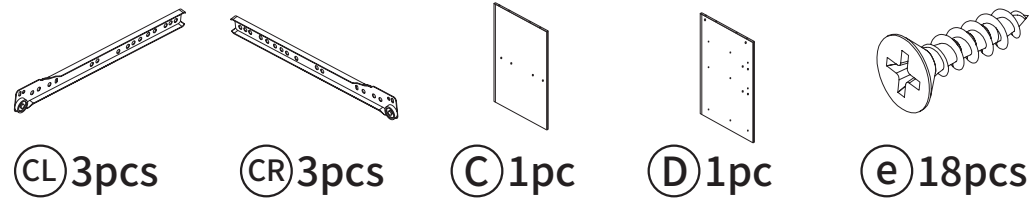


9

### 6




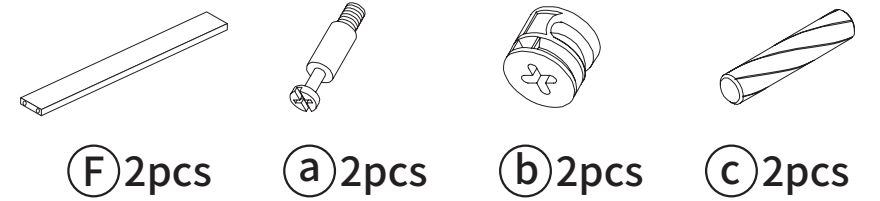






The panels with holes should face downward

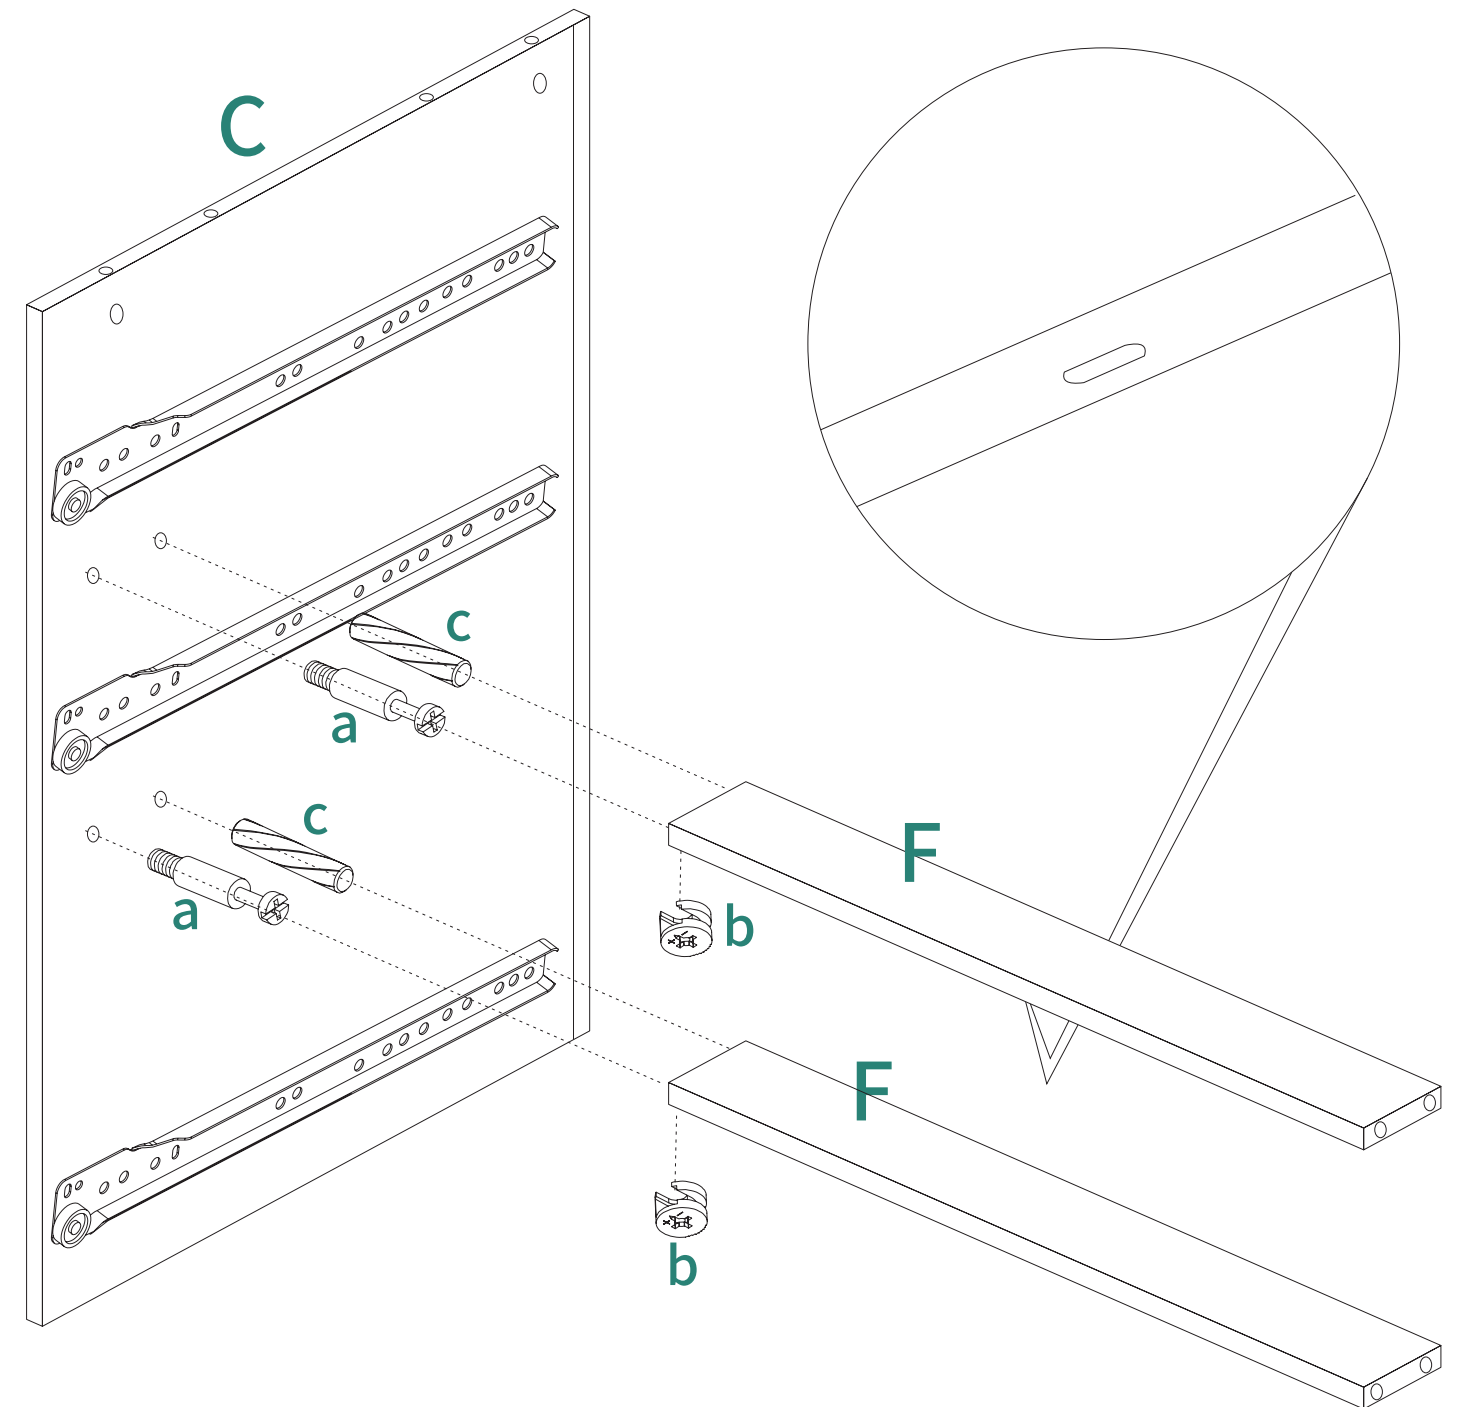



10



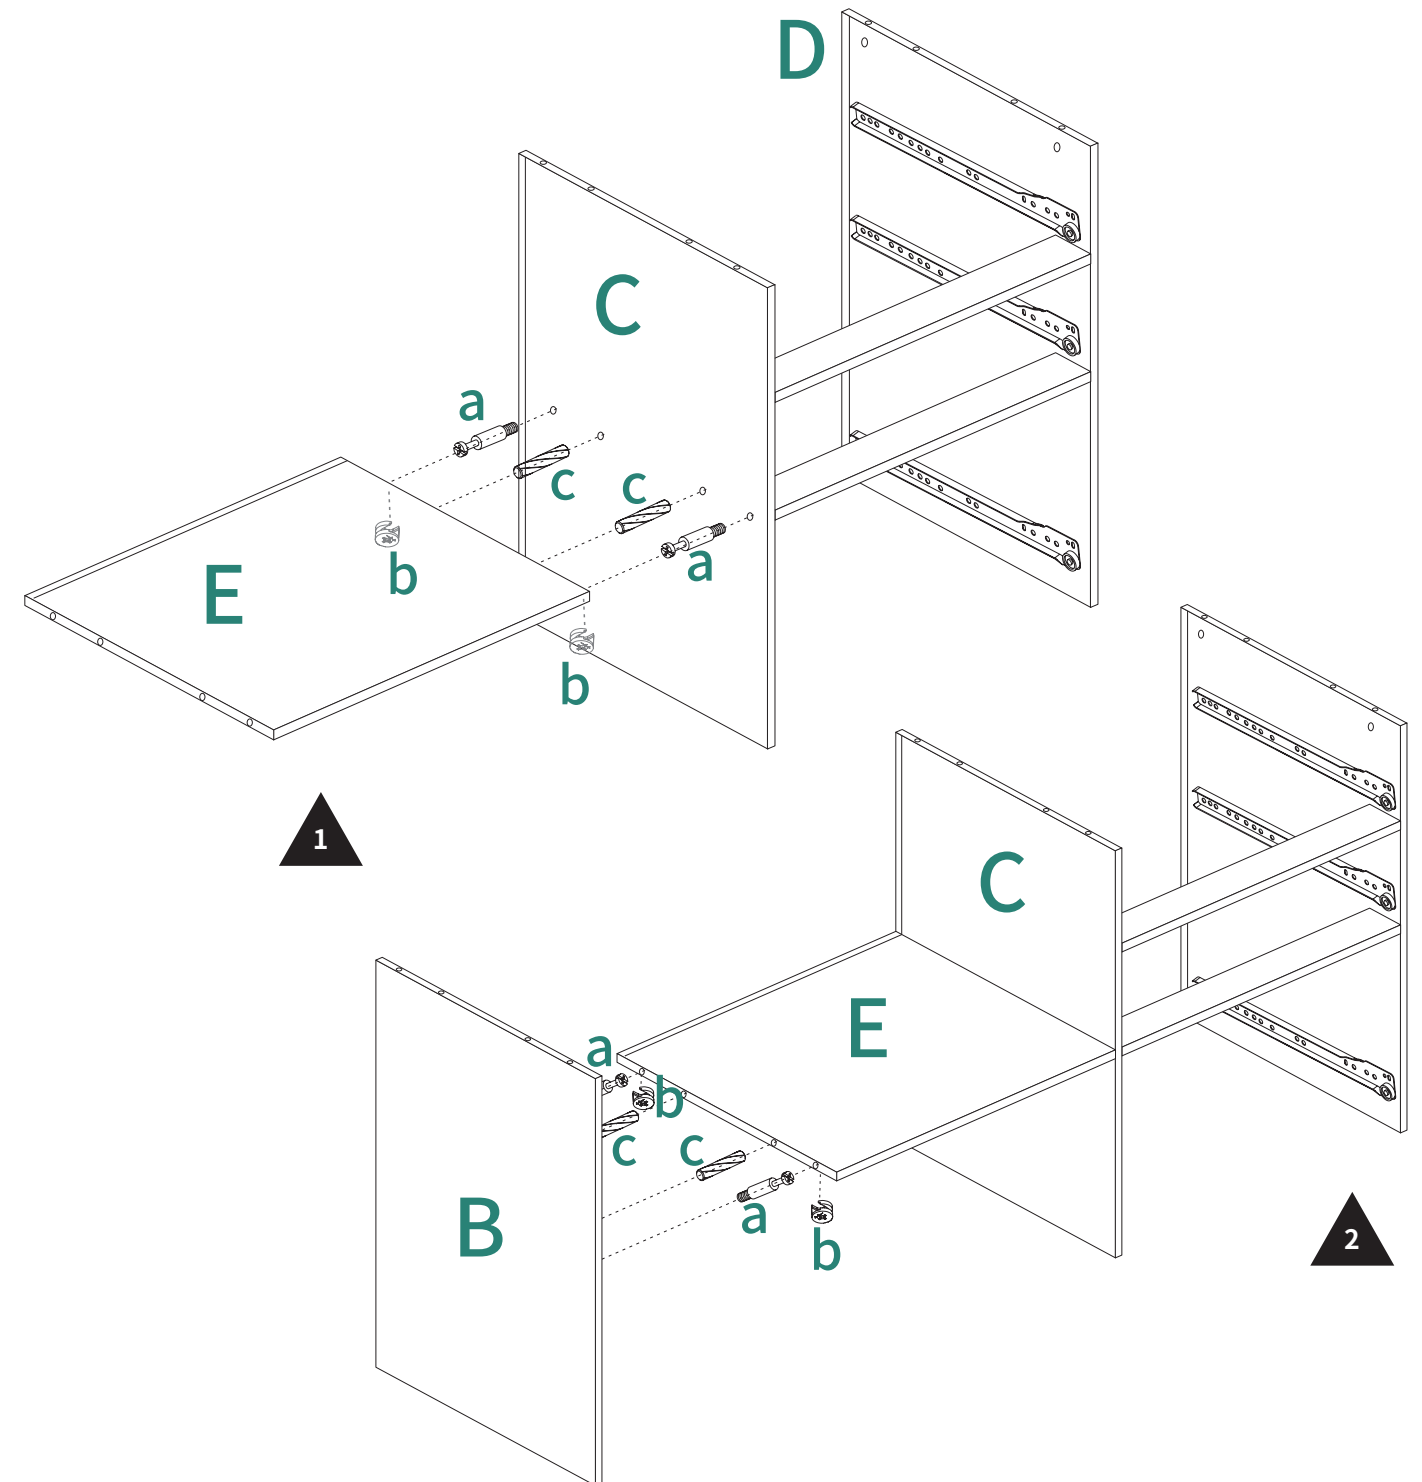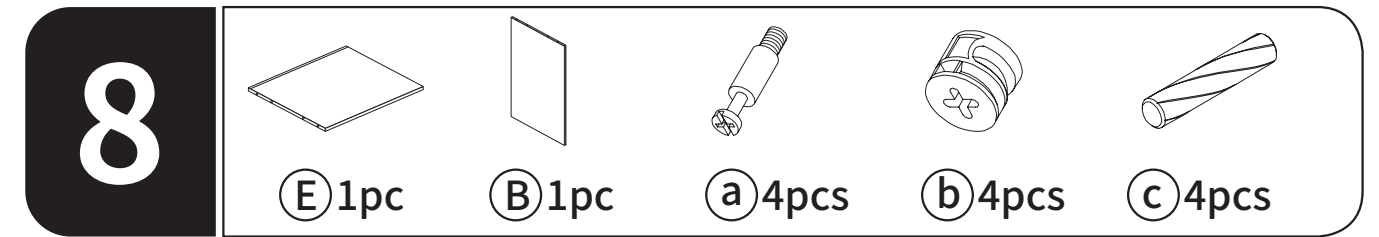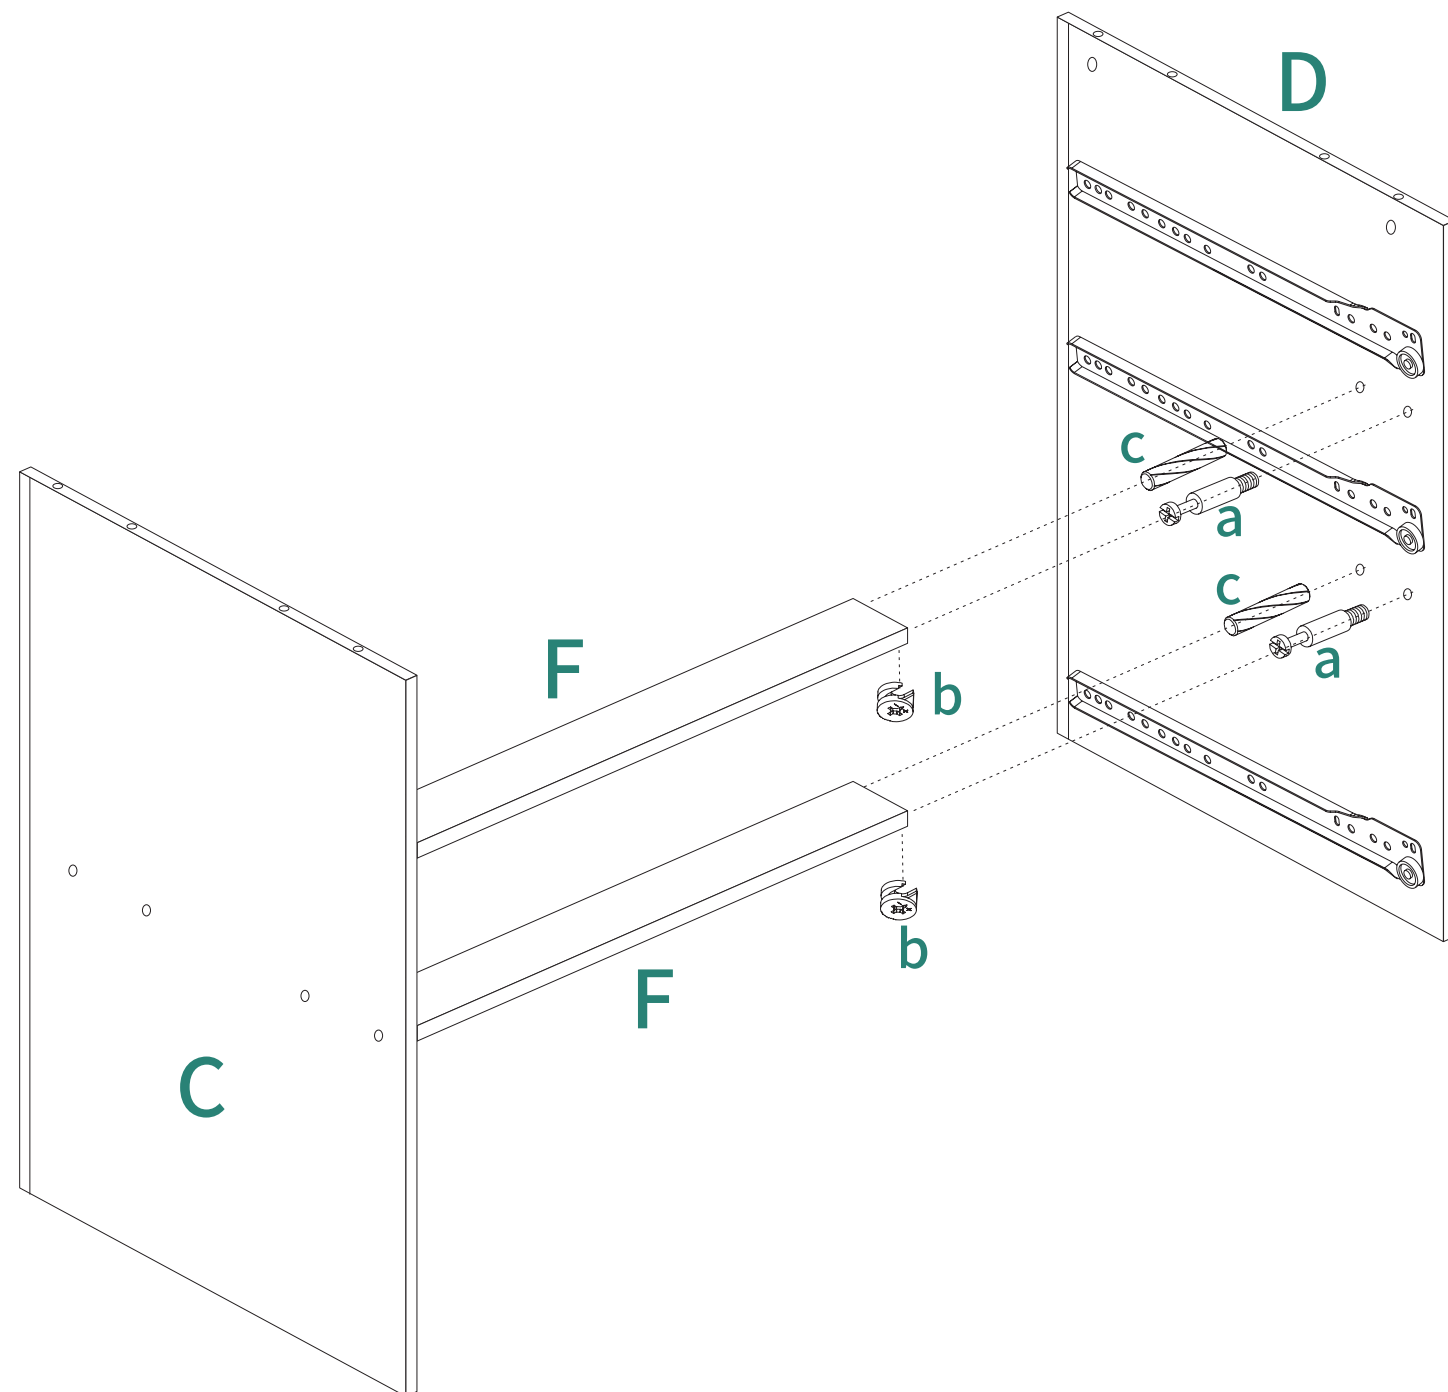
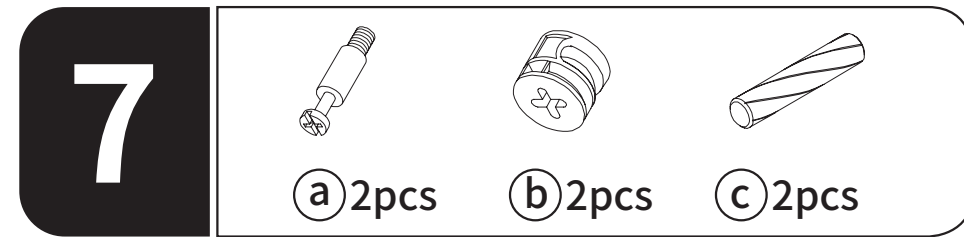


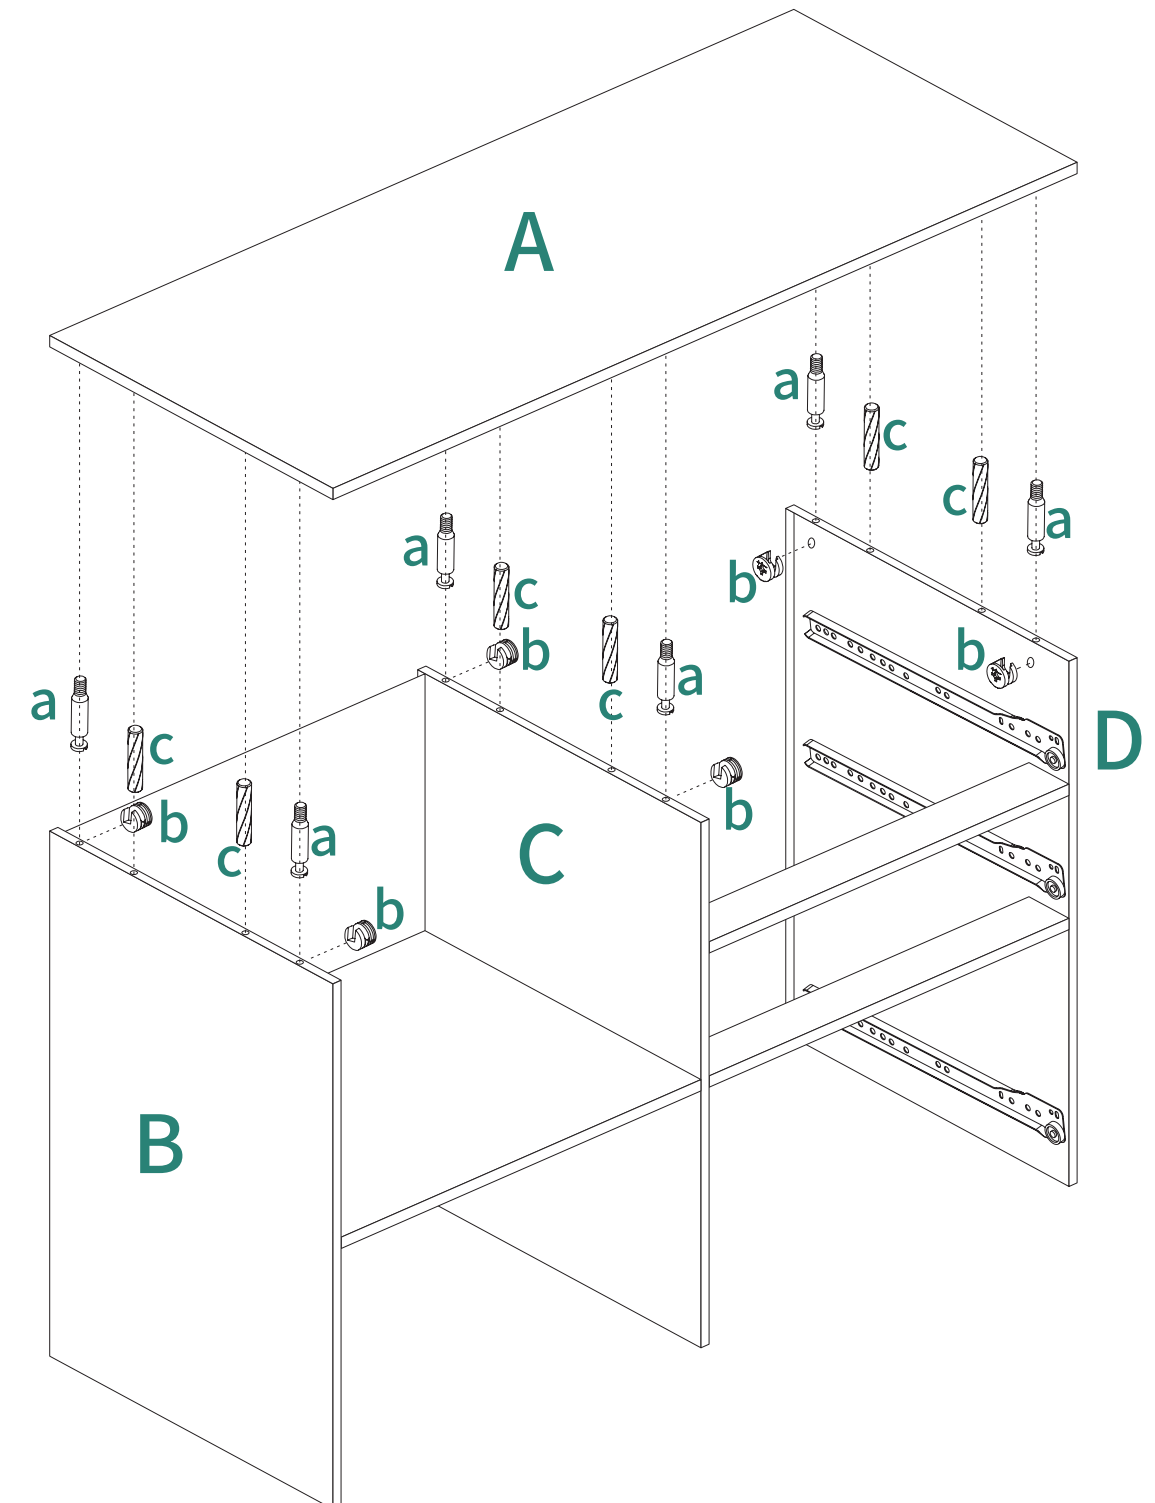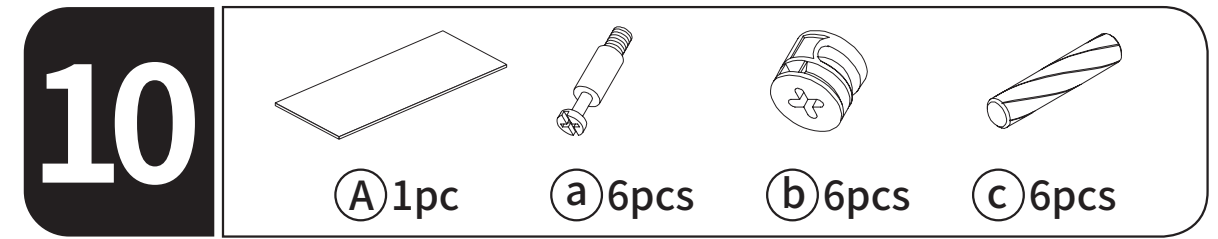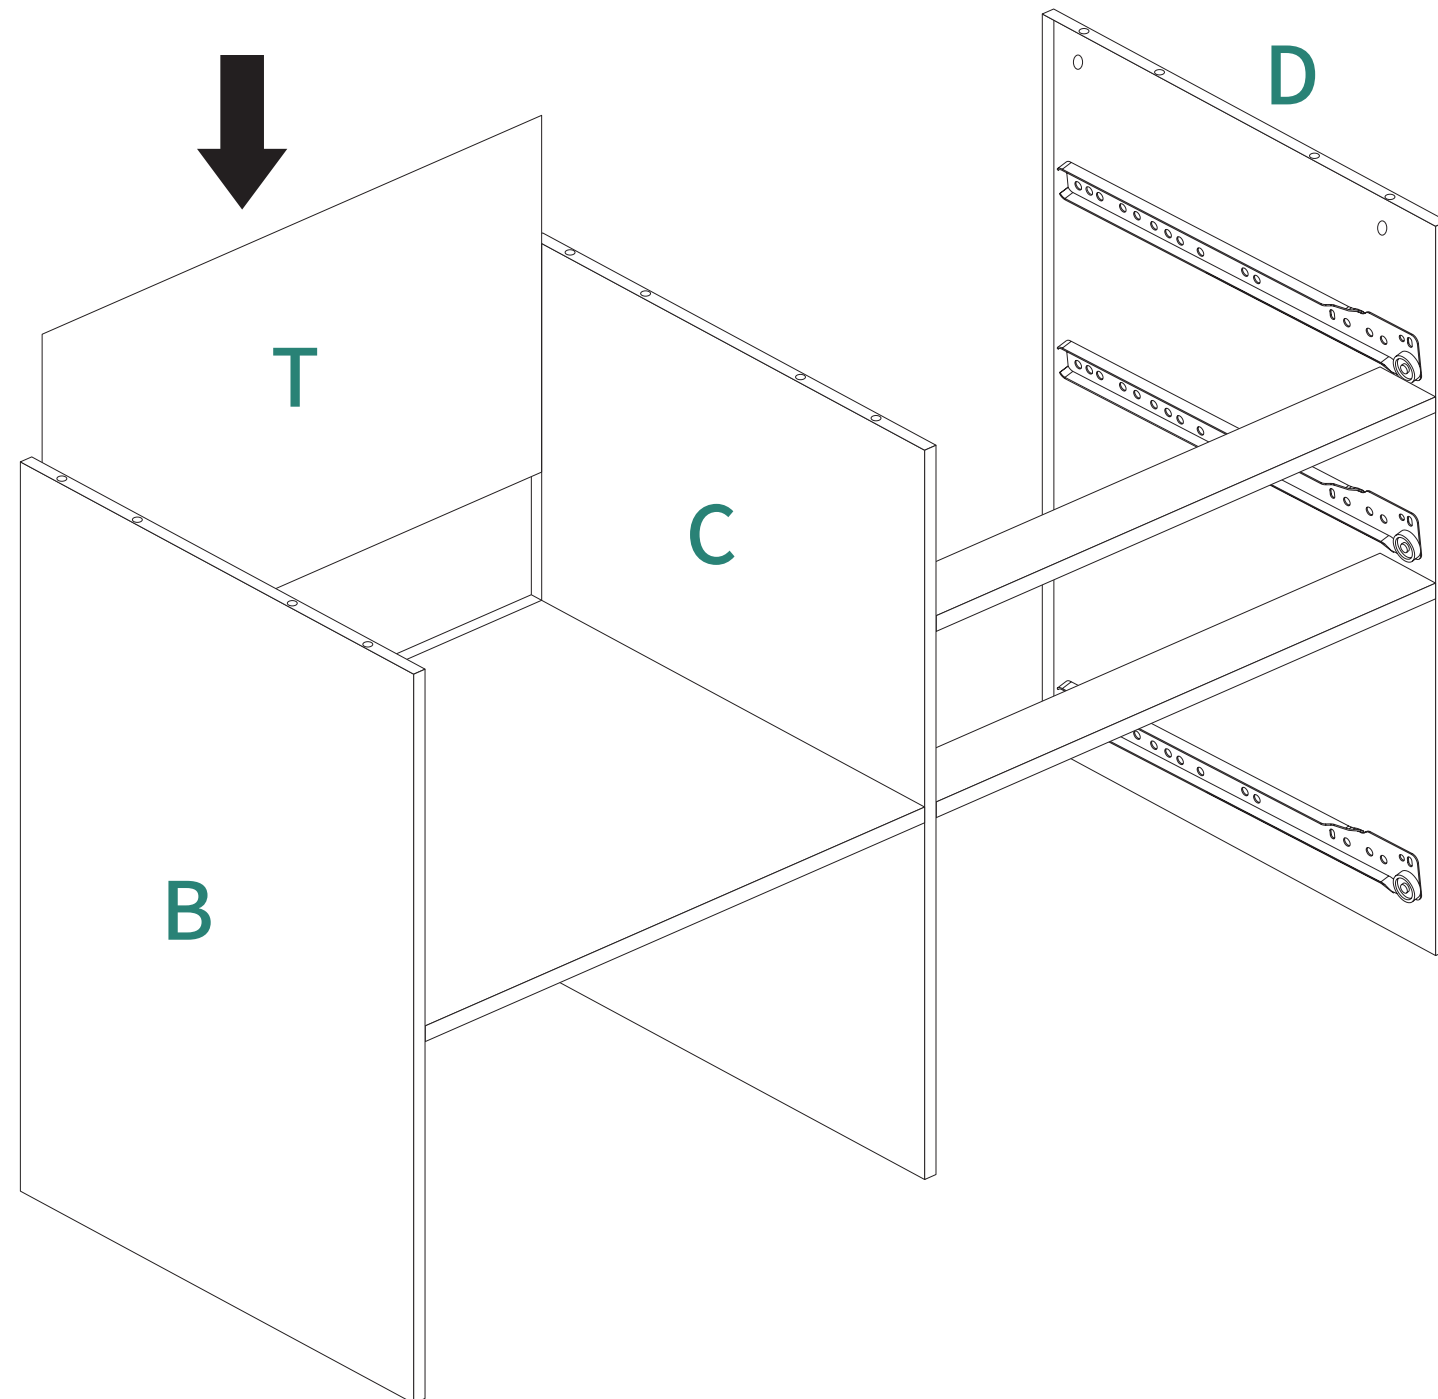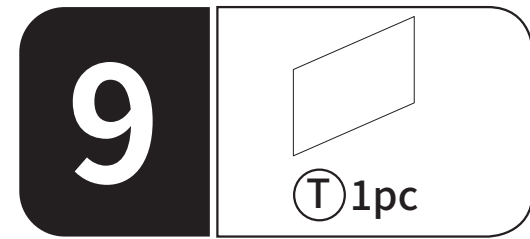



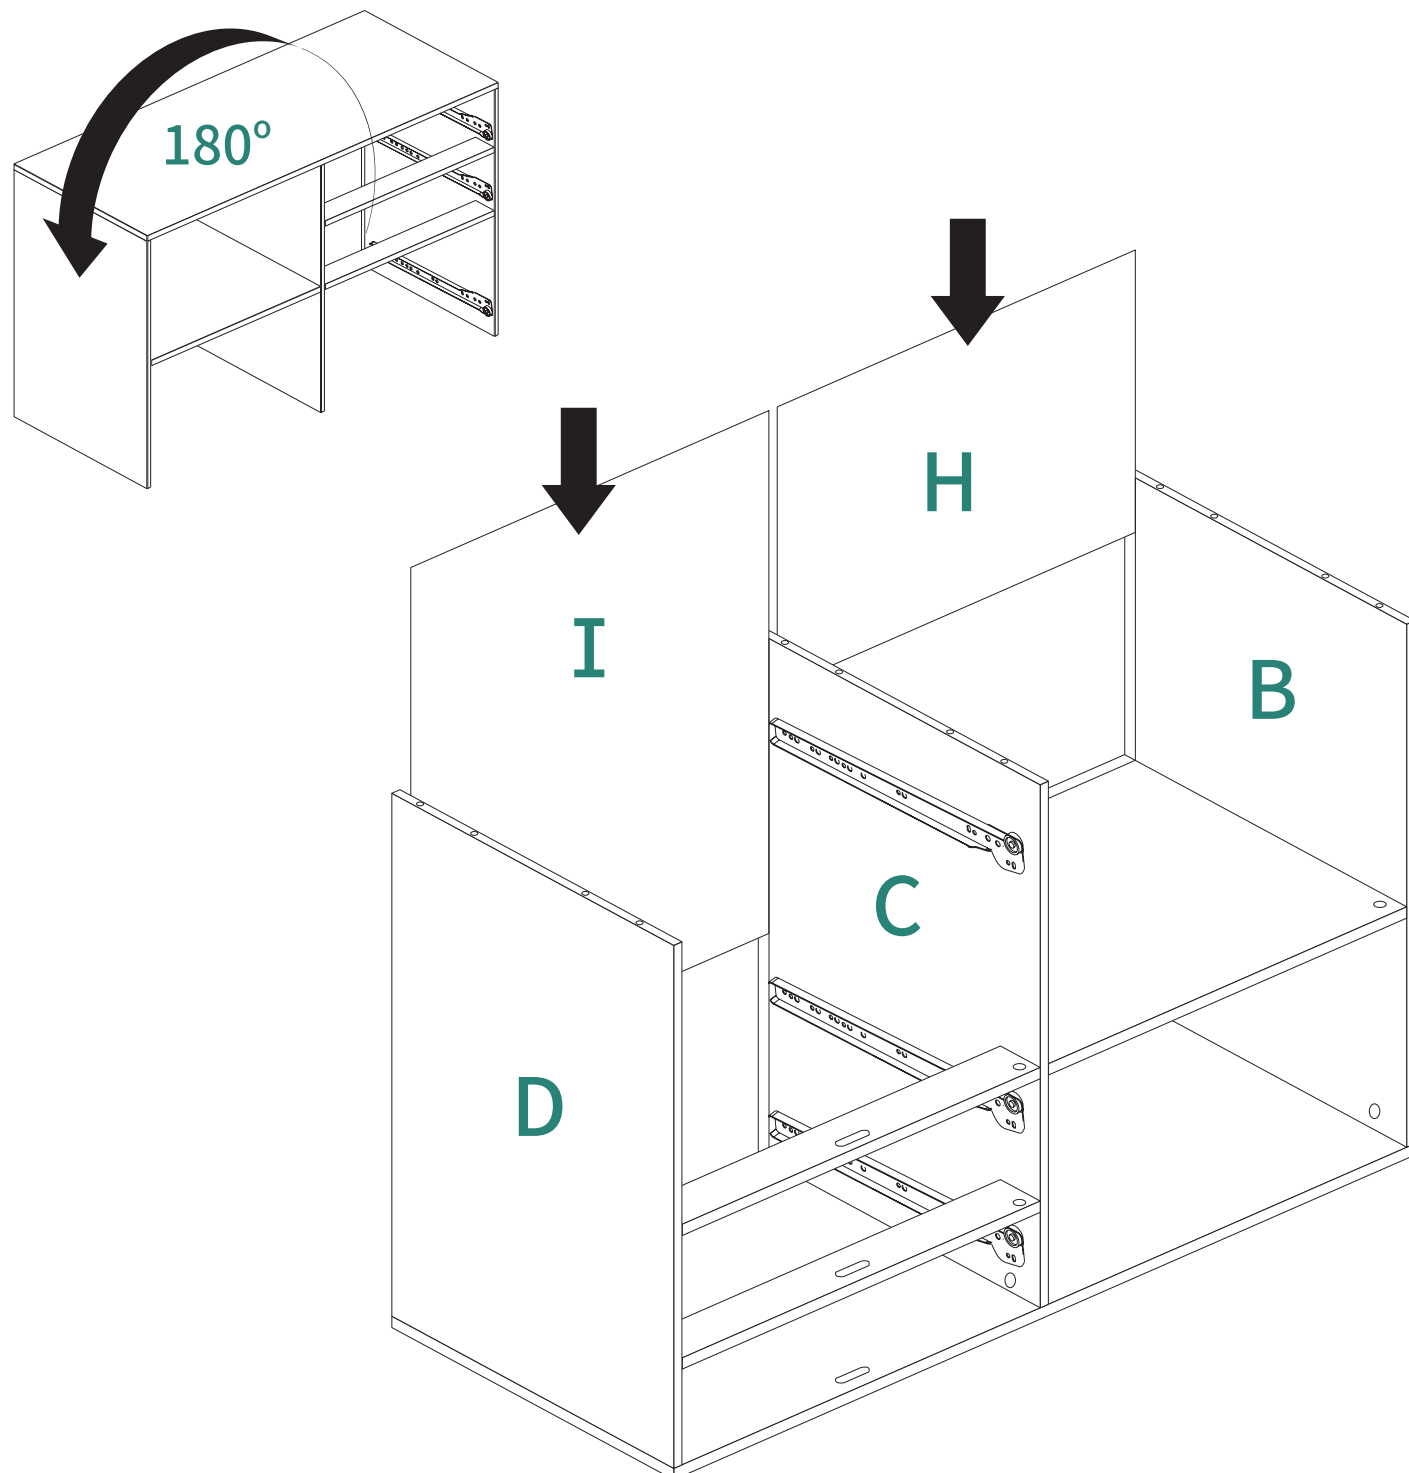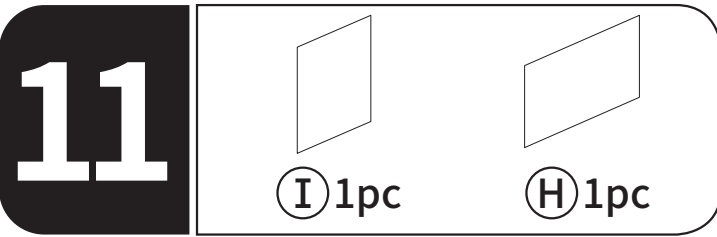


15

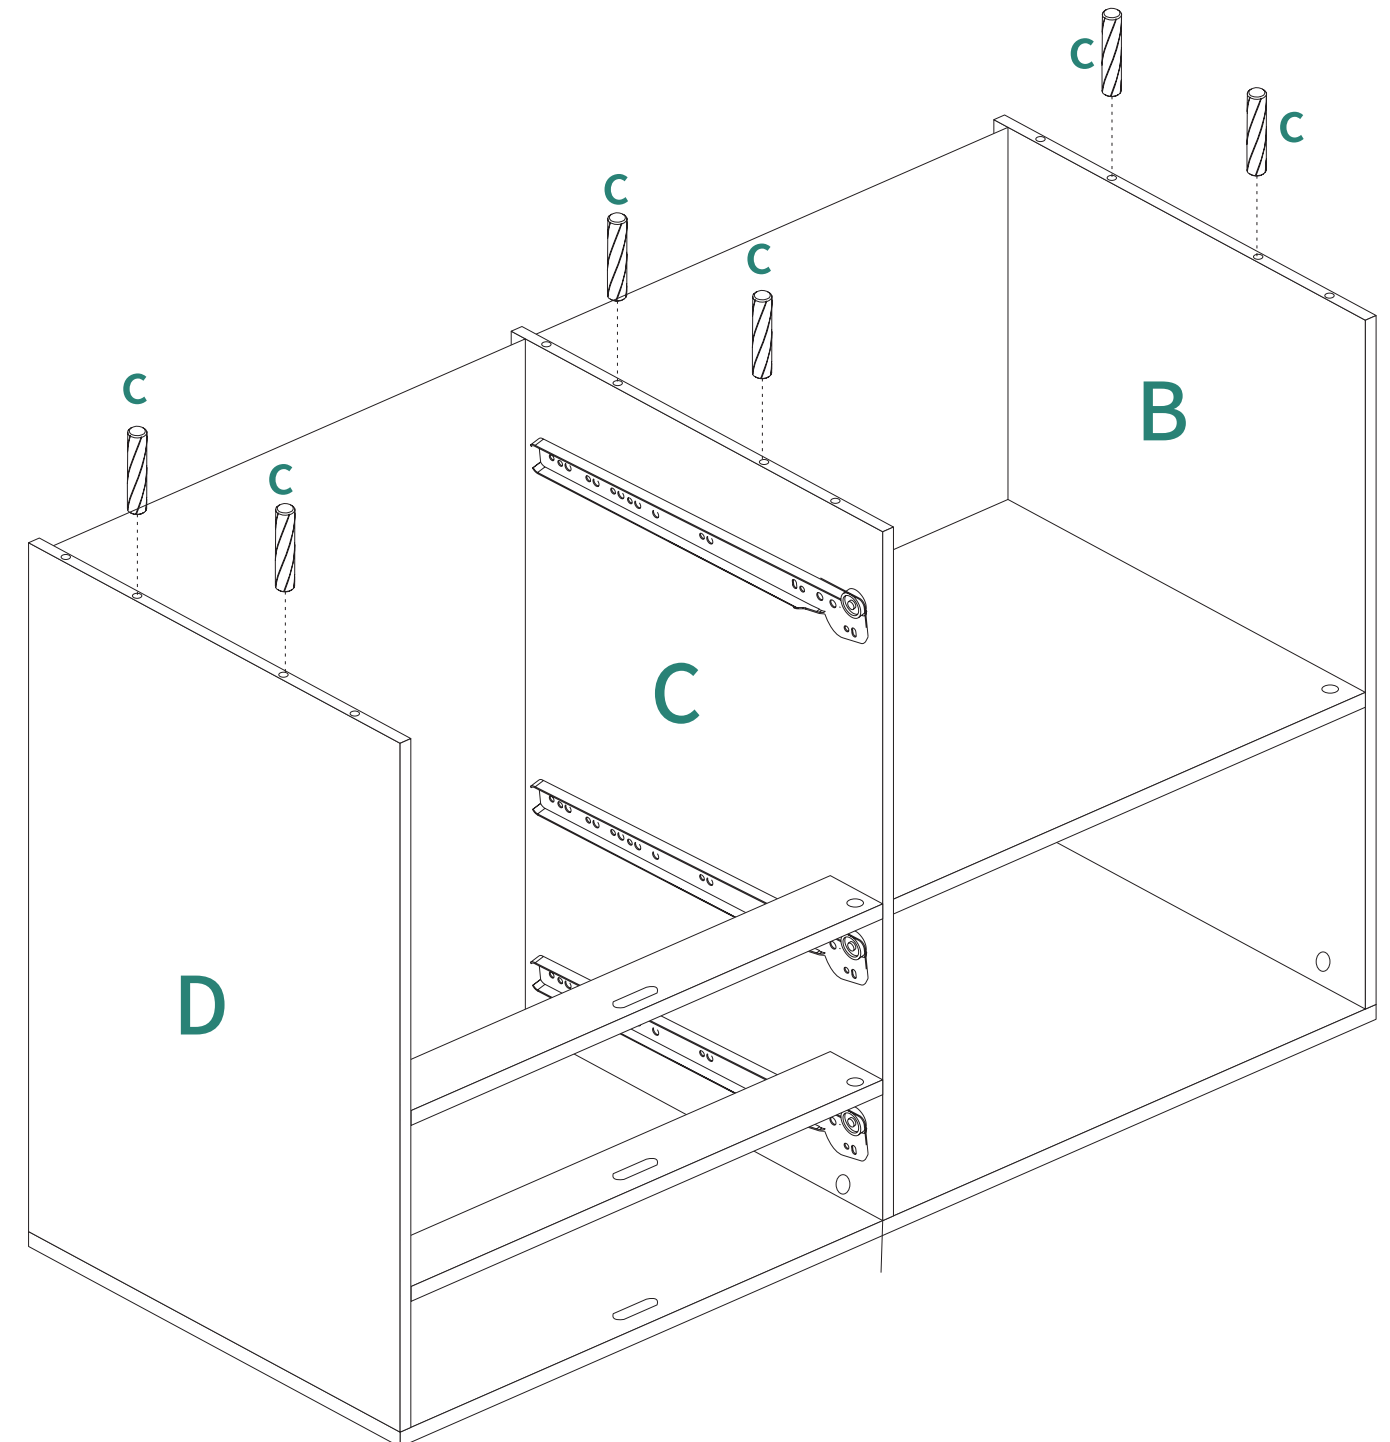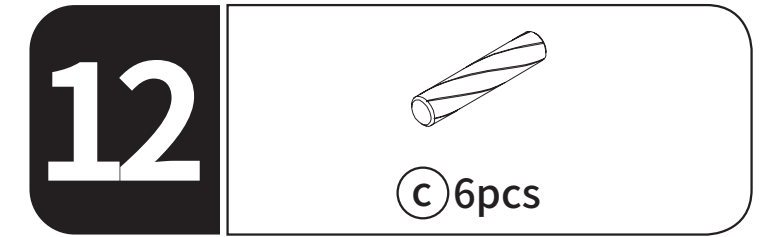


16


### 13



Ⓔ 1pc



Ⓓ 6pcs

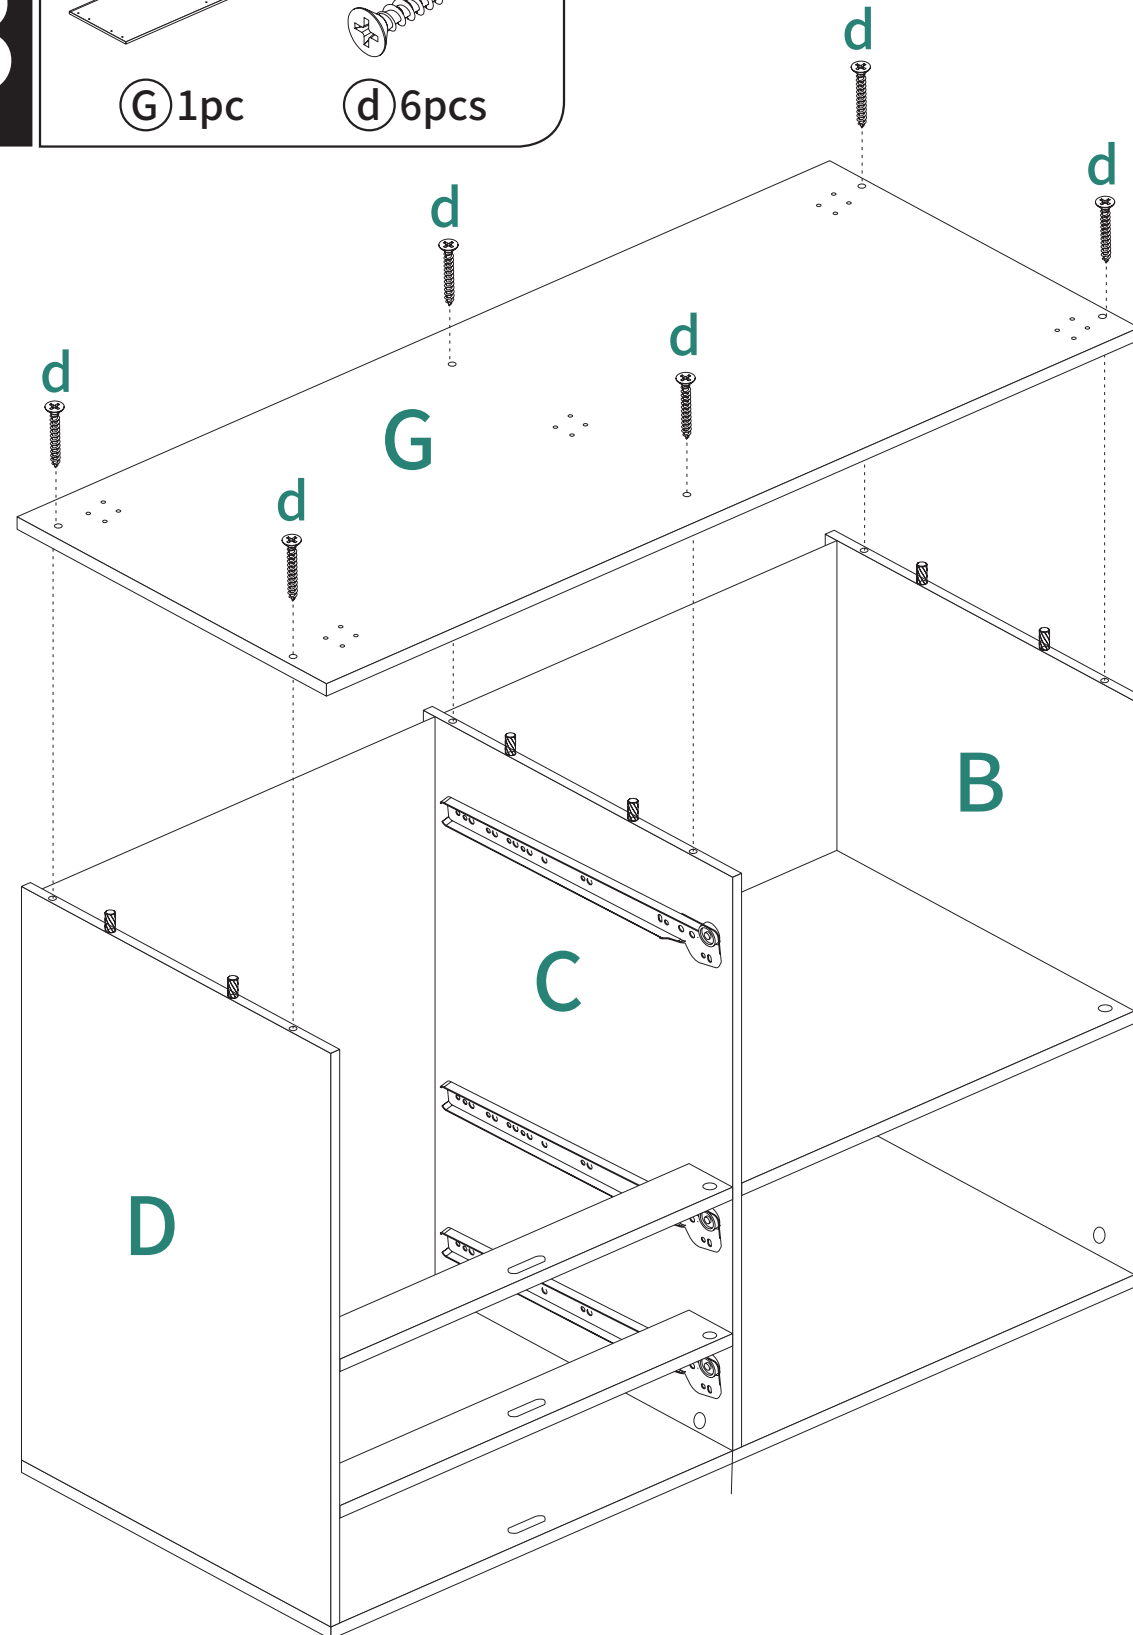


17


### 14




Ⓚ 20pcs

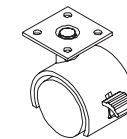




Ⓛ 2pcs

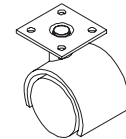


ⓖ 3pcs

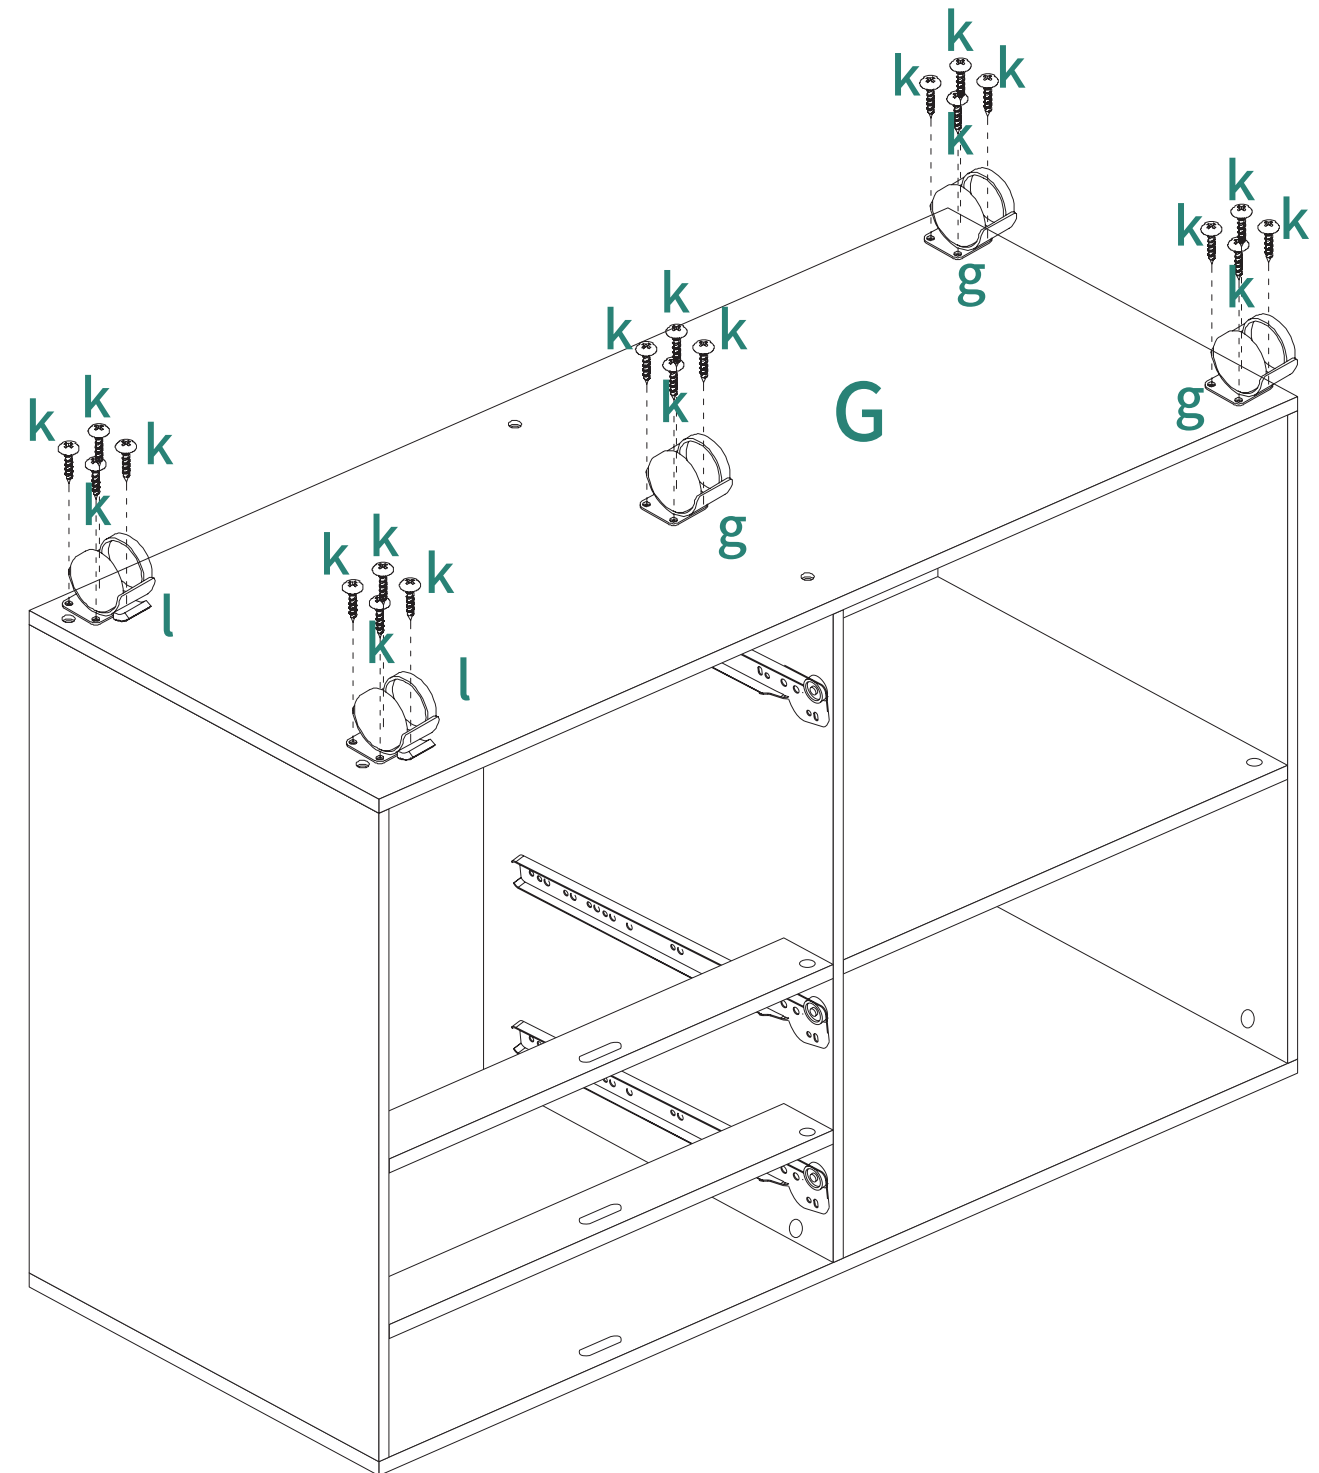

18

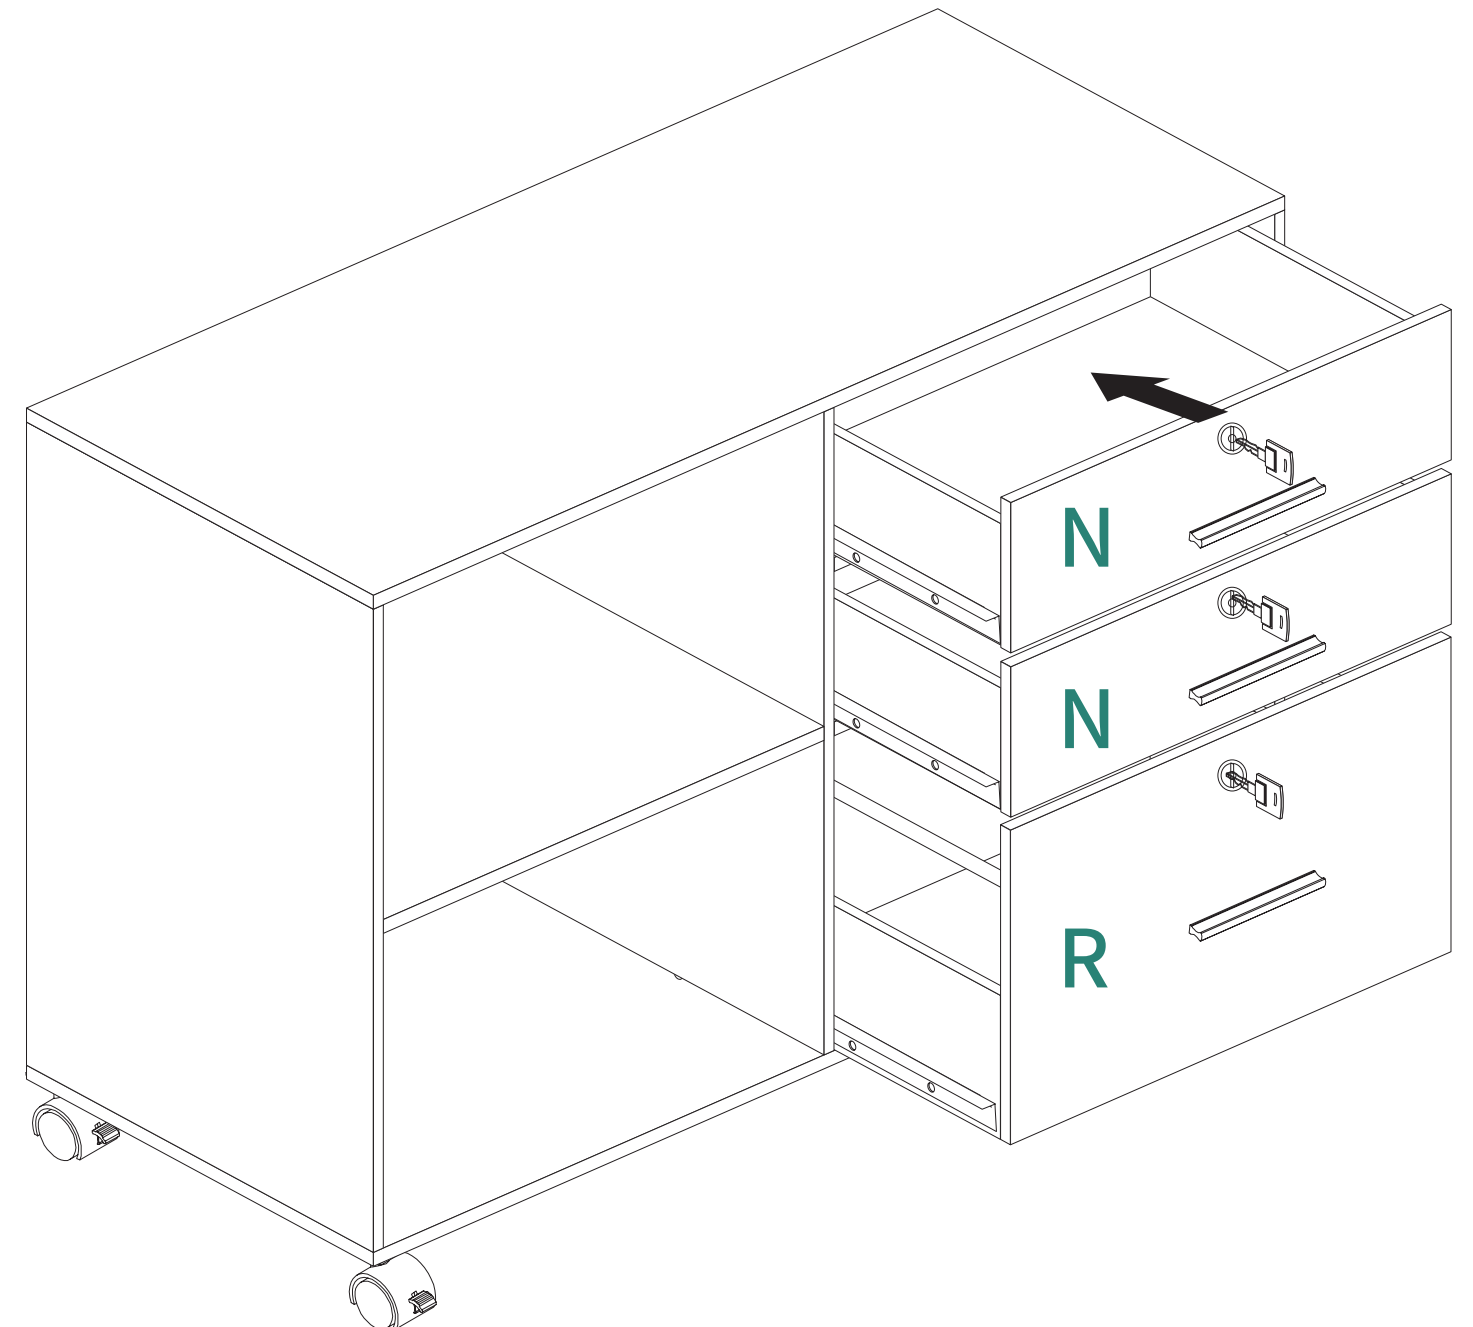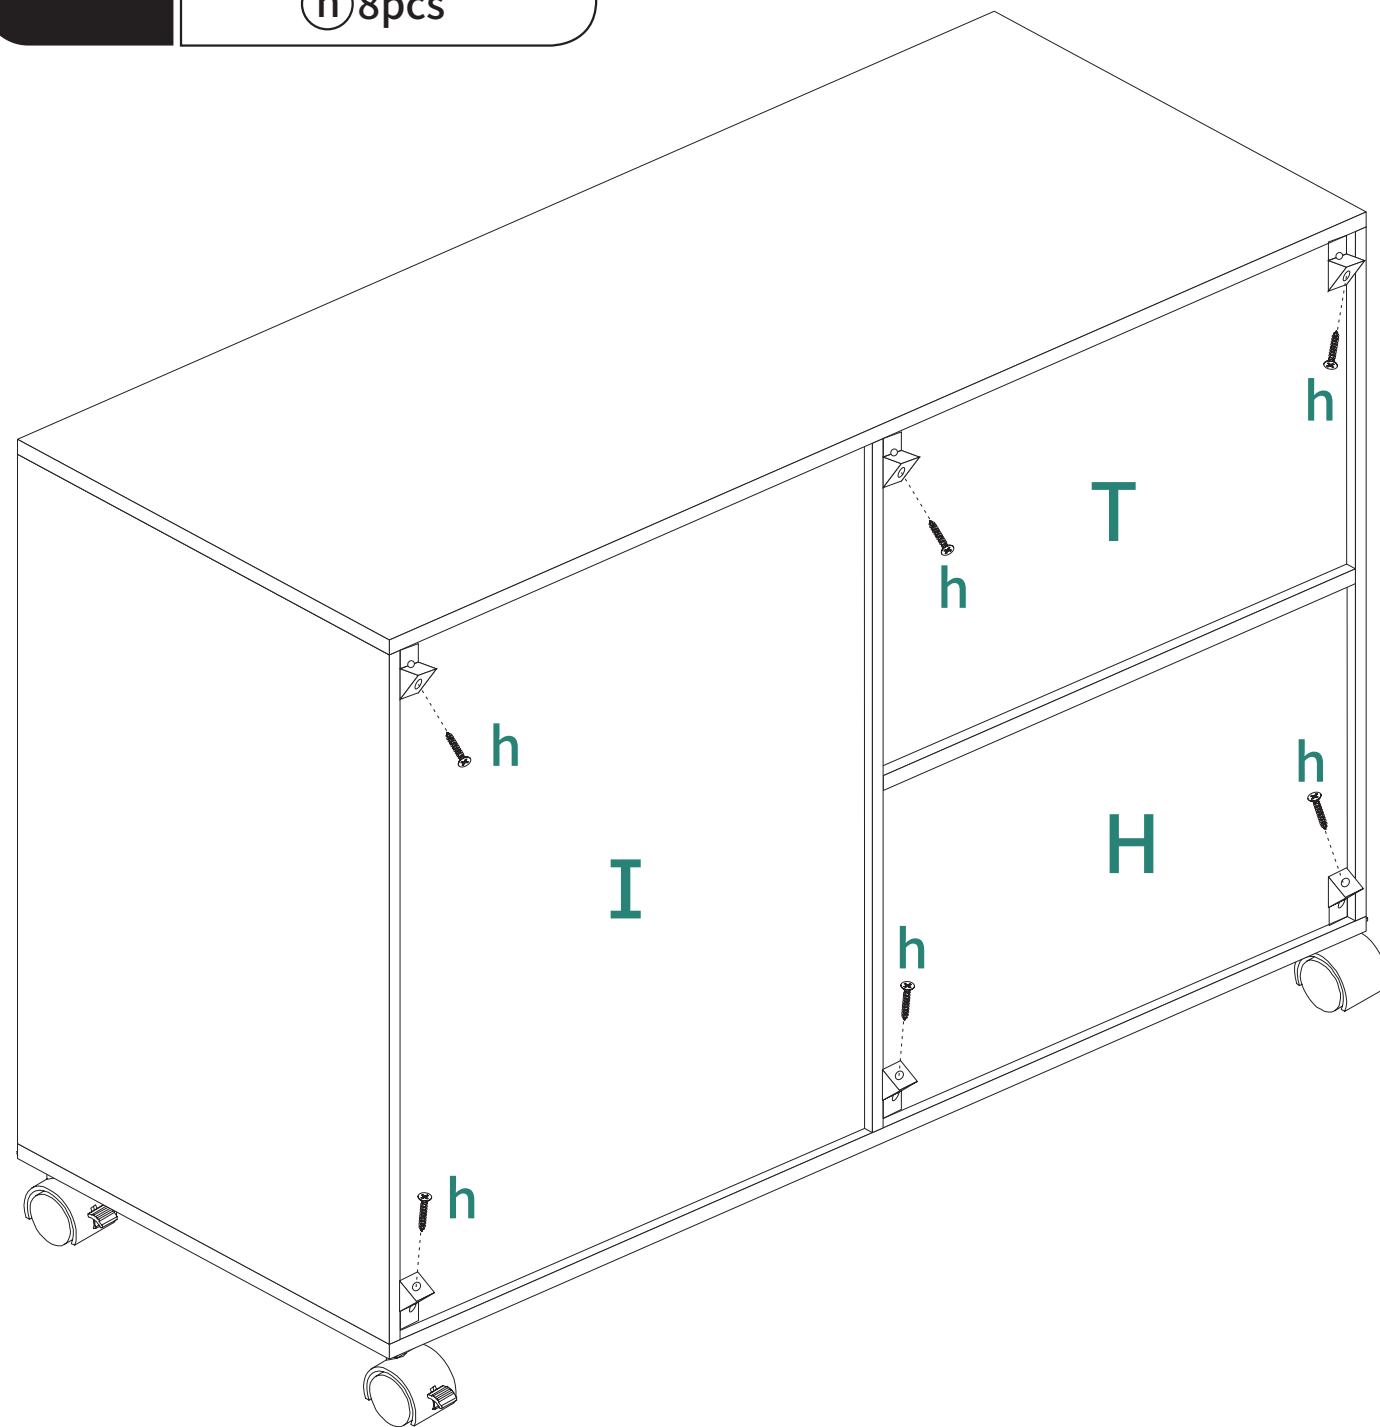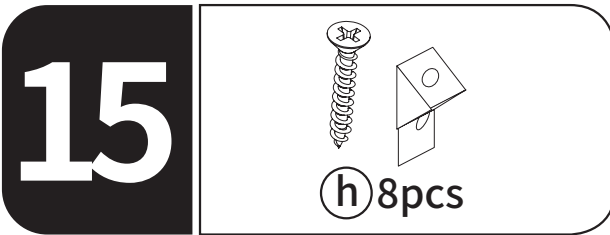

17

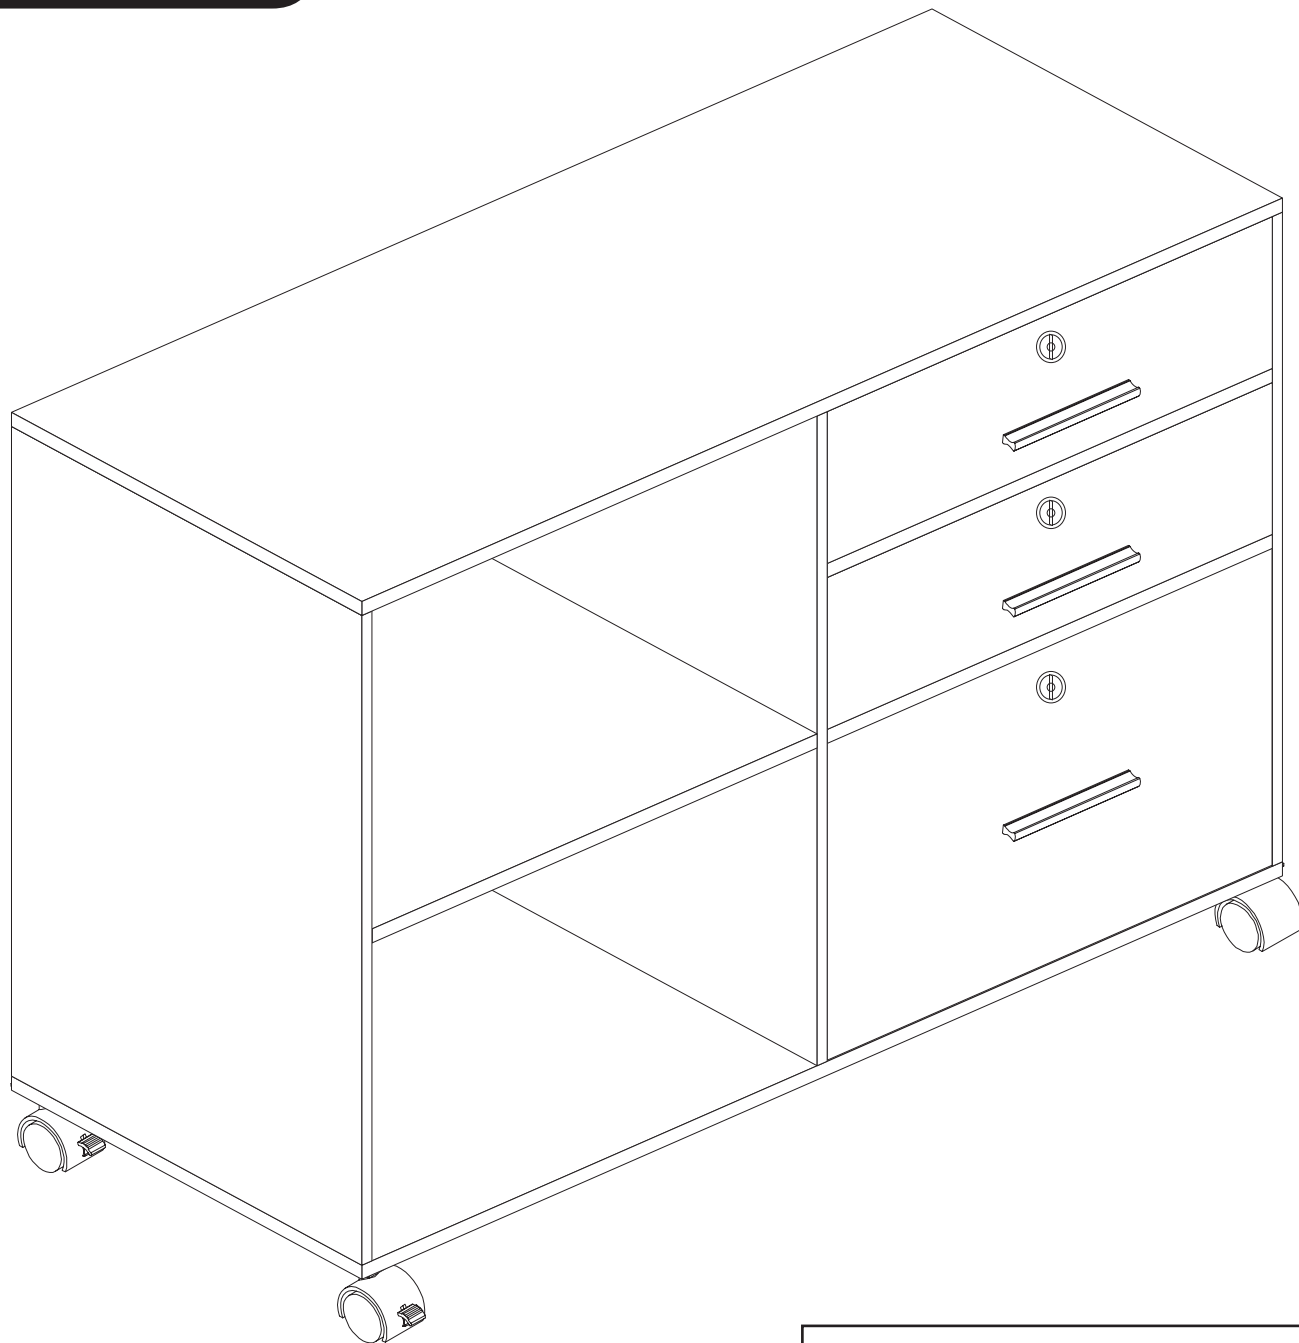

Installation Completed