





CONTACT US:





If you have any questions about the installation of YITAHOME products, just contact us at +1 (888) 717-8084 from Mon-Fri 8:00 AM-4:30 PM PST / Sat. 8:00 AM-12:00 PM PST or e-mail us at after-sale.cs@hotmail.com











Alternative method to contact us (amazon.com orders only)












1. Log into your Amazon account
2. Go to "Your Orders" and find the purchase
3. Click on "Contact Seller"

MOBILE 3-DRAWER FILING CABINET

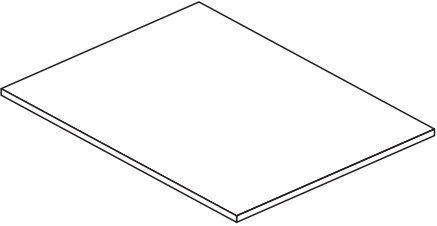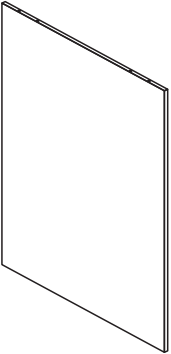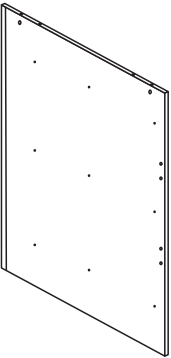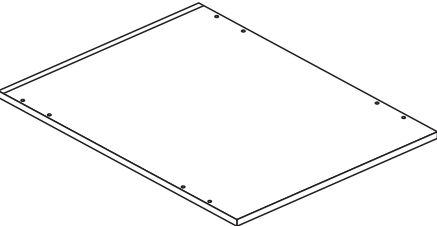Item no.	Reference Image	Qty.
A		X 1
B		X 1
C		X 1
D		X 1

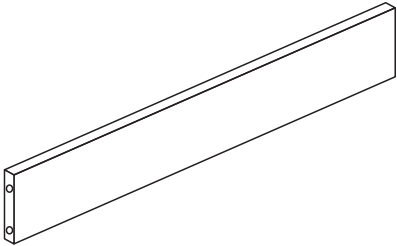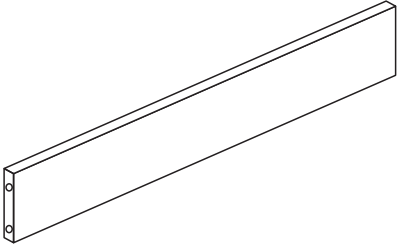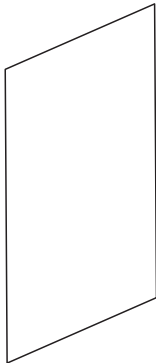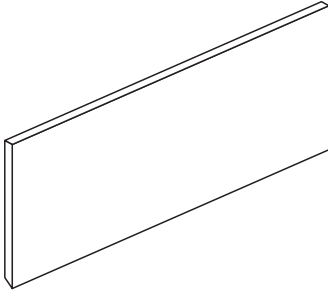
Item no.	Reference Image	Qty.
E		X 1
F		X 1
G		X 1
H		X 2

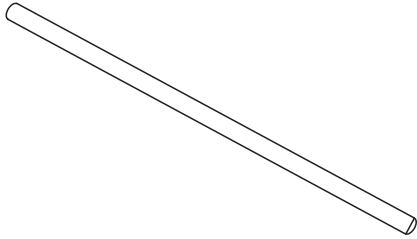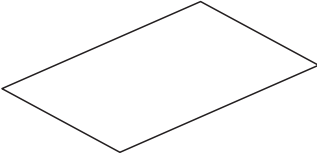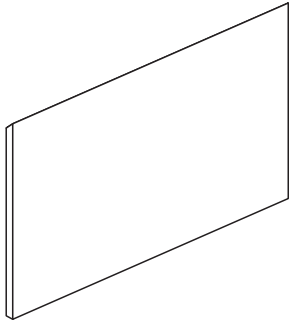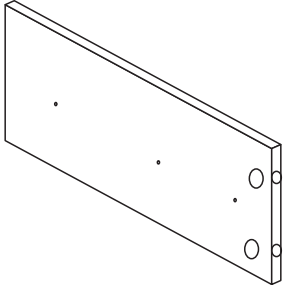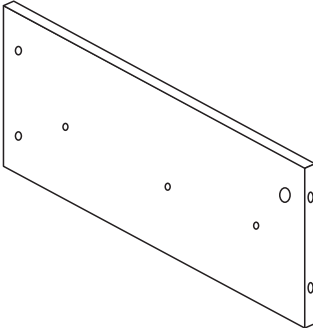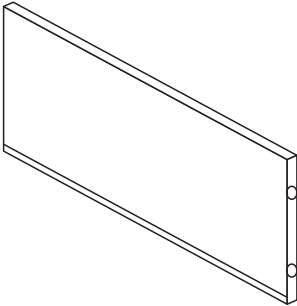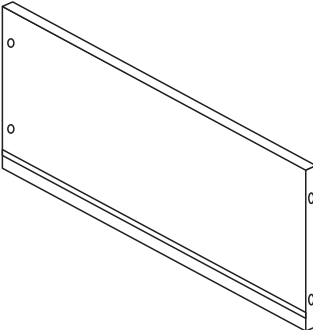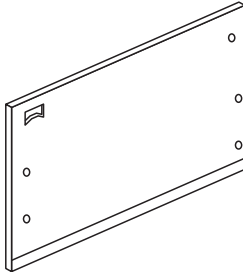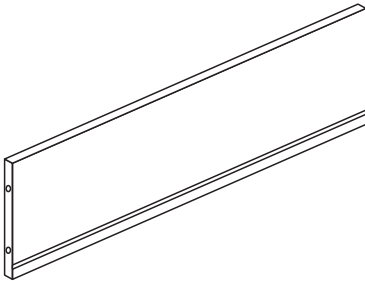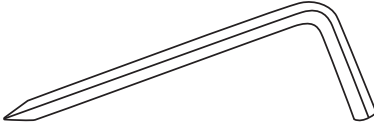Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
I		X 2	N		X 3
J		X 1	O		X 1
K		X 2	P		
L		X 2	Q		X 1
M		X 2	R		X 1

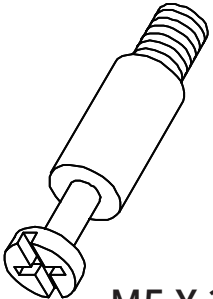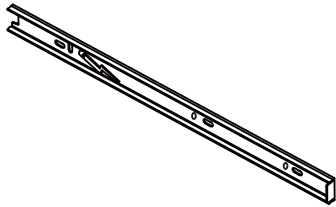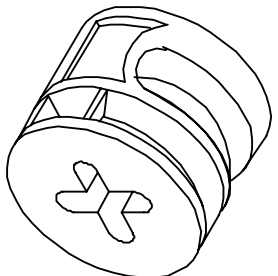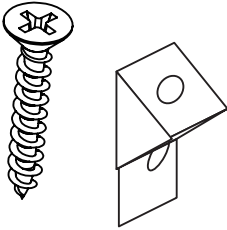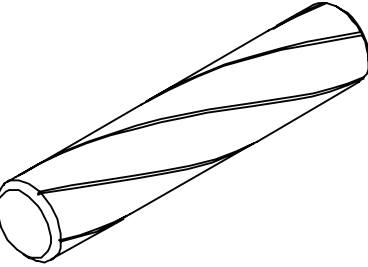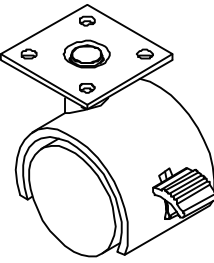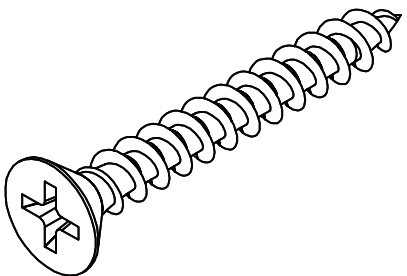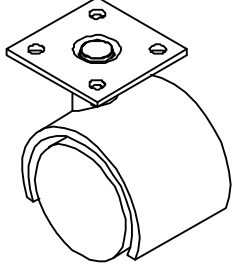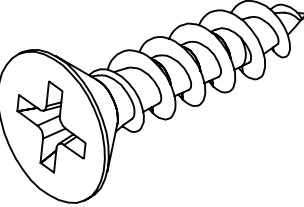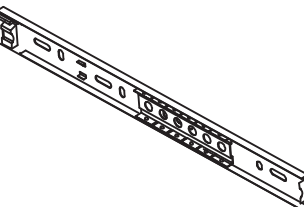
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
a	 M5 X 35mm	X 14	f		X 6
b	 M15 X 9.5mm	X 14	g	 M3X 16mm	X 4
c	 M6X 30mm	X 18	h		X 2
d	 M4X 35mm	X 16	i		X 2
e	 M3X 12mm	X 36	j	 M4X 12mm	X 16
			k		X 6

ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

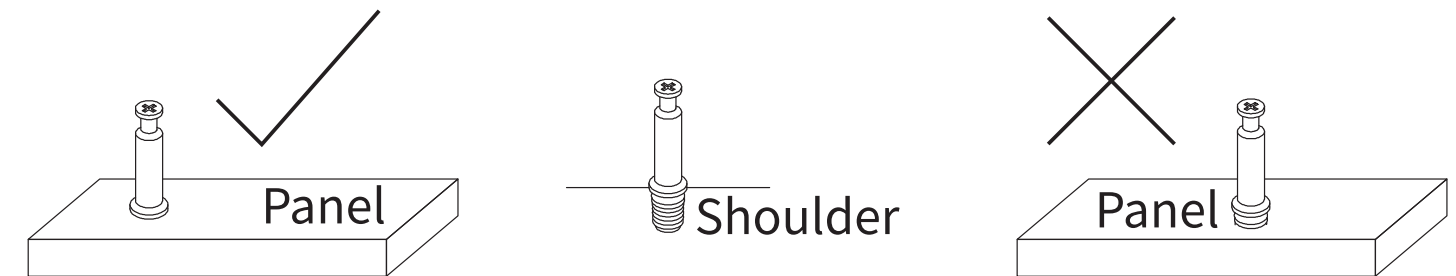

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.


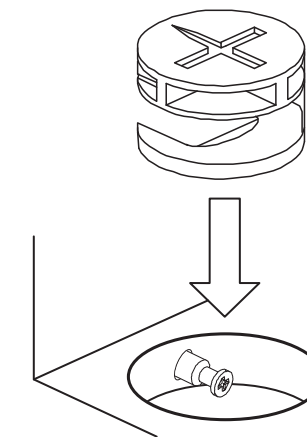


Turn the cam lock clockwise to tighten.

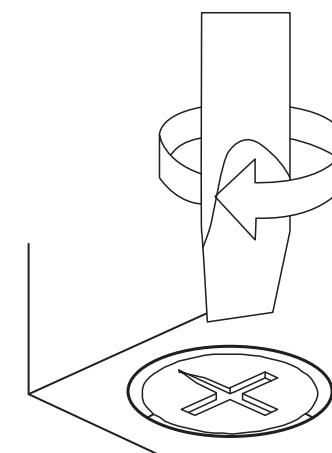


1


X2

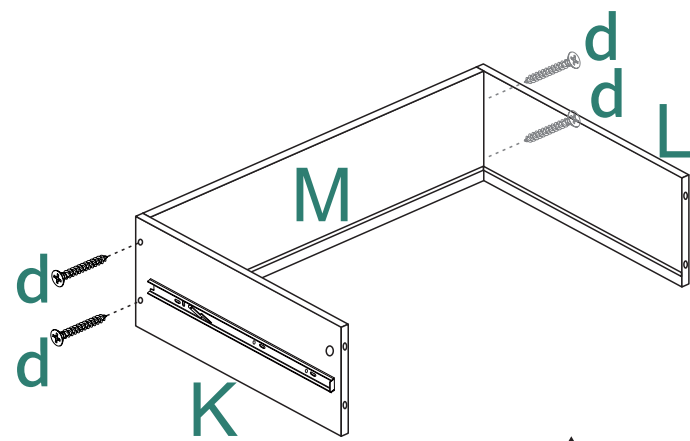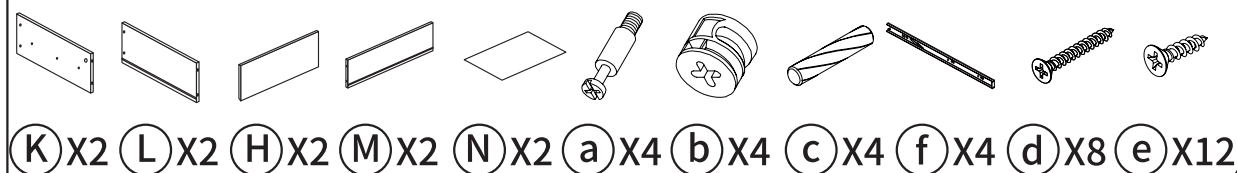


1

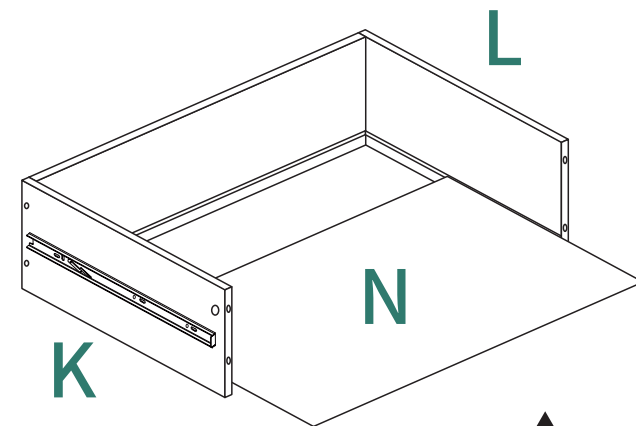

2


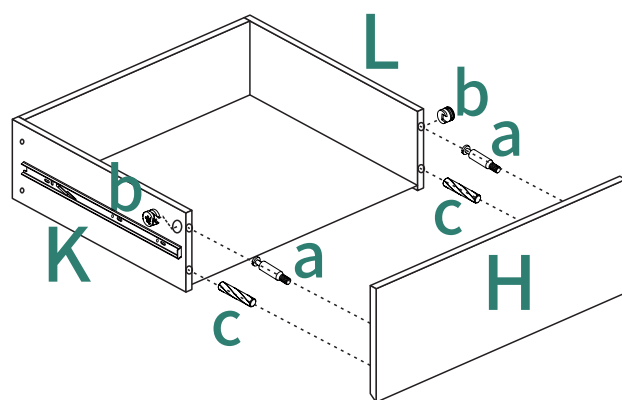


3

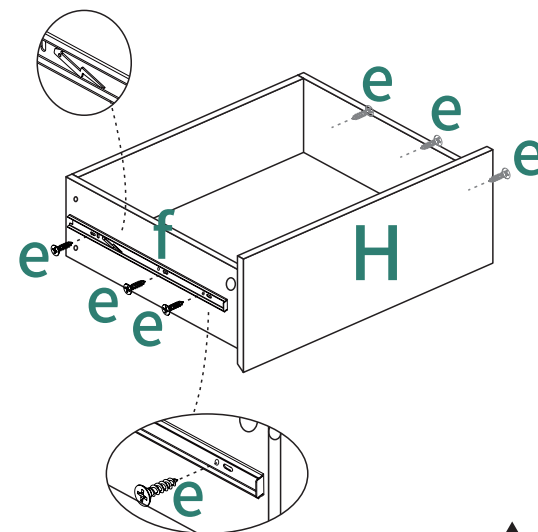


4


2

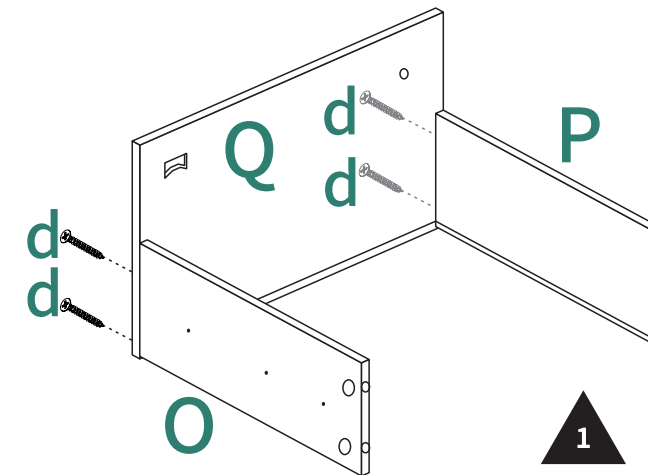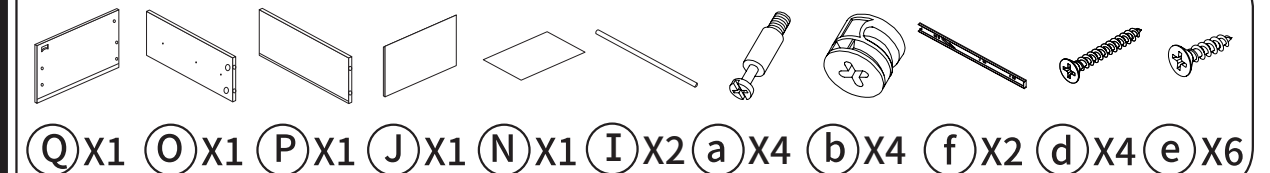


1

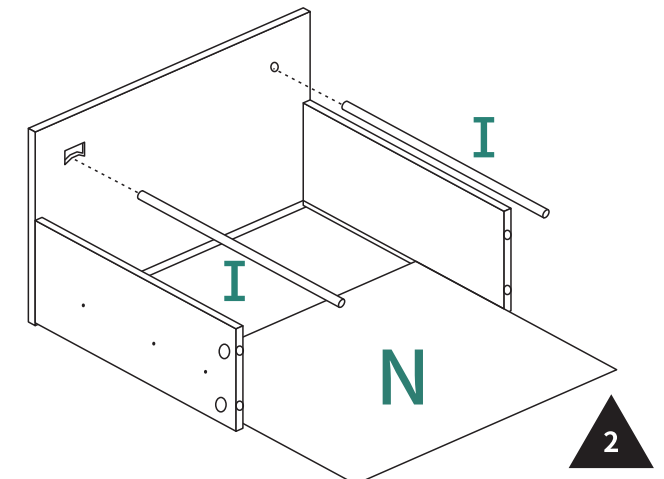

2


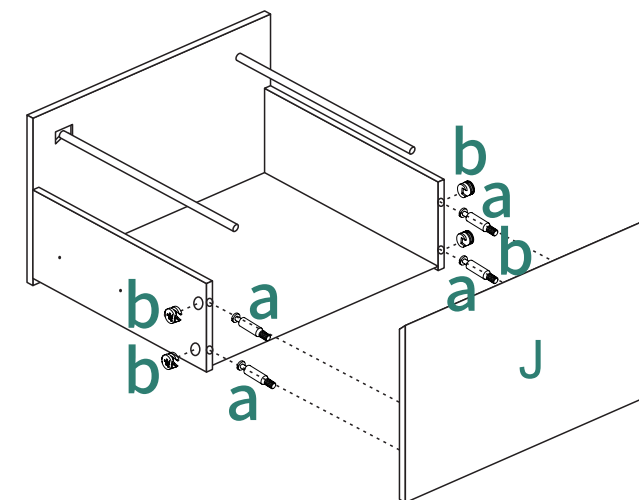


3

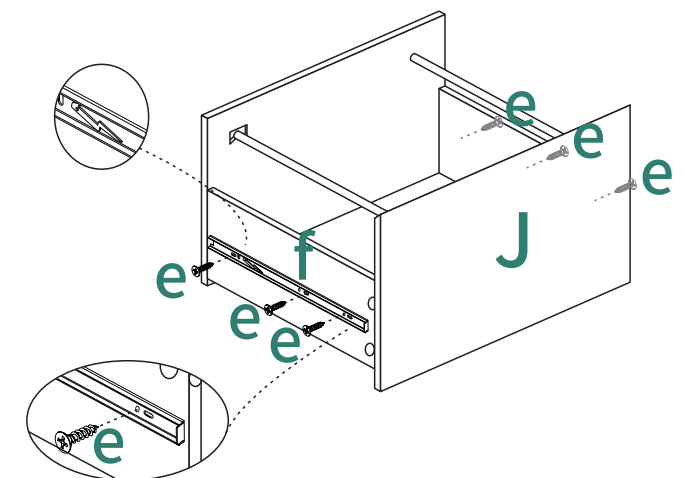



4

3

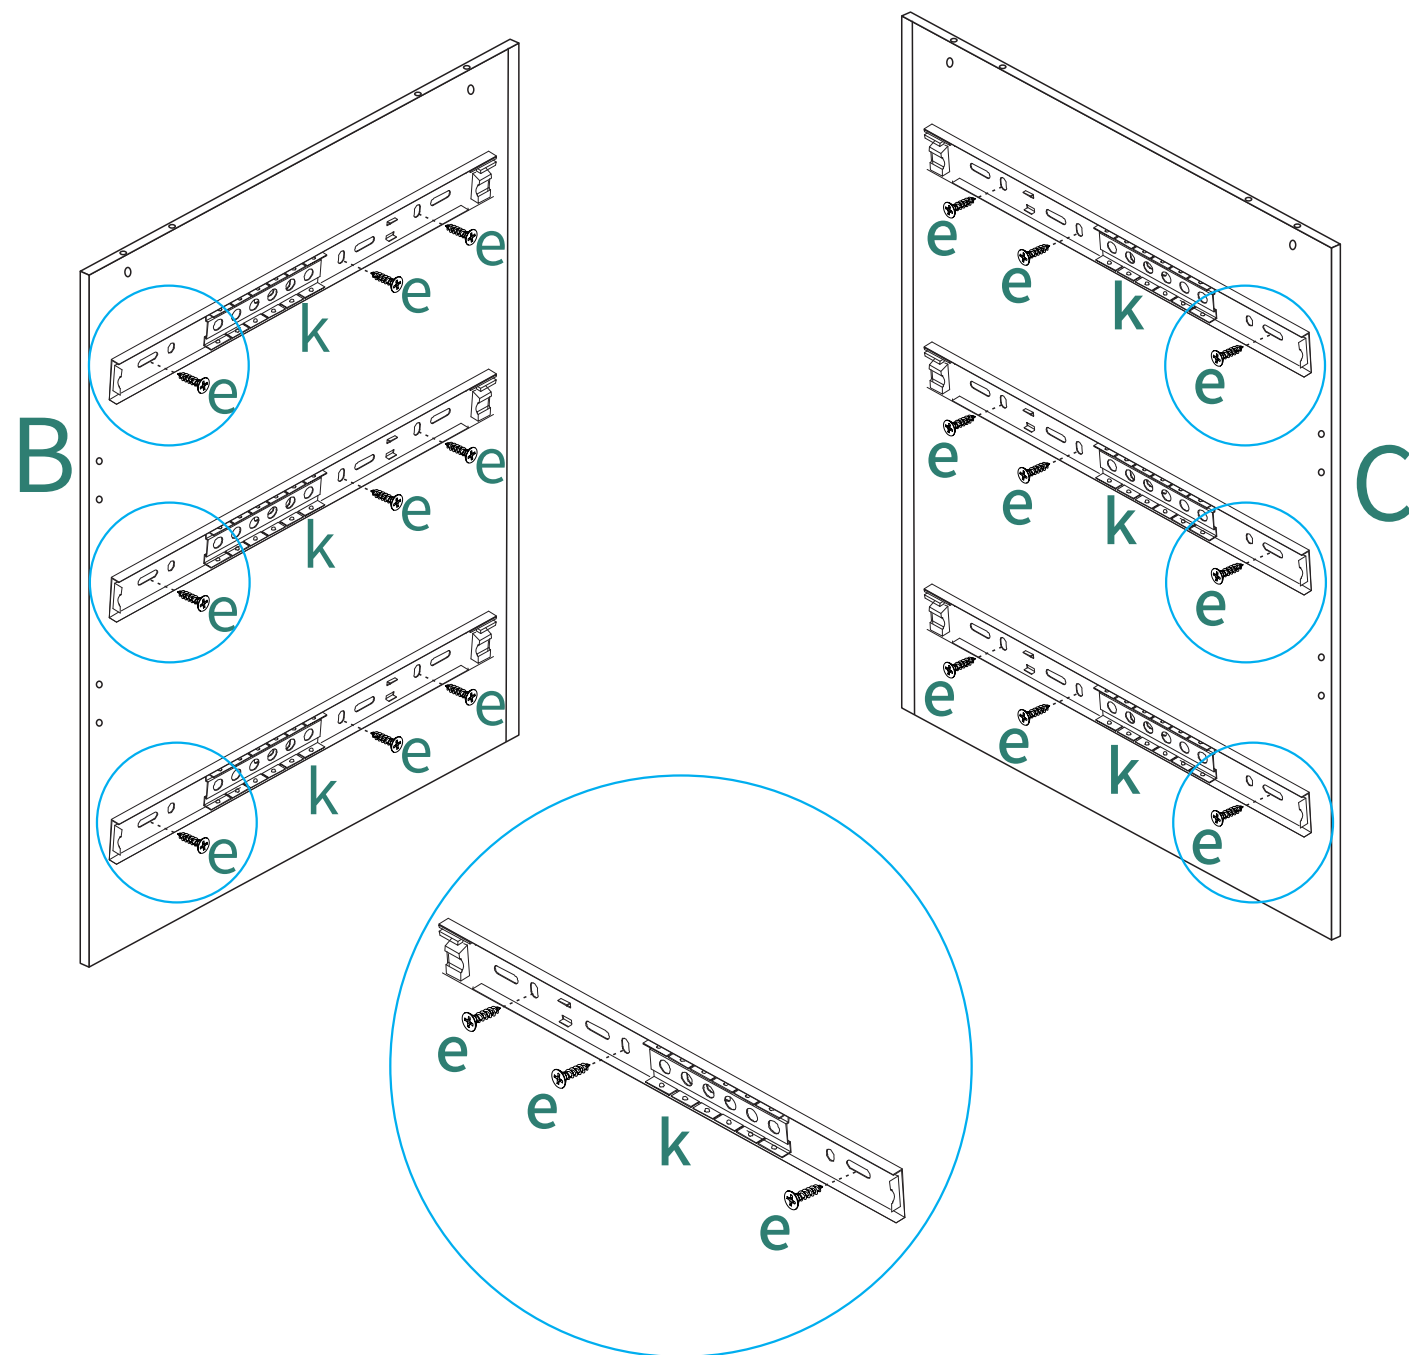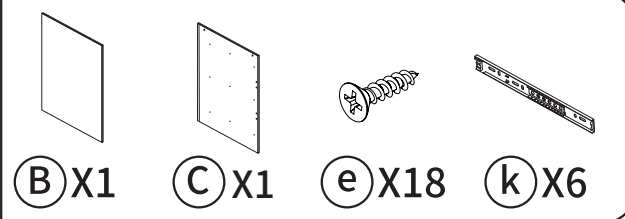


7

4

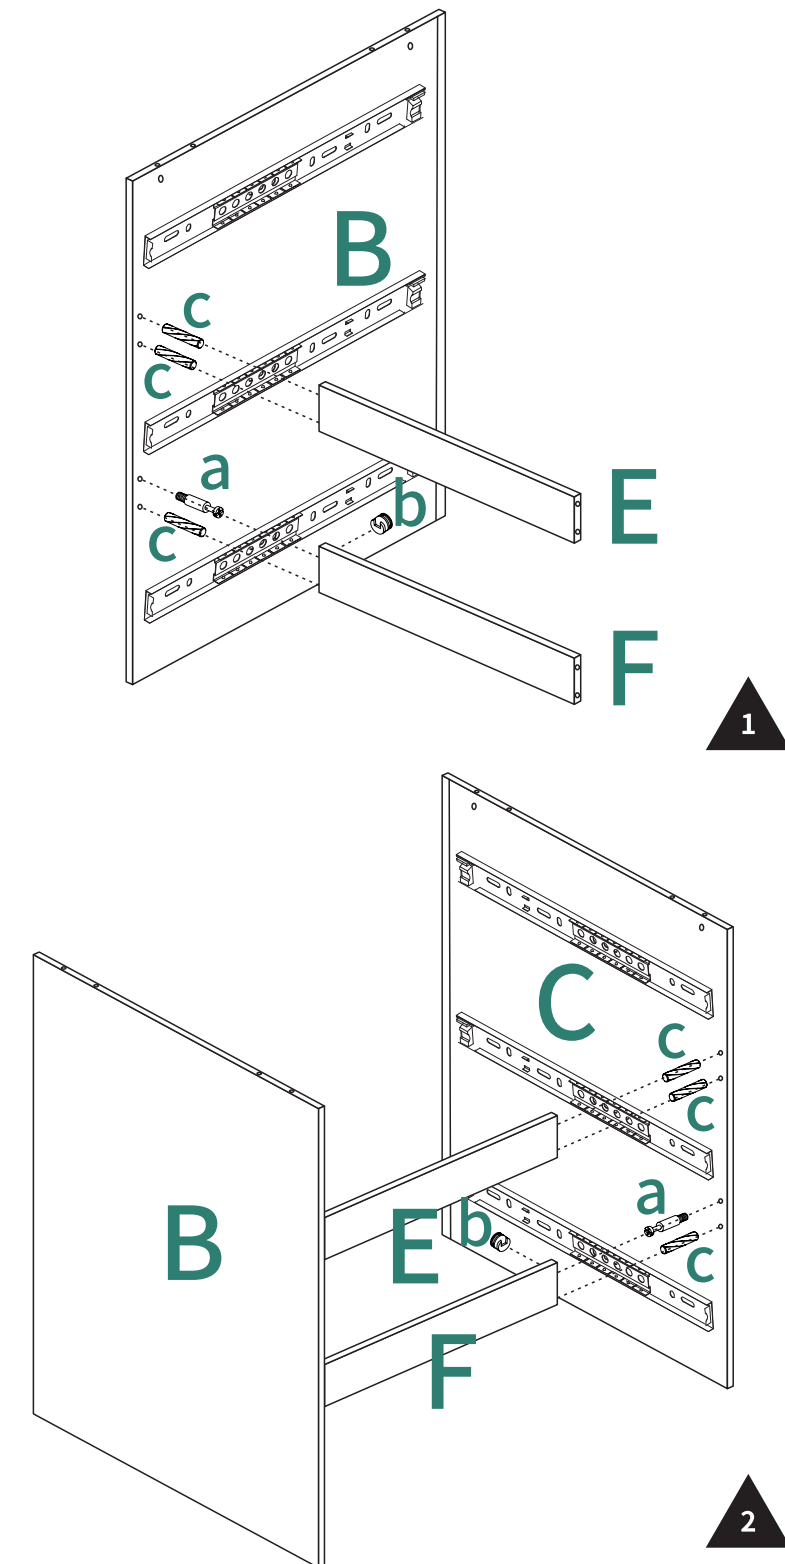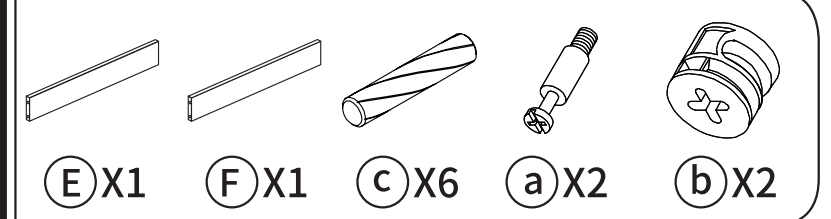


8


5




Ⓓ X1



Ⓒ X4




Ⓓ X4

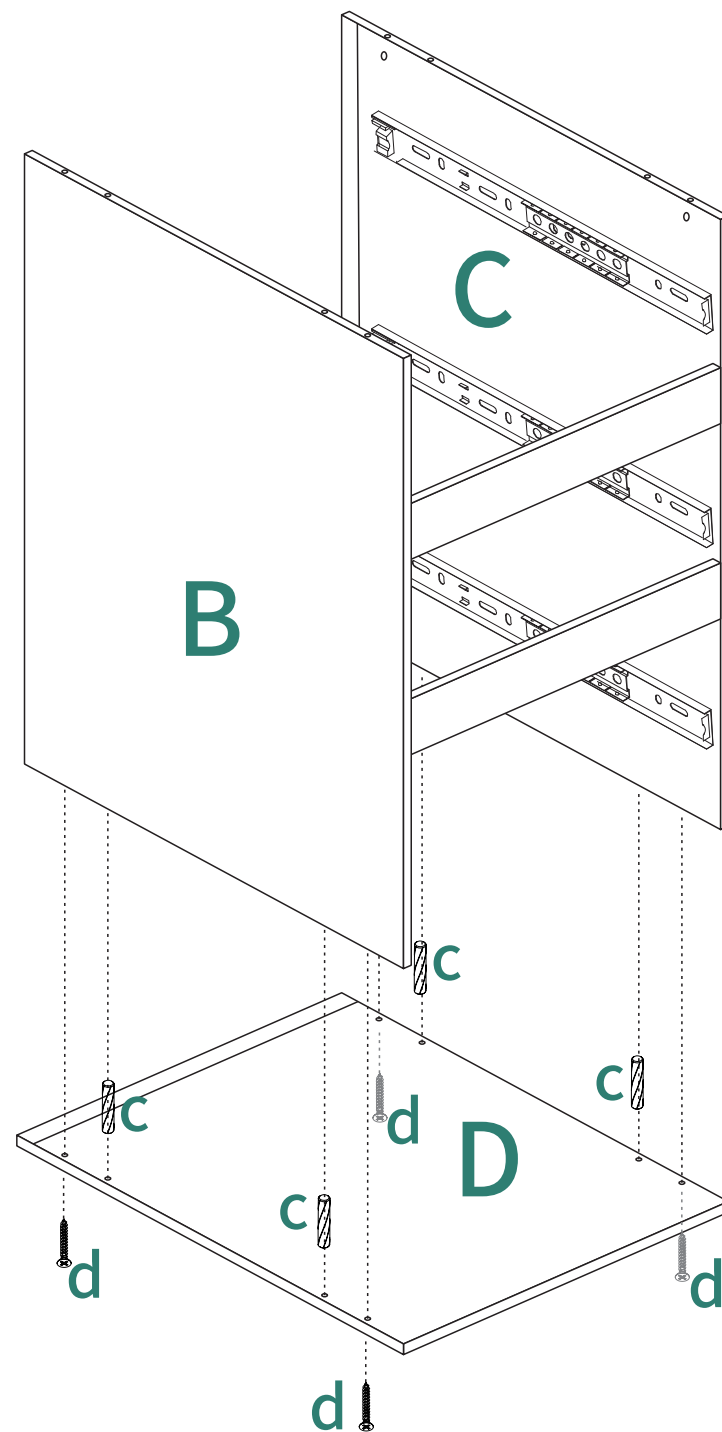


9





6

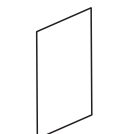


Ⓖ X1

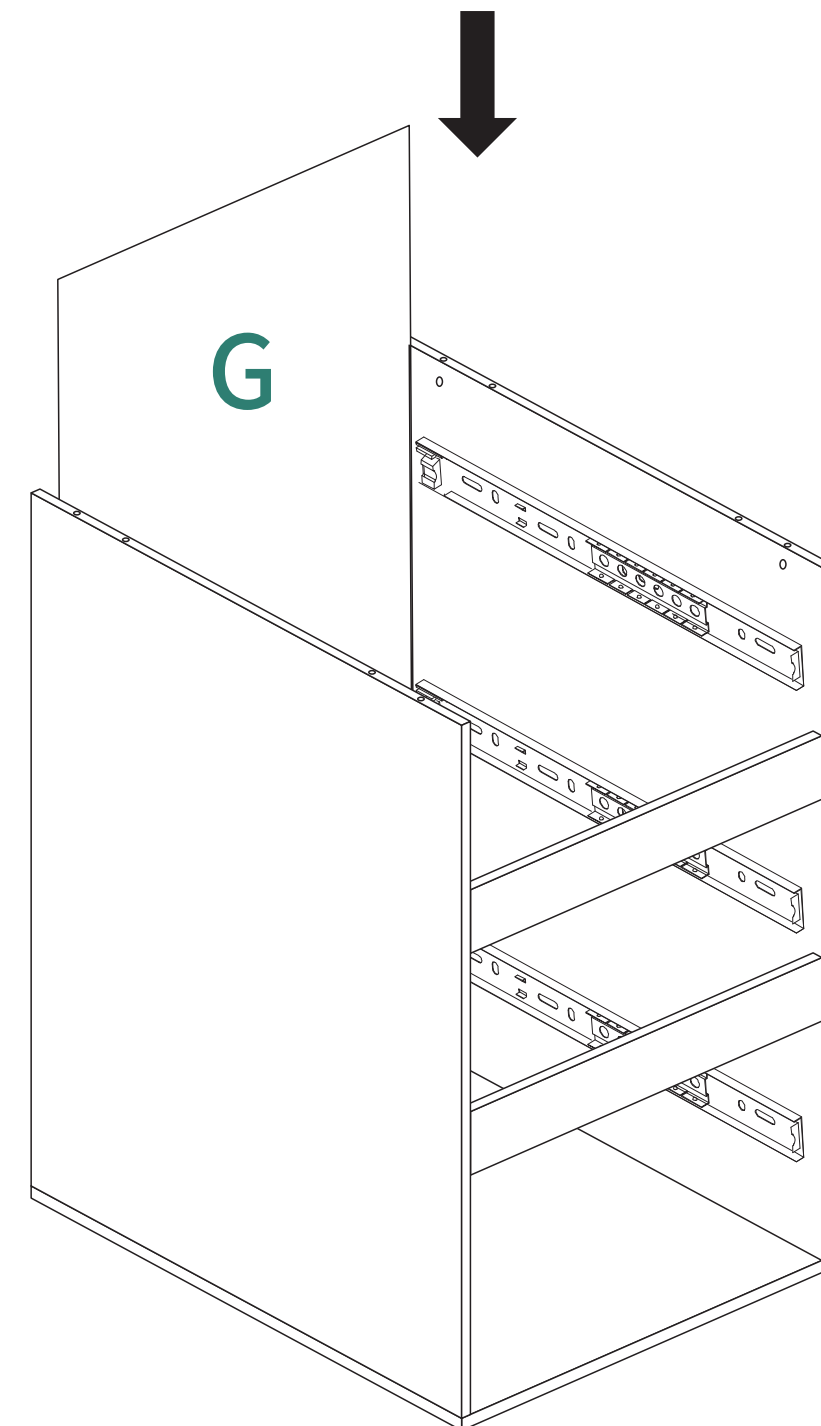

10

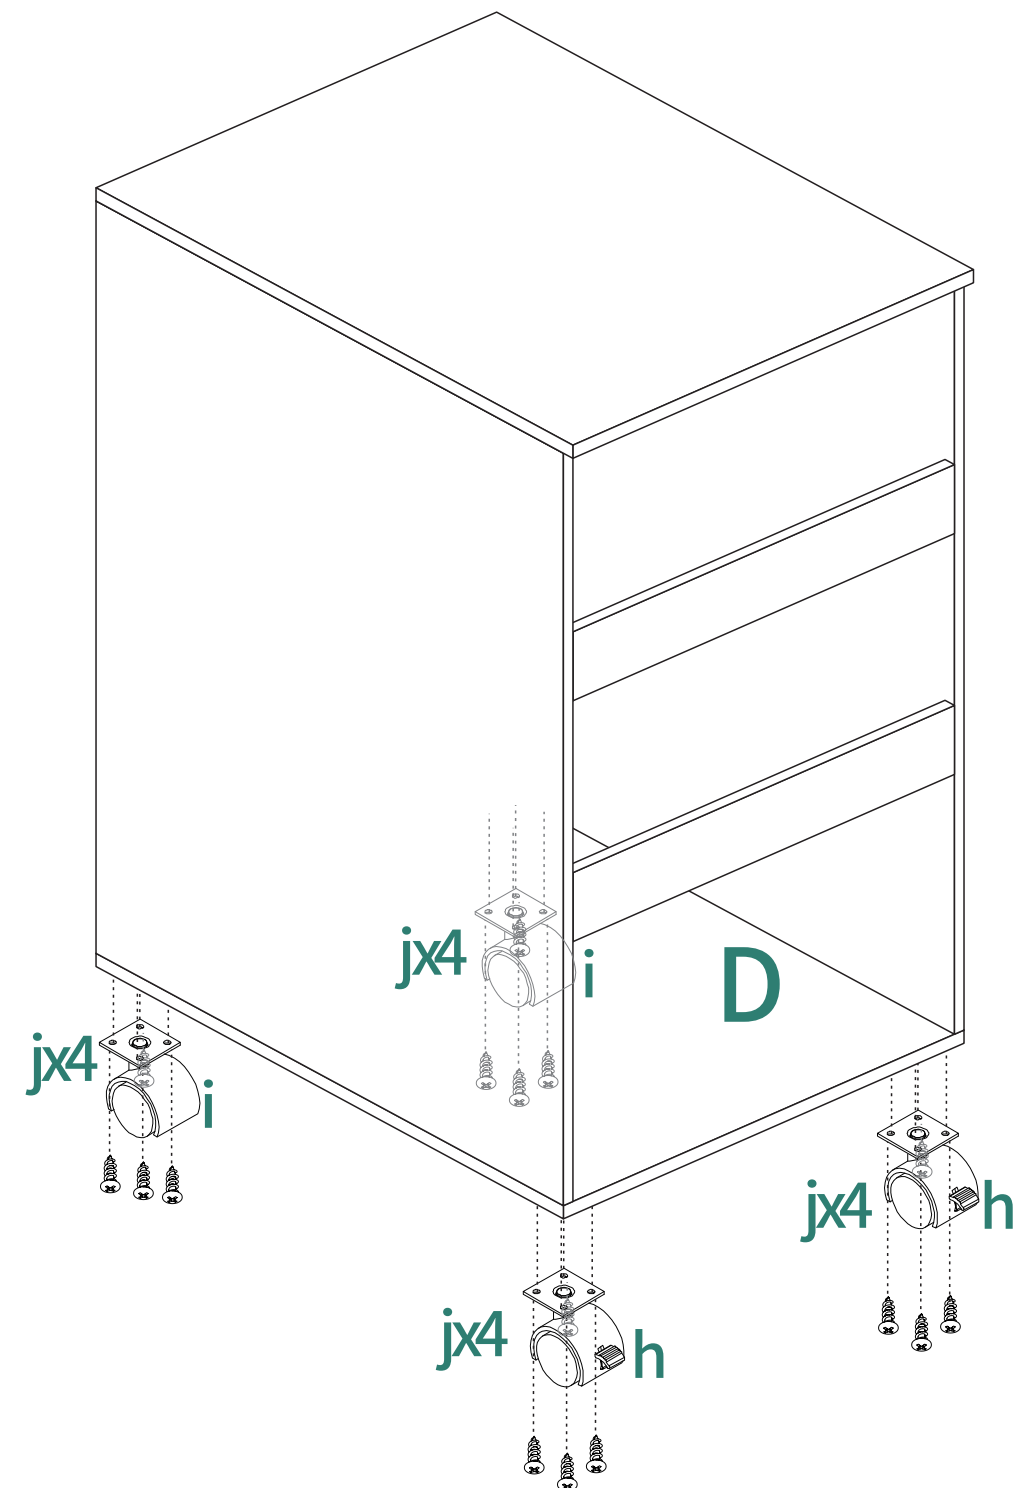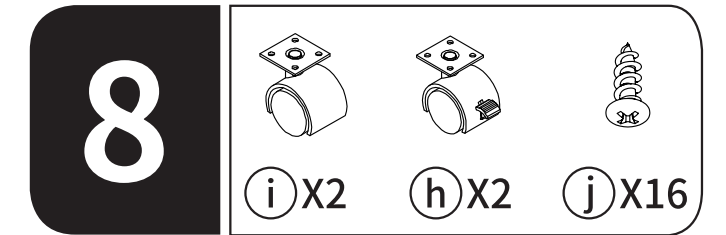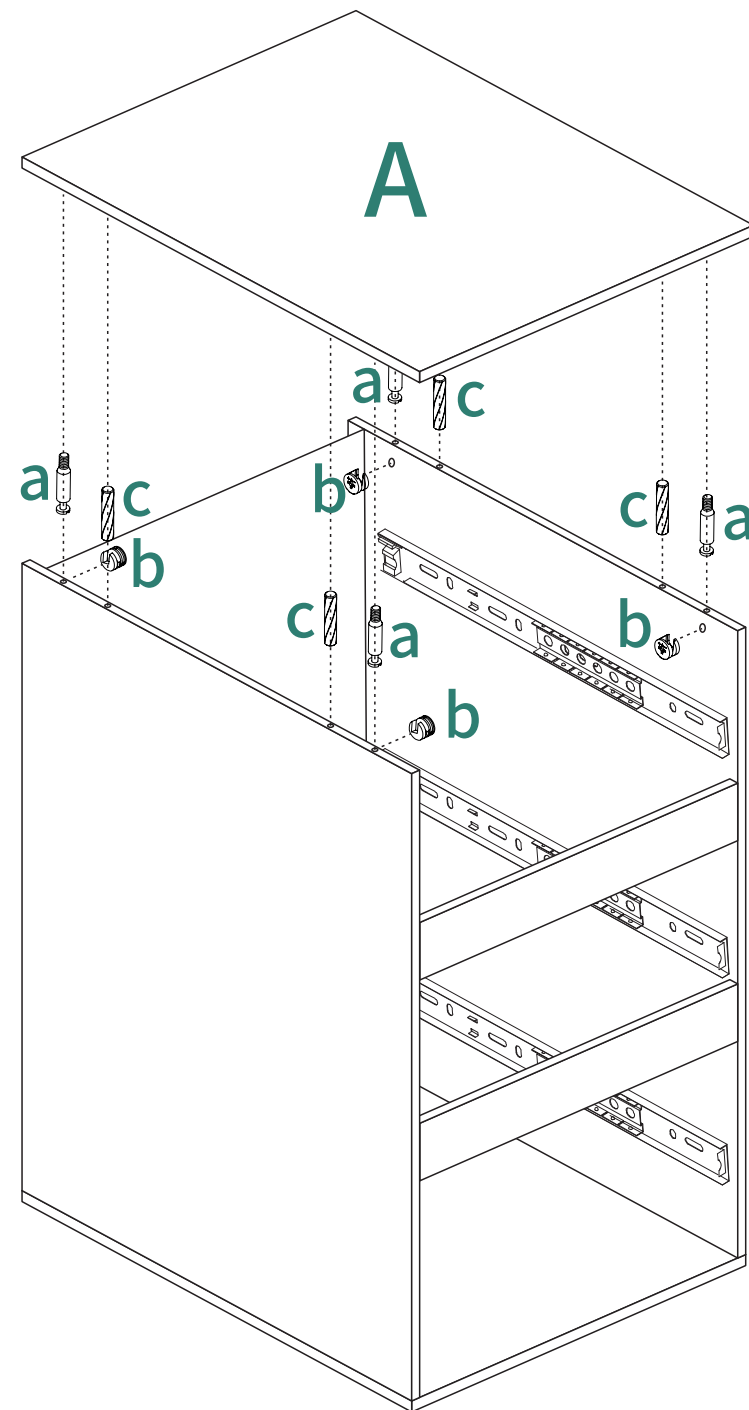
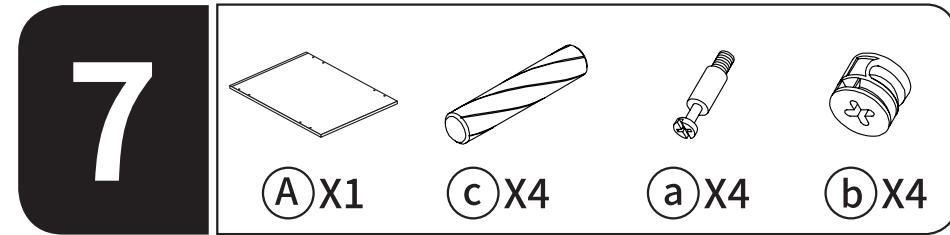


9

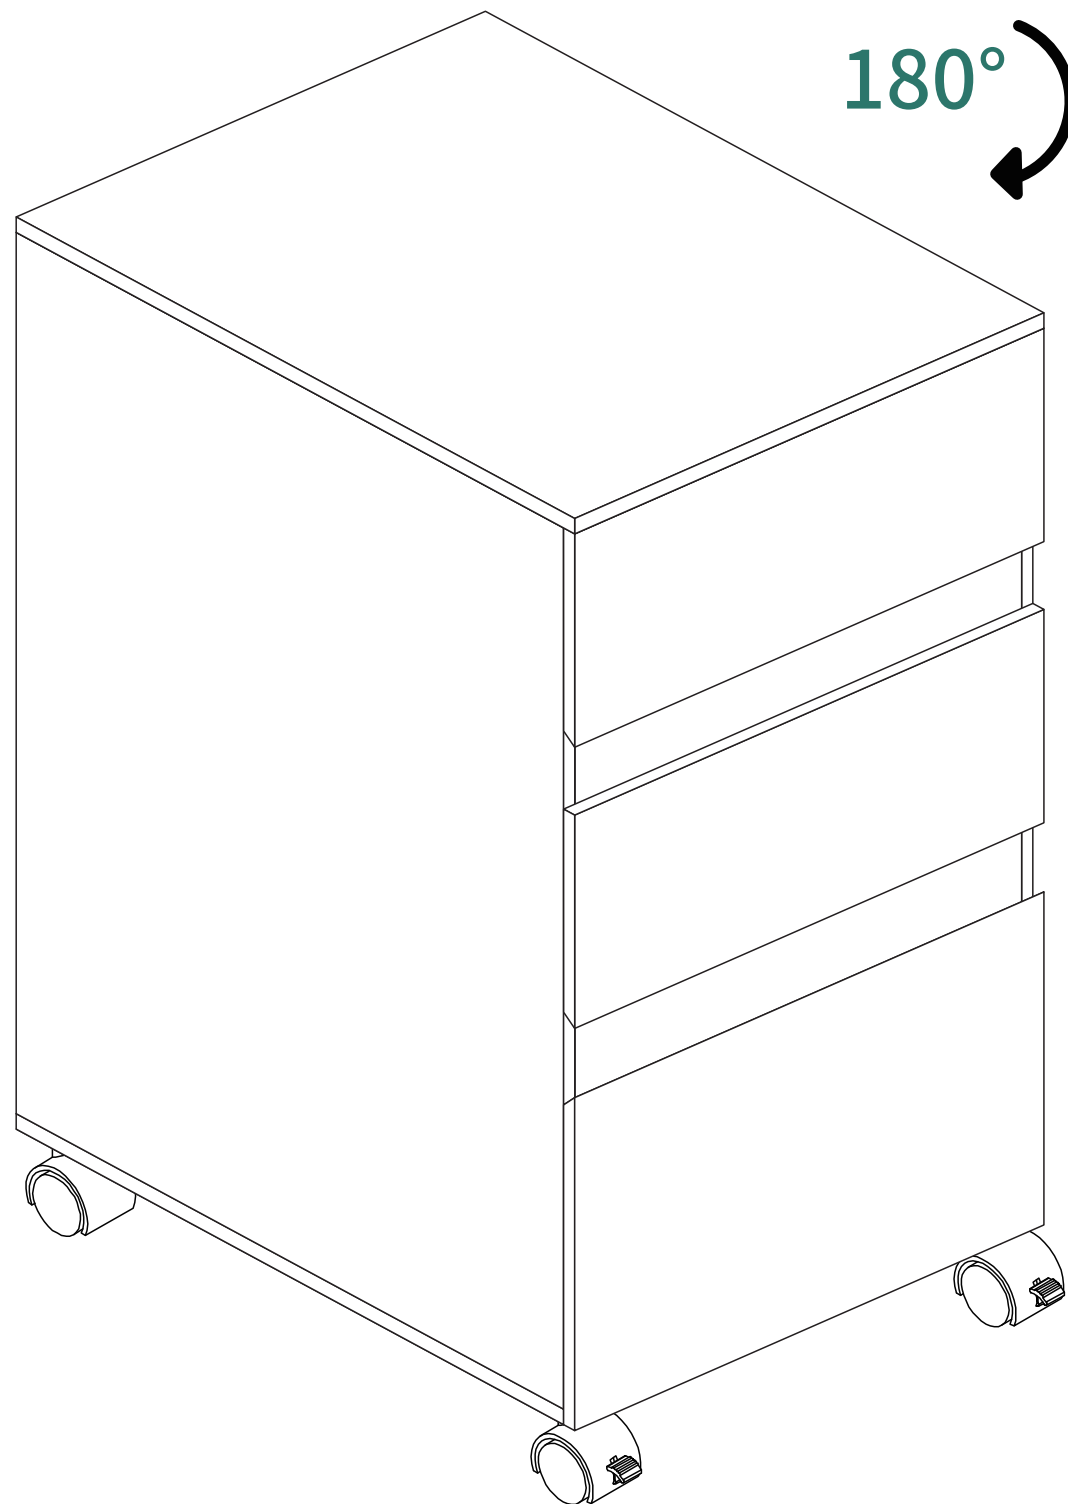


13

10

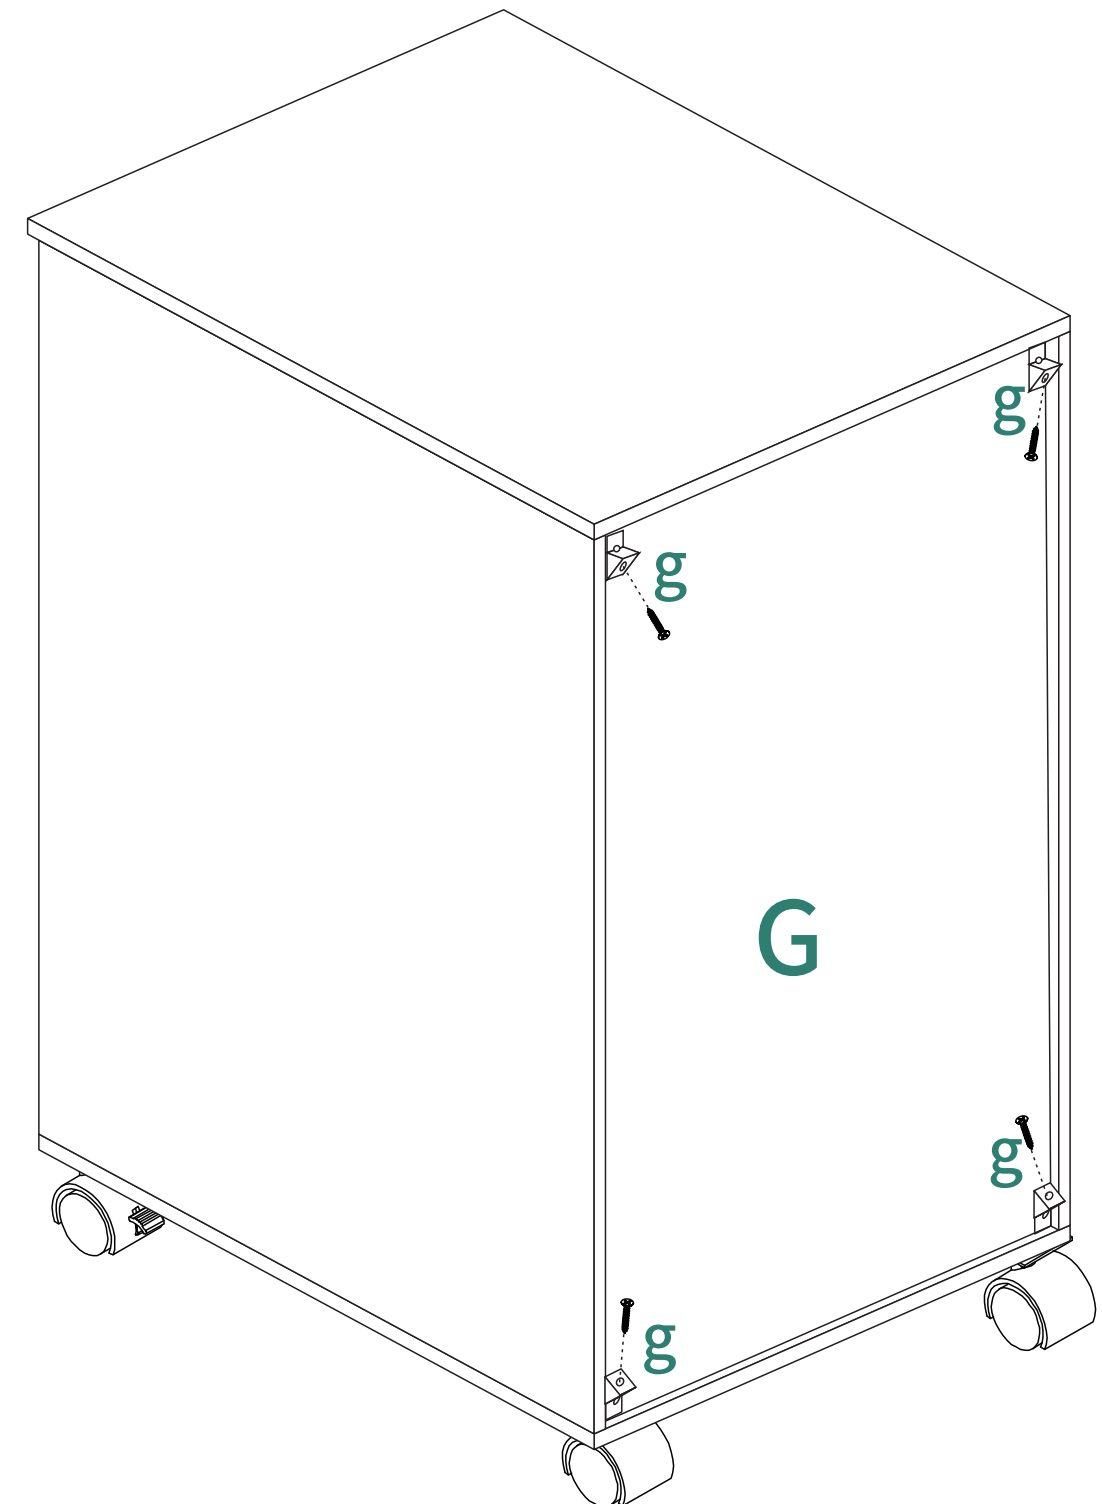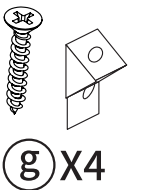





14

11

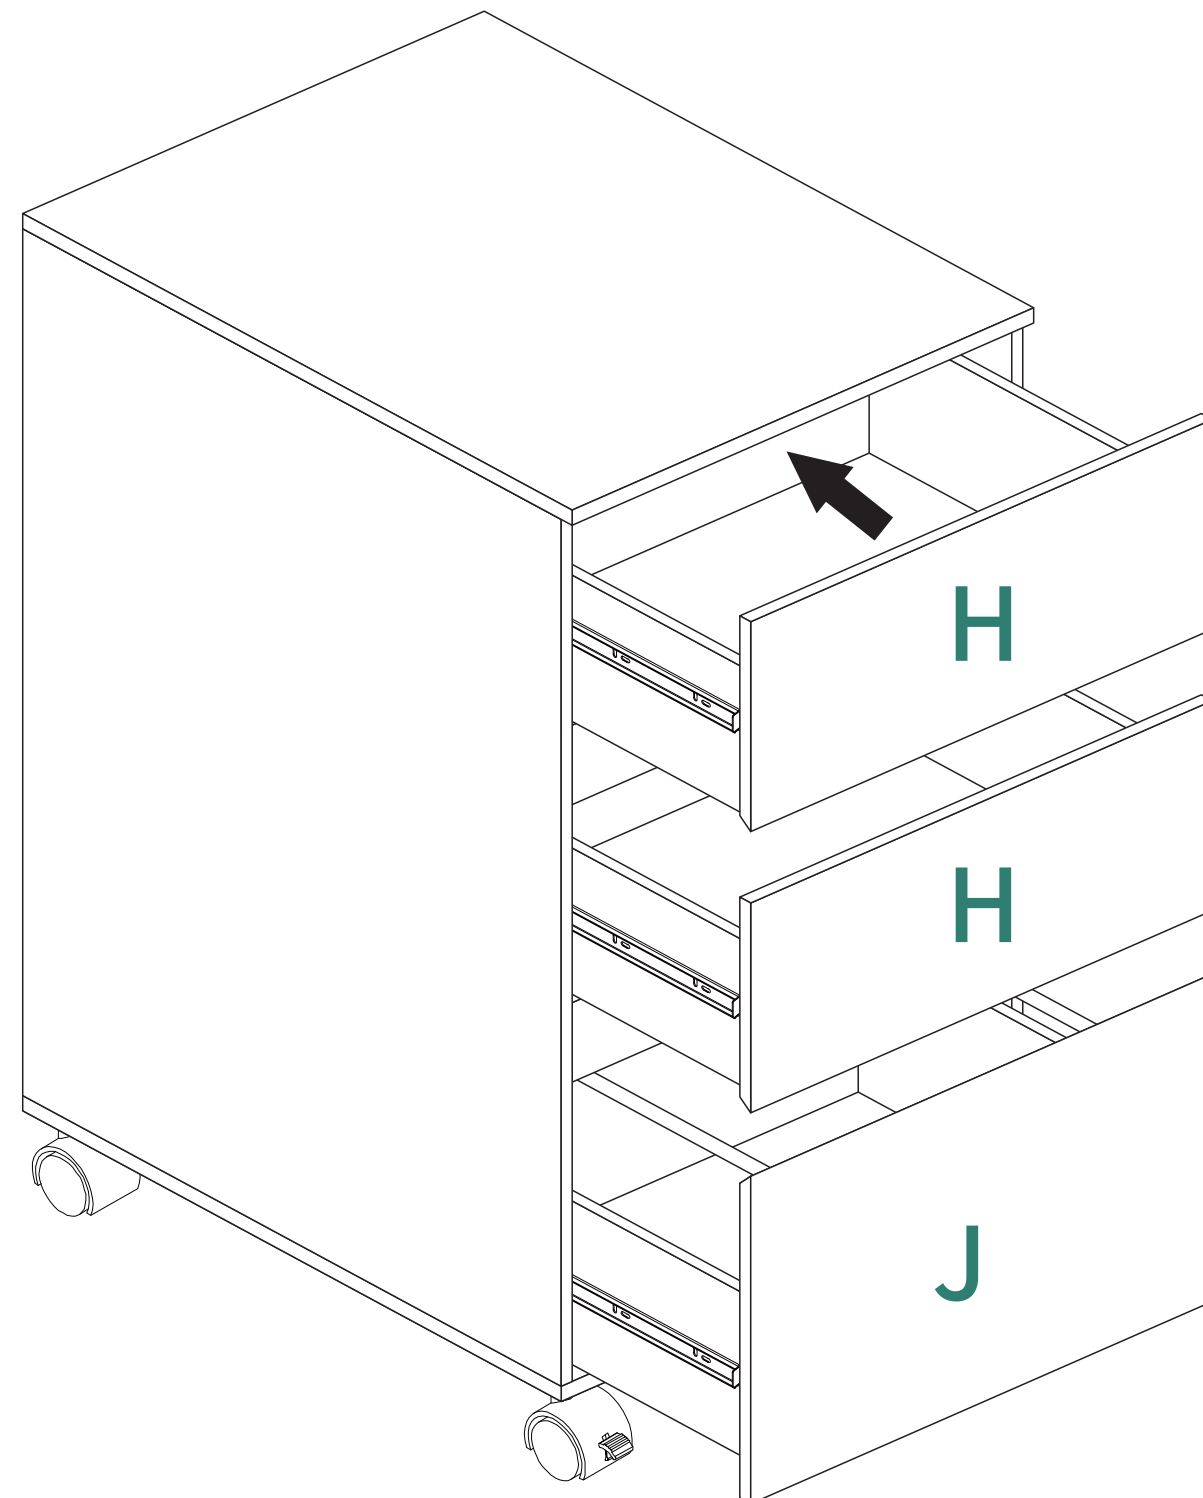

15


Disassembly Instructions

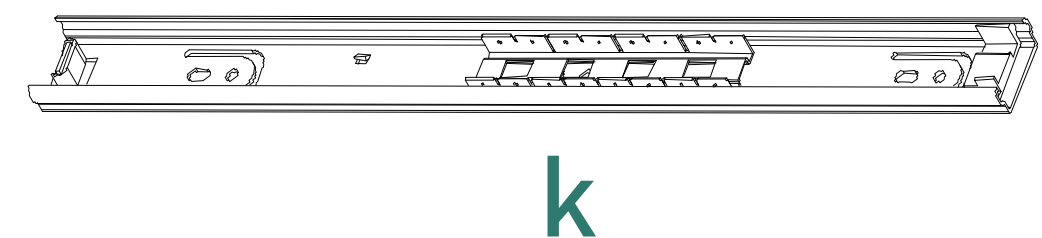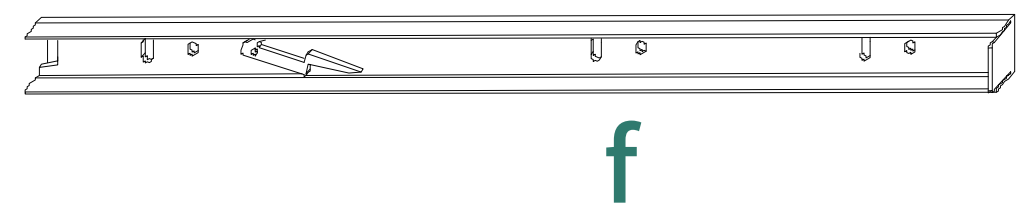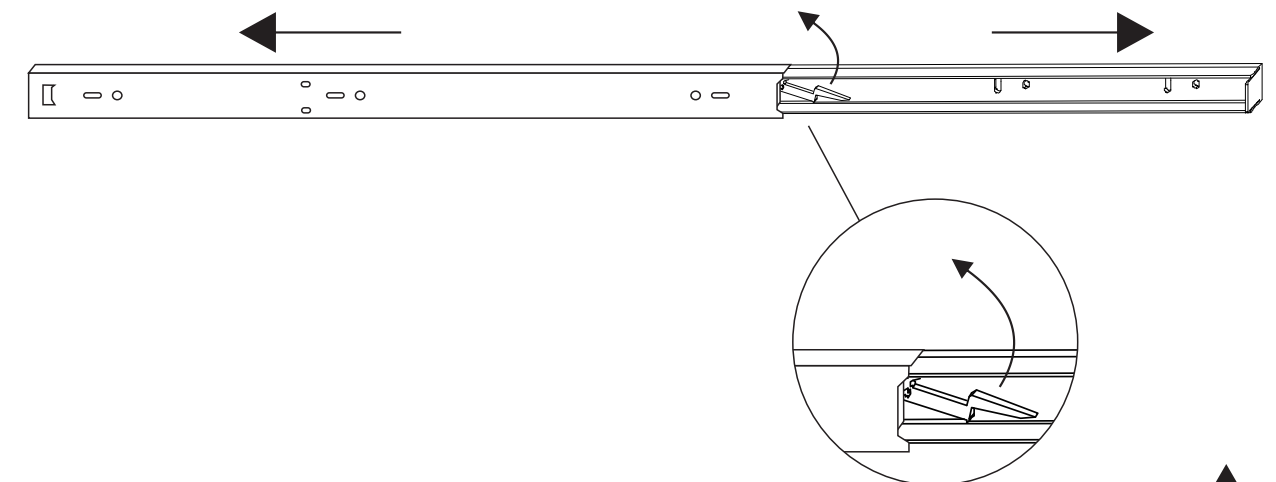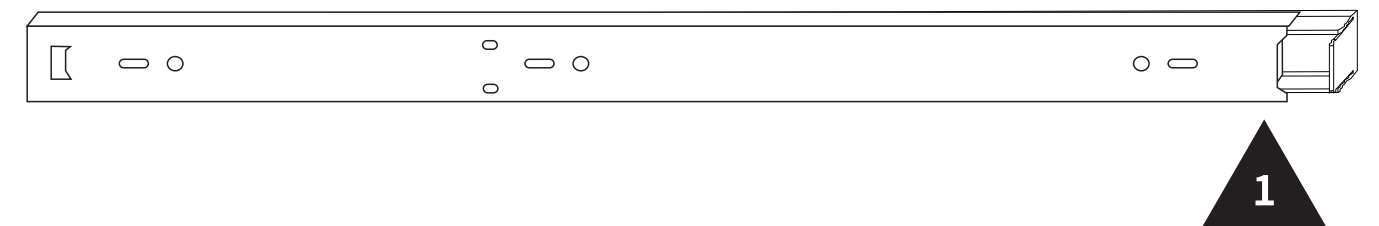

3

16

12

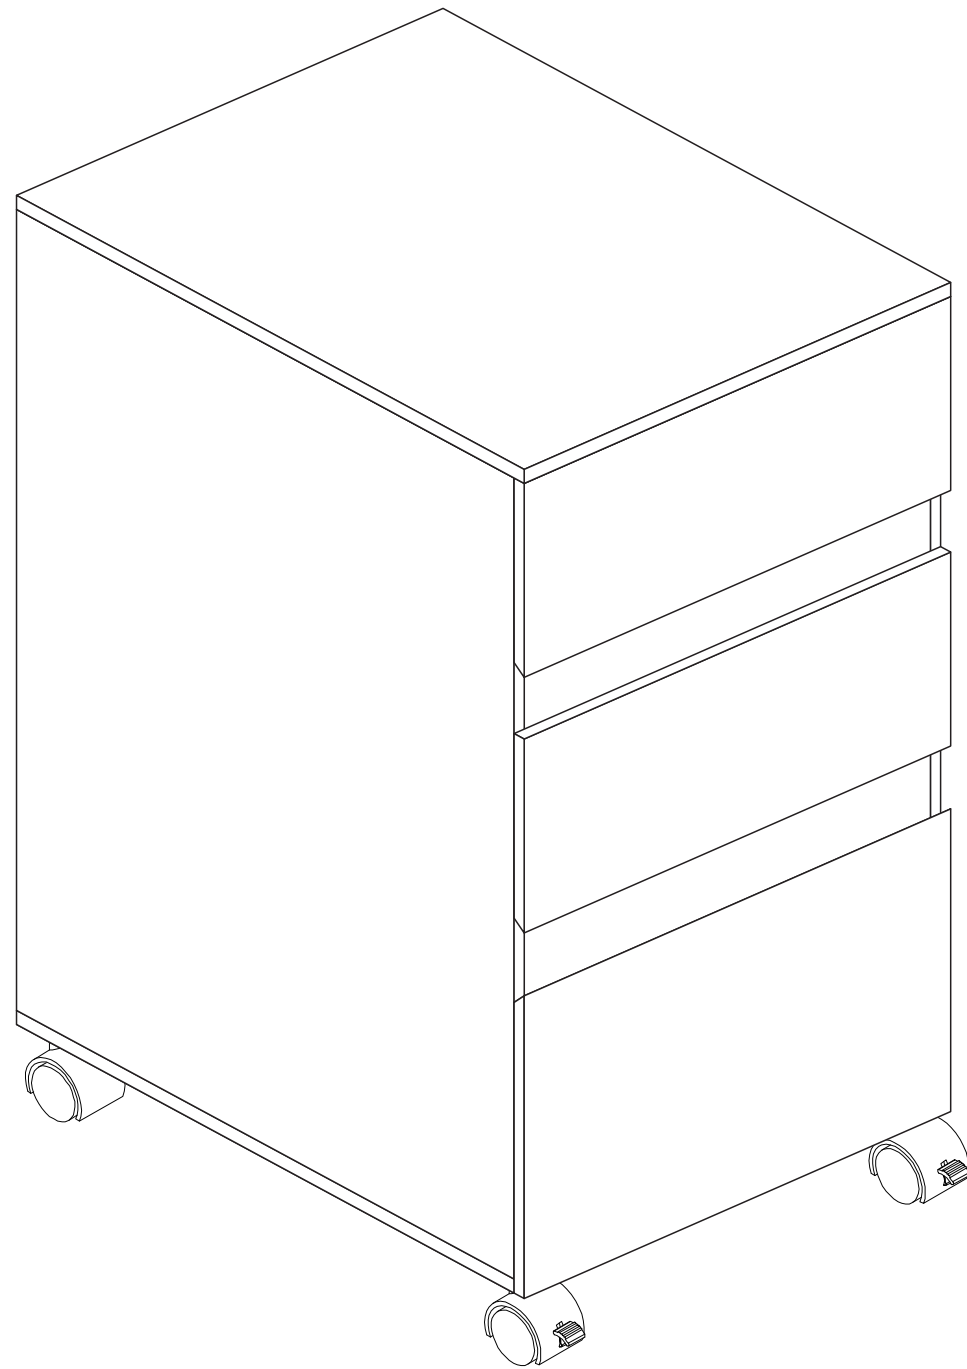

Complete Installation