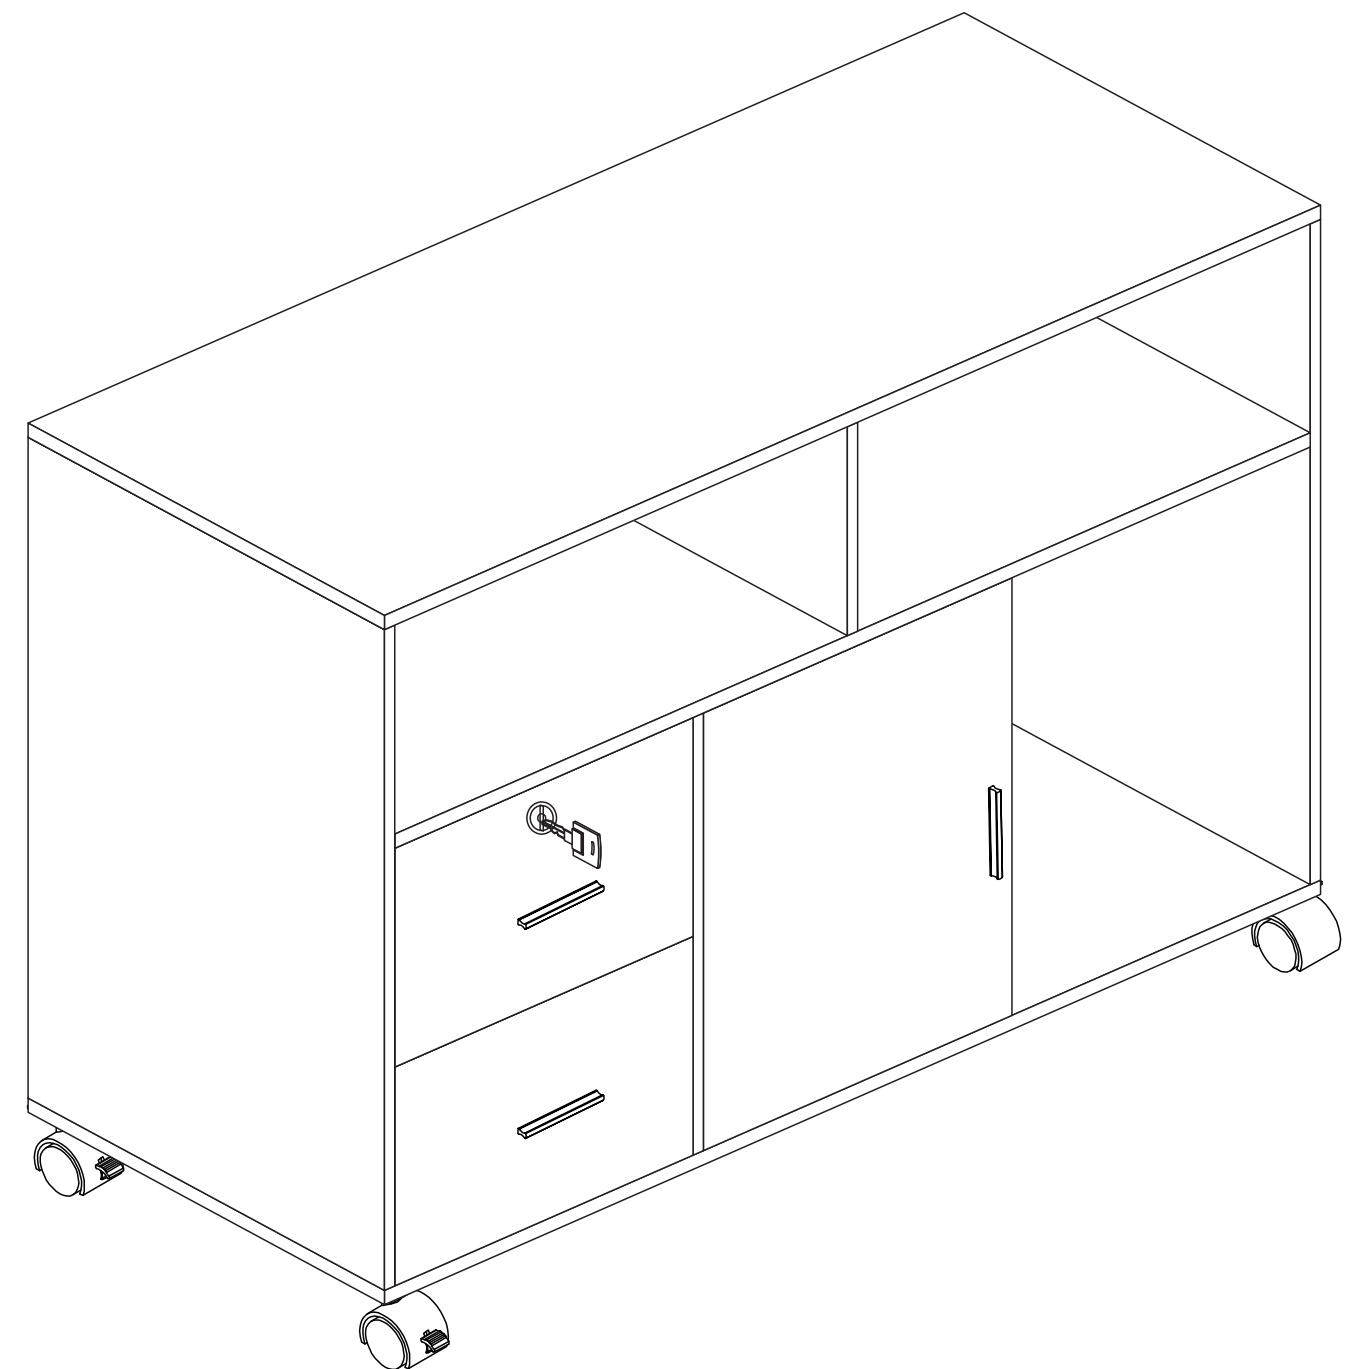










**CONTACT US:**












If you have any questions about the installation of YITAHOME products, just contact us at +1 (888) 717-8084 from Mon-Fri 8:00 AM-4:30 PM PST / Sat. 8:00 AM-12:00 PM PST or e-mail us at after-sale.cs@hotmail.com











Alternative method to contact us (amazon.com orders only)











1. Log into your Amazon account
2. Go to "Your Orders" and find the purchase
3. Click on "Contact Seller"

MOBILE 2-DRAWER LATERAL FILING CABINET

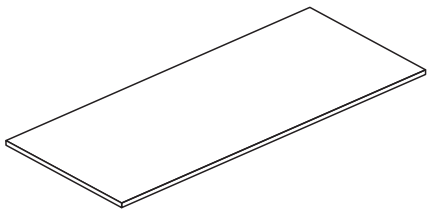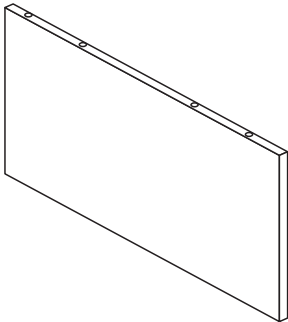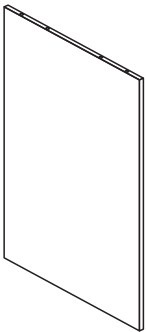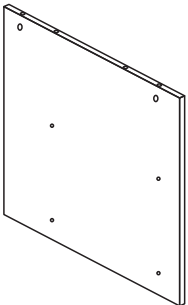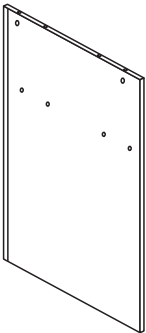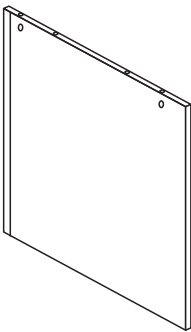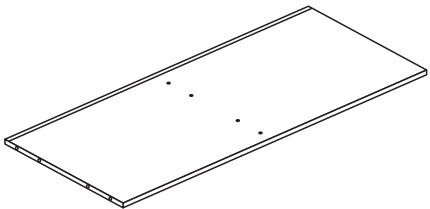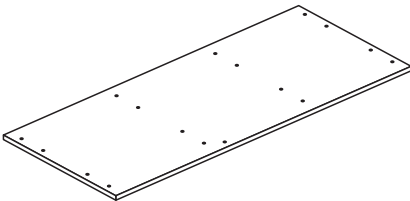Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		X 1	E		X 1
B		X 1	F		X 1
C		X 1	G		X 1
D		X 1	H		X 1

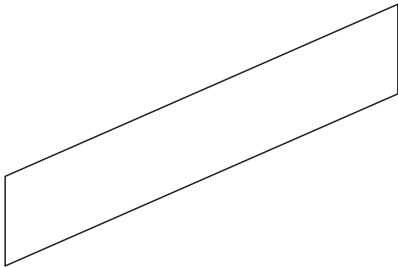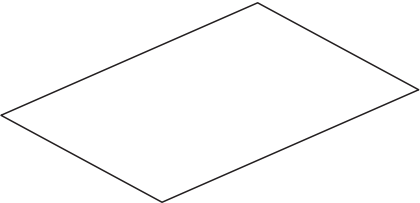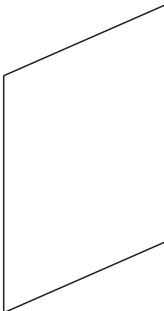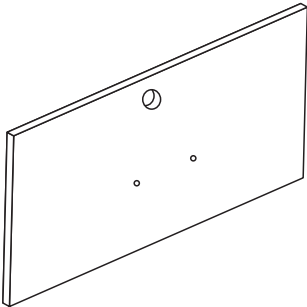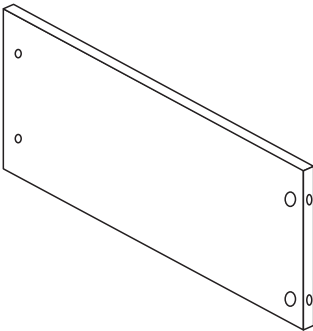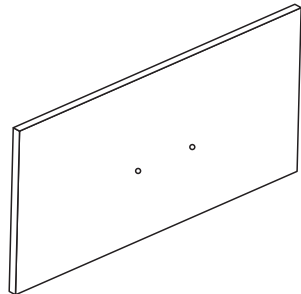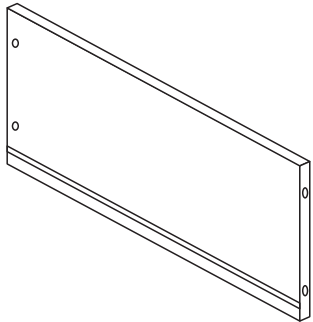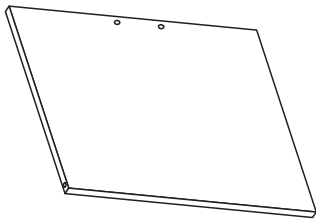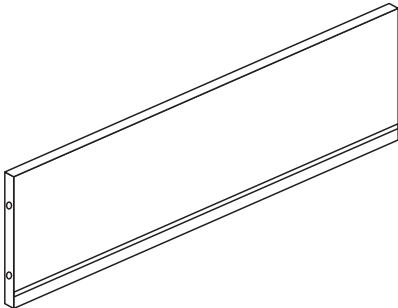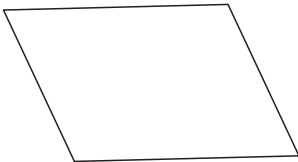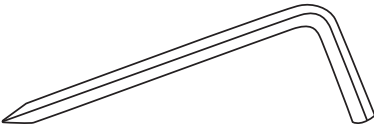Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
I		X 1	N		X 2
J		X 2	O		X 1
K		X 2	P		X 1
L		X 2	Q		X 1
M		X 2	R		X 1
			S		X 1

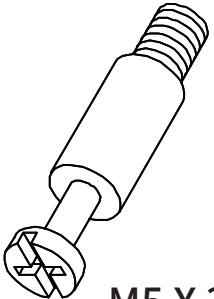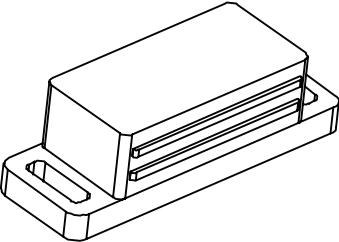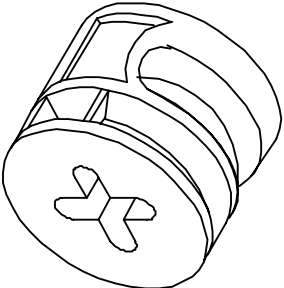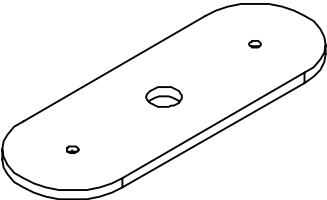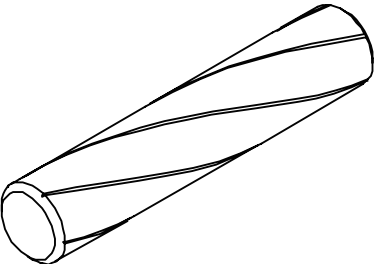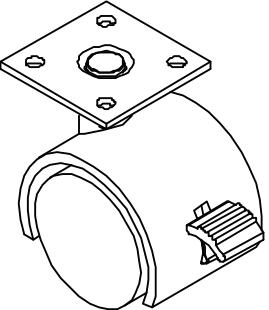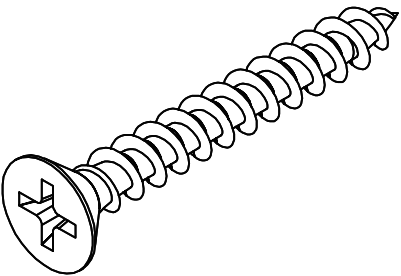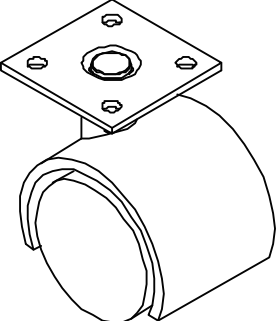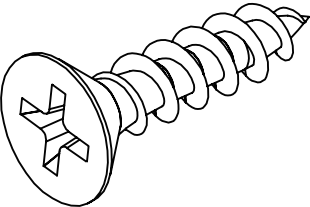
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
a	 M5 X 35mm	X 22	f		X 1
b	 M15 X 9.5mm	X 22	g		X 1
c	 M6X 30mm	X 24	h		X 2
d	 M4X 35mm	X 18	i		X 3
e	 M3X 12mm	X 17	j	 M4X 12mm	X 20

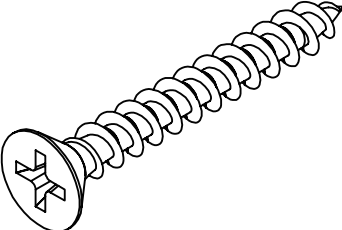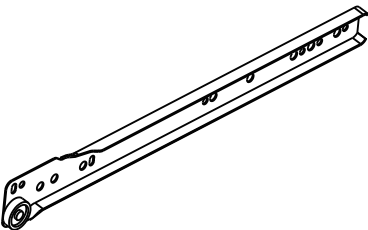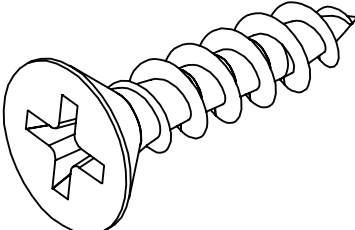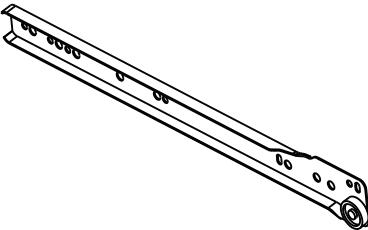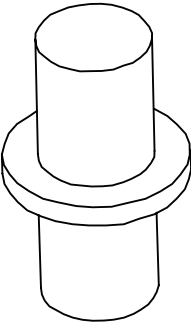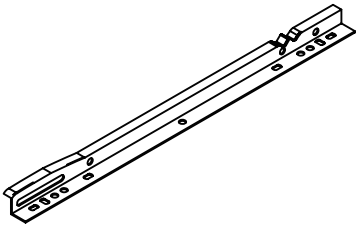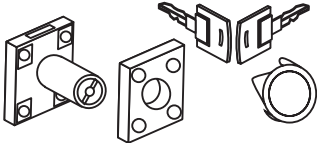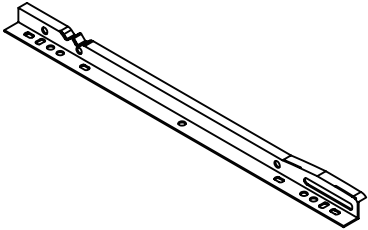Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
k	 M3X 16mm	X 8	p		X 4
l	 M4 X 18mm	X 3	CL		X 2
m	 M3X 16mm	X 2	CR		X 2
n		X 2	DL		X 2
o		X 1	DR		X 2


Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

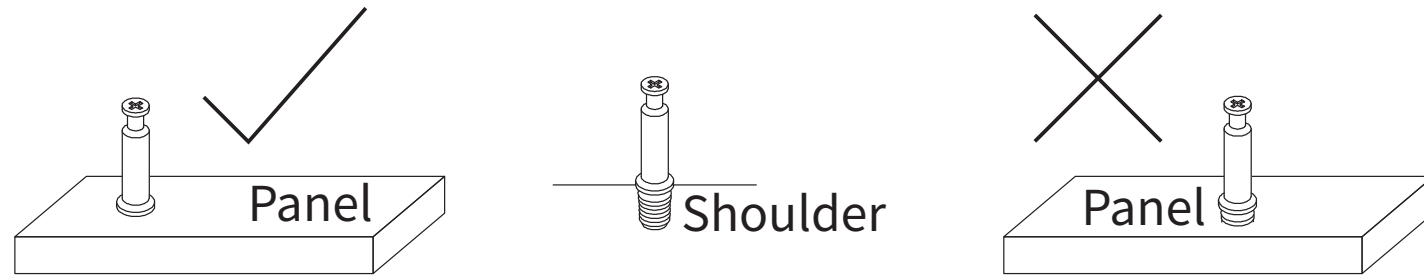


The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

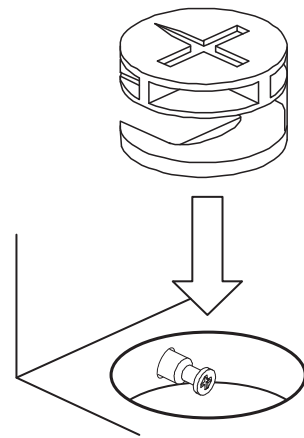


Turn the cam lock clockwise to tighten.

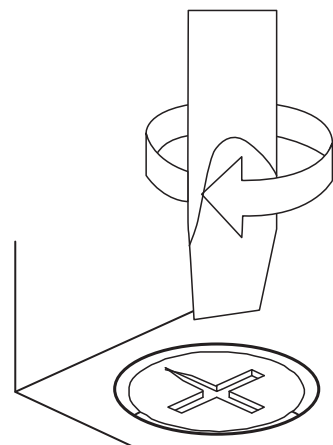


1




Q 1pc




e 1pc





g 1pc

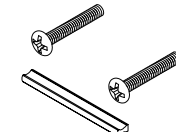

l 1pc

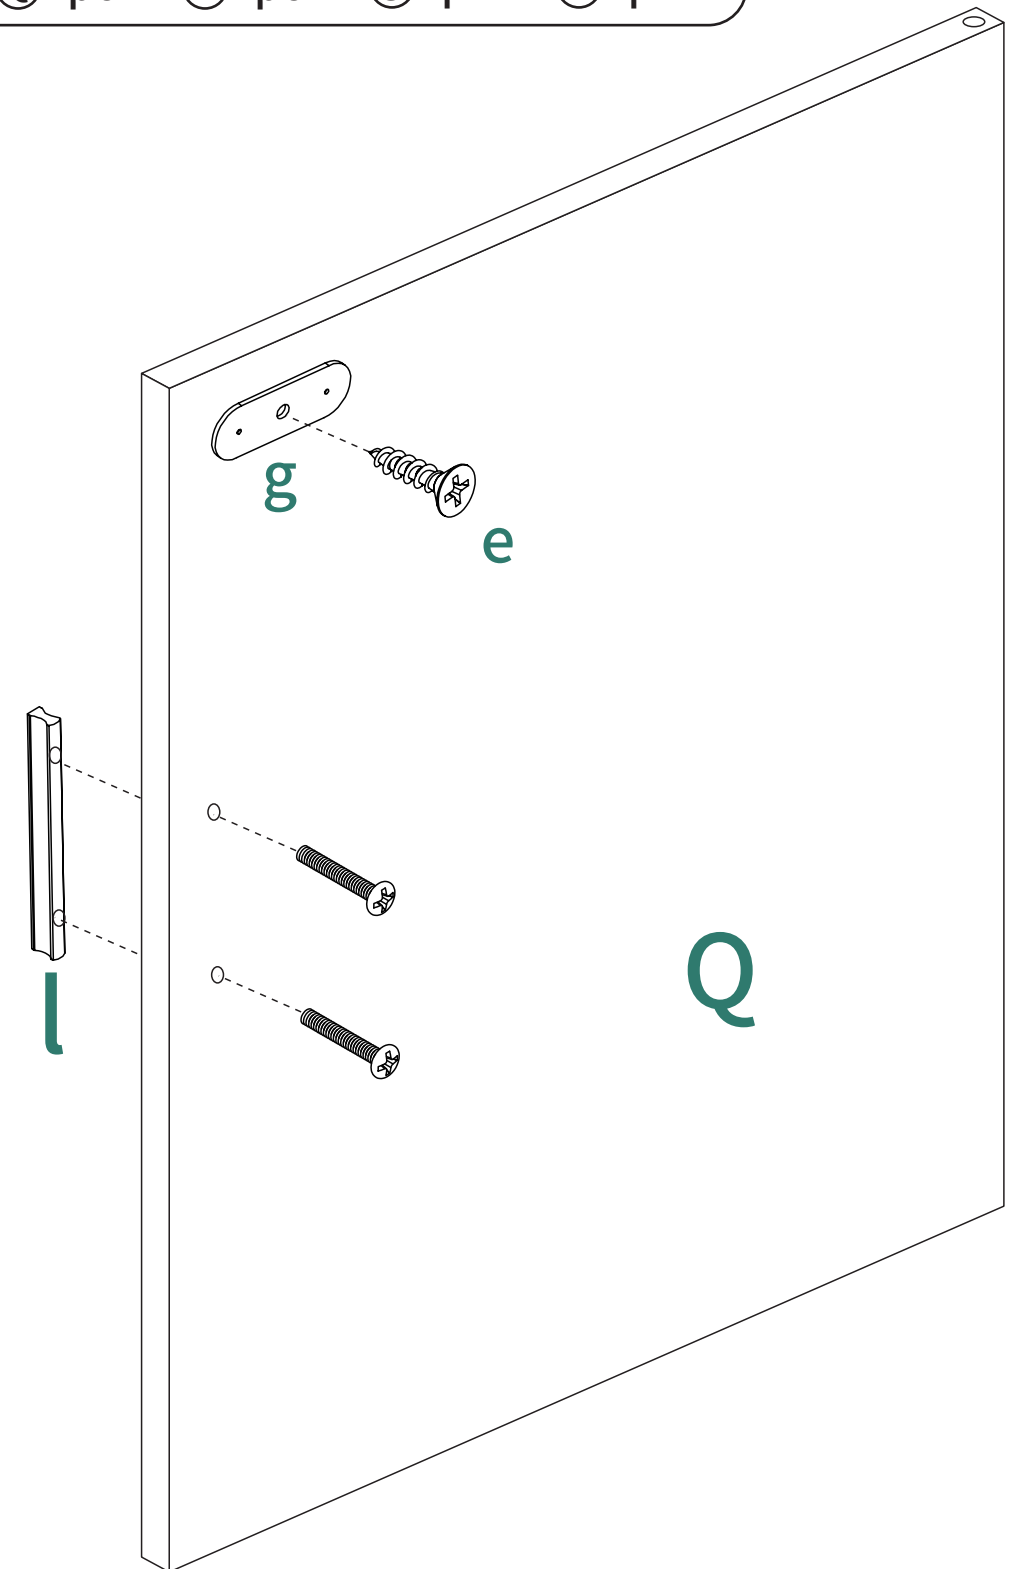



2

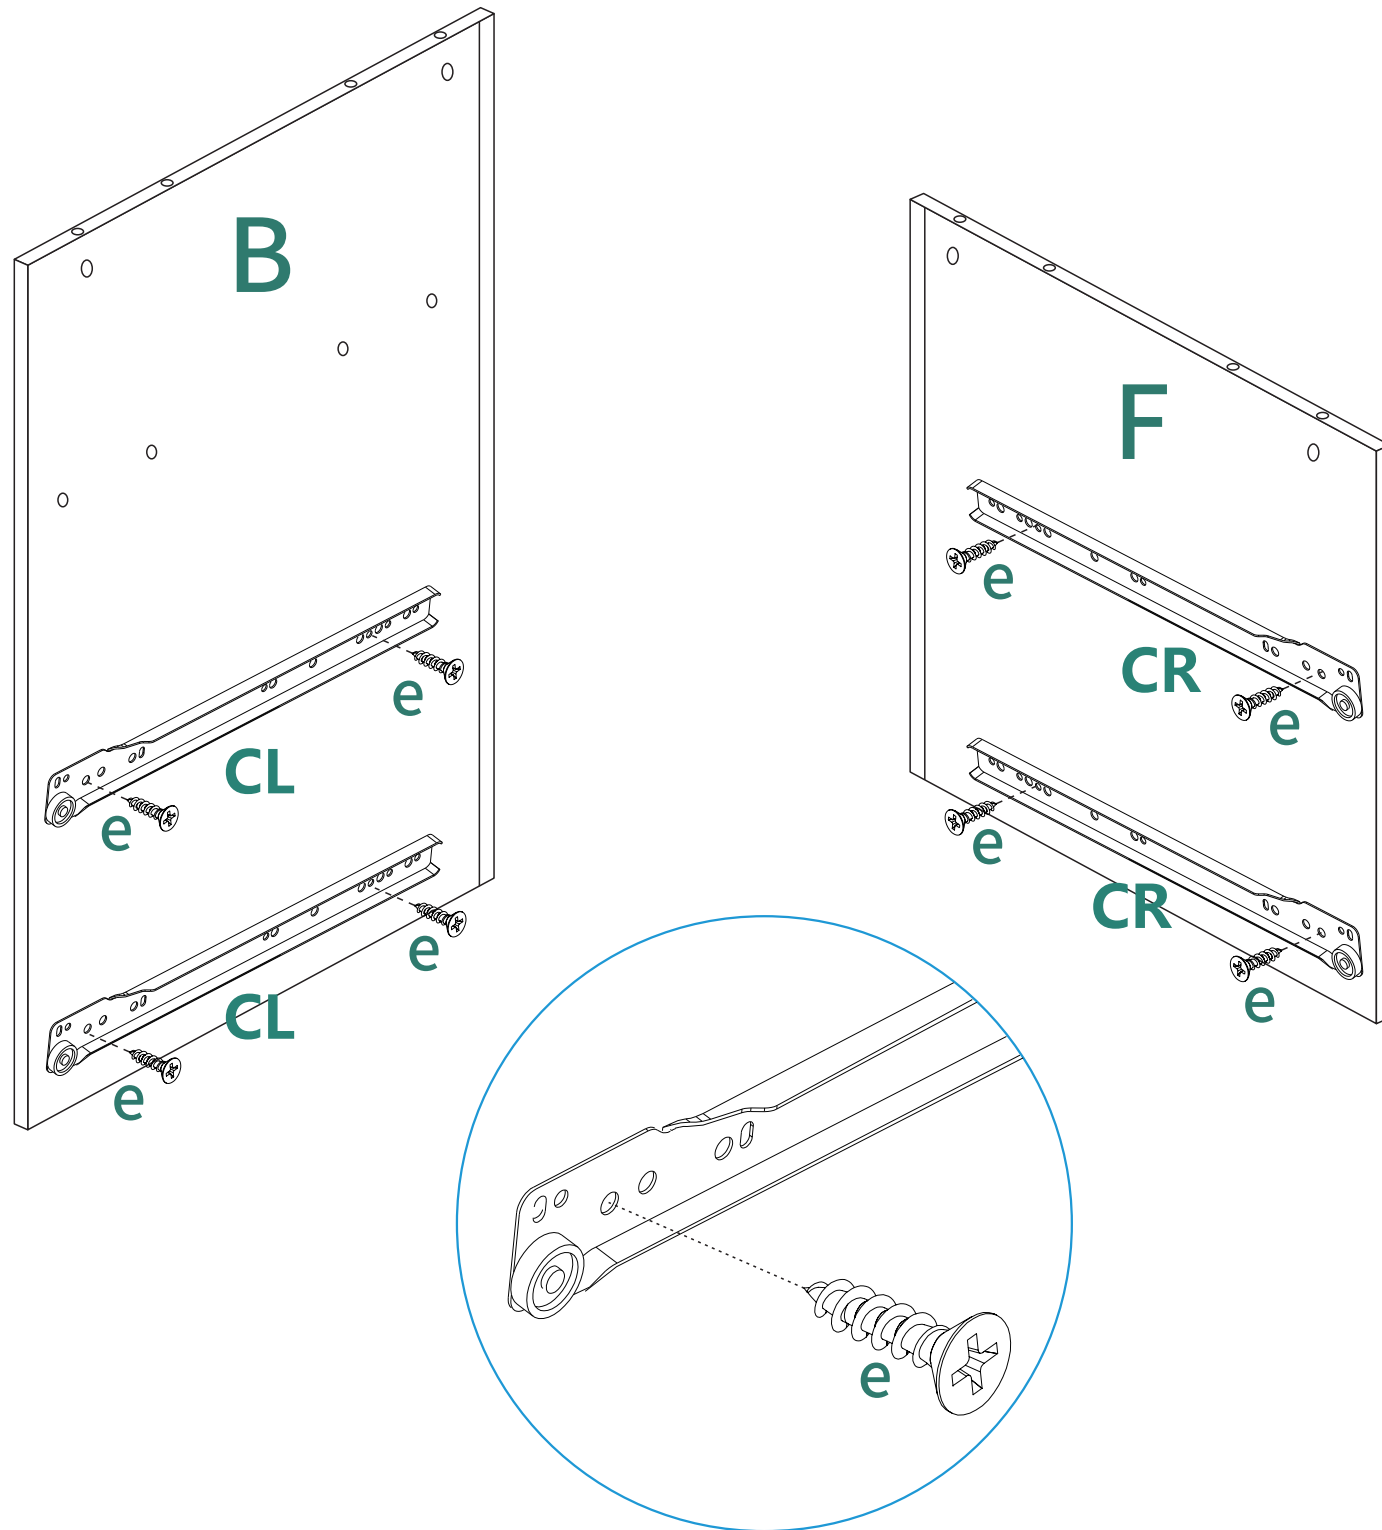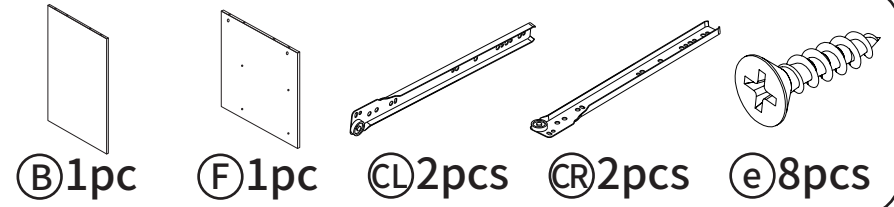

7



3

X2



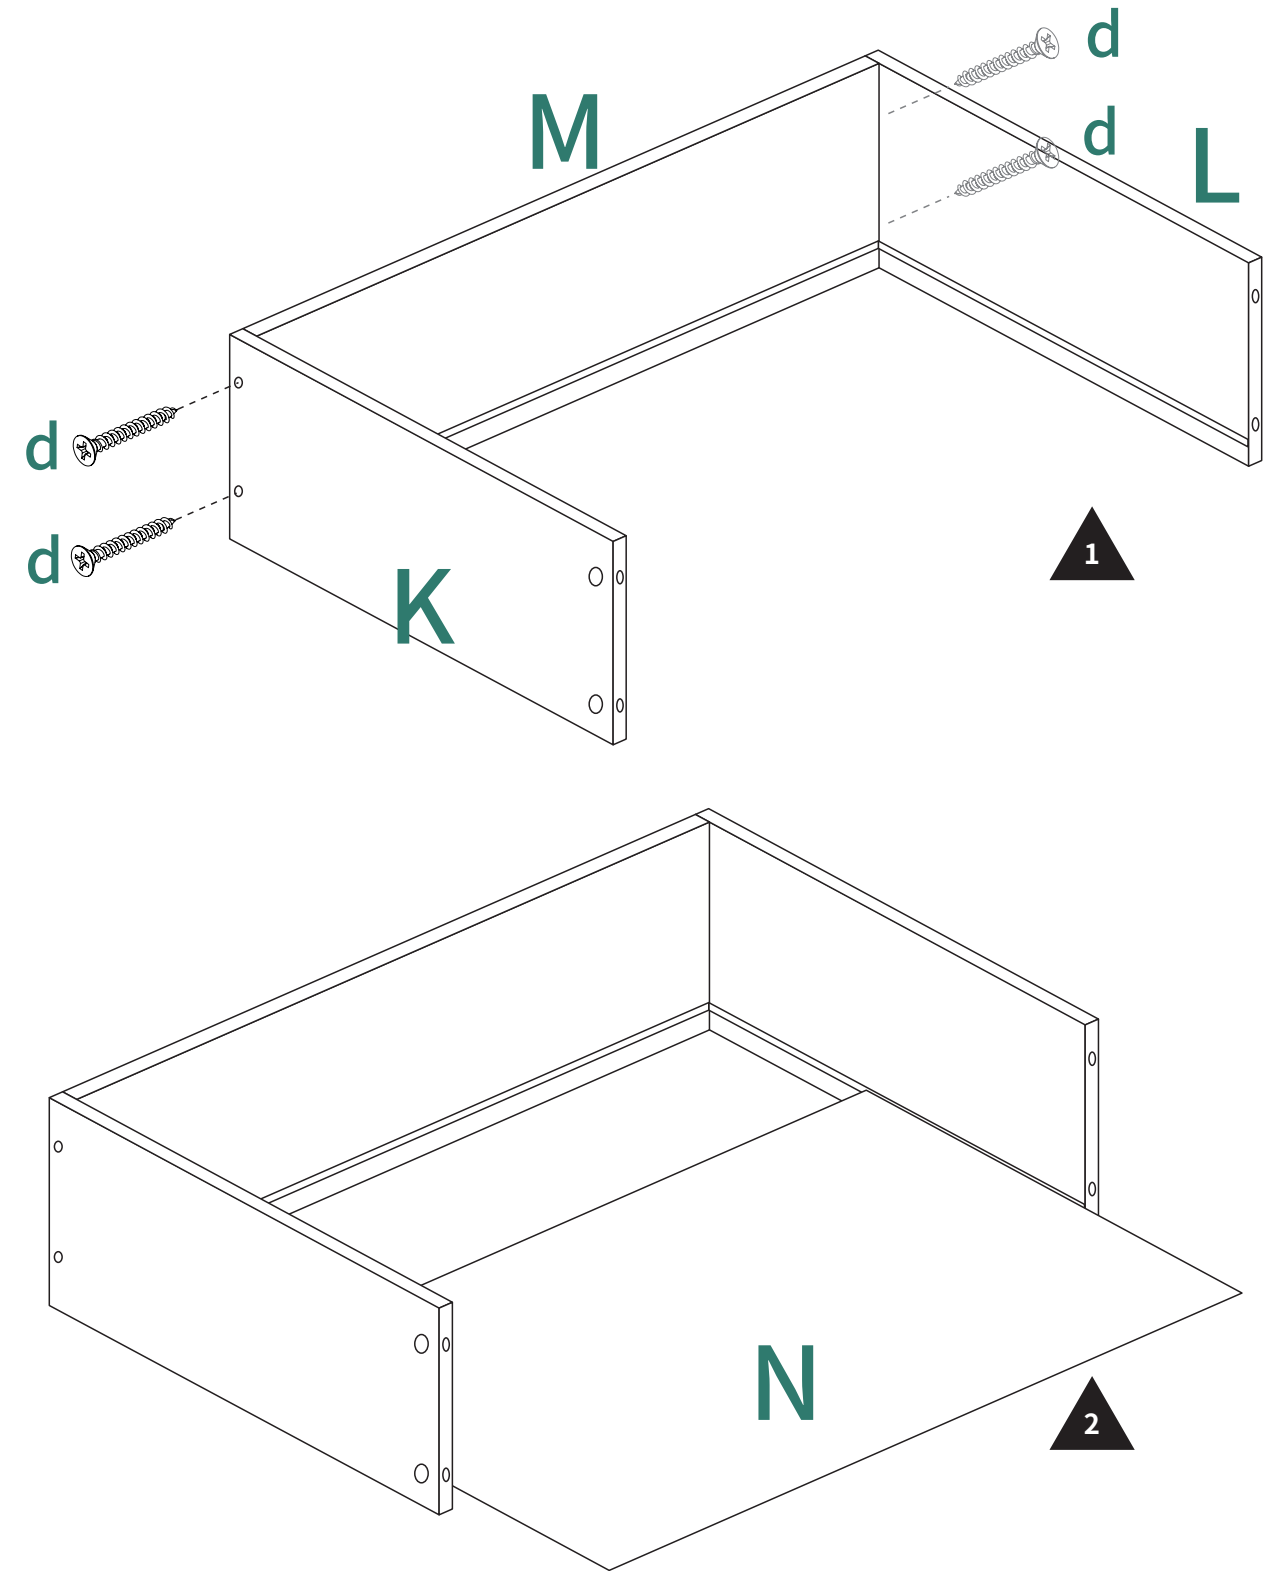
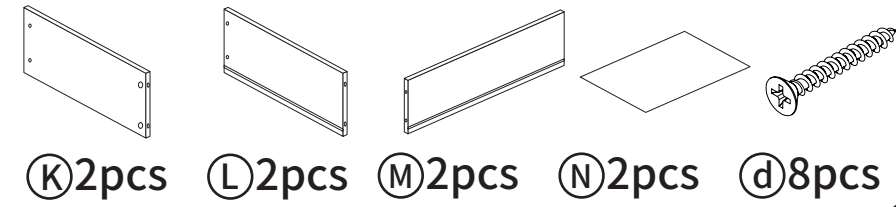


8



4

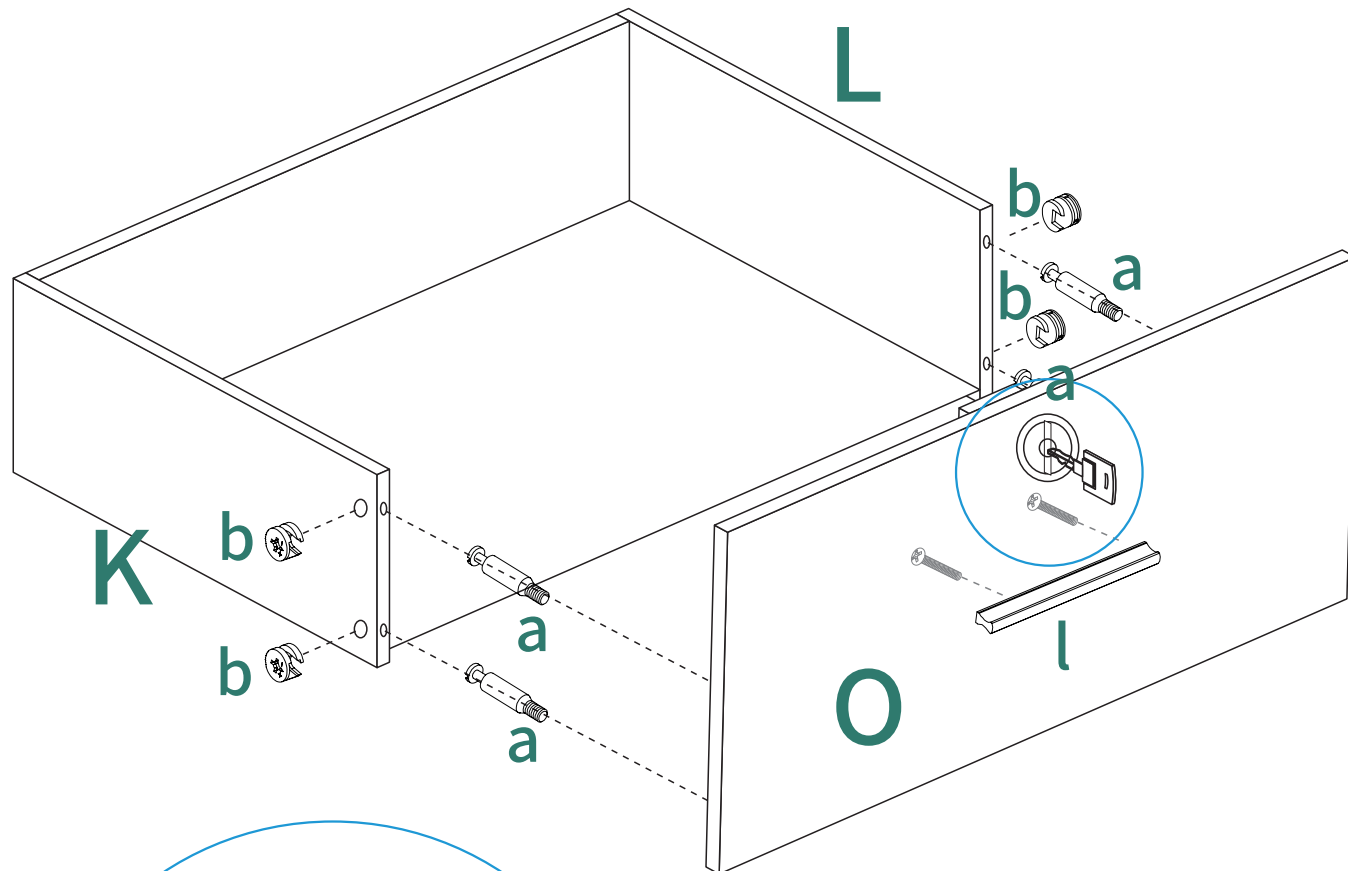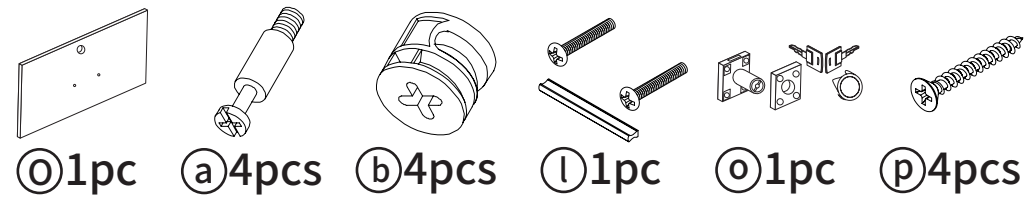



5

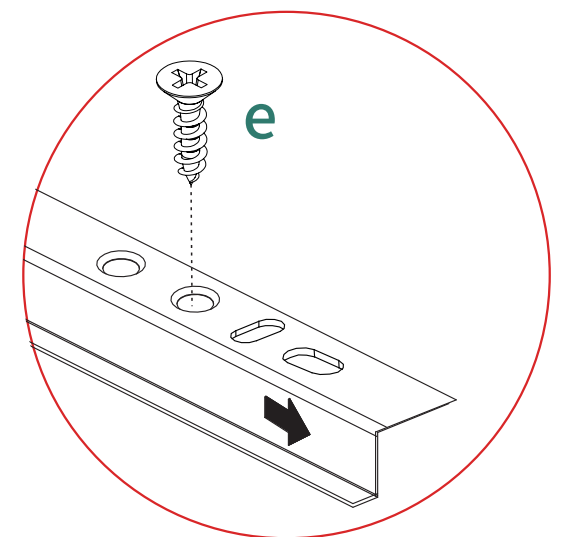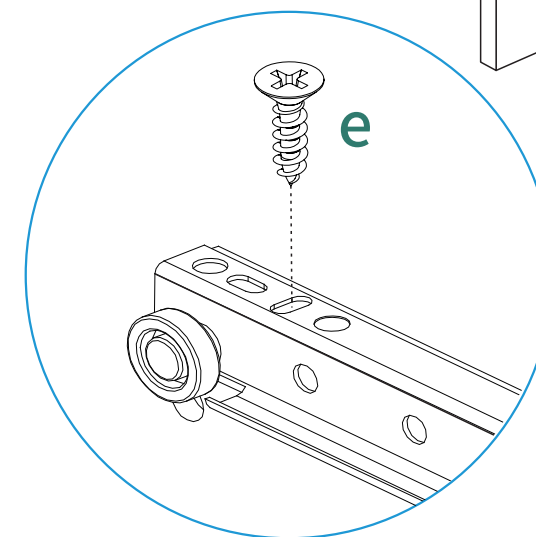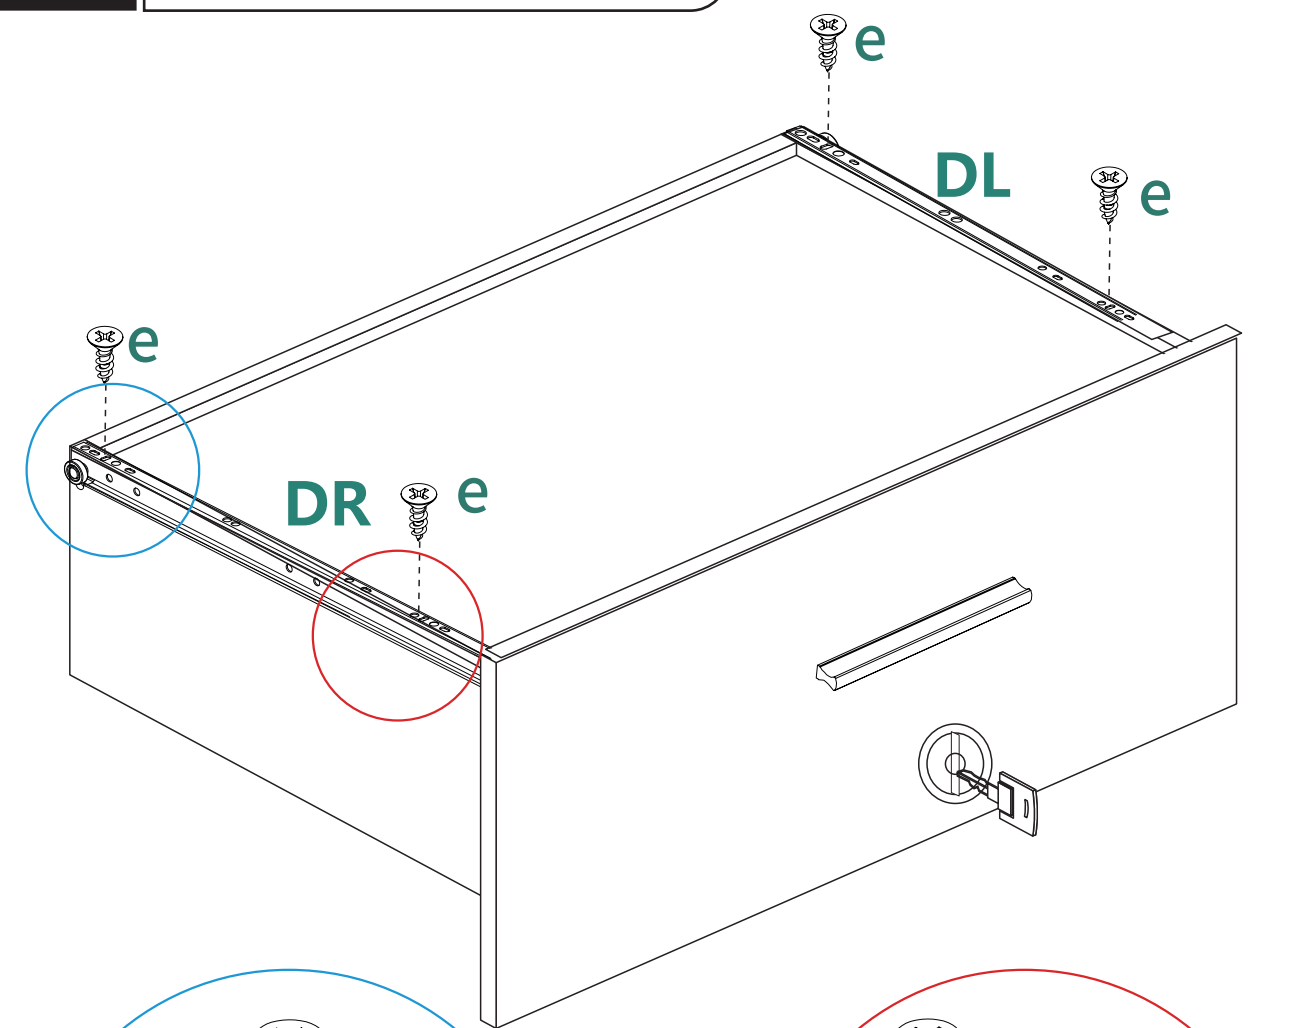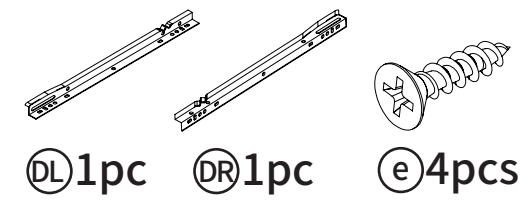



6

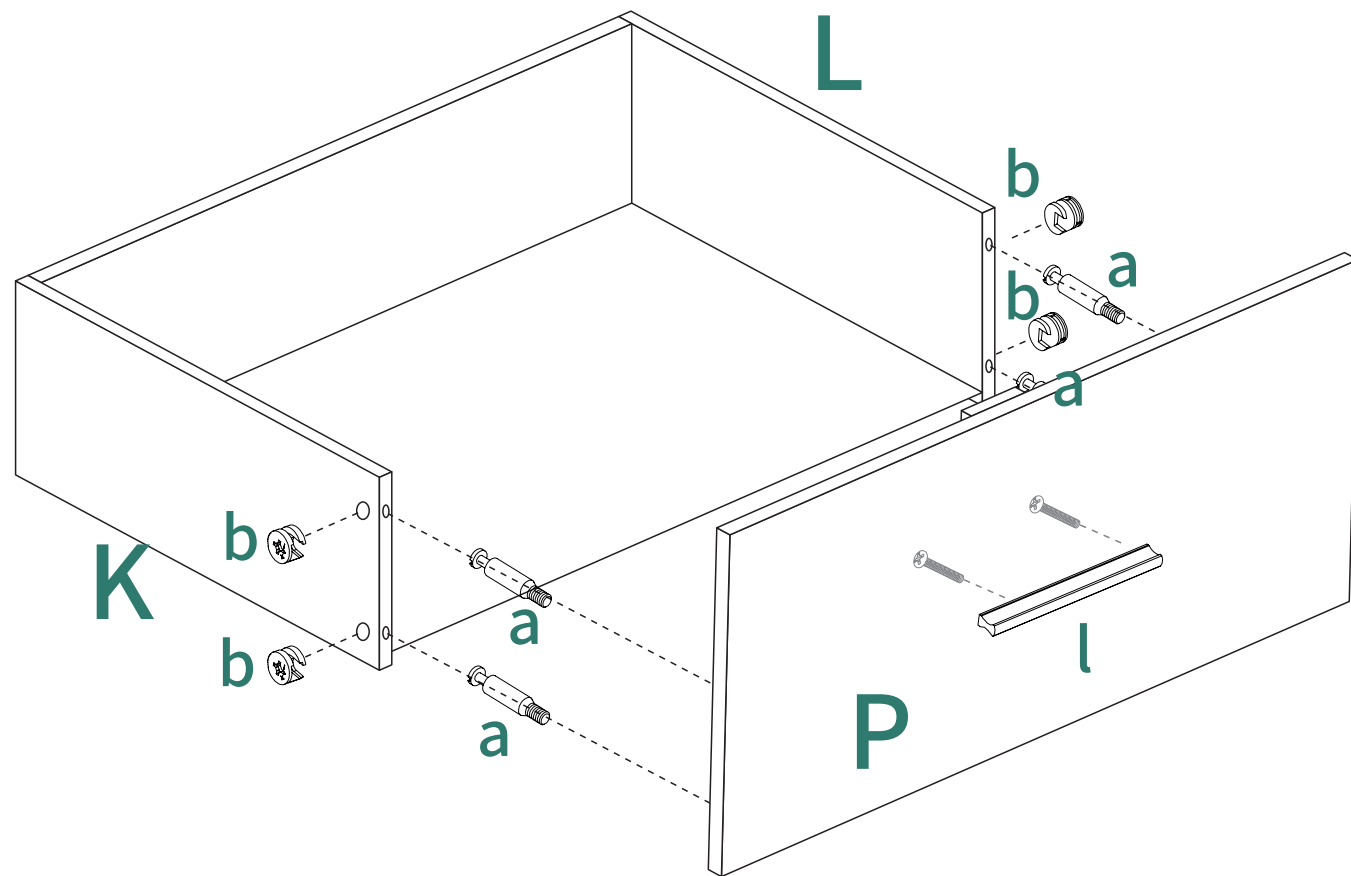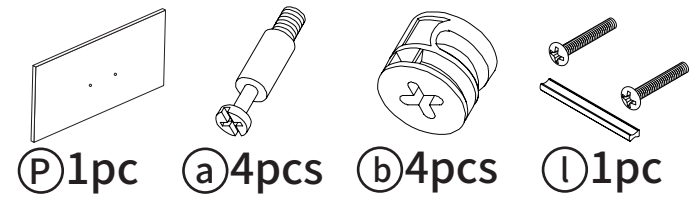



7

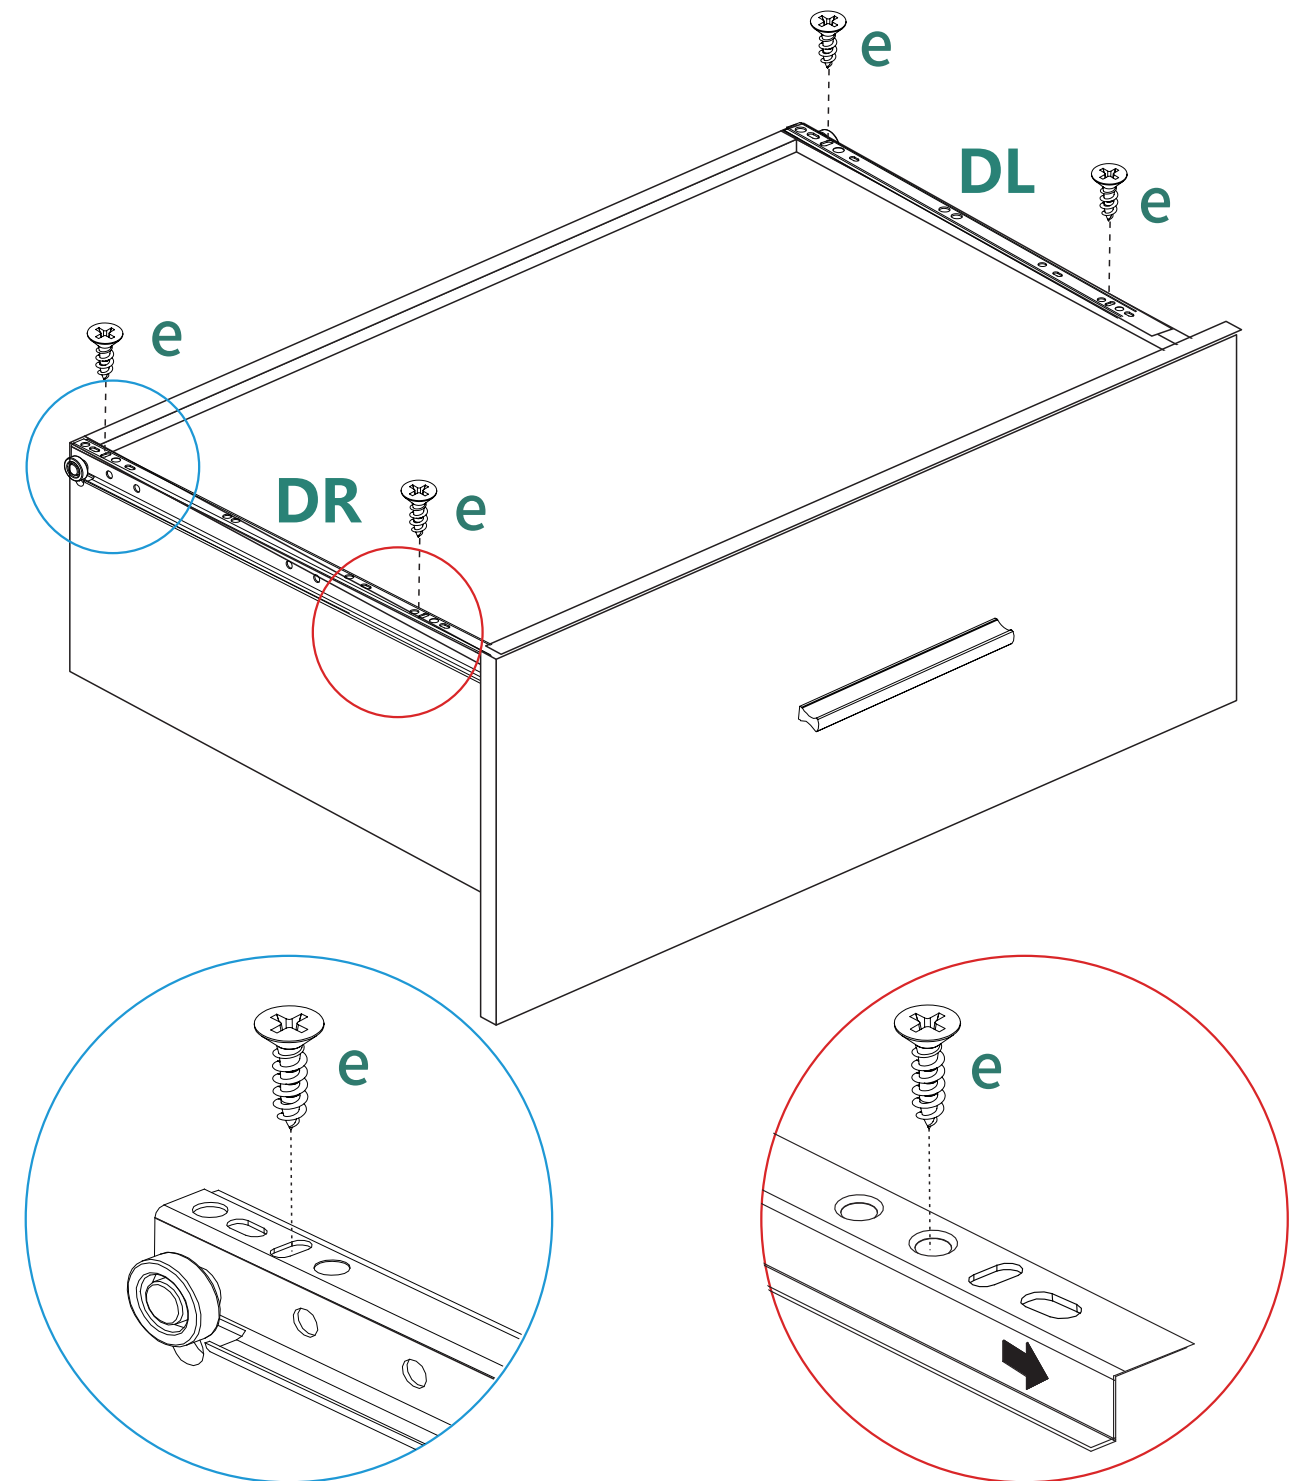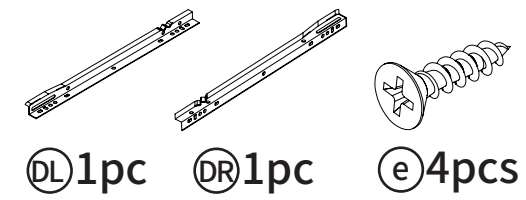



8

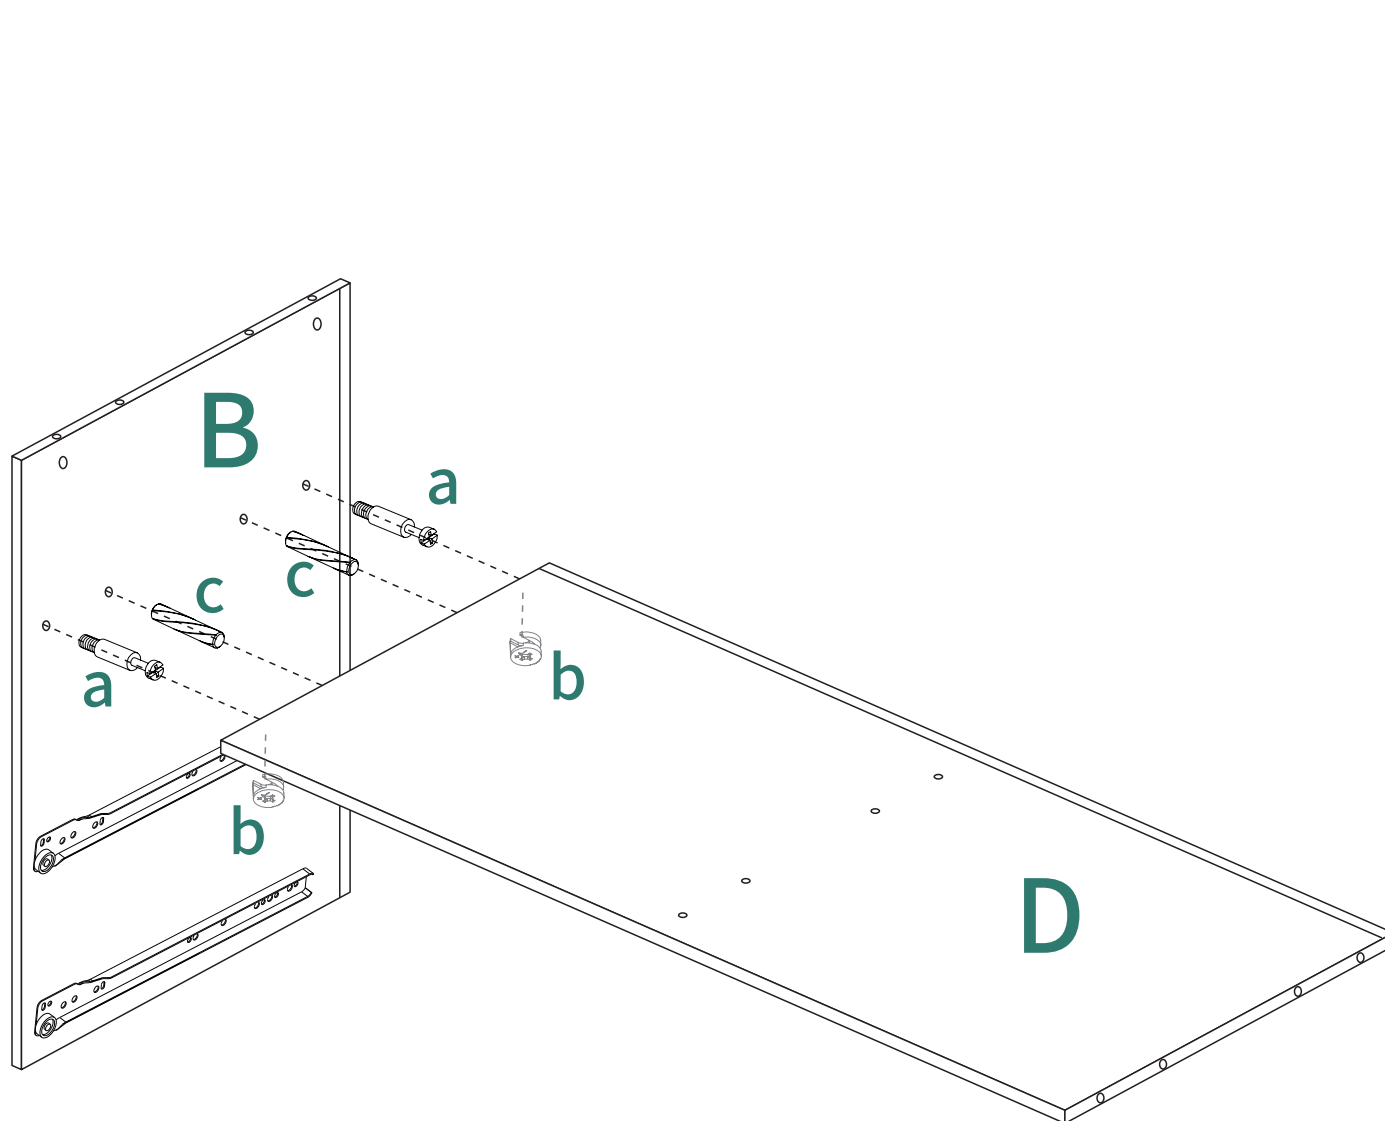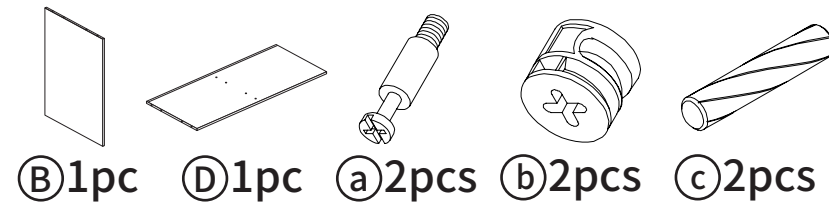



9

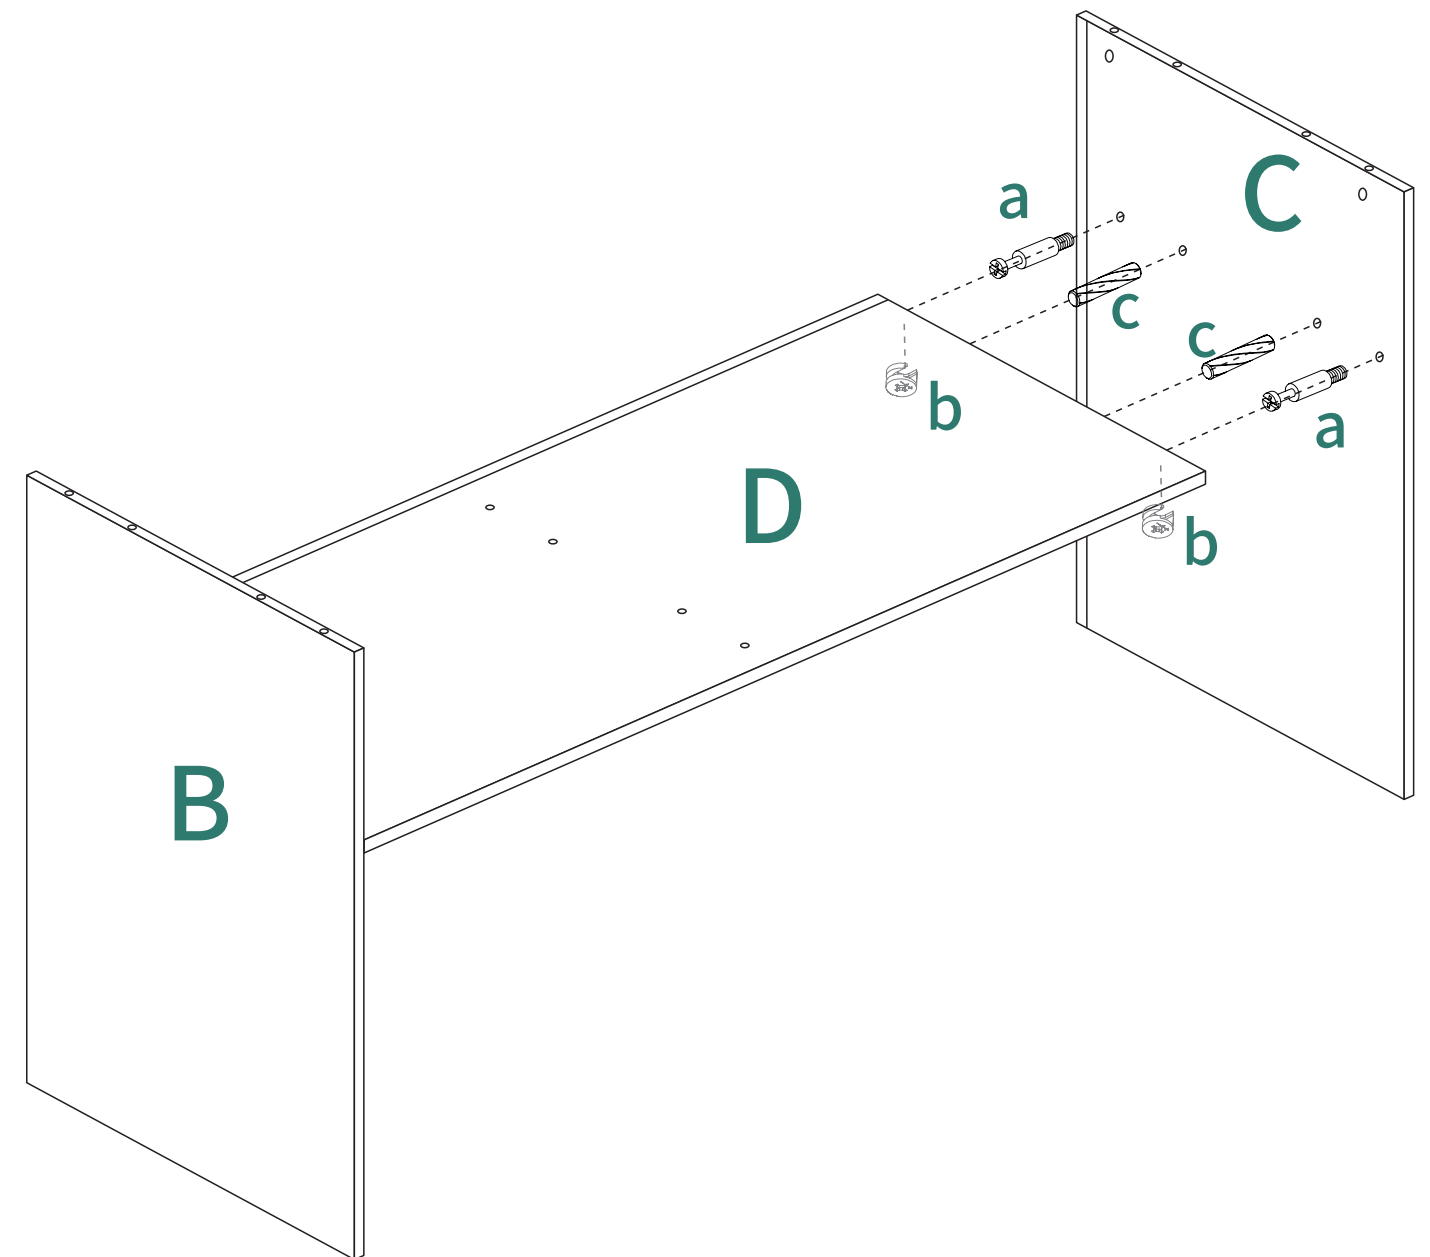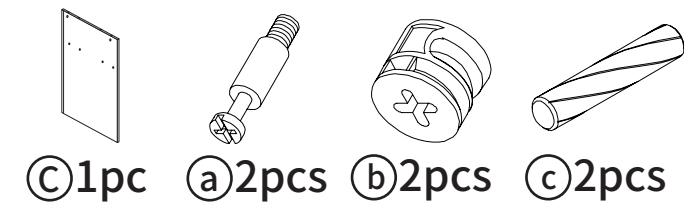



10

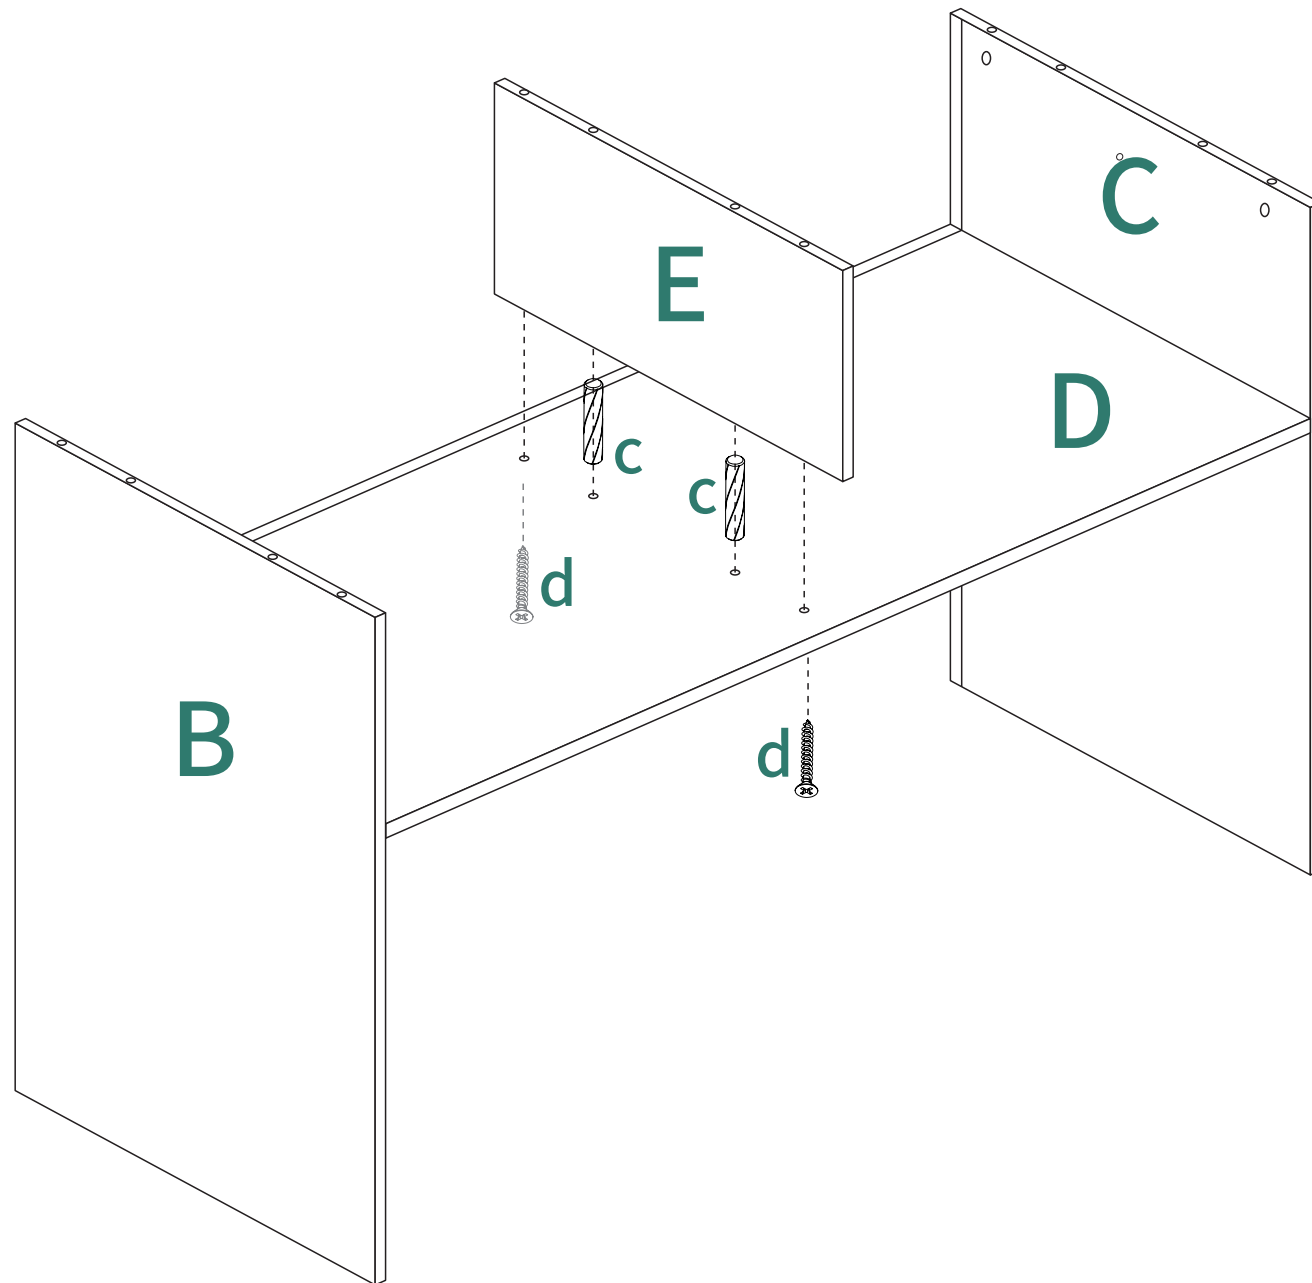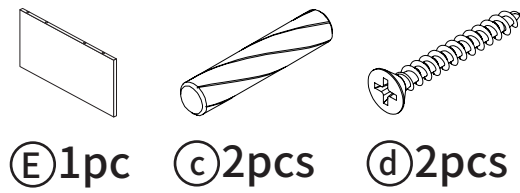



11

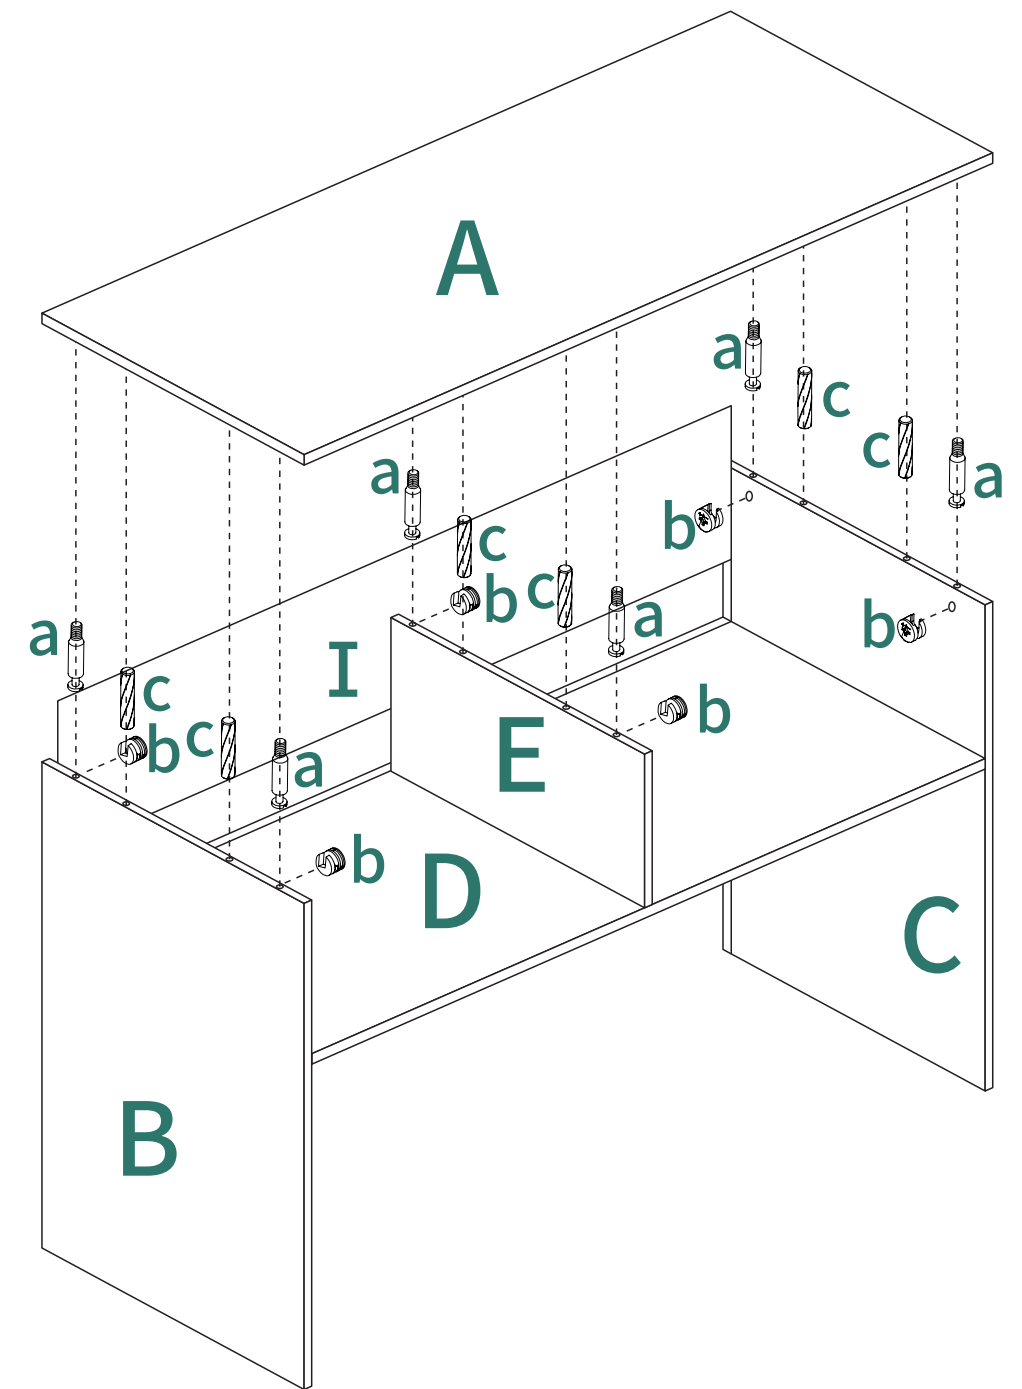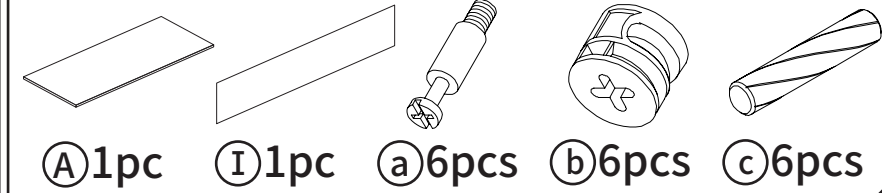


12

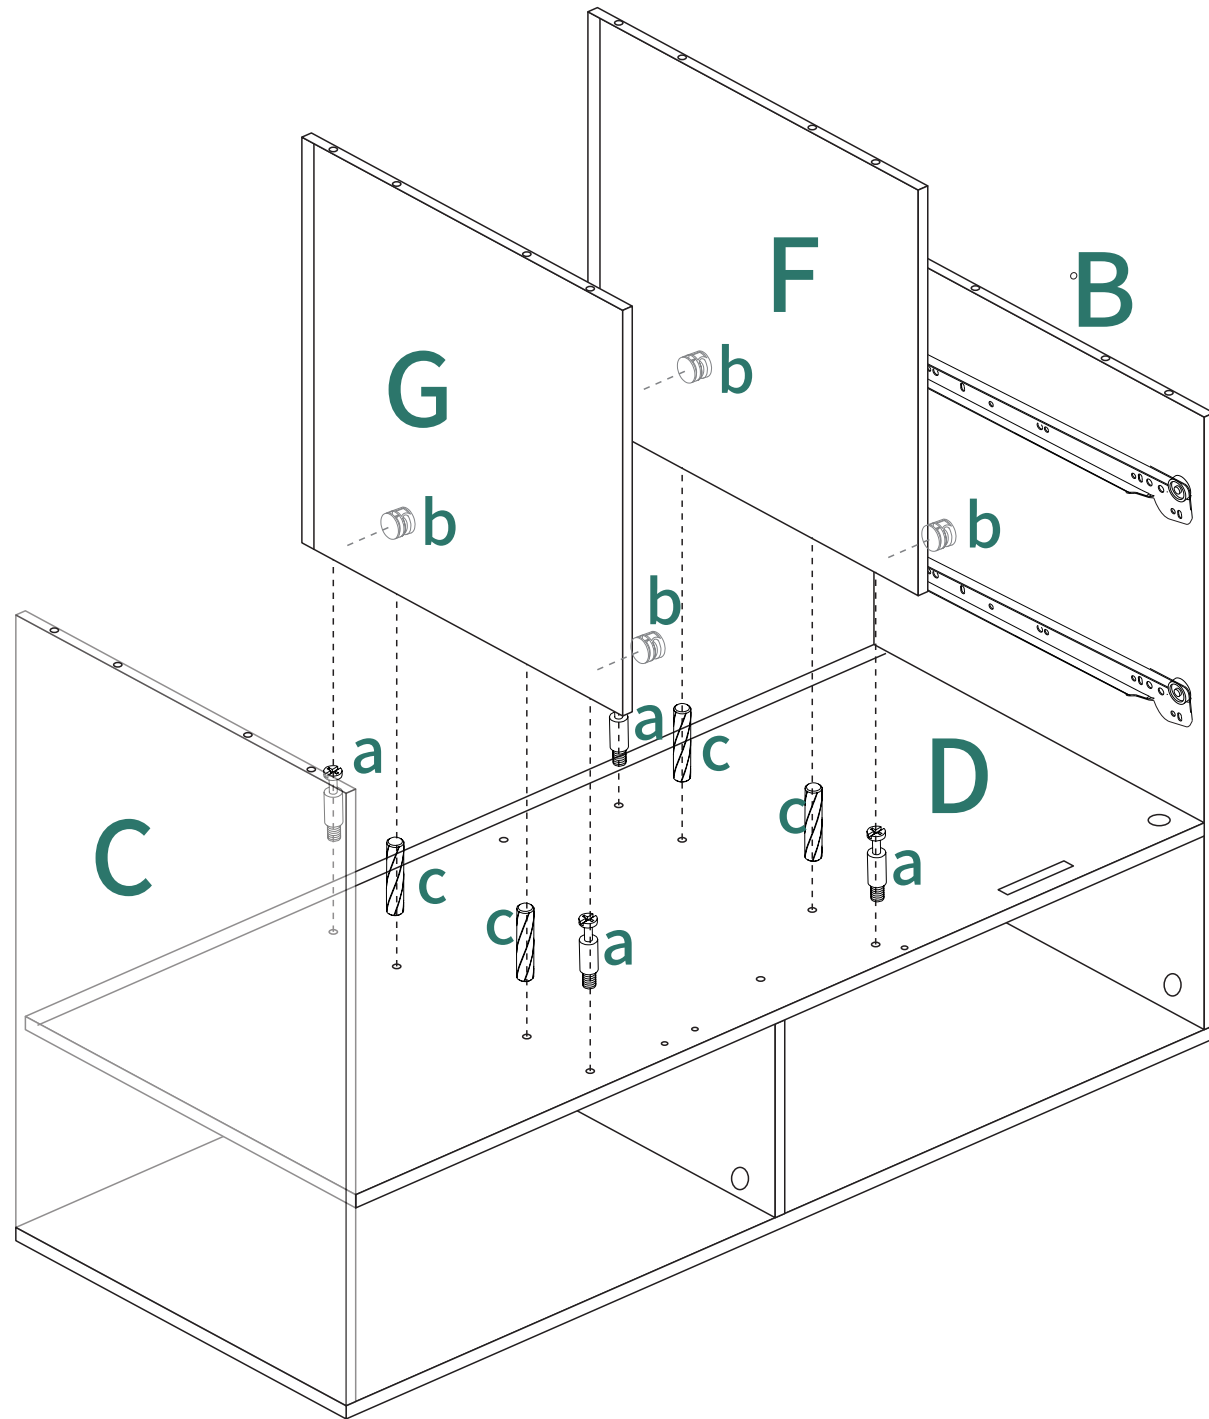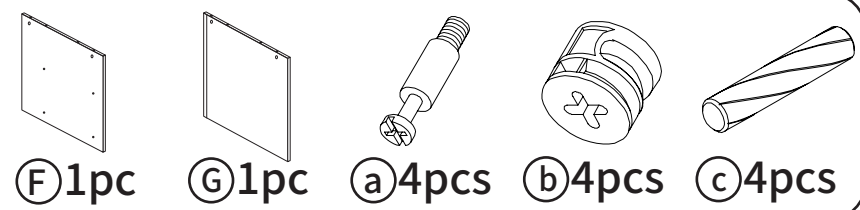


13

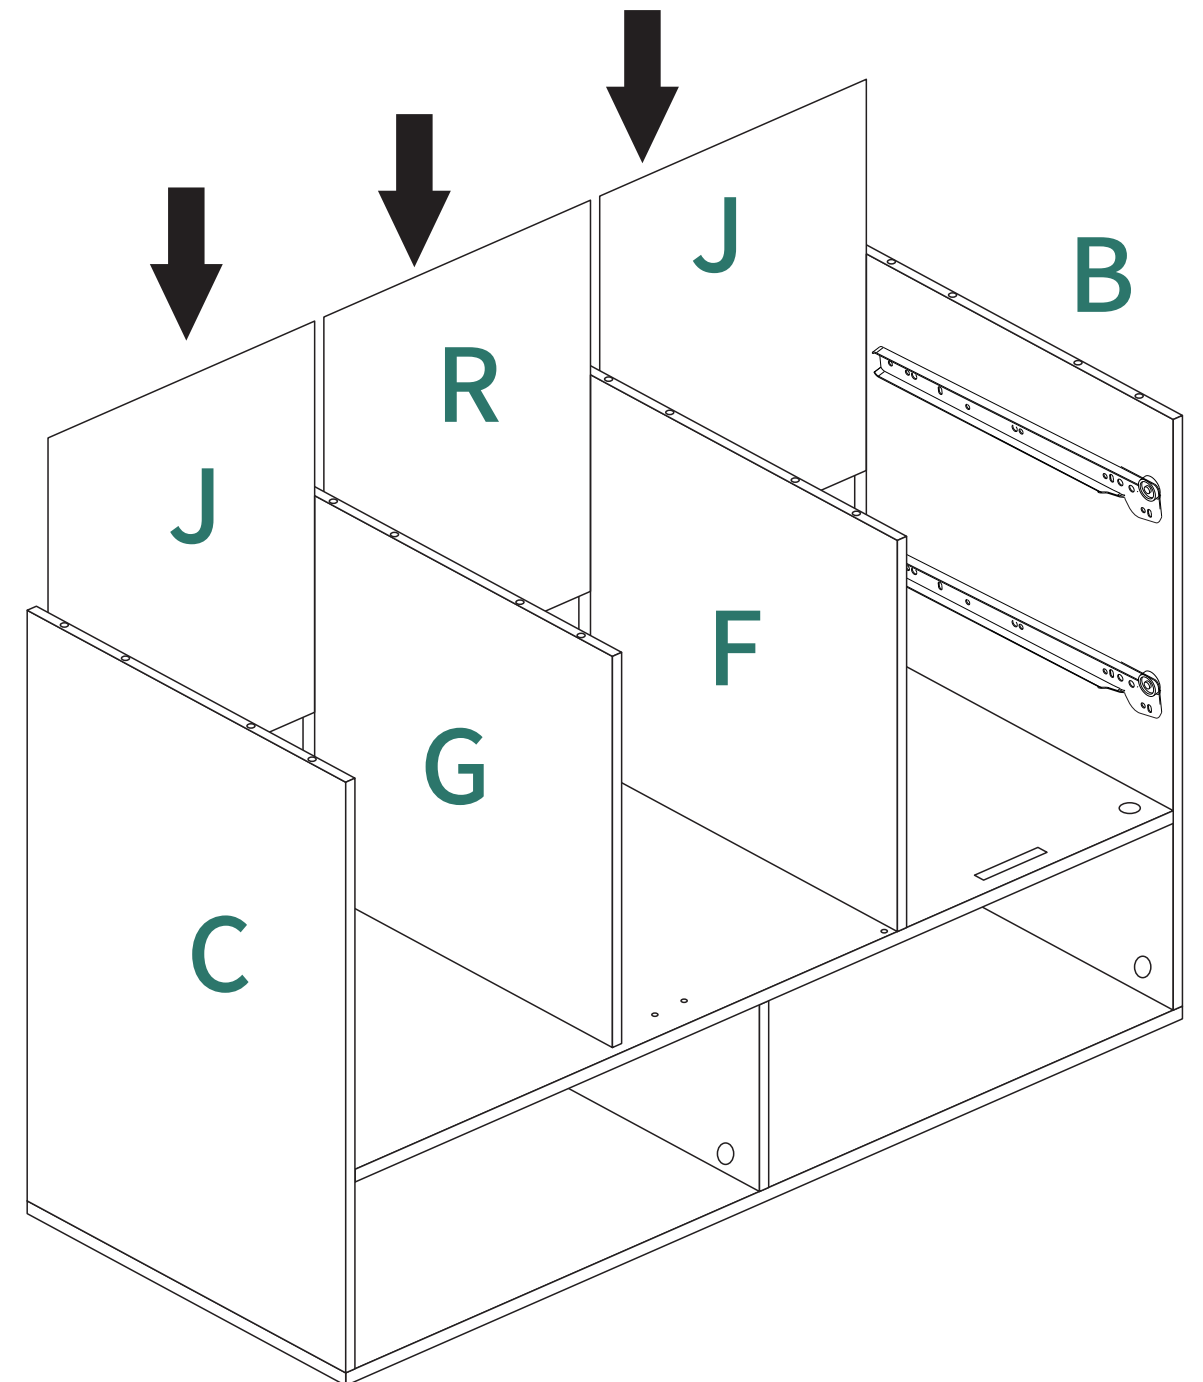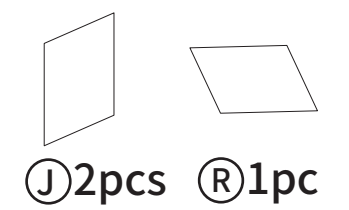


14




Q 1pc




n 1pc

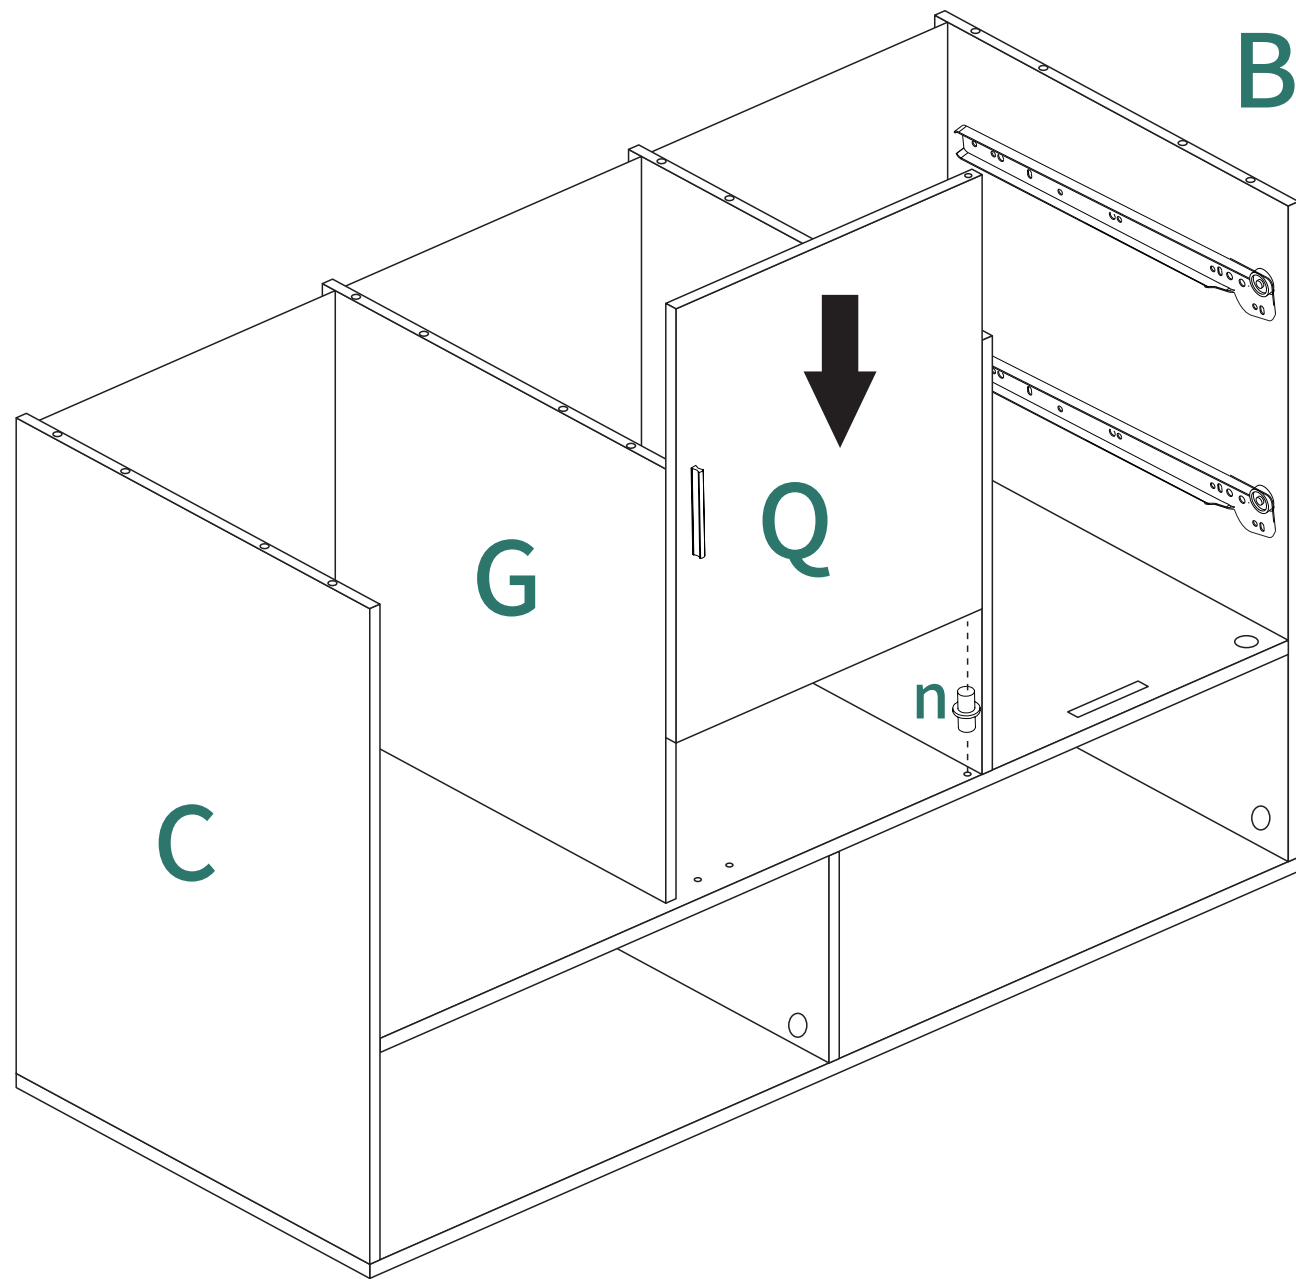



15





c 8pcs

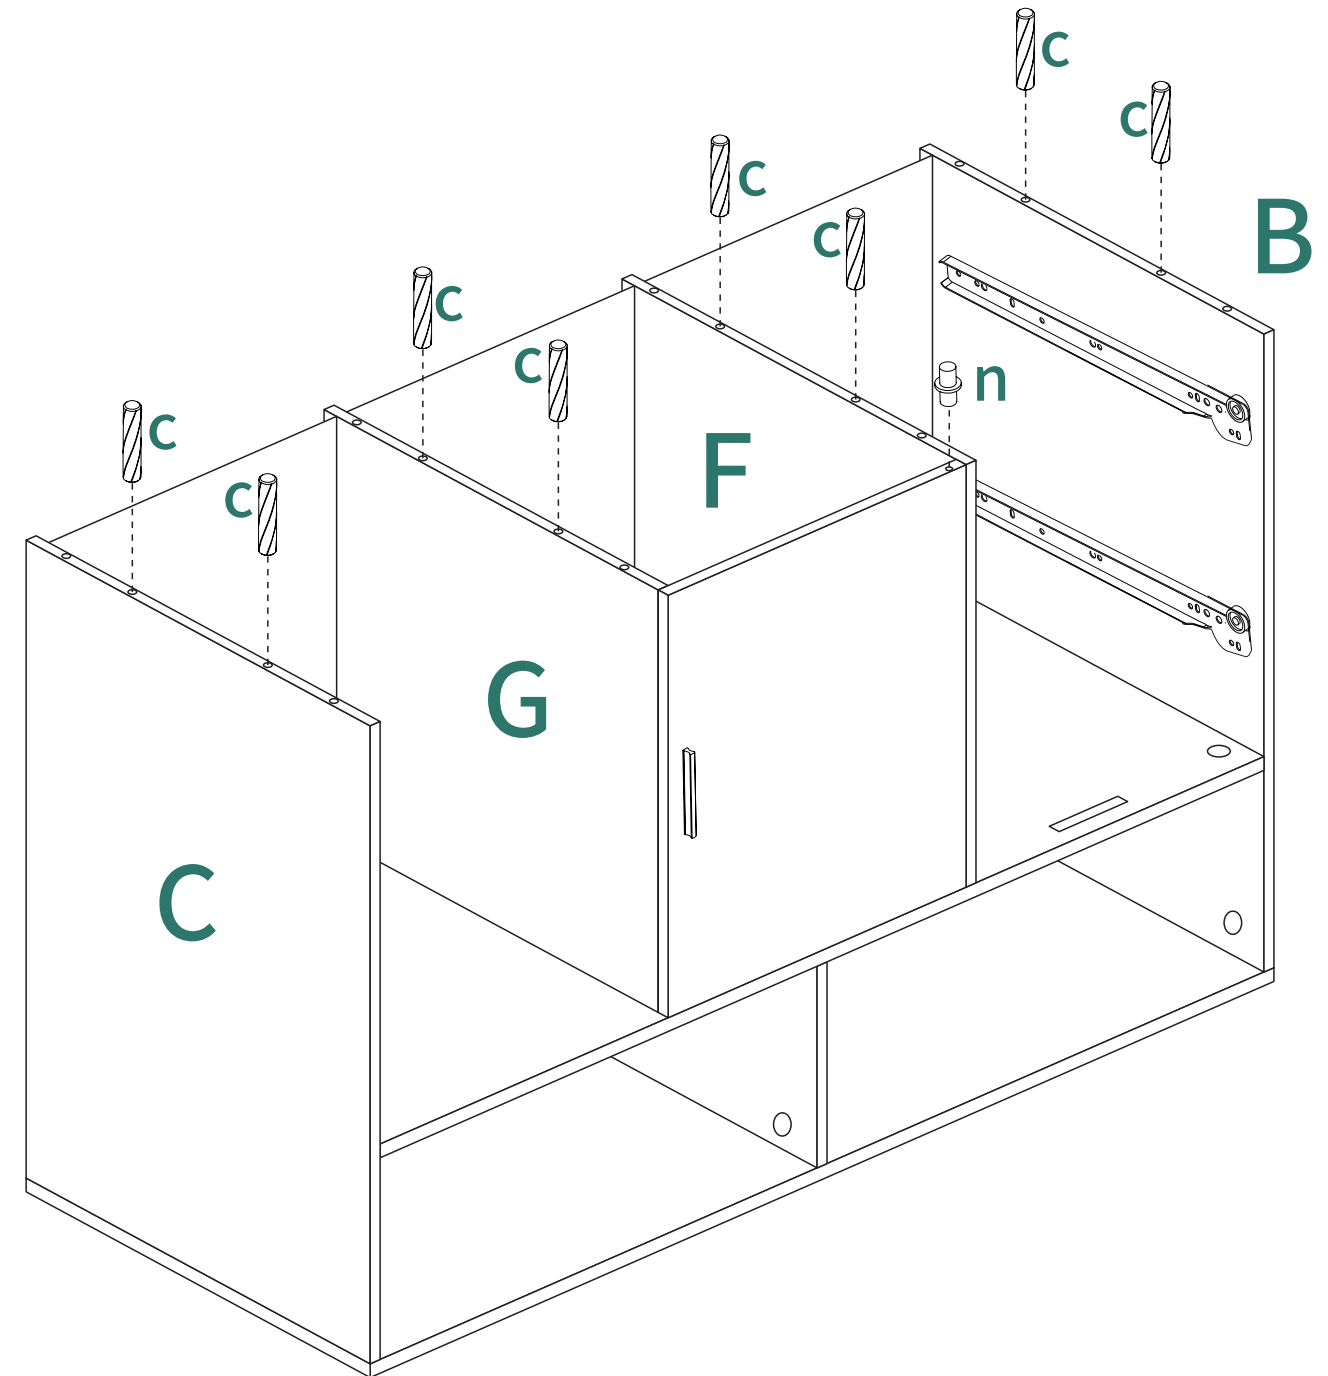



16

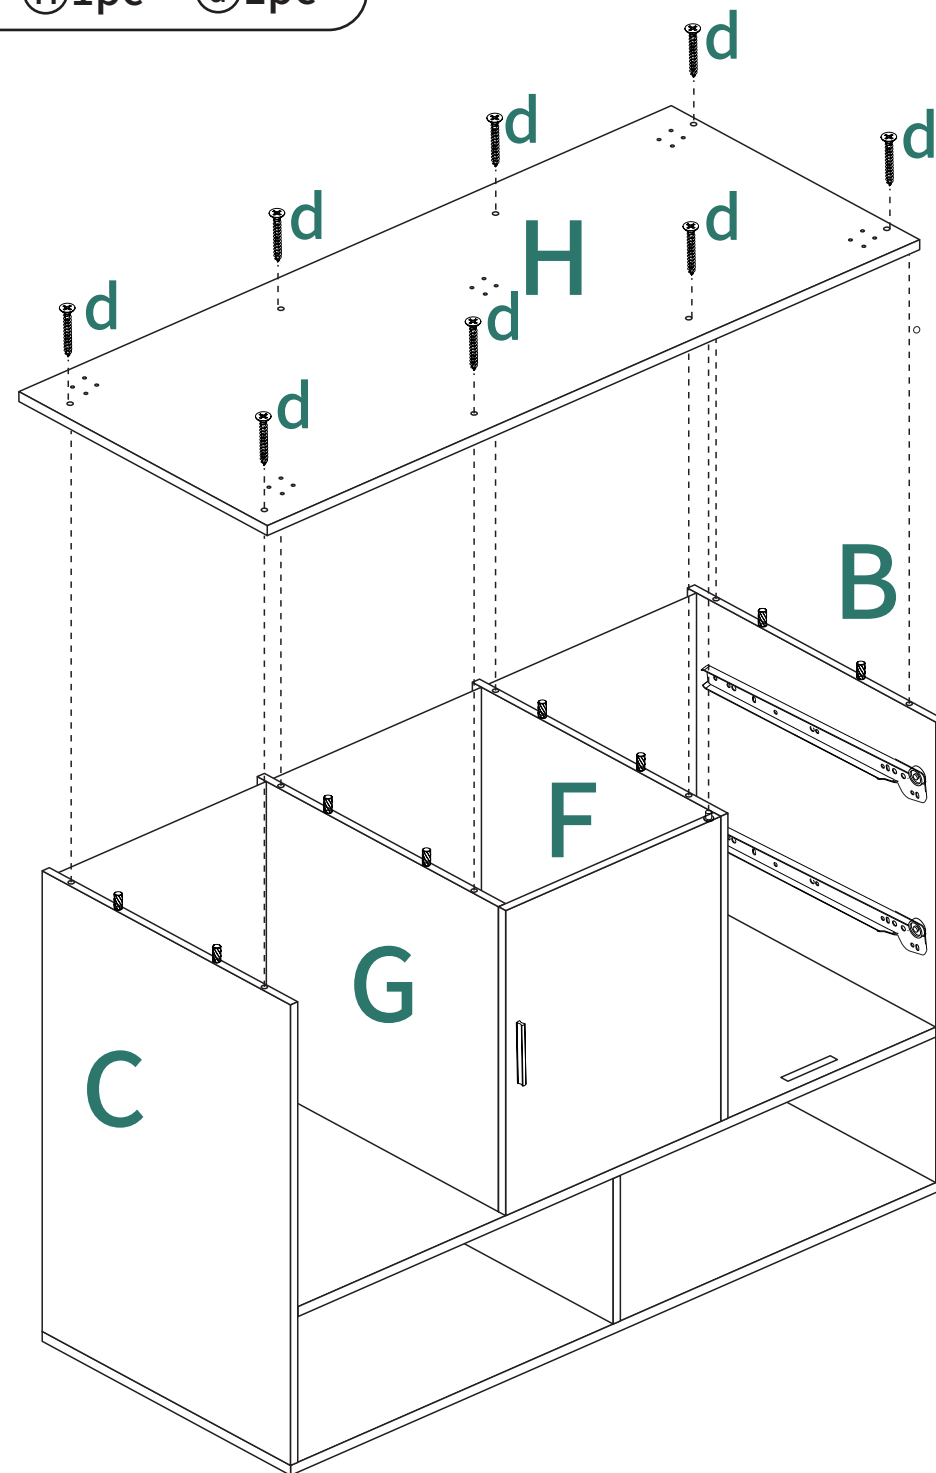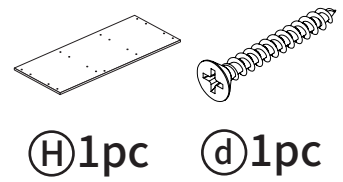



17

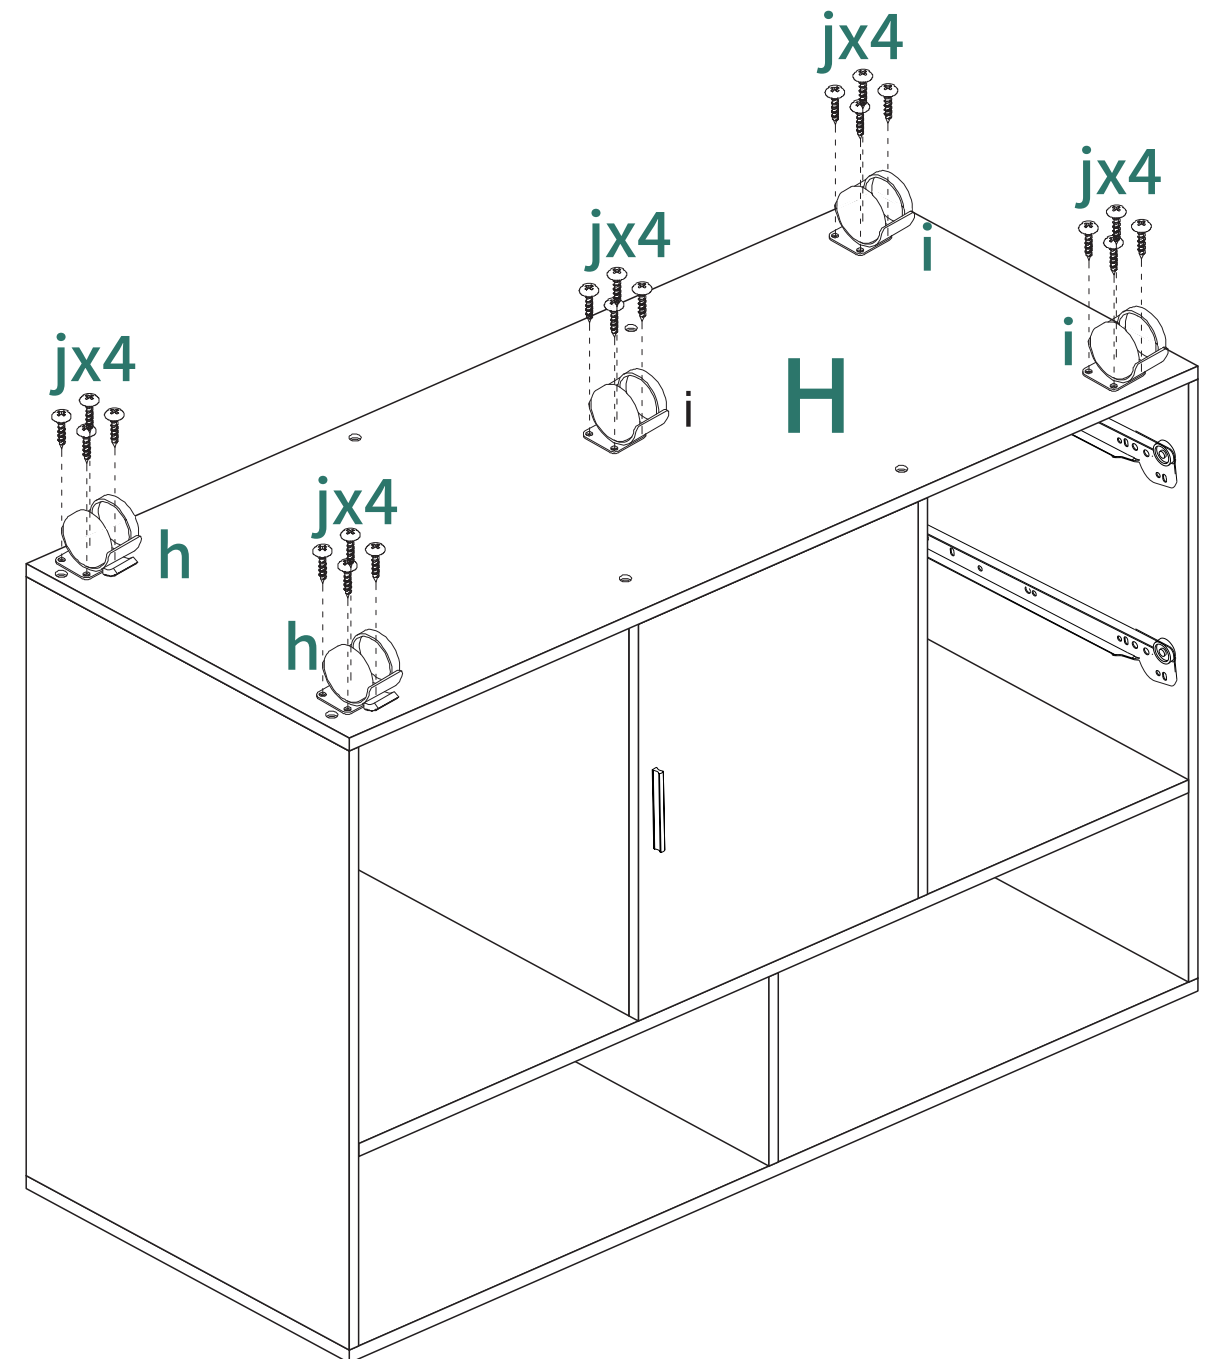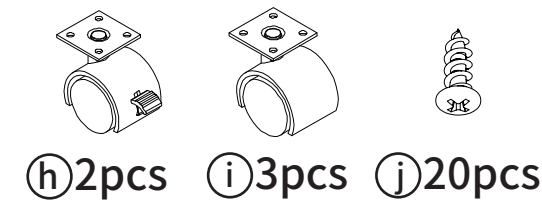


18

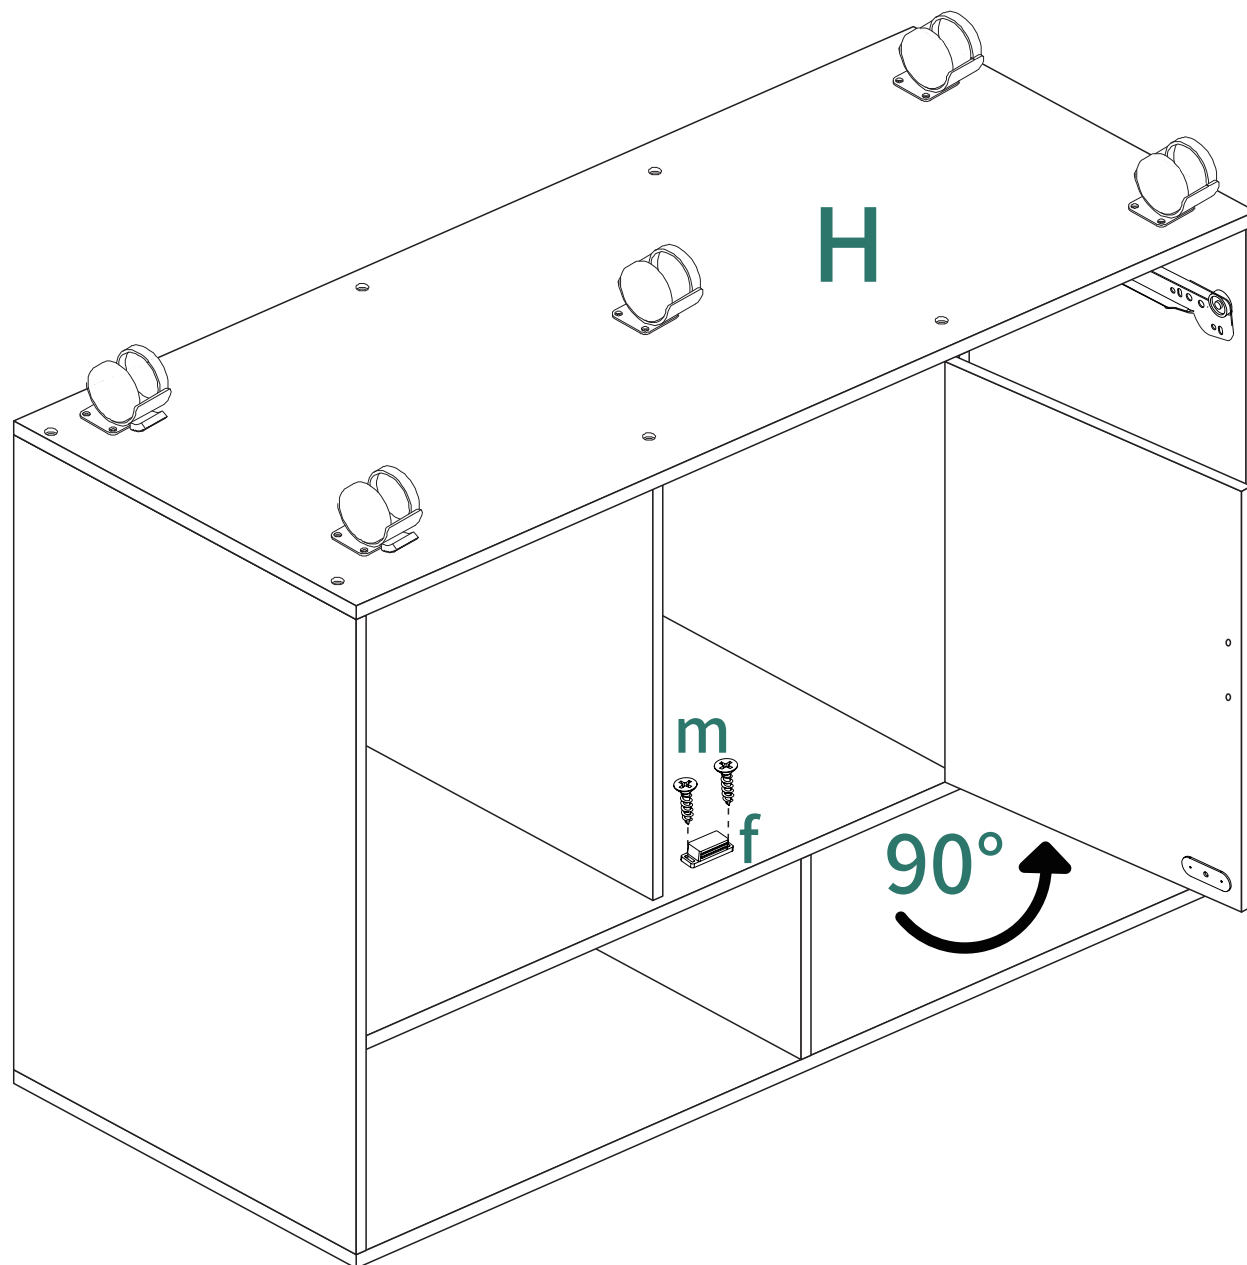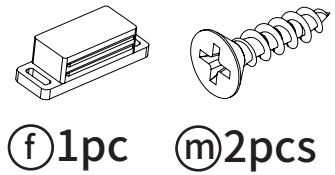

19

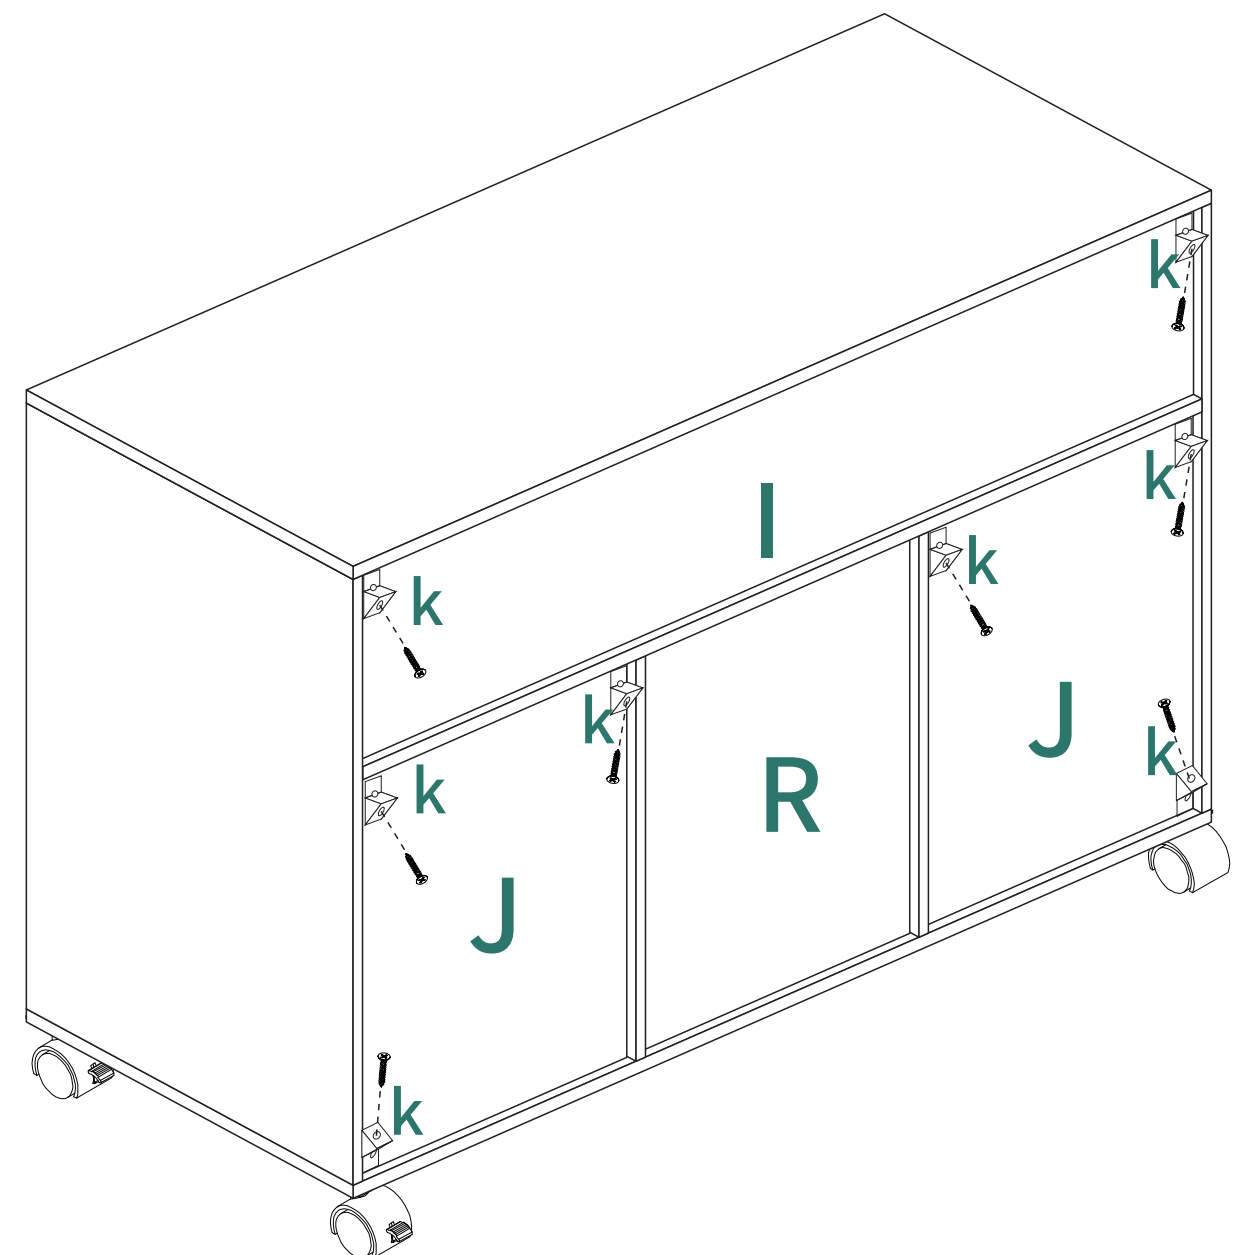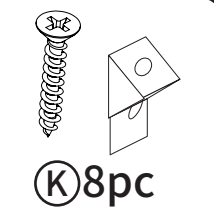


20

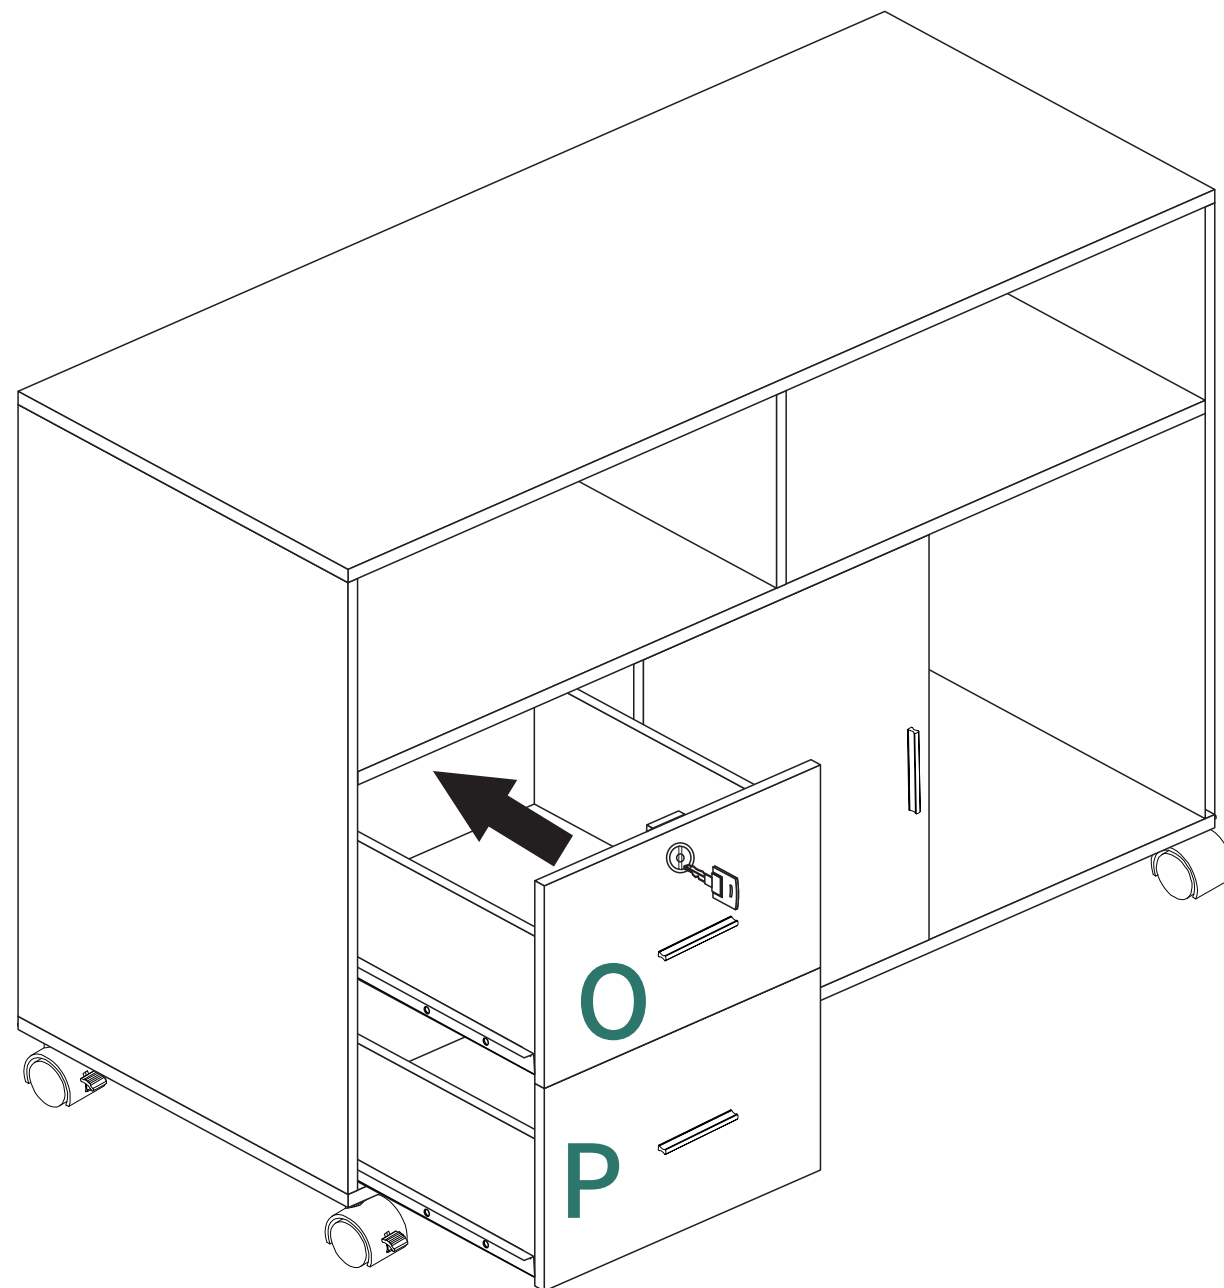

25

21

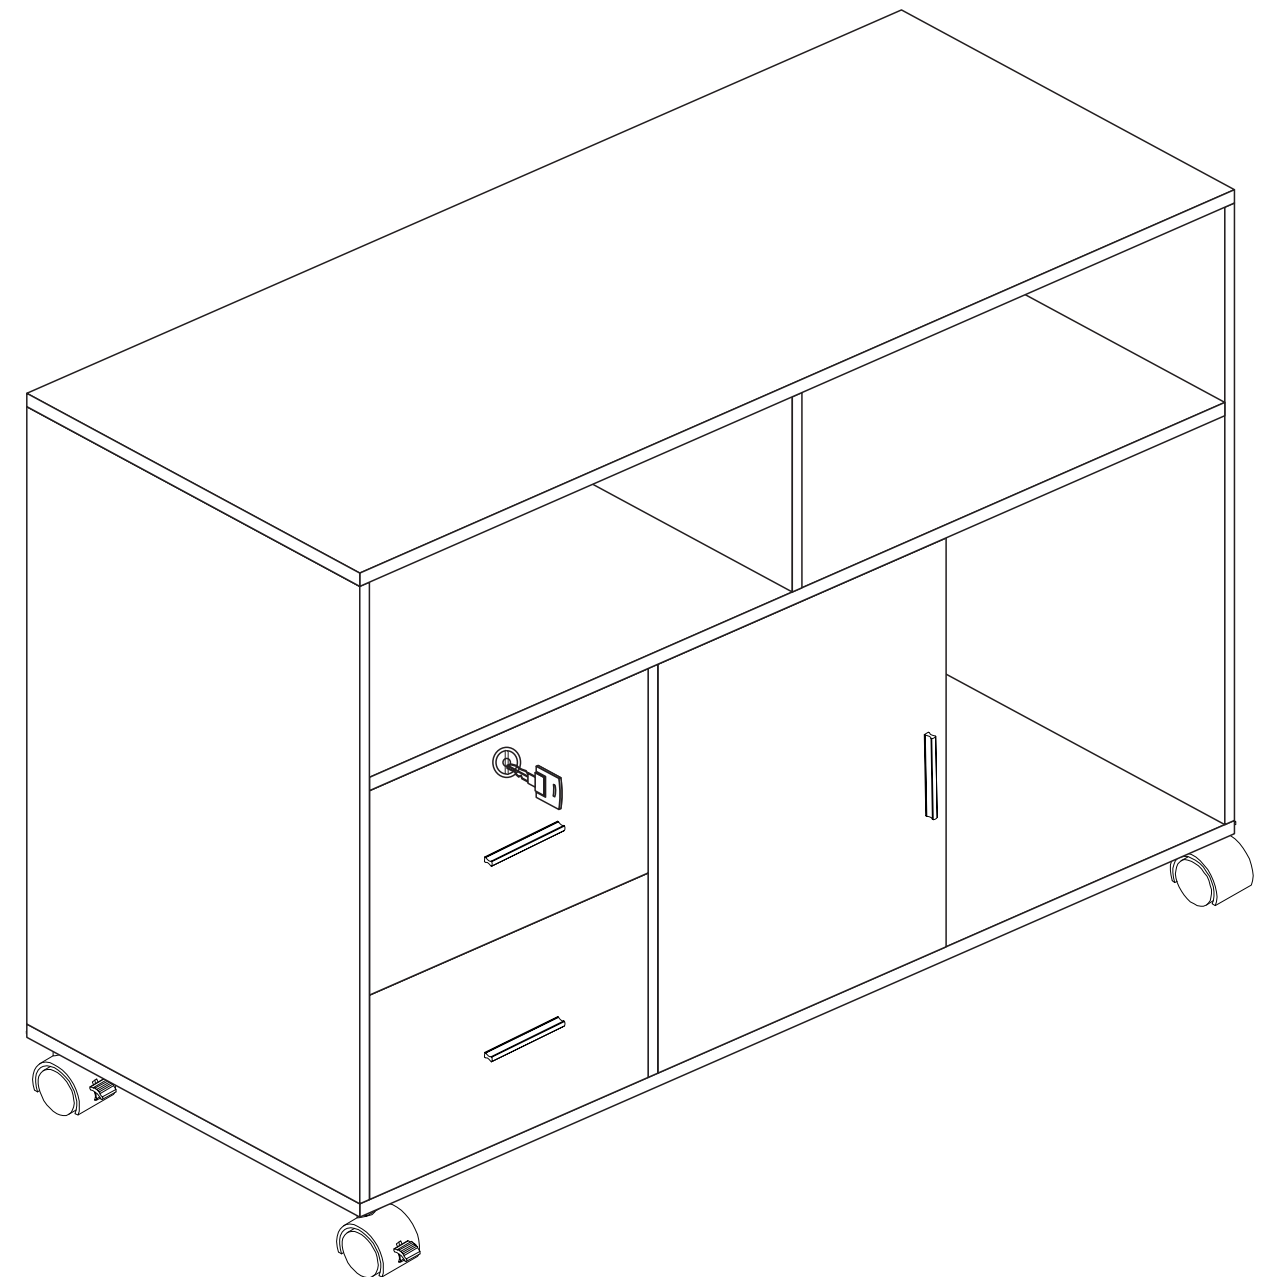

Complete Installation

26