


NBQF-V 1

FTPLCG-0022
FTPLCG-0023

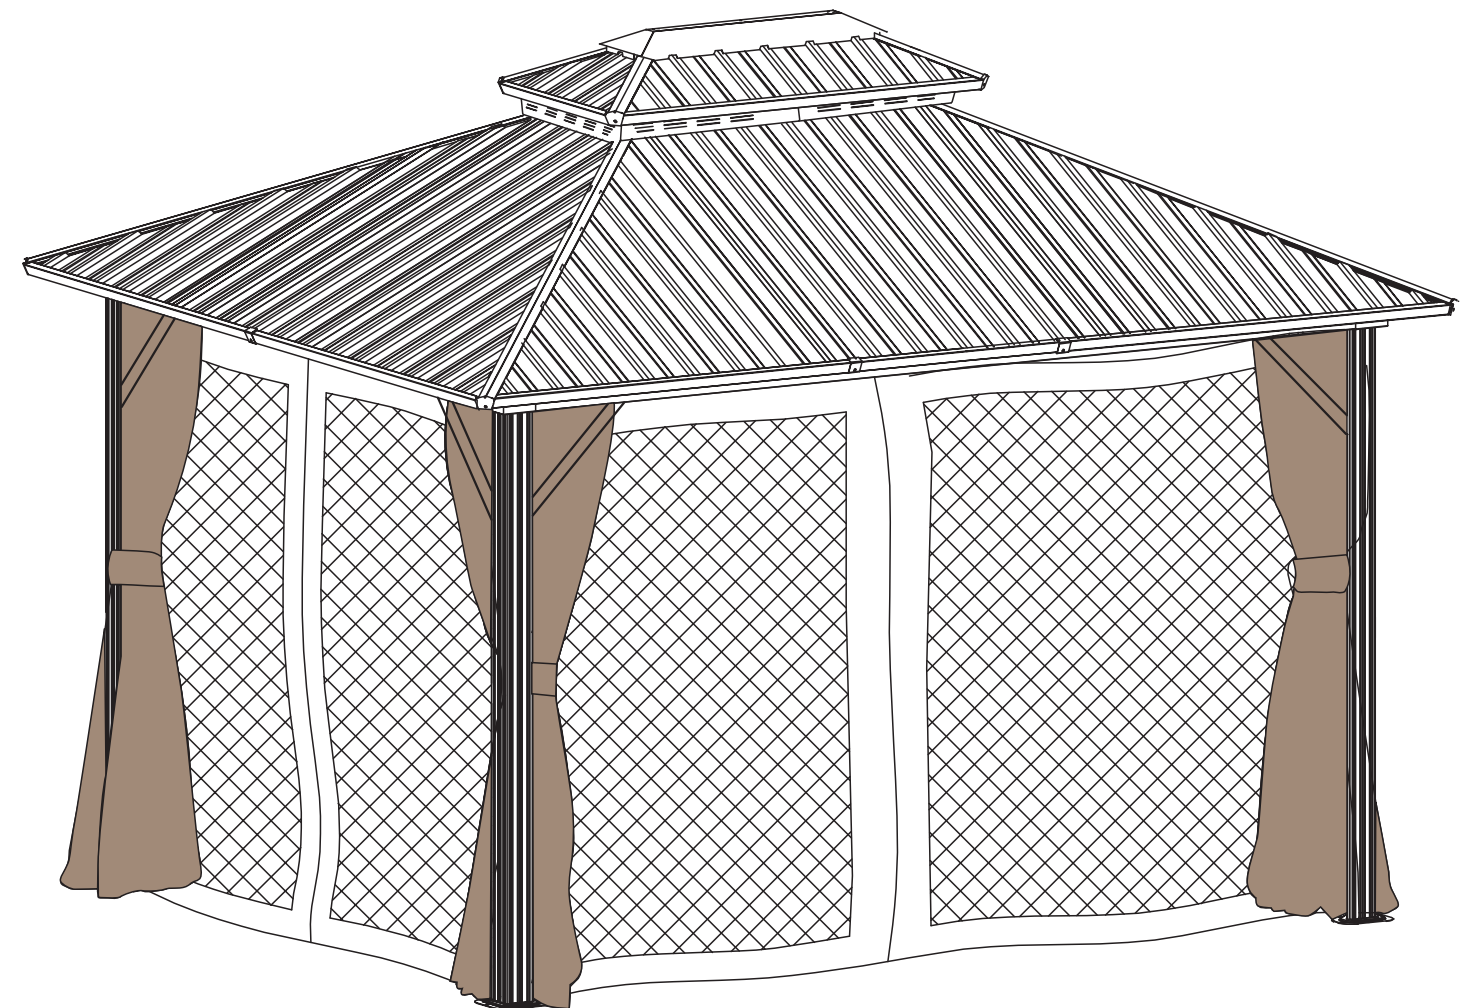

CONTACT US:

If you have any questions about the installation of YITAHOME products, just contact us at +1 (888) 717-8084 from Mon-Fri 8:00 AM-4:30 PM PST / Sat. 8:00 AM-12:00 PM PST or e-mail us at after-sale.cs@hotmail.com









Alternative method to contact us (amazon.com orders only)












1. Log into your Amazon account
2. Go to "Your Orders" and find the purchase
3. Click on "Contact Seller"









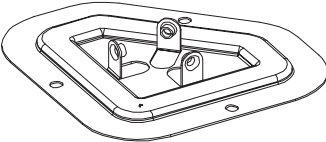
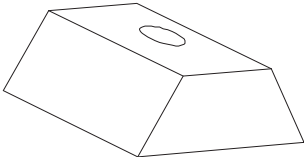
10X12 FT OUTDOOR HARD-TOP DOUBLE ROOF GAZEBO









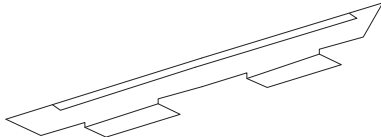
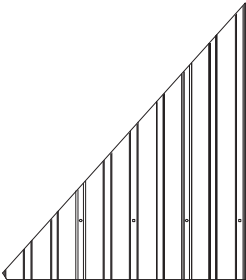












1. Two or more people are required for assembly.
2. A ladder and electric drill may be necessary.
3. Do not erect the structure in heavy winds or inclement weather.
4. Do not leave up this unit for extended periods of time, as it is not a permanent structure or designed to withstand sustained wind or rain. It is a temporary, portable shelter that shields you from sunlight and rain. The screens also block flying insects.
5. Do not use candles, matches, or any open flames near the tent.
6. To better align the screws for practical situations, do not fully tighten screws initially.













Item no.	Reference Image	Qty.
A		X4
B		X2
B1		X2
C		X2
C1		X2
D		X4
E		X4
F		X4

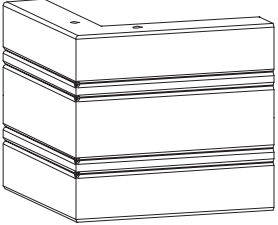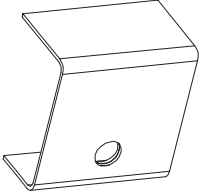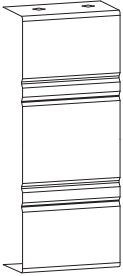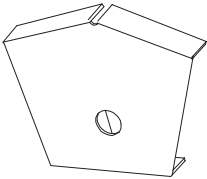Item no.	Reference Image	Qty.
F1		X4
G1		X2
G2		X2
G3		X2
G4		X2
G5		X2
G6		X2
G7		X2
G8		X2
H		X4
I		X4

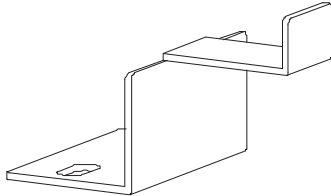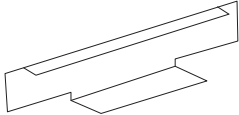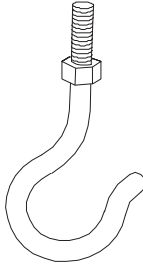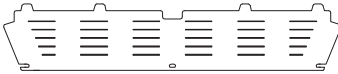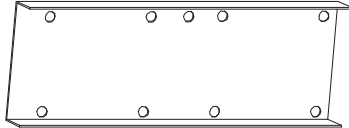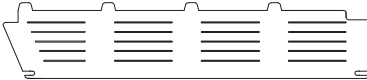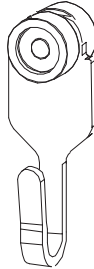Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
J1		X4	M1		X4
J2		X4	M2		X8
K		X1	M3		X4
K1		X1	M4		X4
L		X4	M5		X76

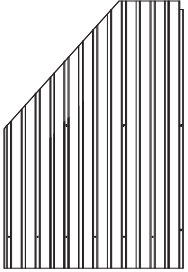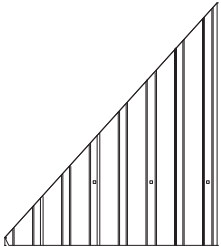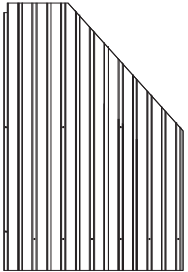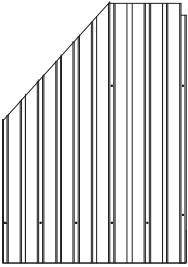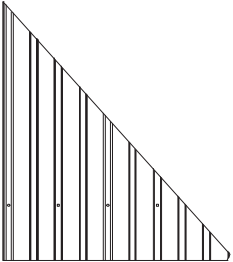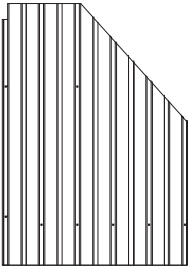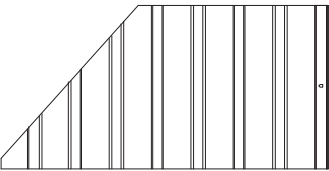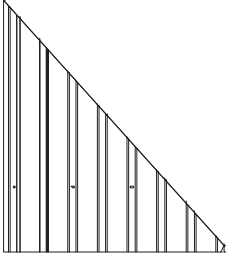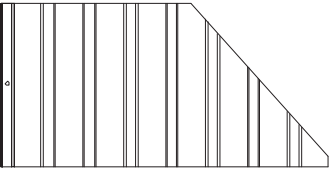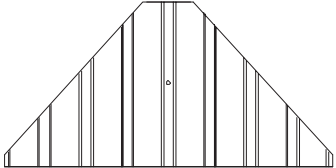Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
M6		X4	R1		X24
M7		X2	Z2		X2
P		X4	Z3		X2
Q		X72	Z4		X2
R		X56	N1		X2

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
N2		X2	O1		X2
N3		X2	O2		X2
N4		X2	O3		X2
N5		X2	O4		X2
N6		X2	O5		X2


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
<div>S</div>	<div></div> <div>M6X47mm</div>	X12	<div>W</div>	<div></div> <div>M6X50mm</div>	X4
<div>T</div>	<div></div> <div>M6X25mm</div>	X64	<div>X</div>	<div></div> <div>M6X10mm</div>	X32
<div>U</div>	<div></div> <div>M6X25mm</div>	X9	<div>Y</div>	<div></div> <div>M5X10mm</div>	X56
<div>U1</div>	<div></div> <div>M6X30mm</div>	X4	Reference Image		Qty.
<div>V</div>	<div></div> <div>M6X15mm</div>	X108	<div></div> <div>Curtain</div>	X1	
			<div></div> <div>Netting</div>	X1	
			<div></div> <div>Assembly tools</div>	X1	
			<div></div> <div>Tent peg</div>	X12	

1


X4



Ⓐ 4pcs



Ⓛ 4pcs




Ⓥ 12pcs



Ⓐ

Ⓐ

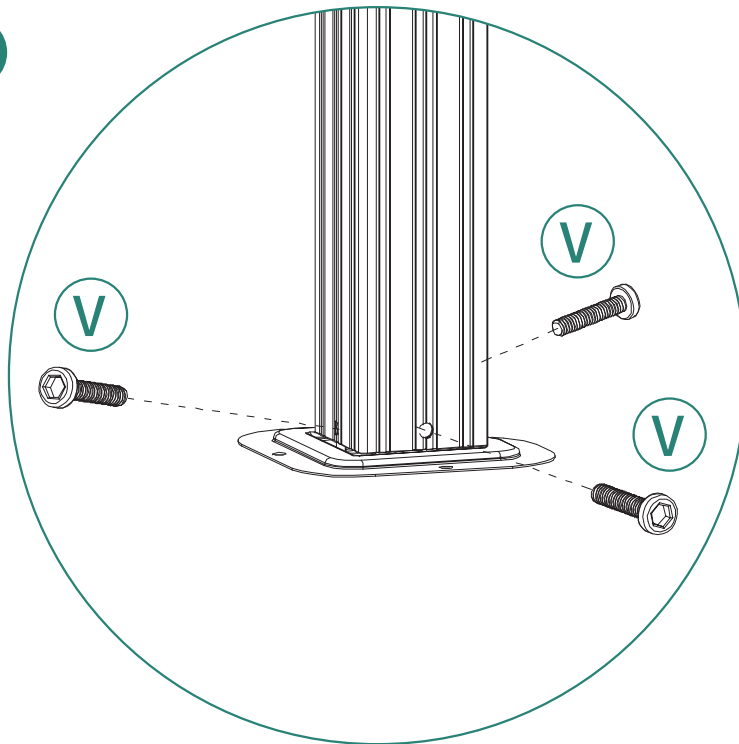

2

7

2

X2



Ⓑ1 2pcs



Ⓑ 2pcs




Ⓒ 2pcs



Ⓒ1 2pcs



ⓧ 32pcs

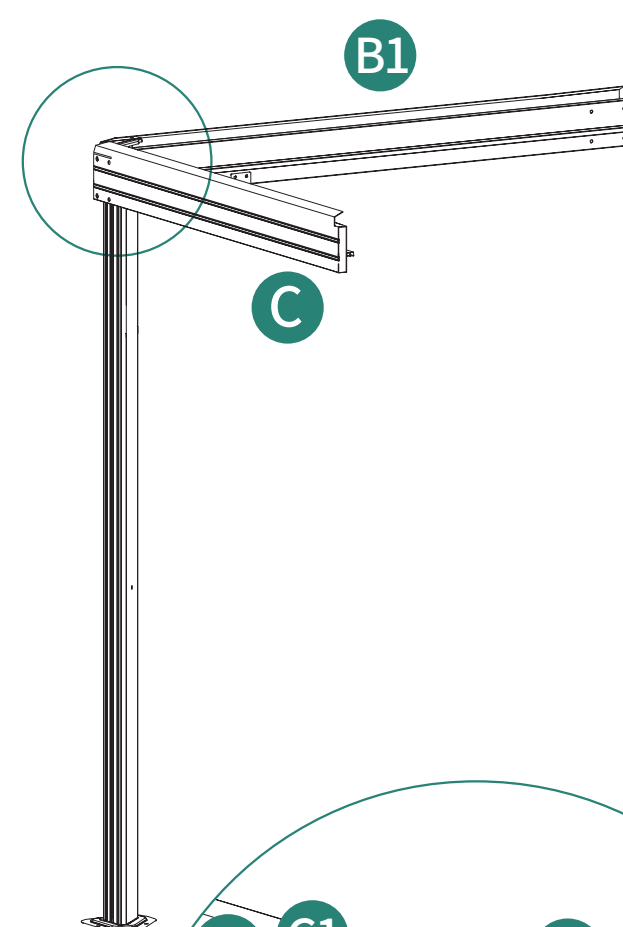


Ⓑ1

Ⓒ

Ⓑ

Ⓒ1

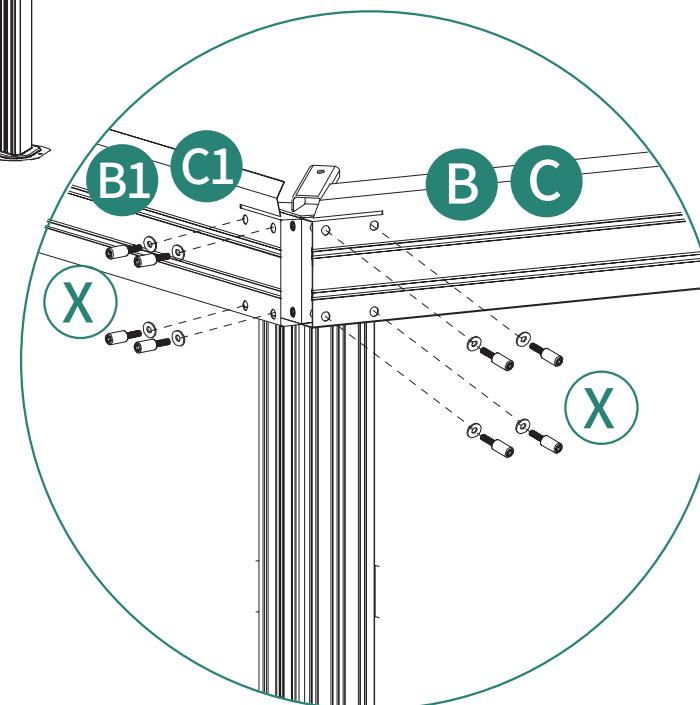

Ⓑ1

Ⓒ1

Ⓑ

Ⓒ


ⓧ

ⓧ


8

3


X2






ⓕ4pcs



ⓕ14pcs




Ⓨ32pcs

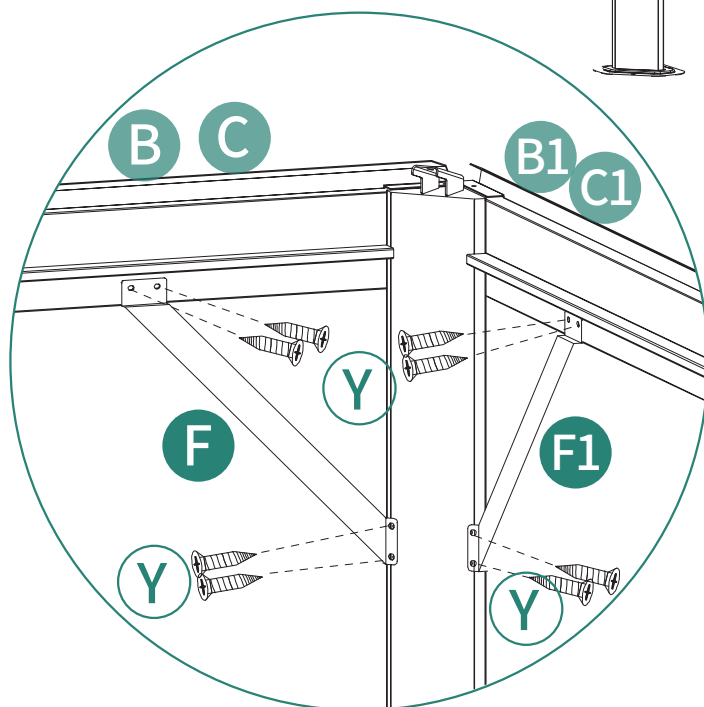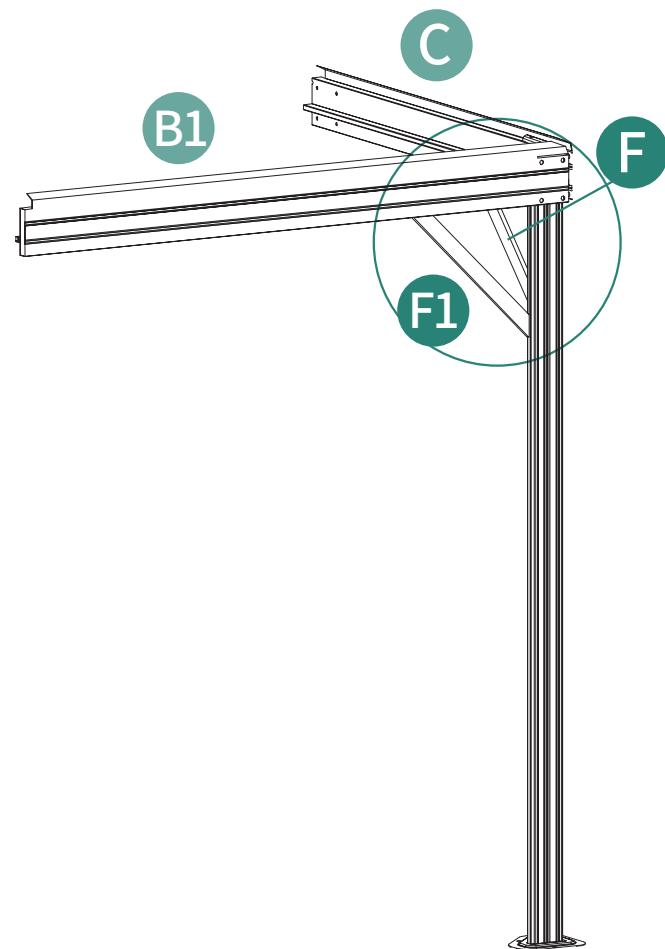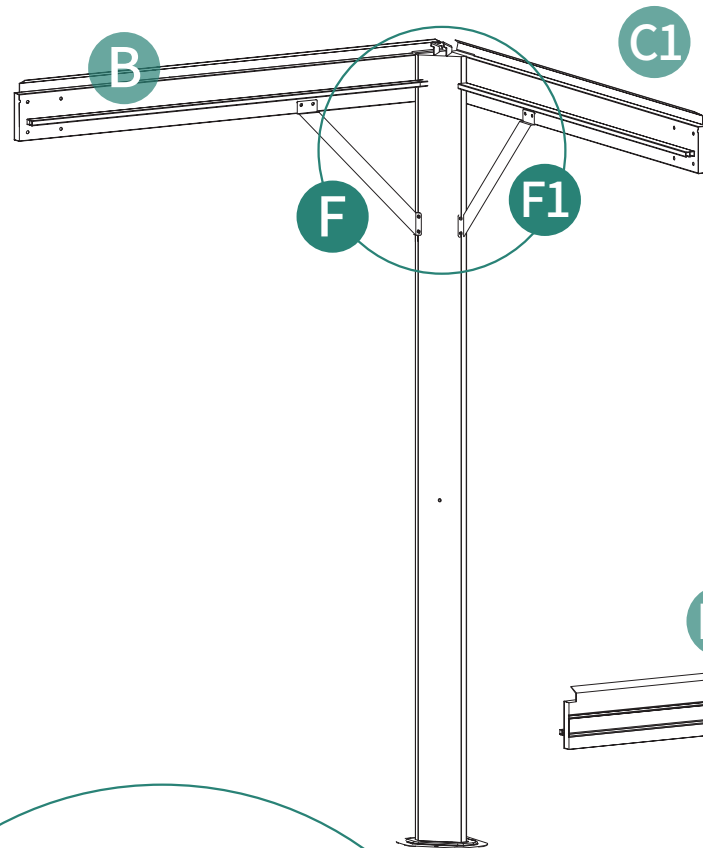


4

X2




Ⓟ4pcs




Ⓥ16pcs

When connecting B and B1 via P, and connecting C and C1 via P, make sure that 3 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

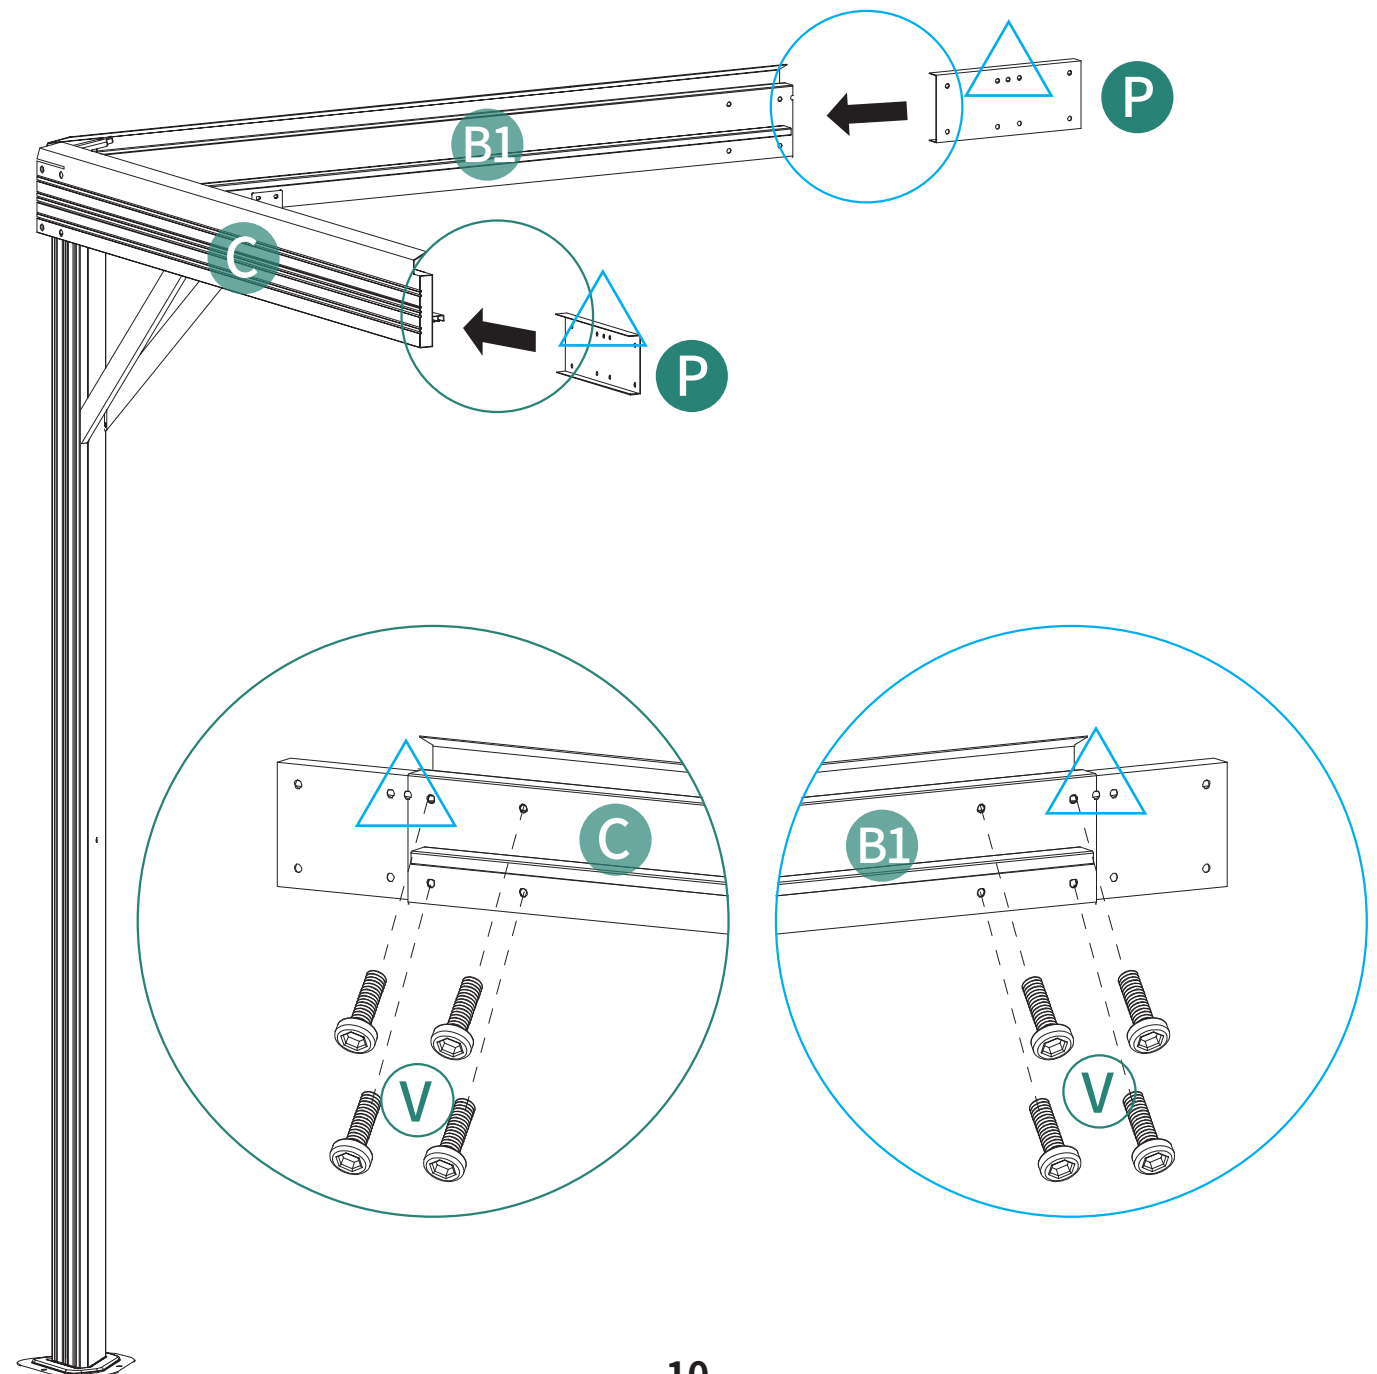


5

X2





Ⓥ8pcs

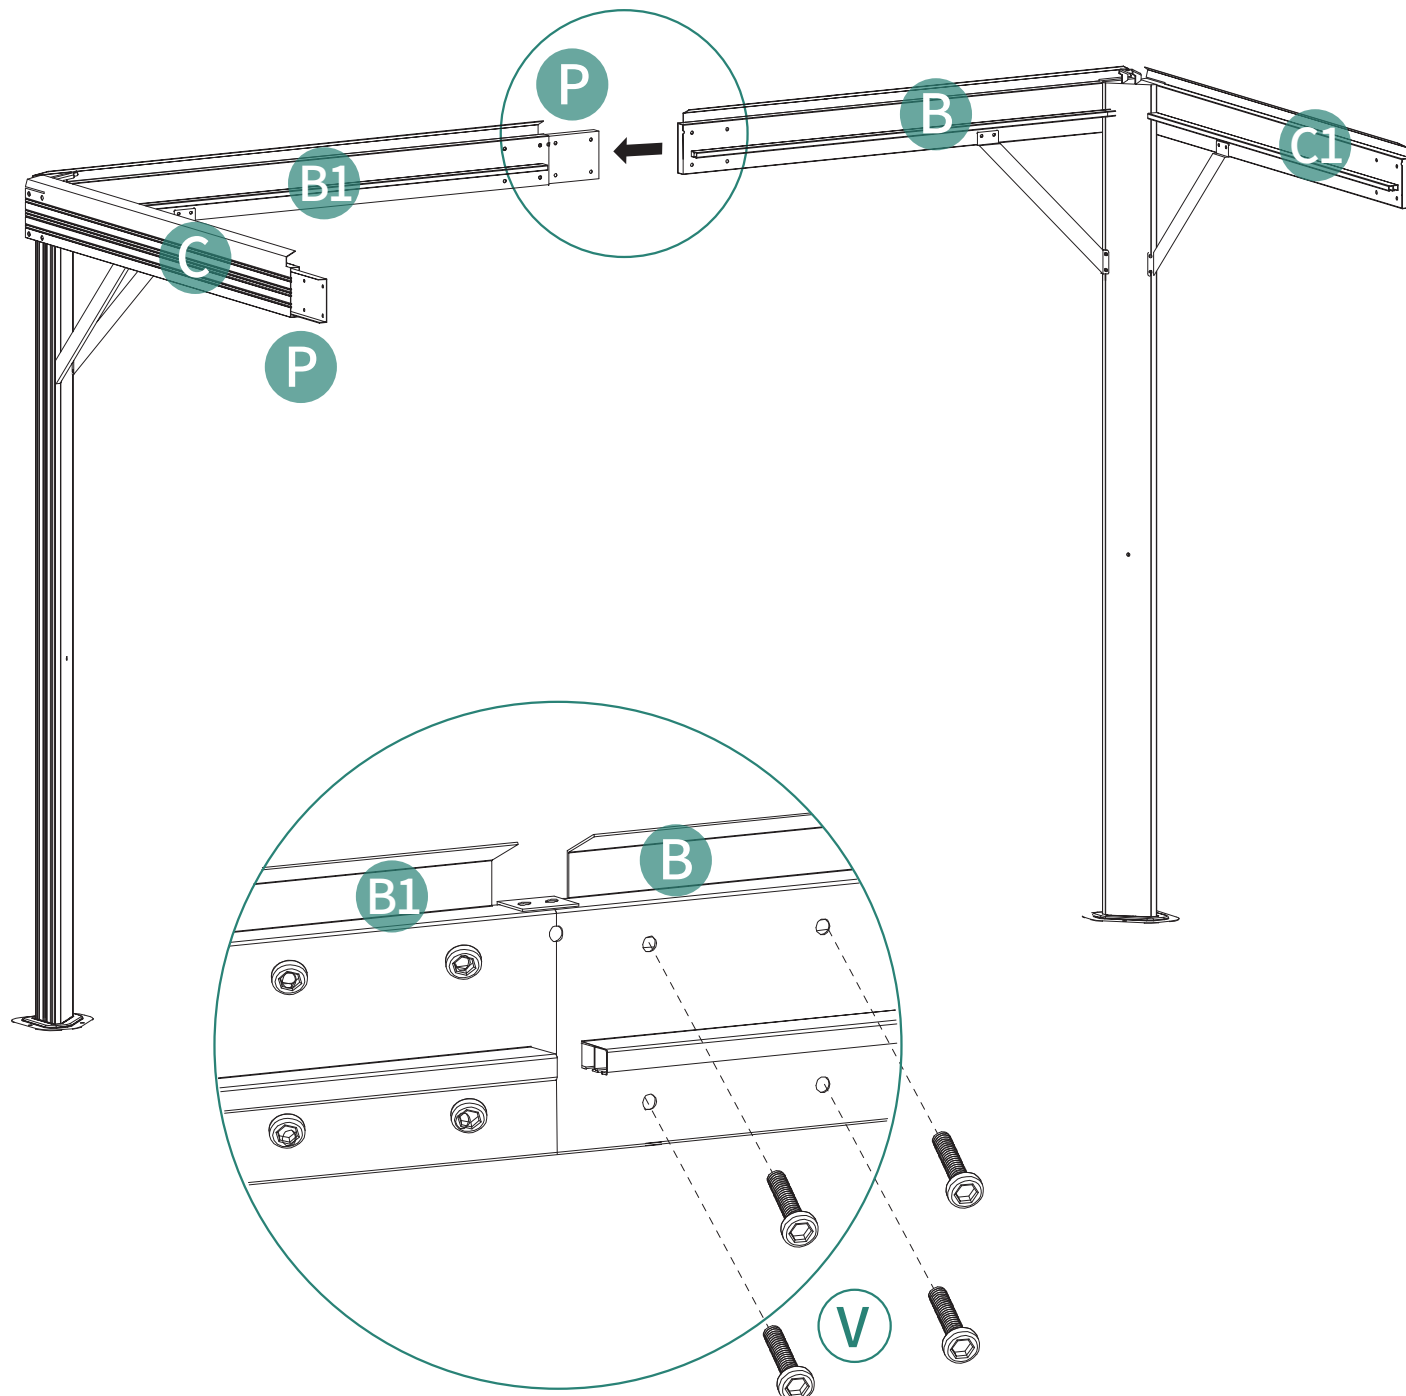



11

6


Ⓥ8pcs

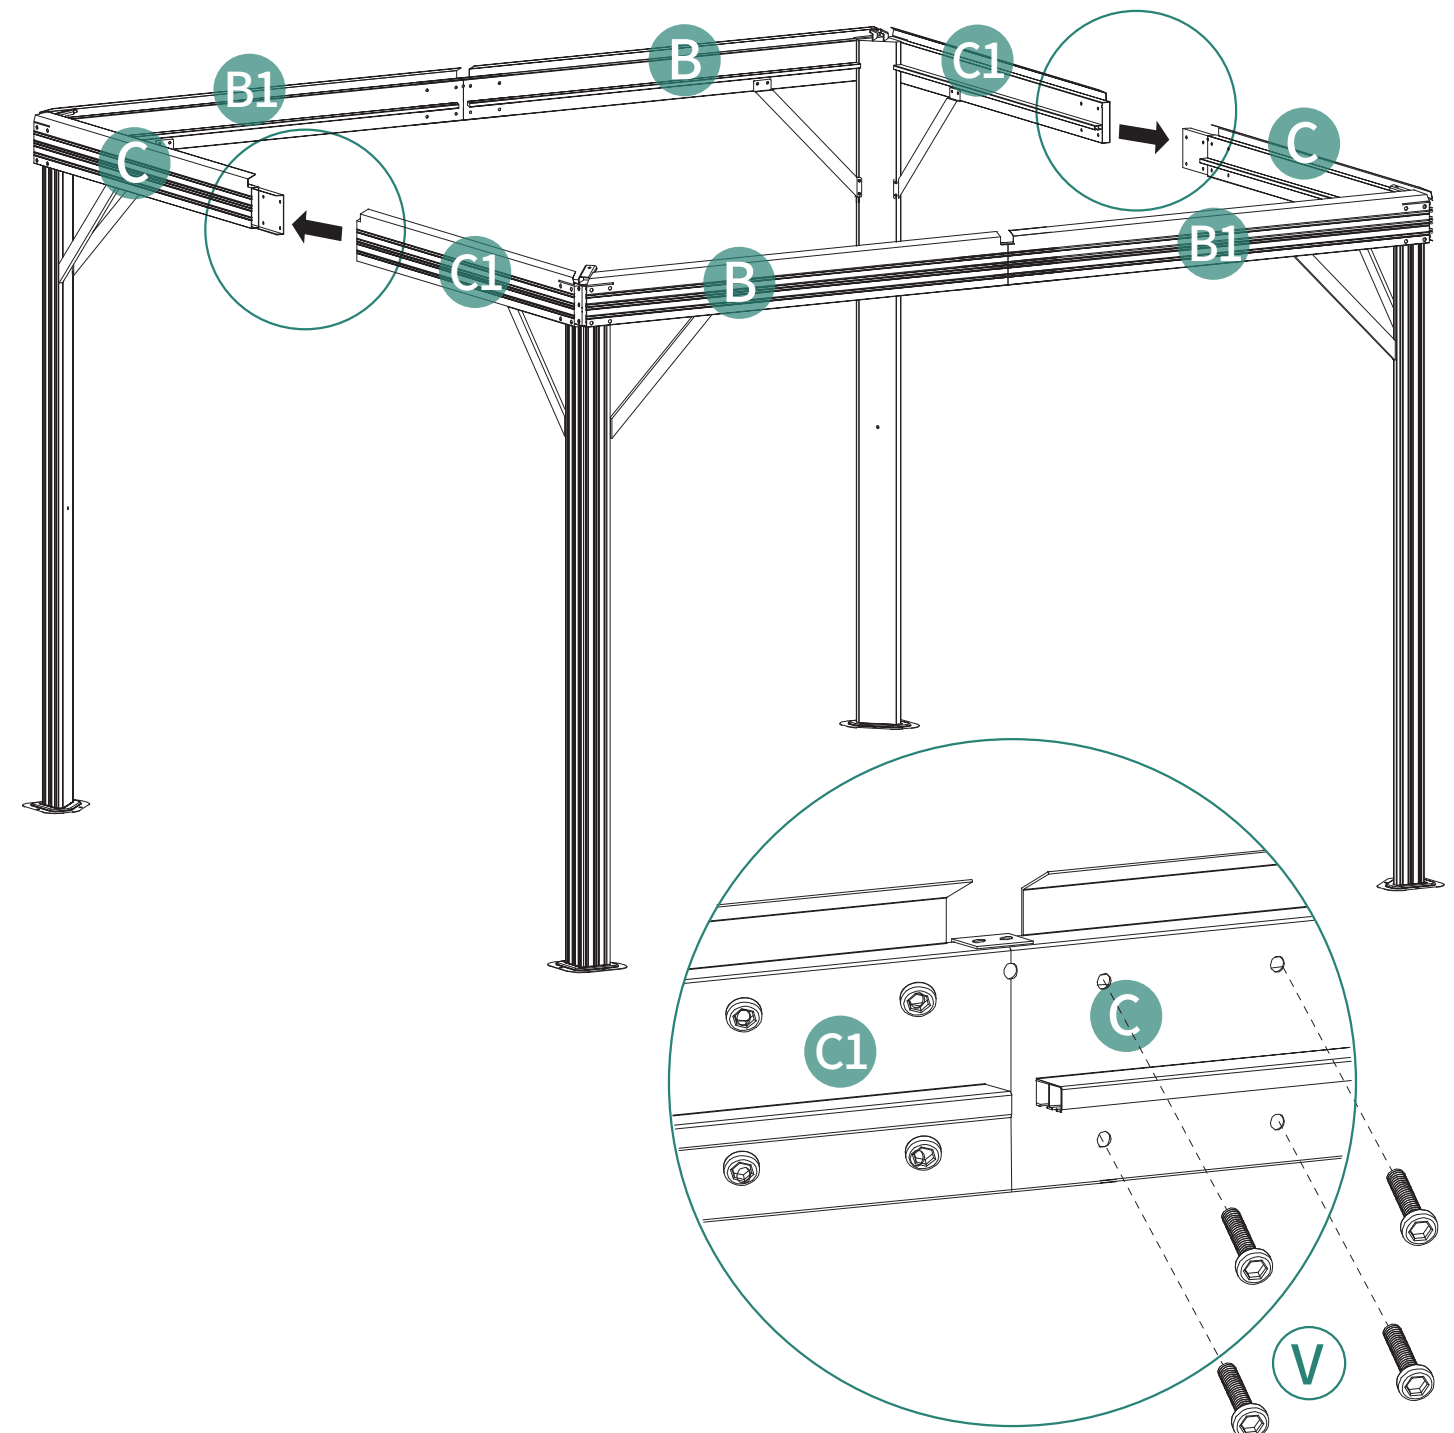


12

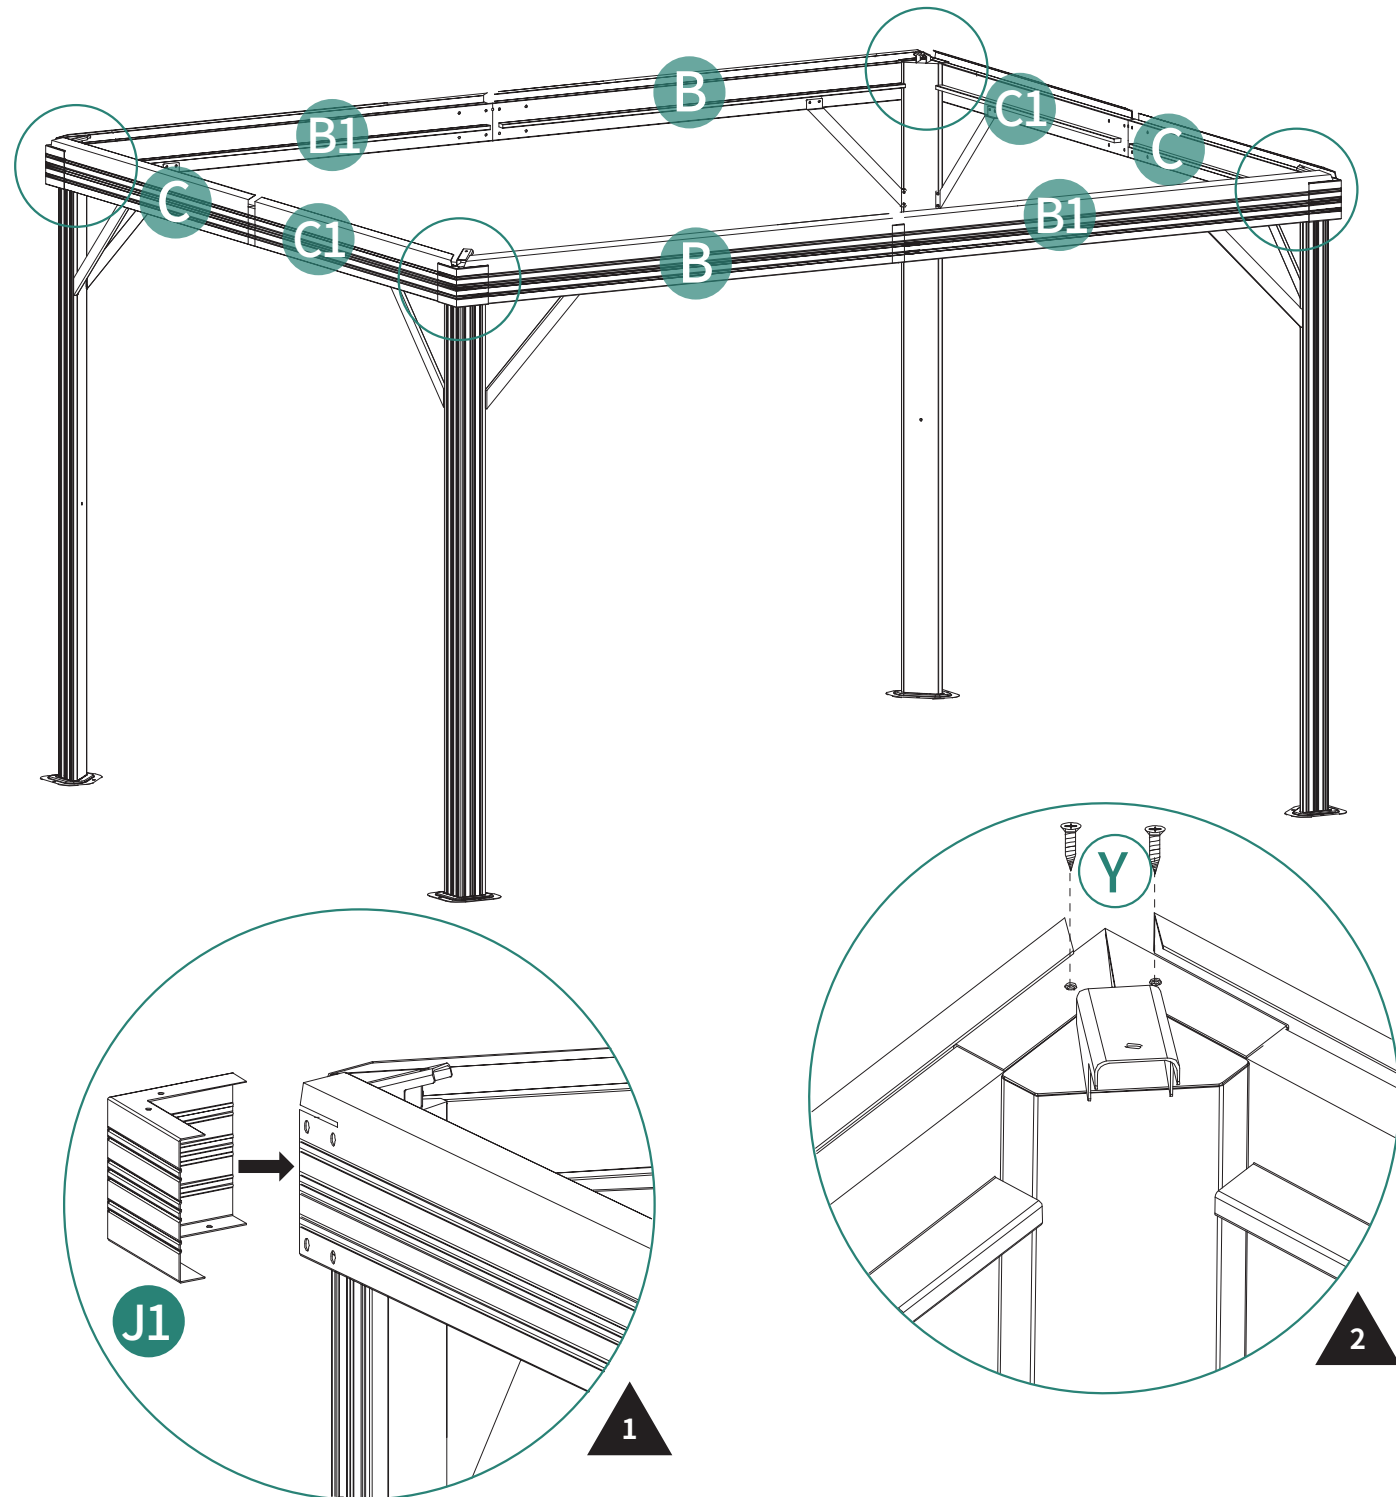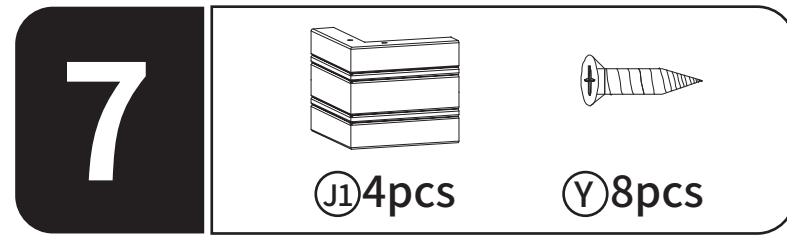

13





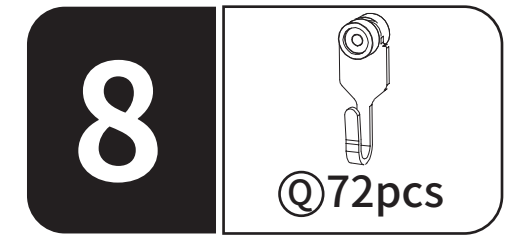


There are 2 rails on the rod. Install the 5 hanging hooks each rail on rod of B and B1, as well as the 4 hanging hooks each rail on rod of C and C1.

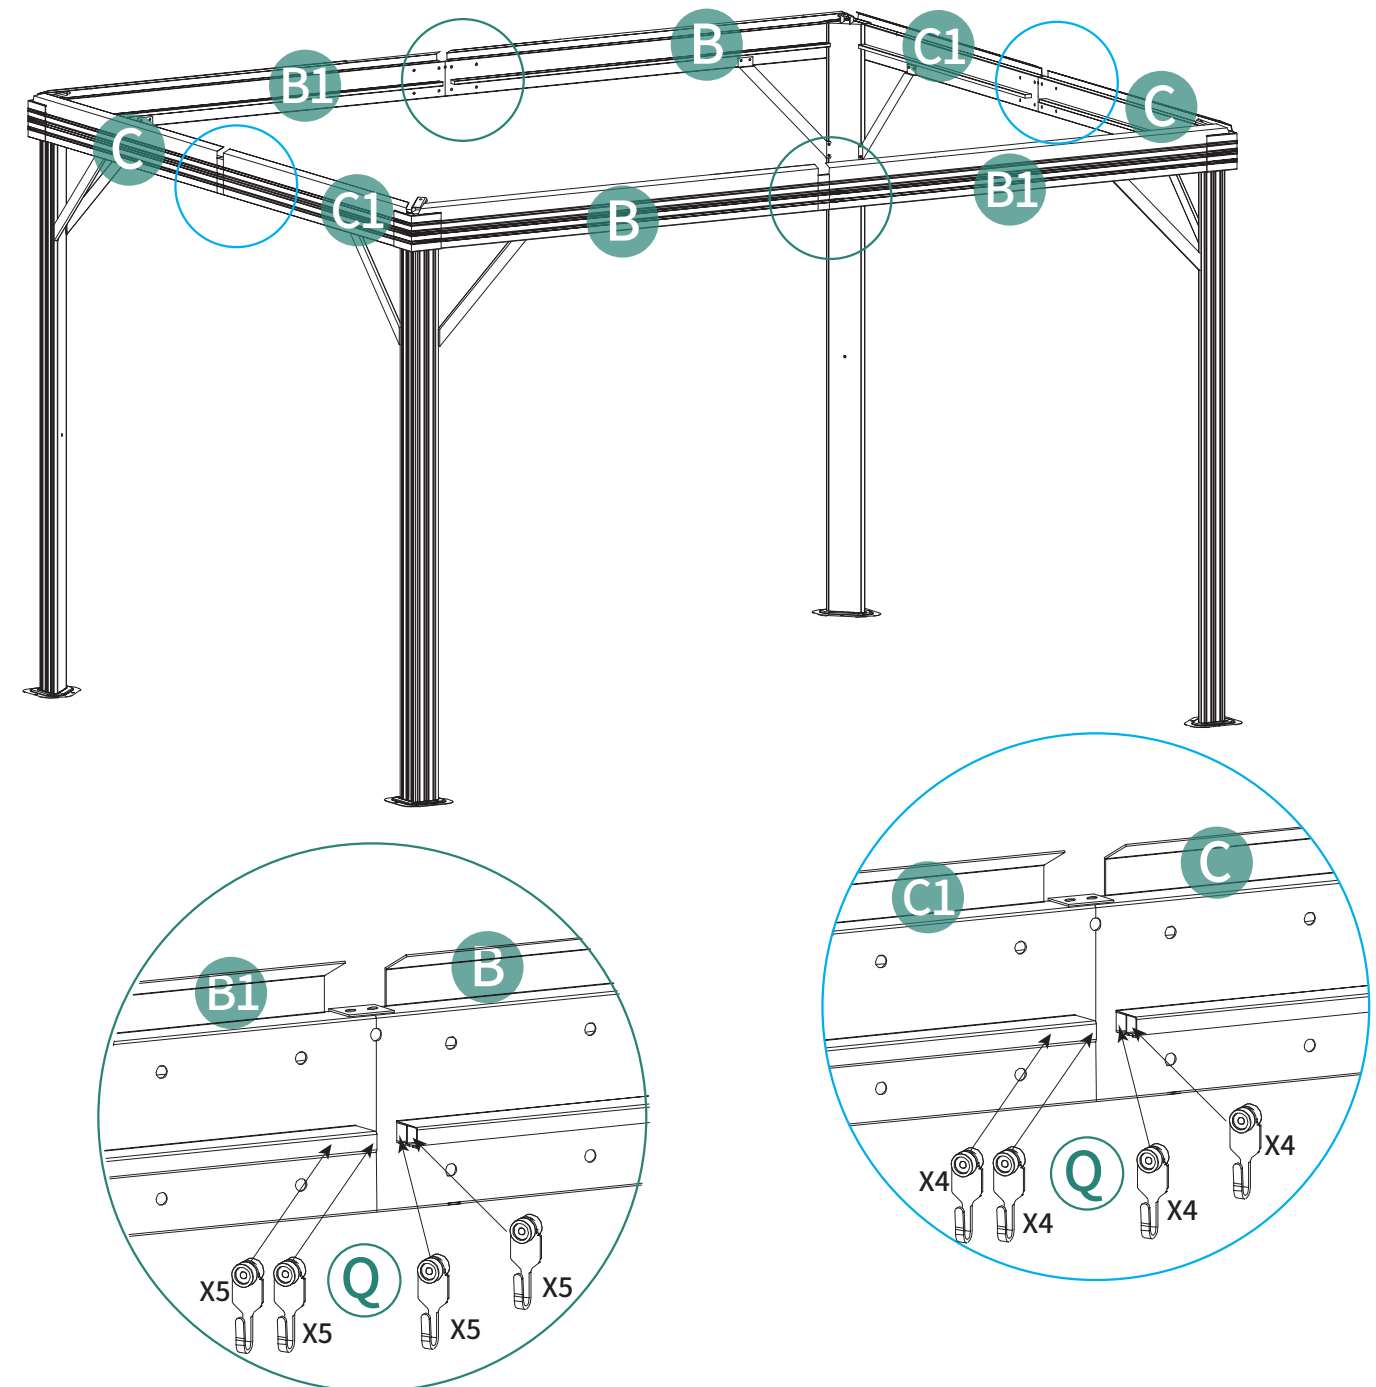




14

9

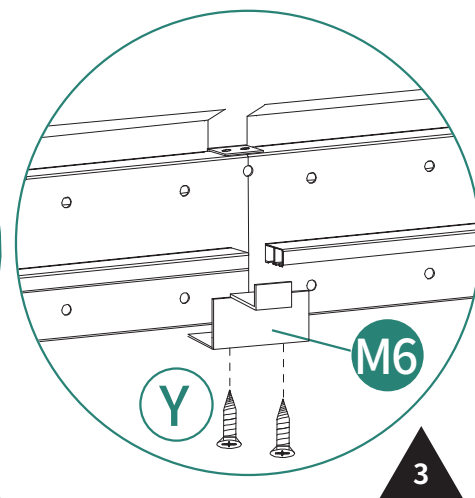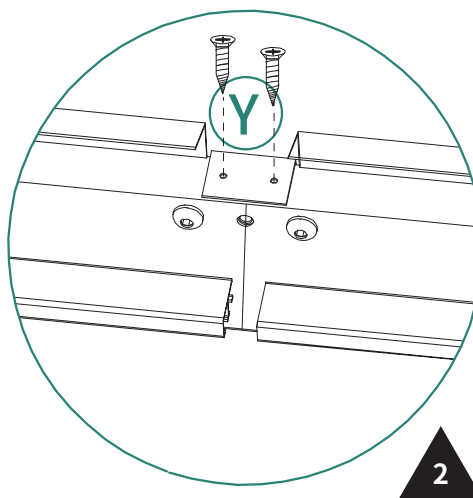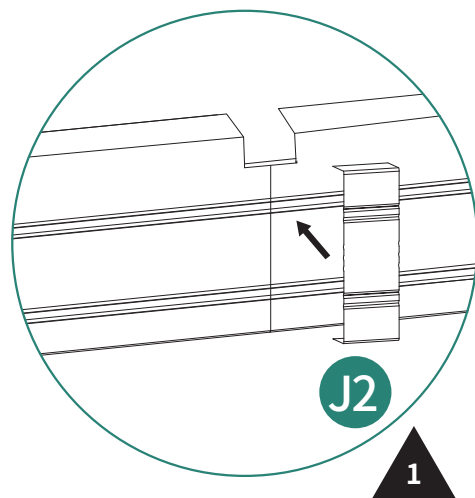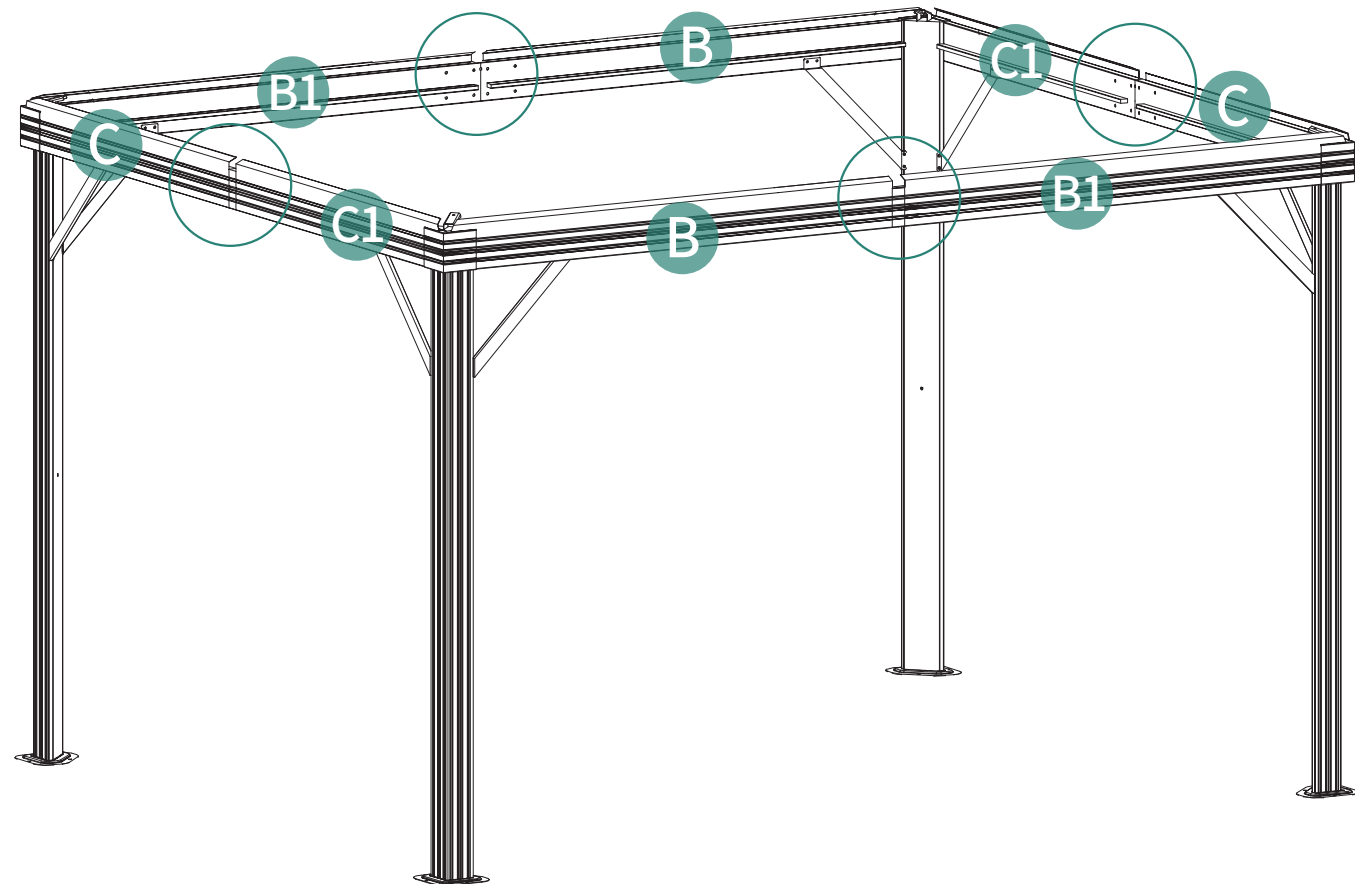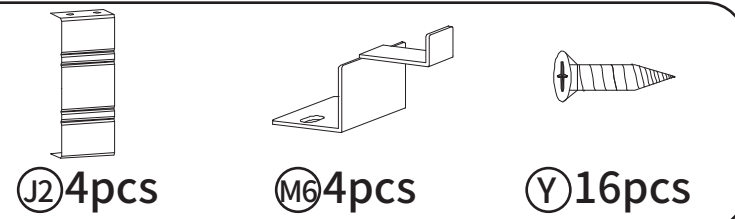

15



10

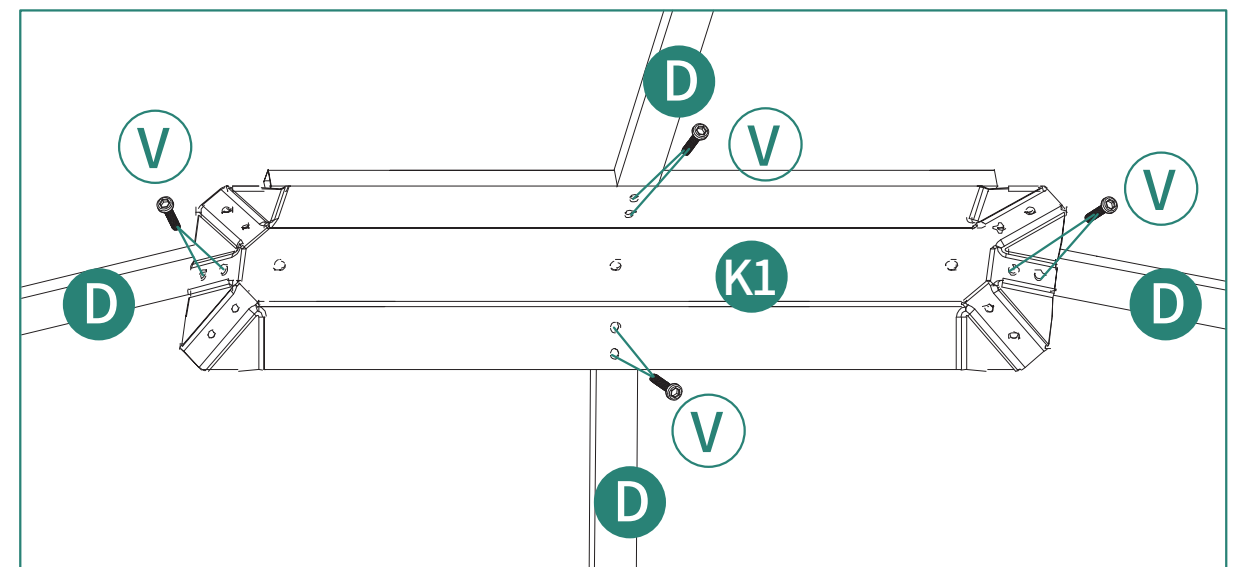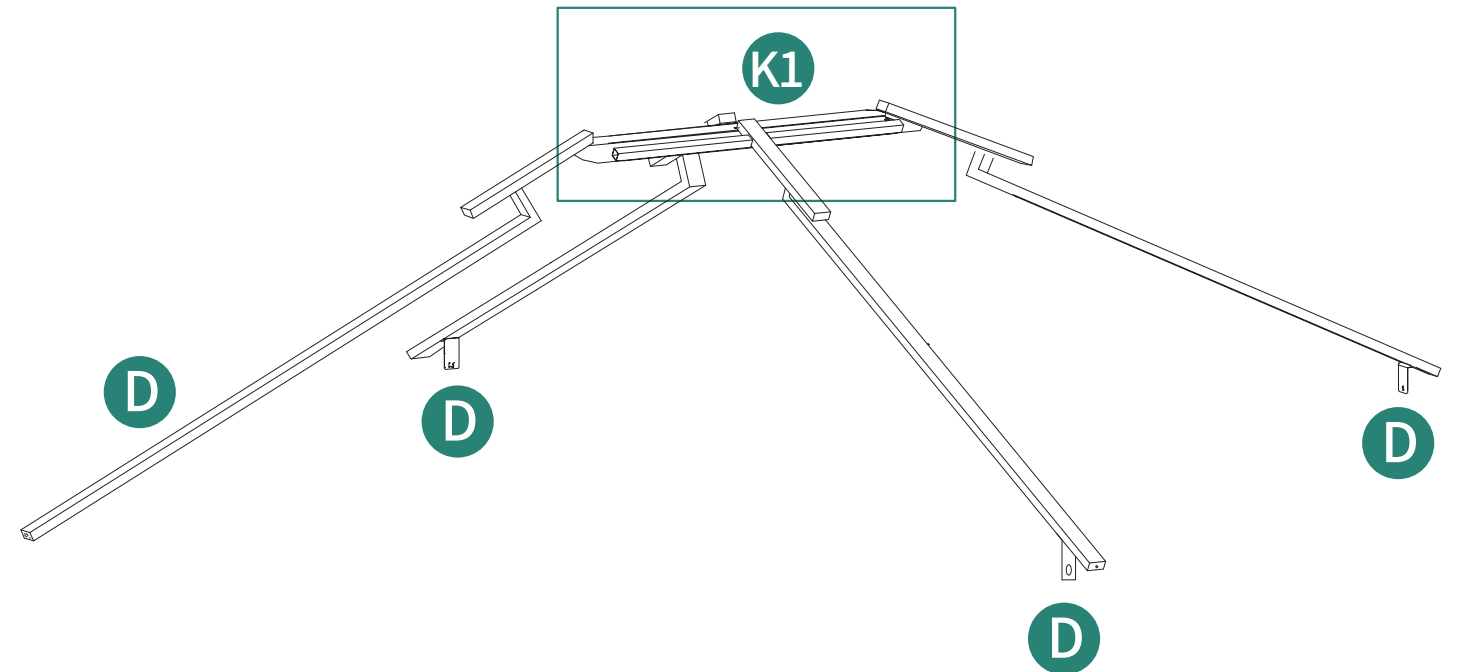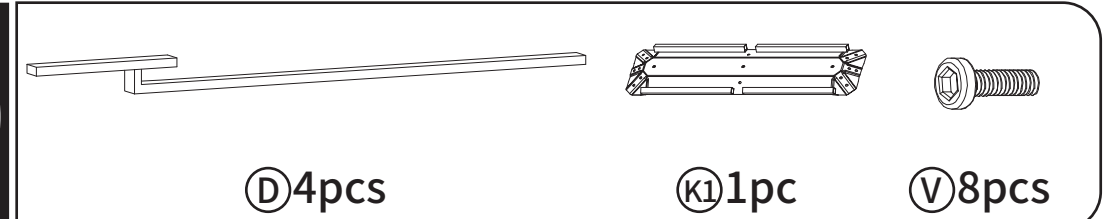

16


11




Ⓥ4pcs

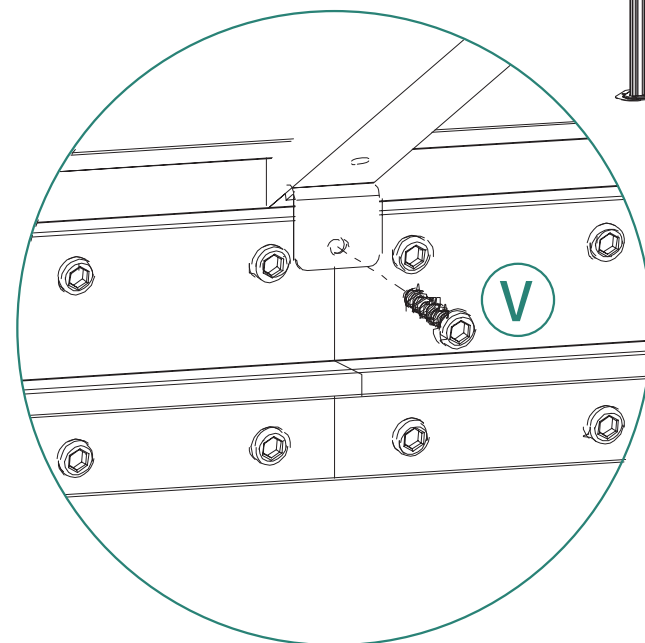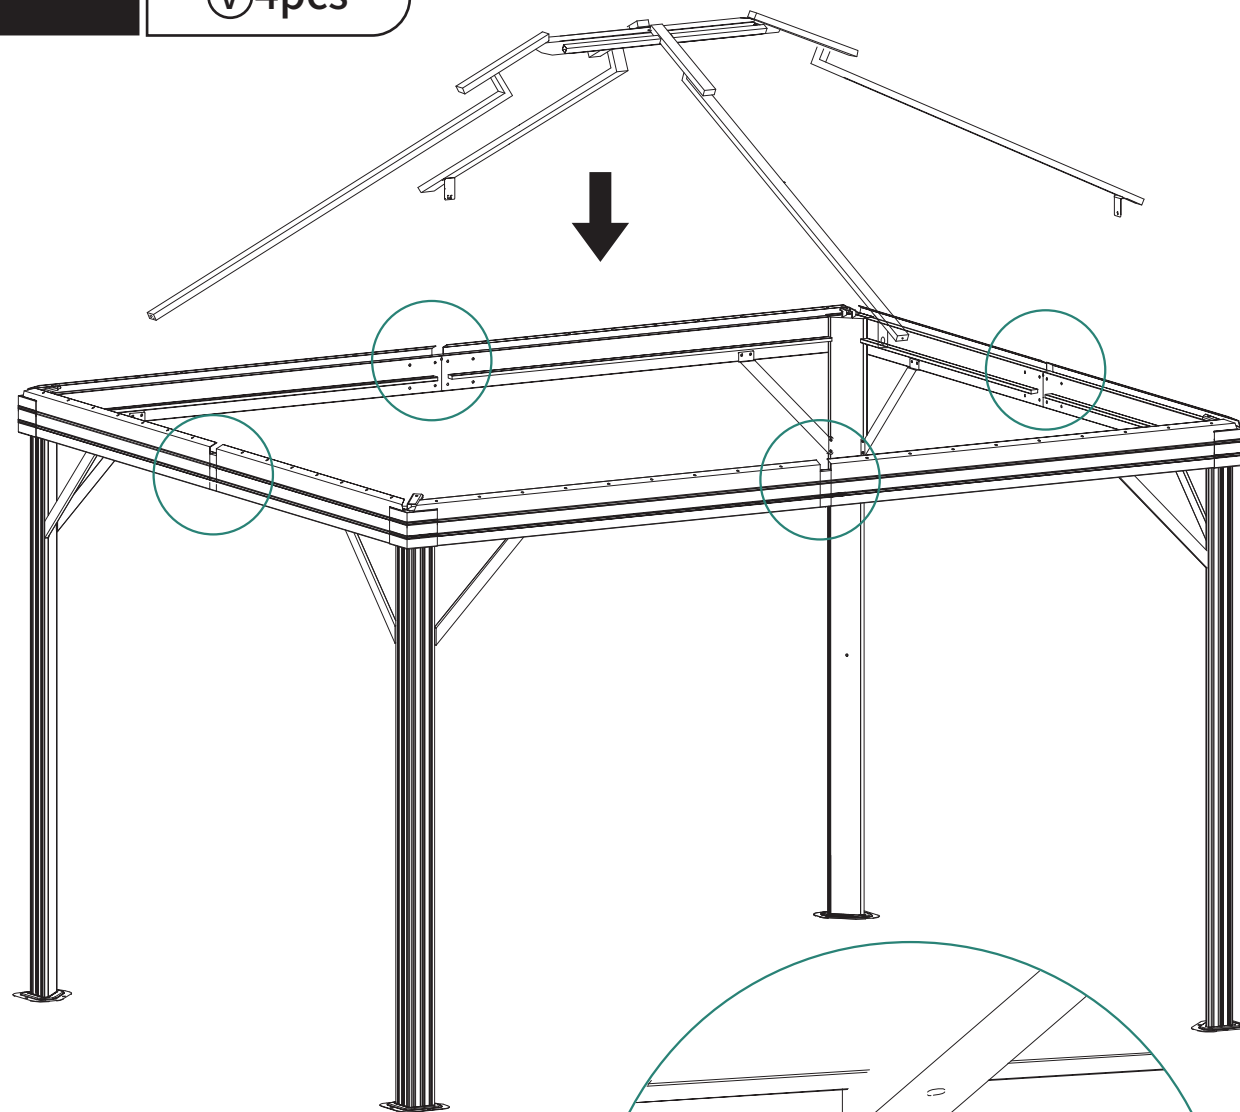


17

12


ⓔ4pcs Ⓥ12pcs

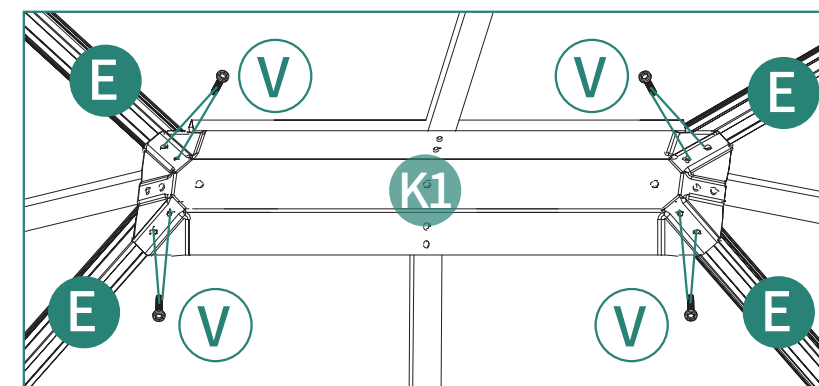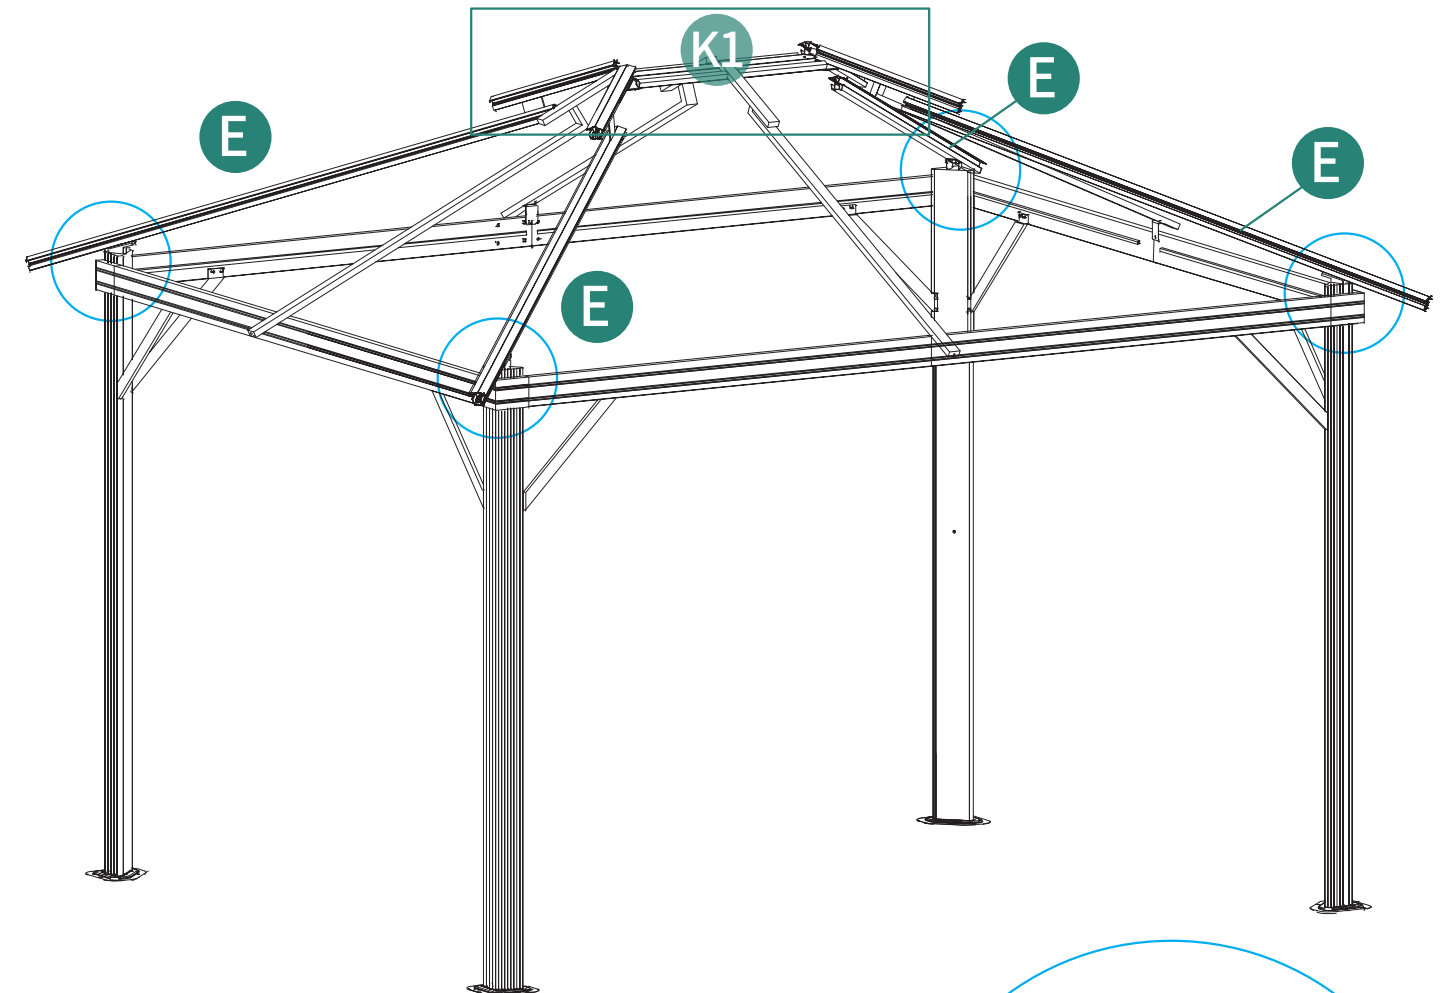

1

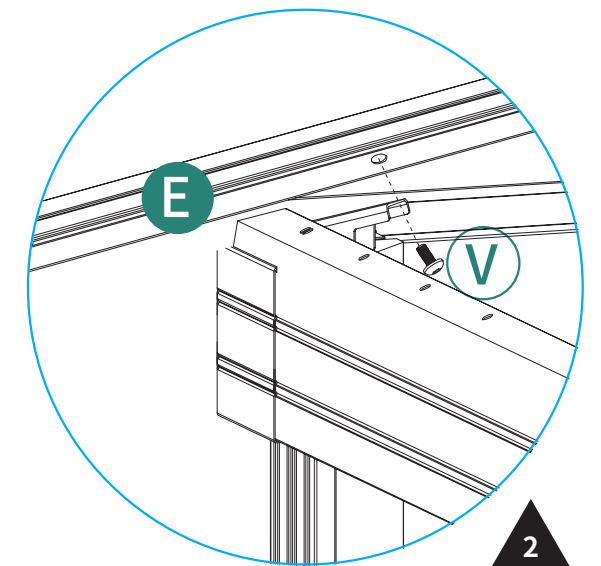

2

18

13

X2


ⓂH4pcs

ⓂI4pcs

ⓂM34pcs

ⓂV8pcs

Part H and I should be placed as shown in the picture. The side views are marked by triangles.
Part M3 should be inserted between part H and I.

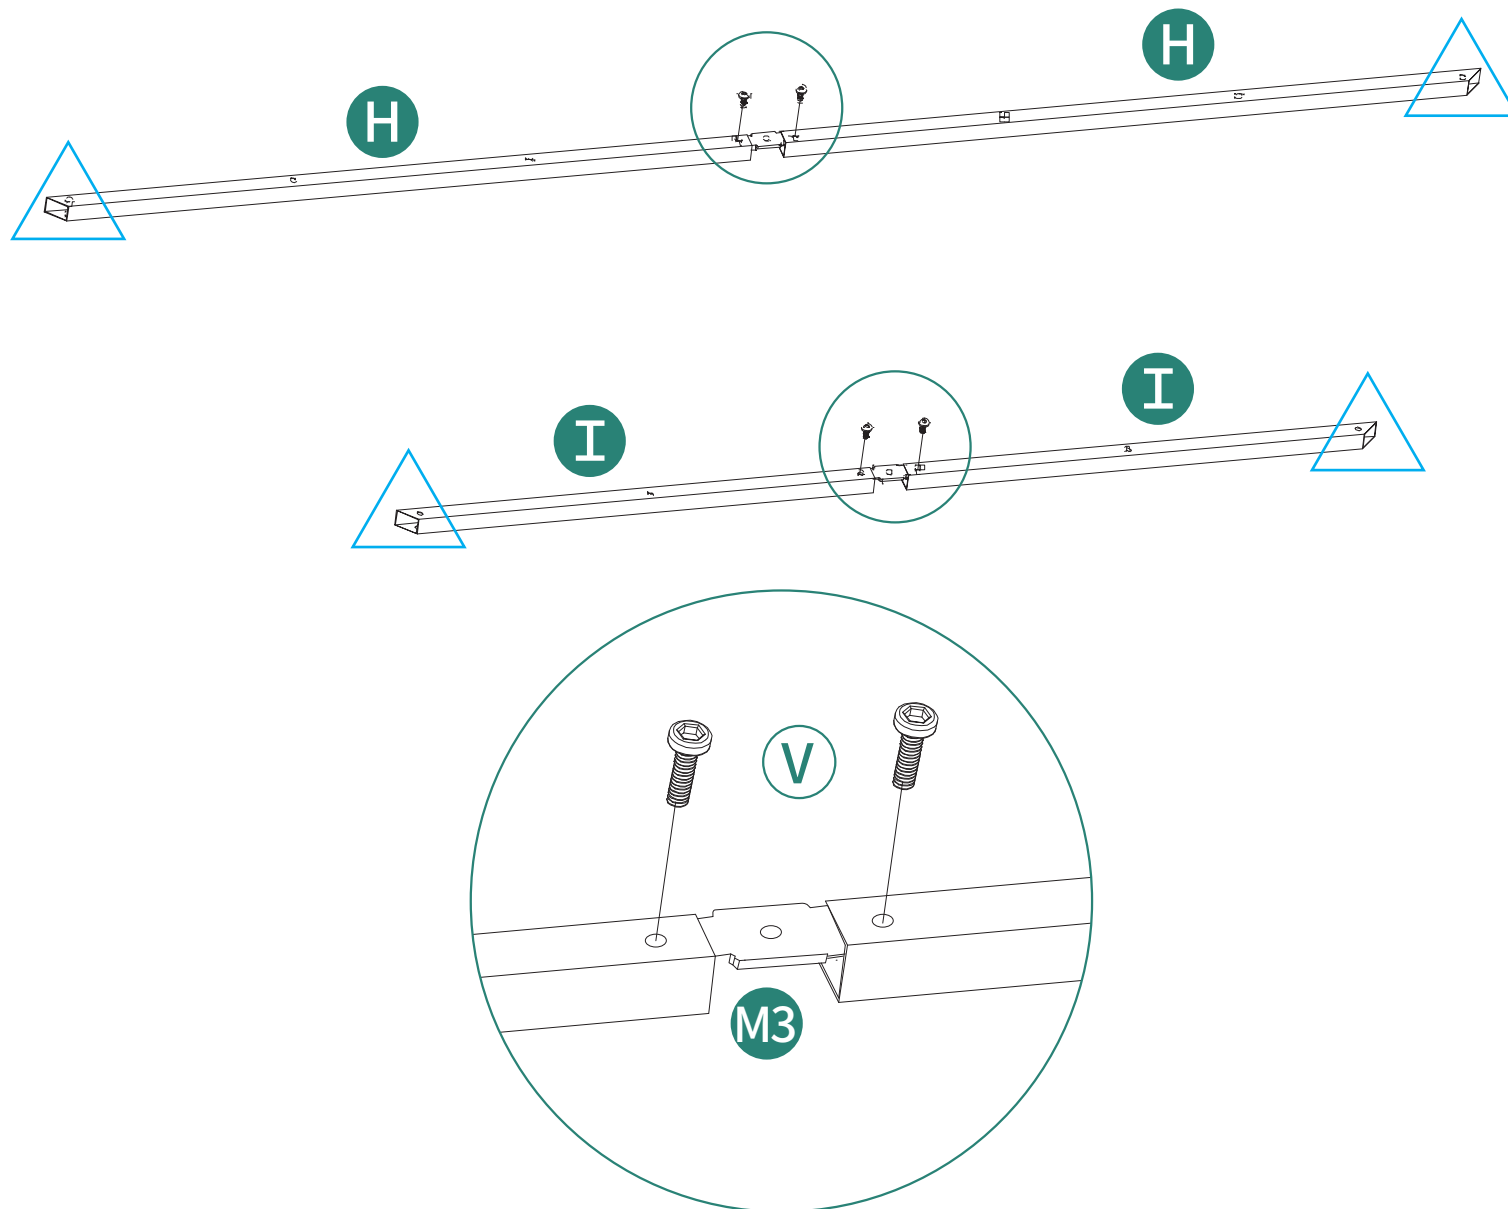


19

14


ⓂW2pcs

Put the screws onto part W and tighten the nuts at step 22 and 24.

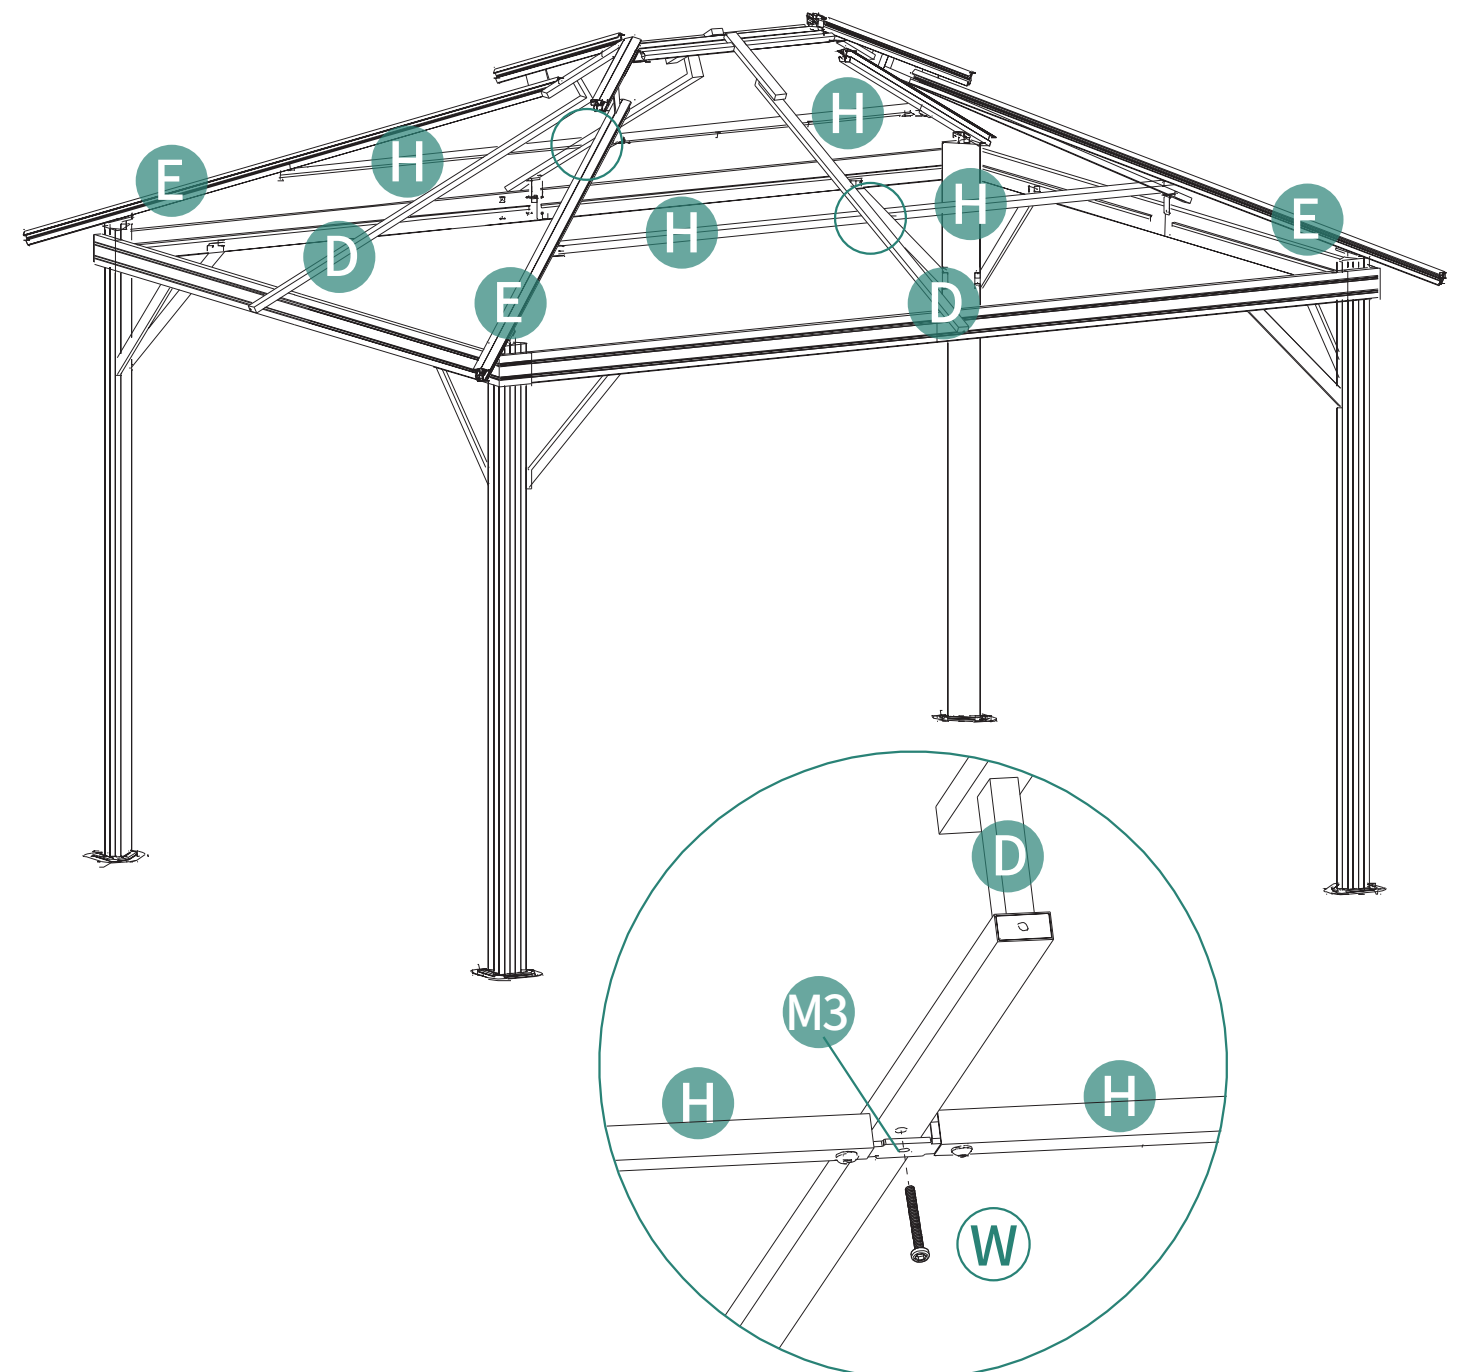

20

15



M4 4pcs





W 2pcs




V 4pcs


Put the screws onto part W and tighten the nuts at step 22 and 24.

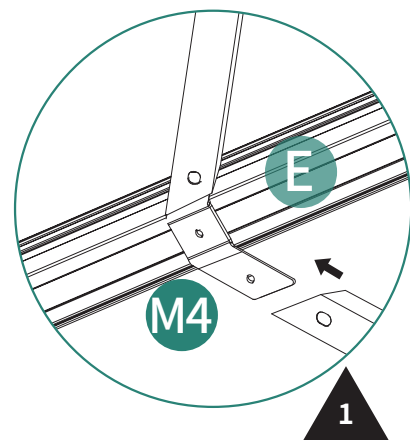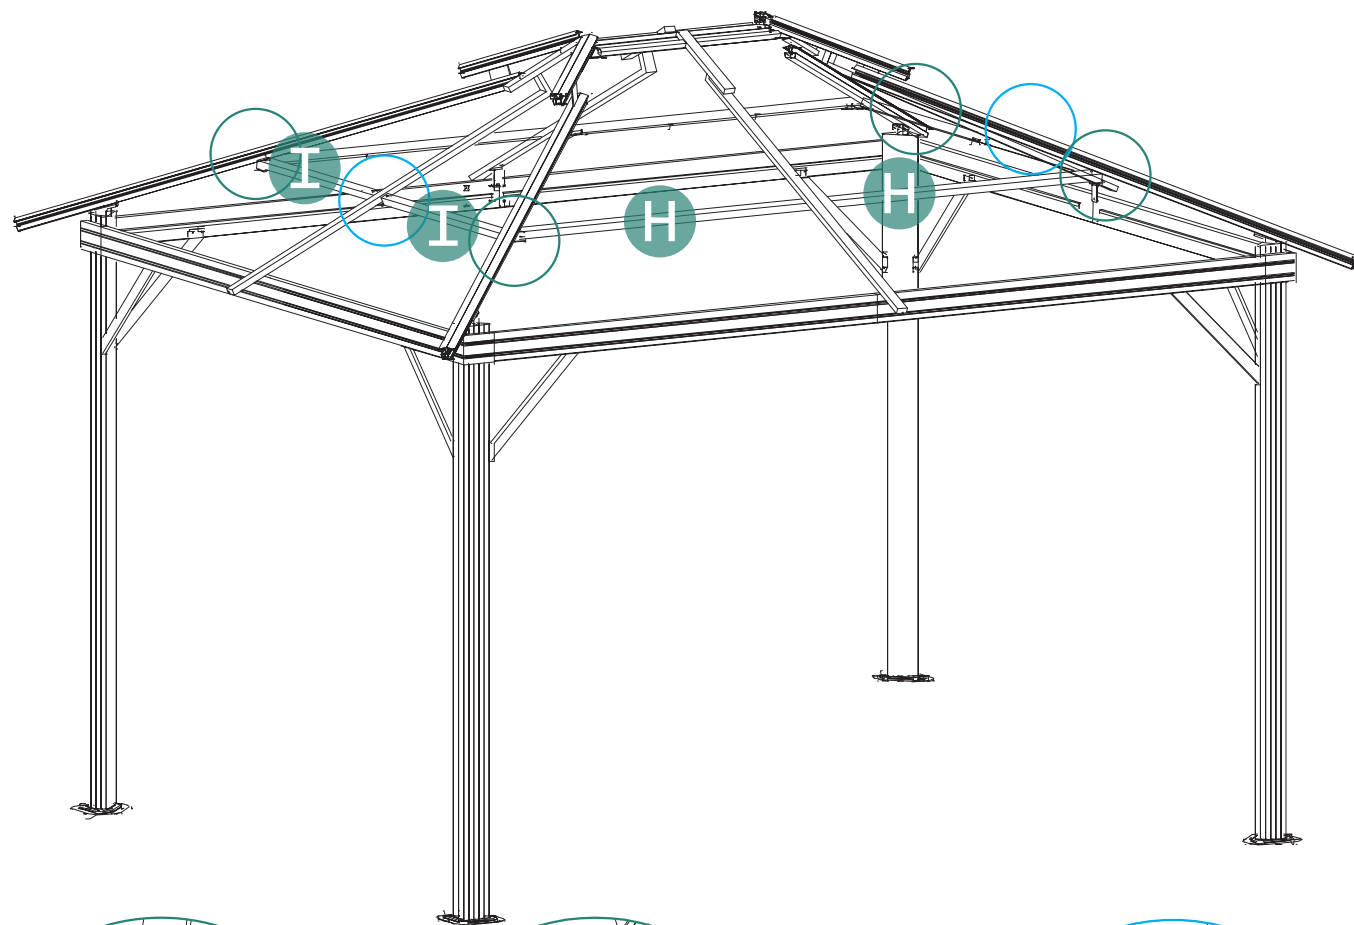

1

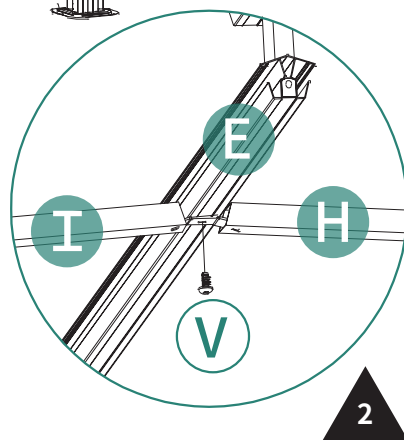


2

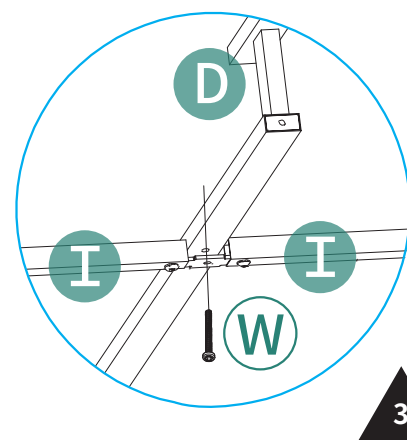



3

21

16






V 8pcs



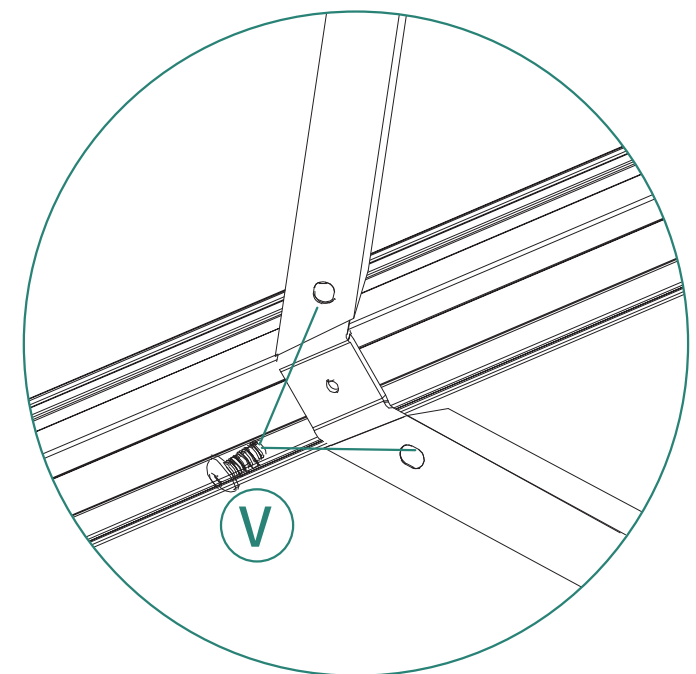
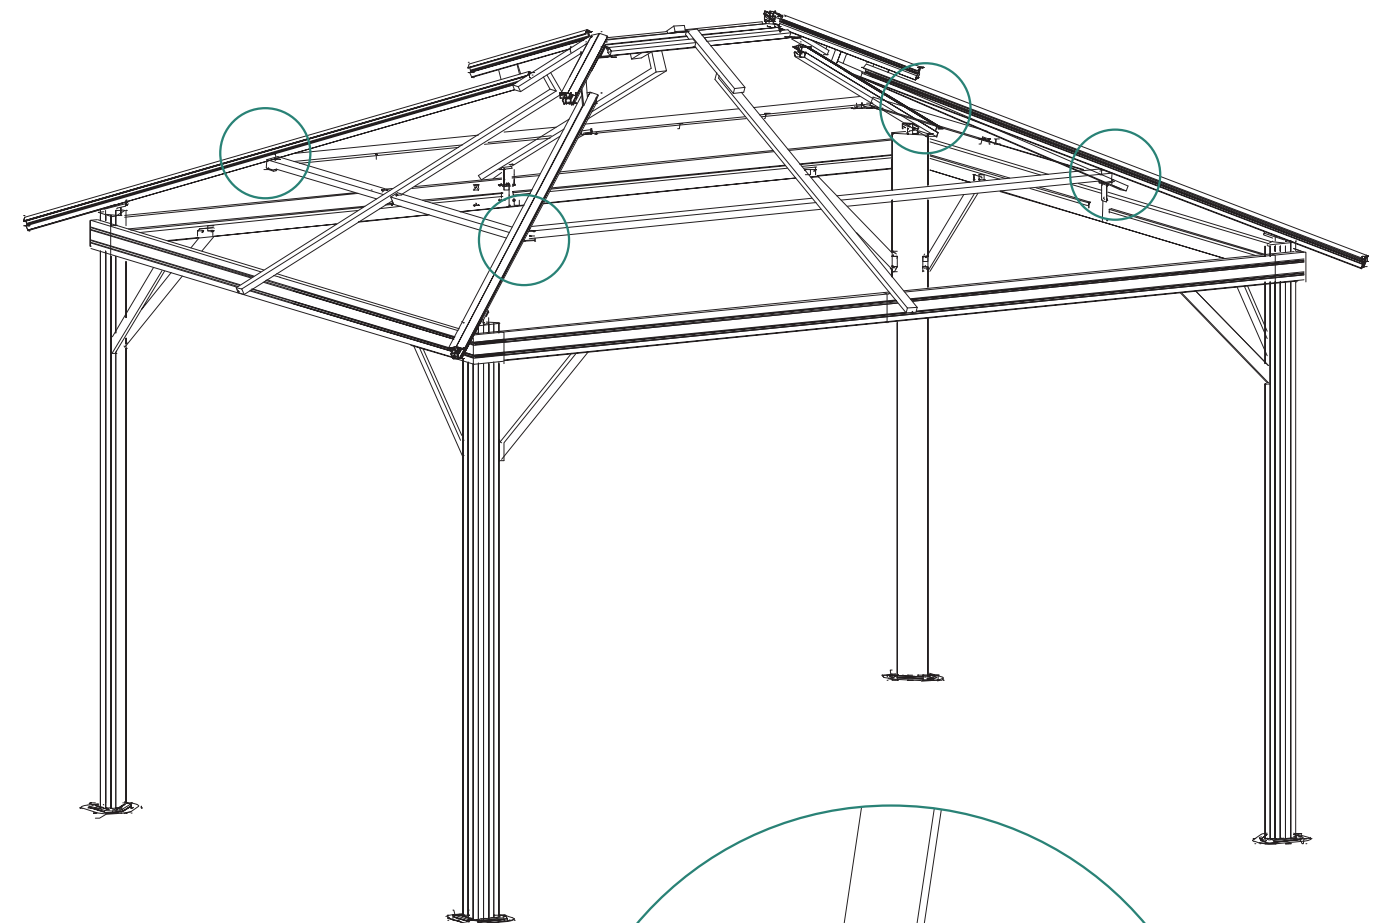


22


17


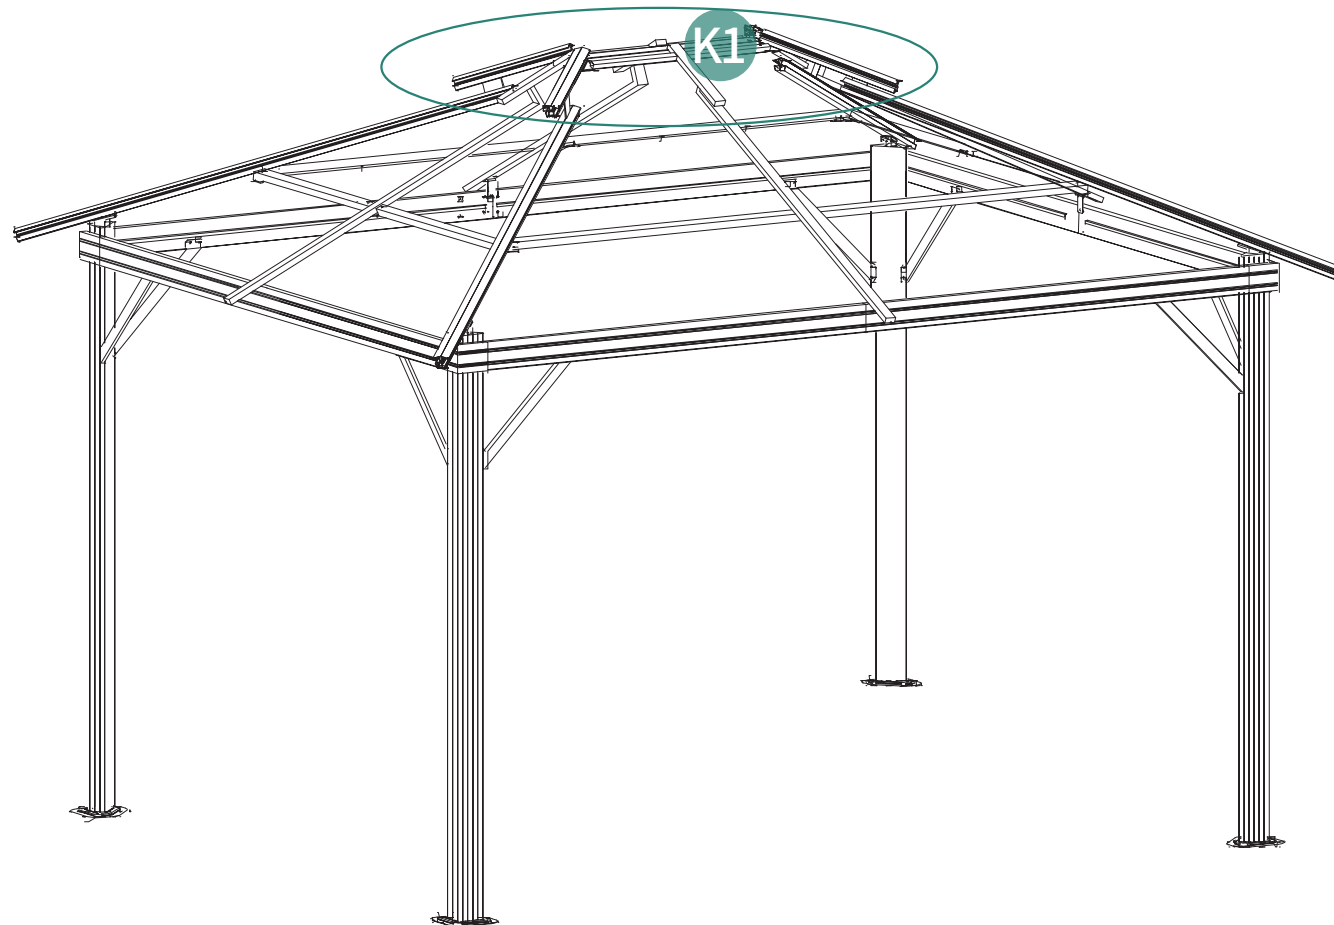
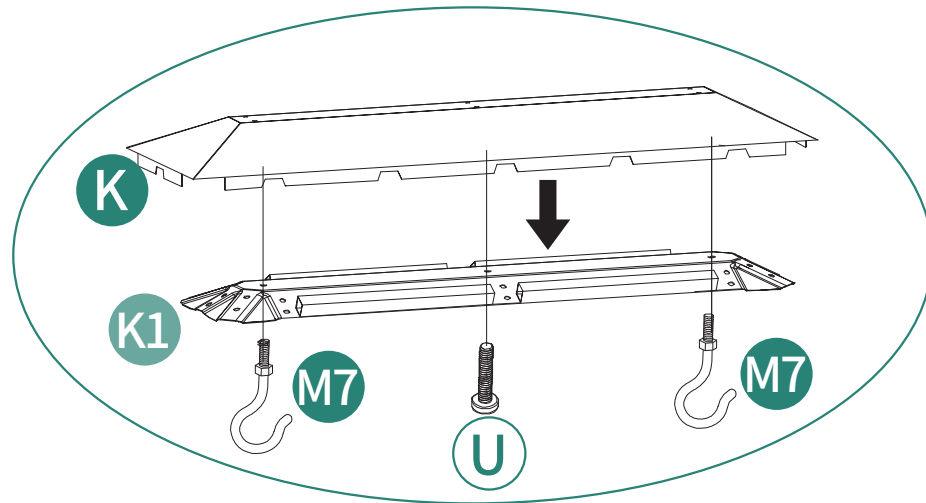
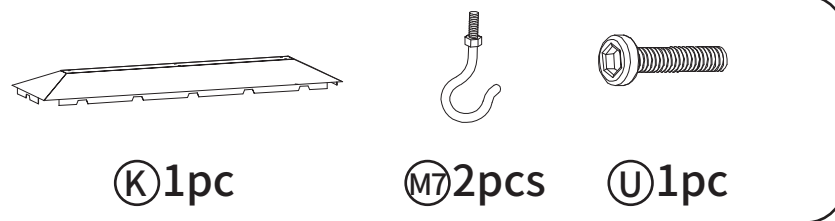


18

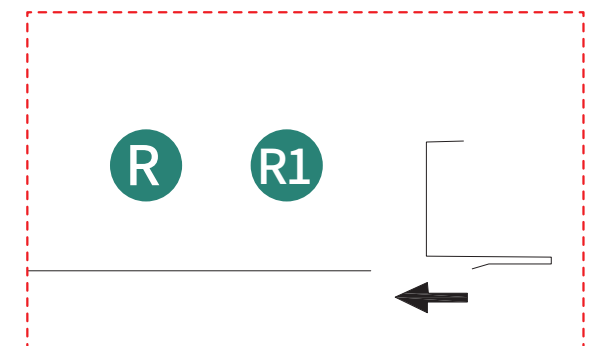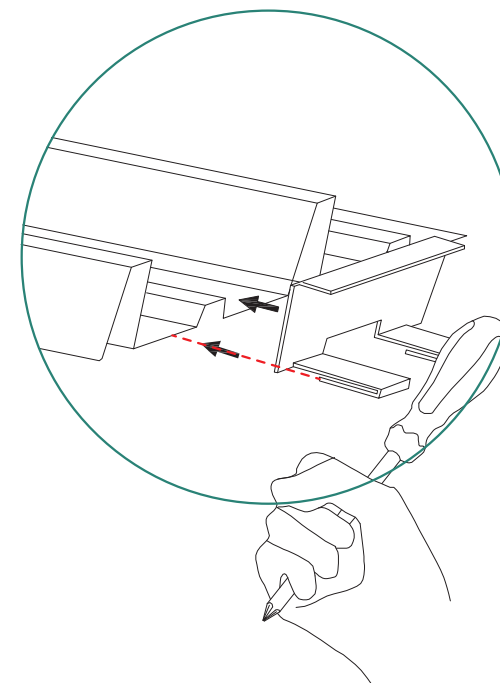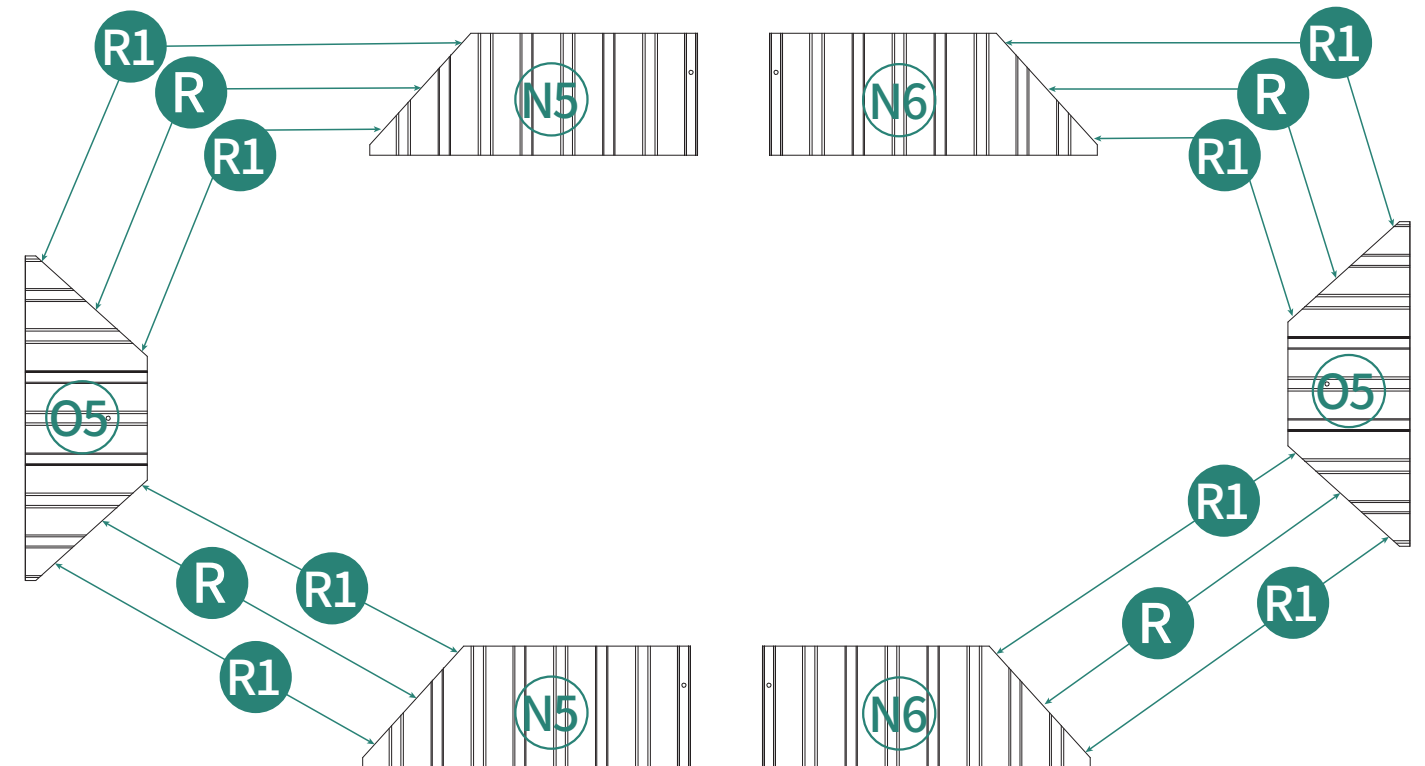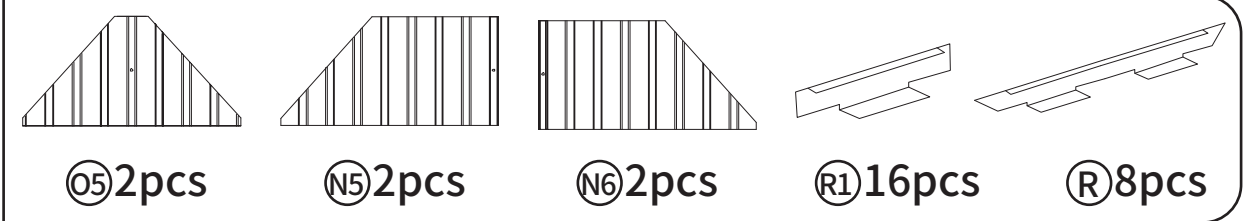



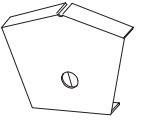

19

 4pcs

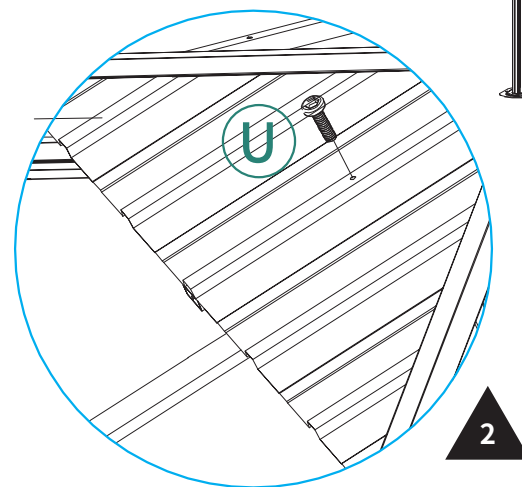
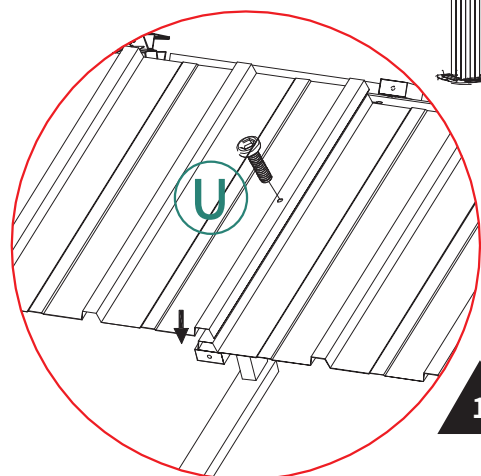
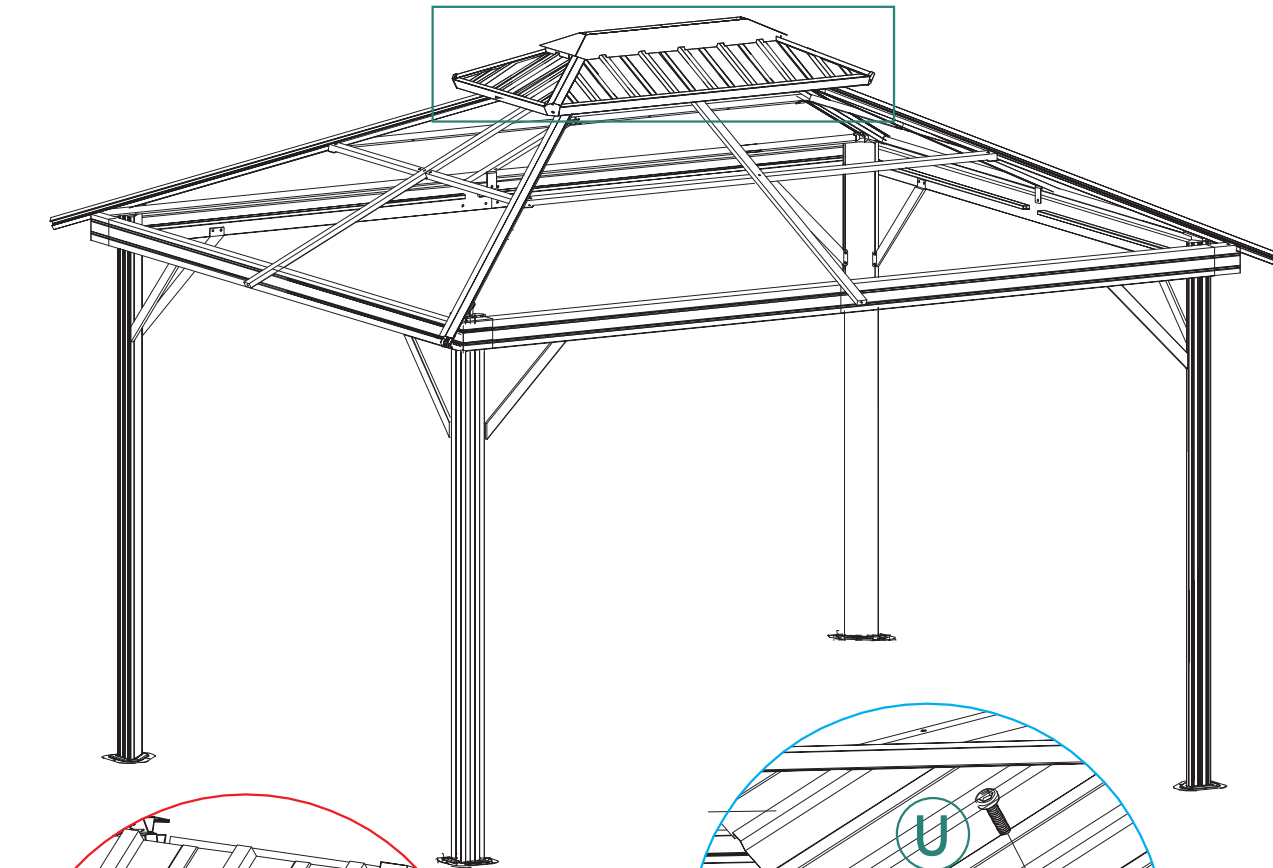
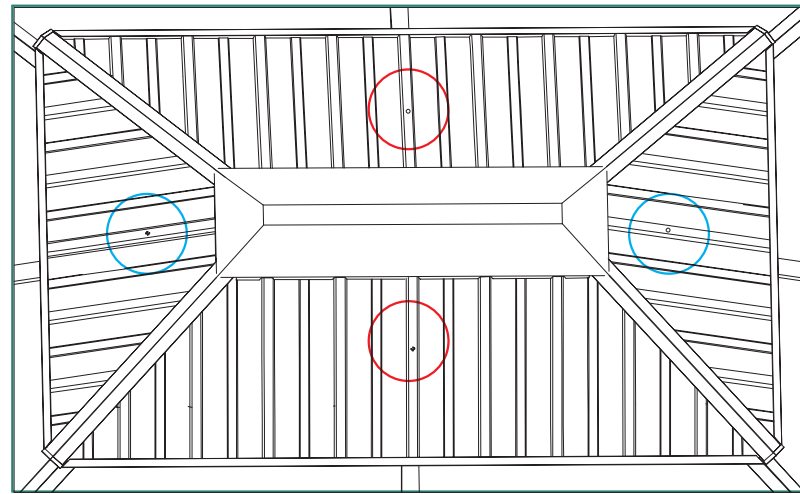


25

20


 2pcs  2pcs  4pcs  8pcs

Do not tighten the screw V before completing step 20.

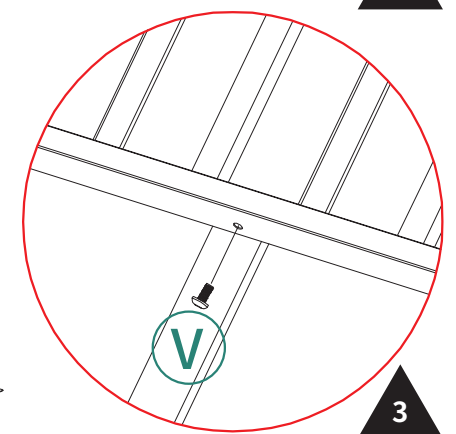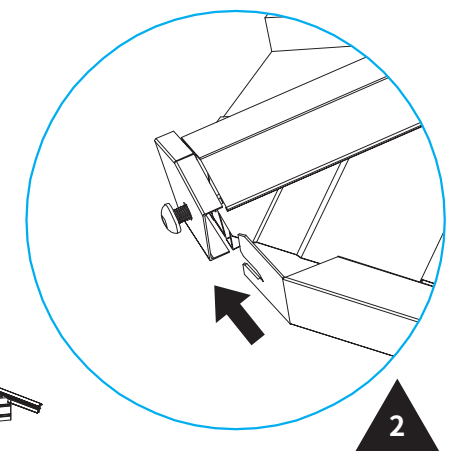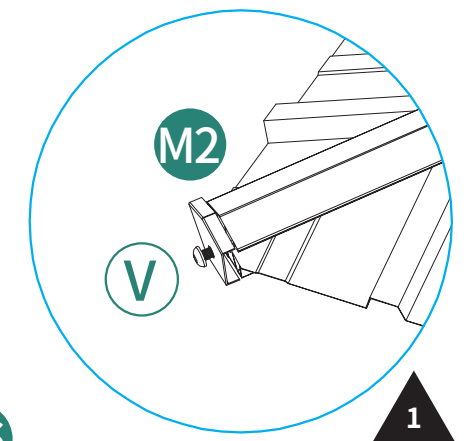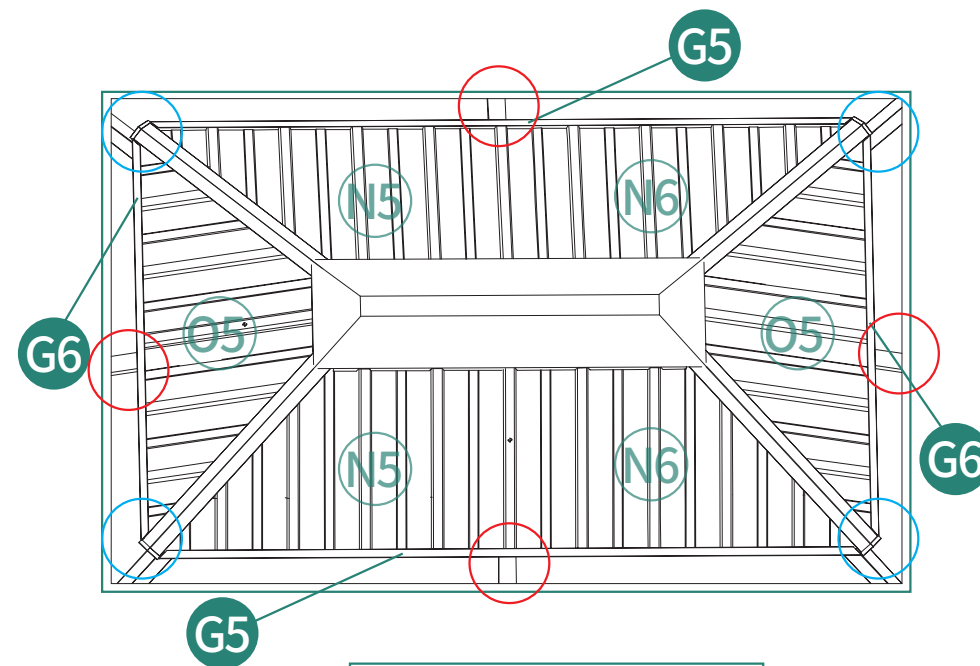


26

21

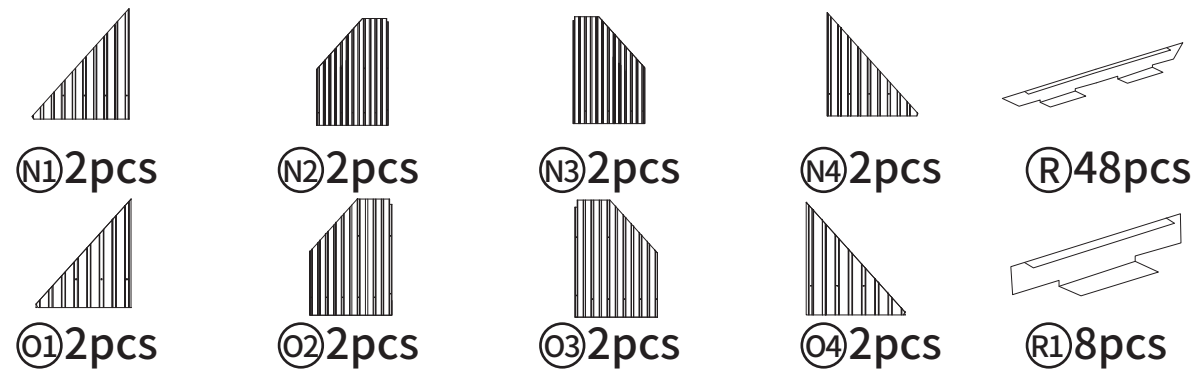


Refer to step 18 when assembling parts R and R1.

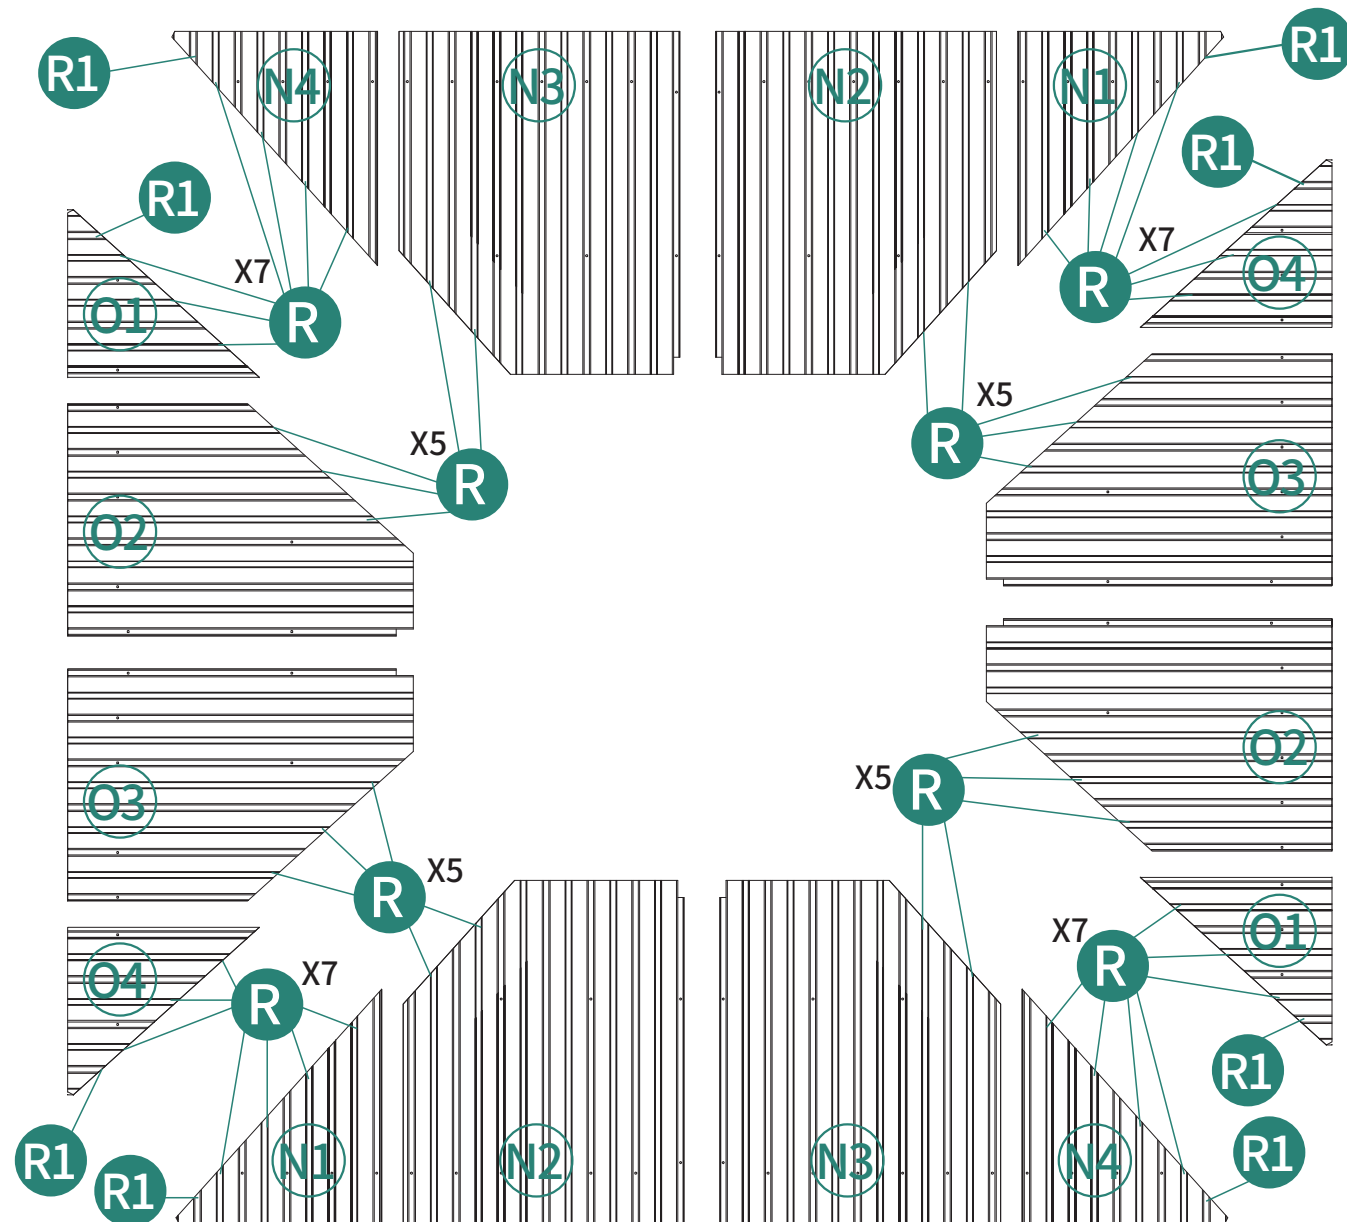


22

X2

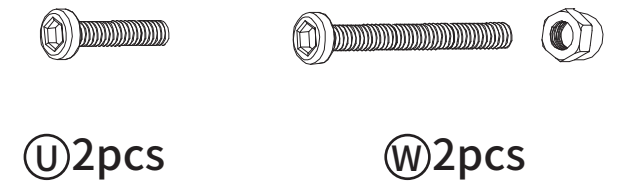


Do not tighten the screws before completing step 22. After step 22 and screws are tightened, install part W's nut.

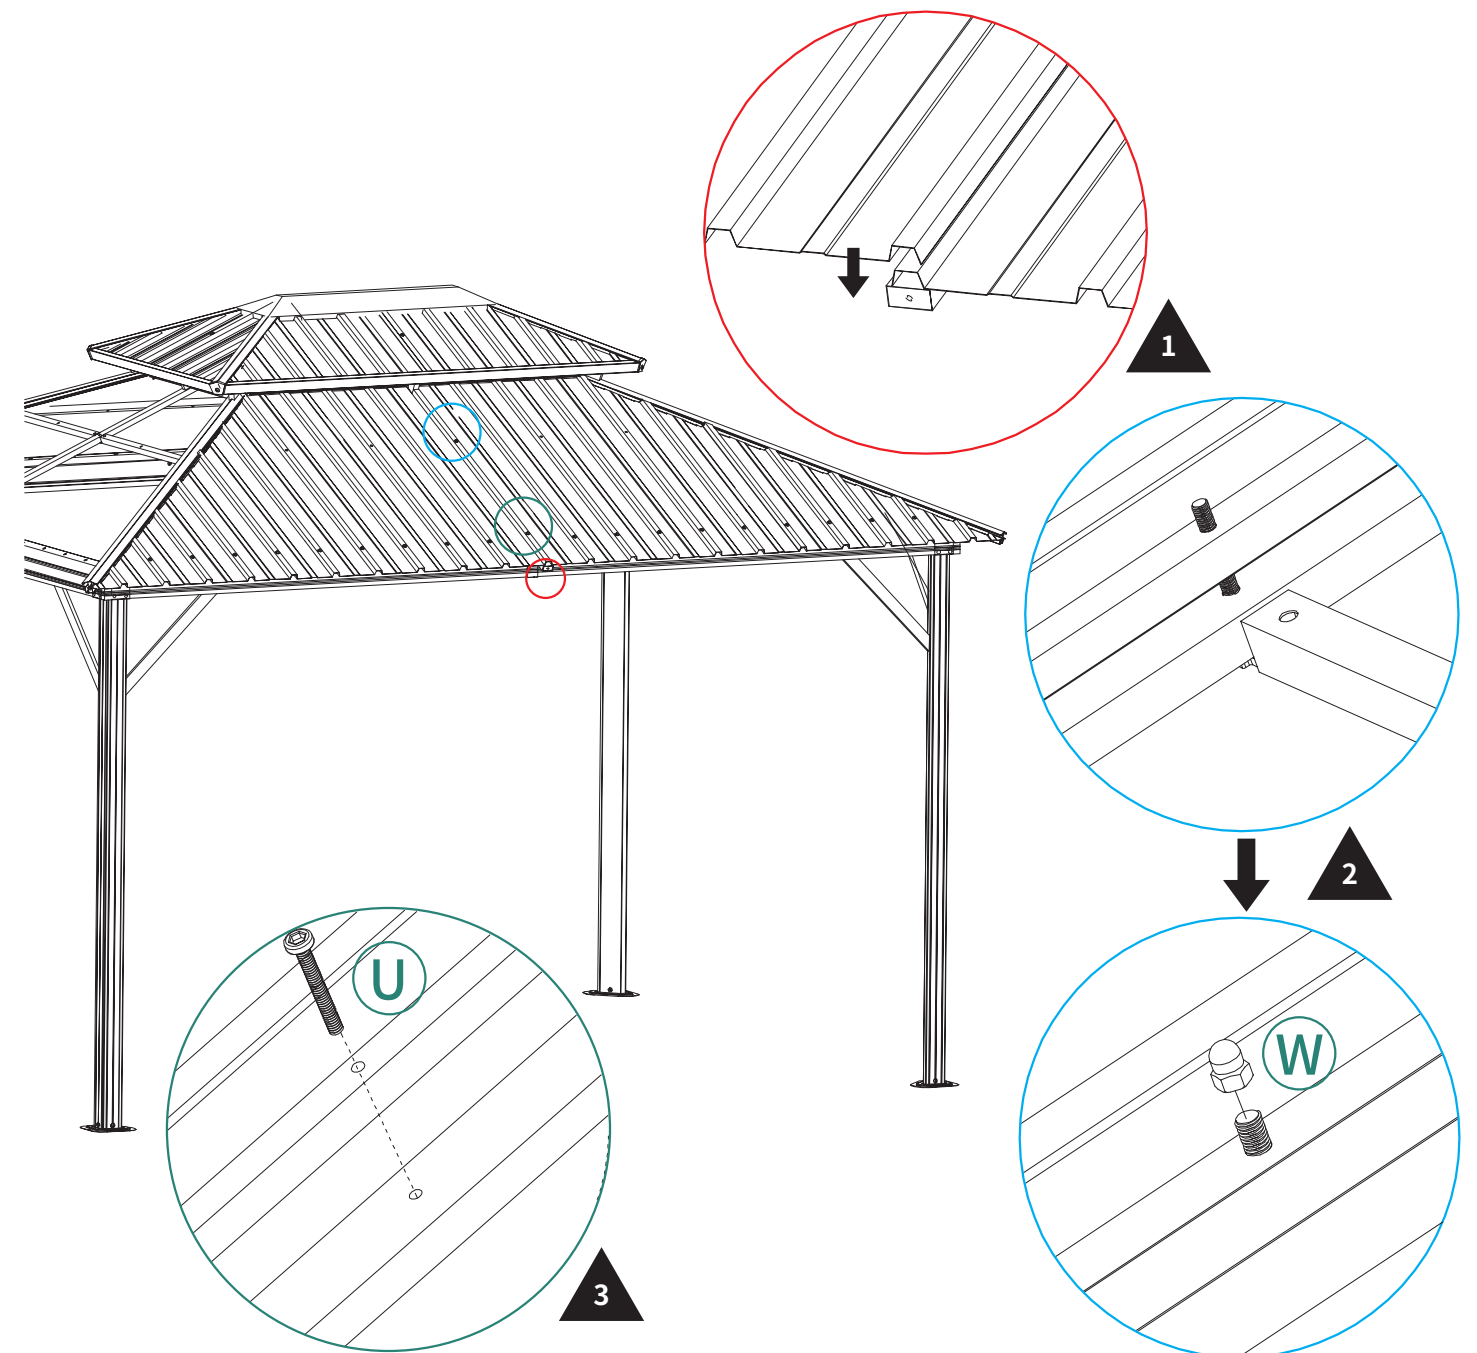

23

X2



Ⓜ5 44pcs




Ⓢ 8pcs




Ⓣ 36pcs

Do not tighten the screws before completing step 23.

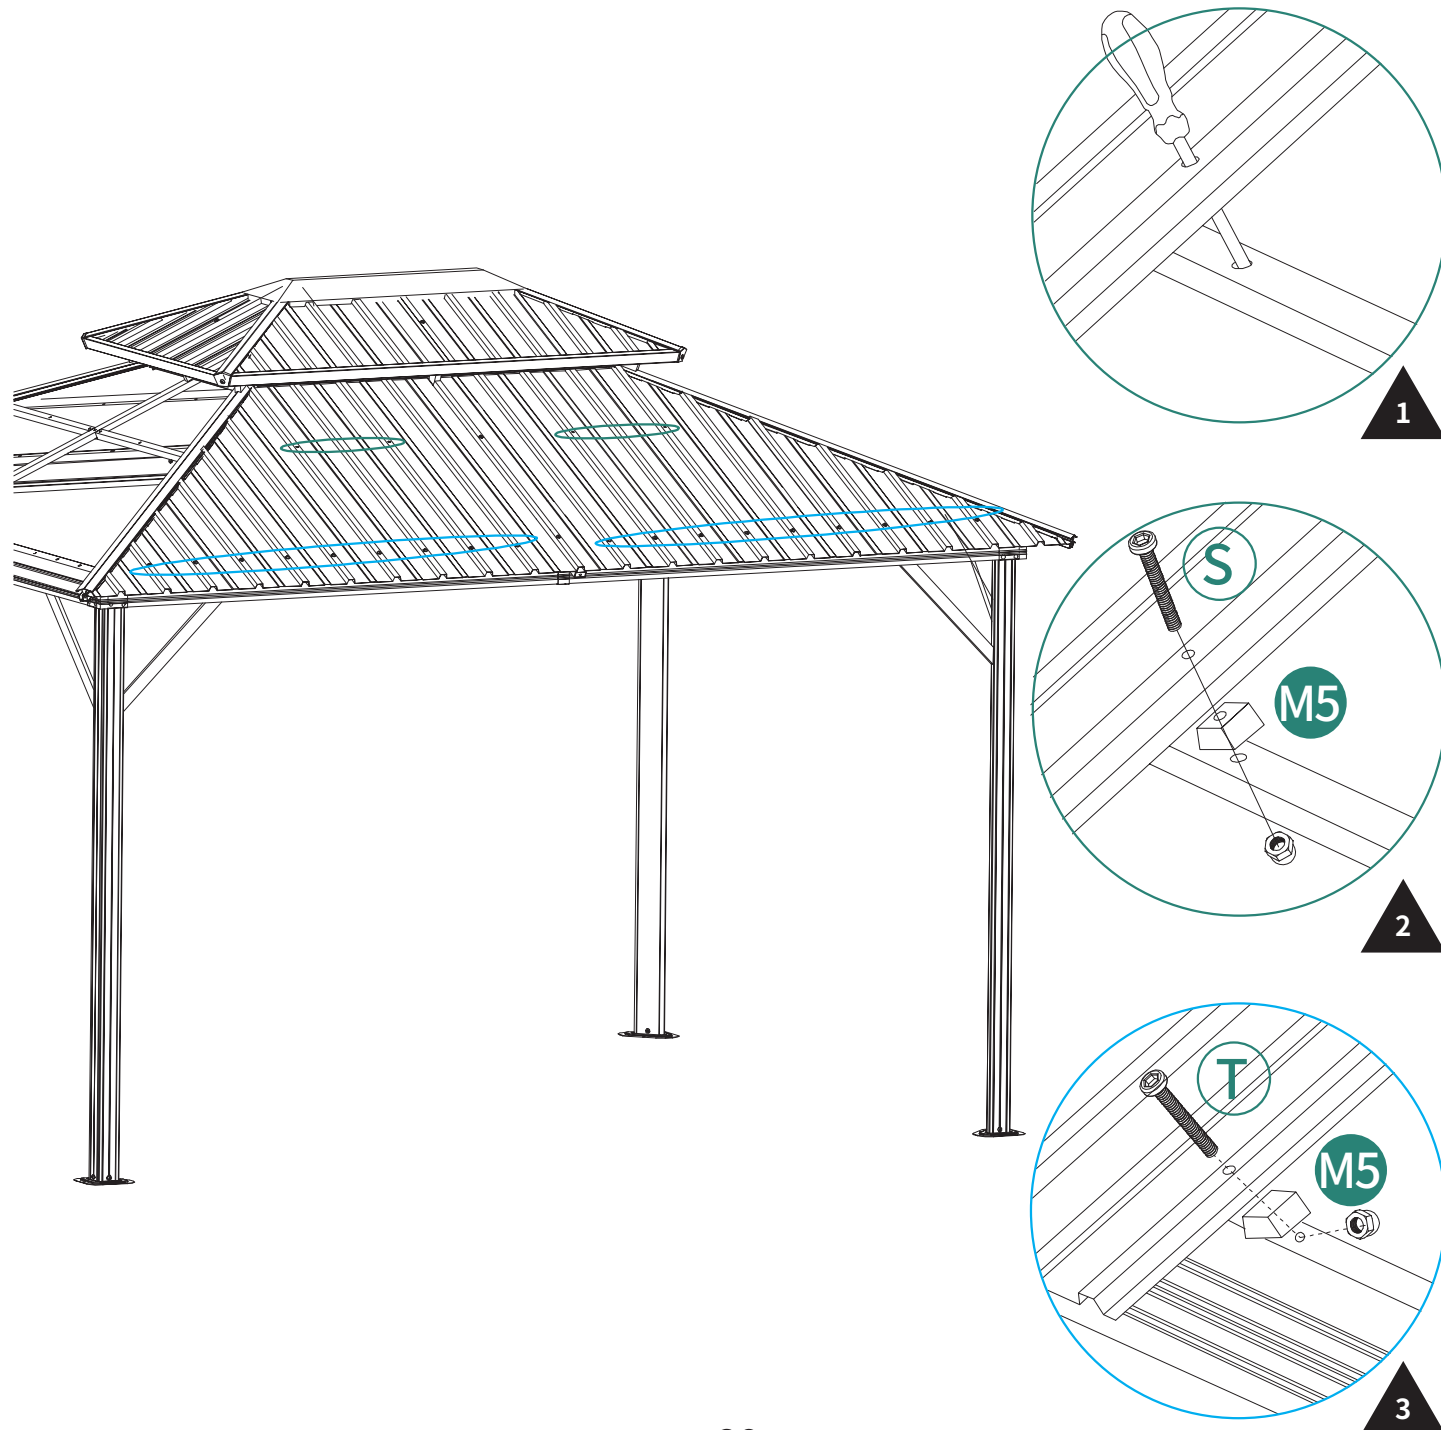


24

X2




Ⓤ 2pcs




Ⓦ 2pcs

Do not tighten the screws before completing step 24. After step 24 and screws are tightened, install part W's nut.

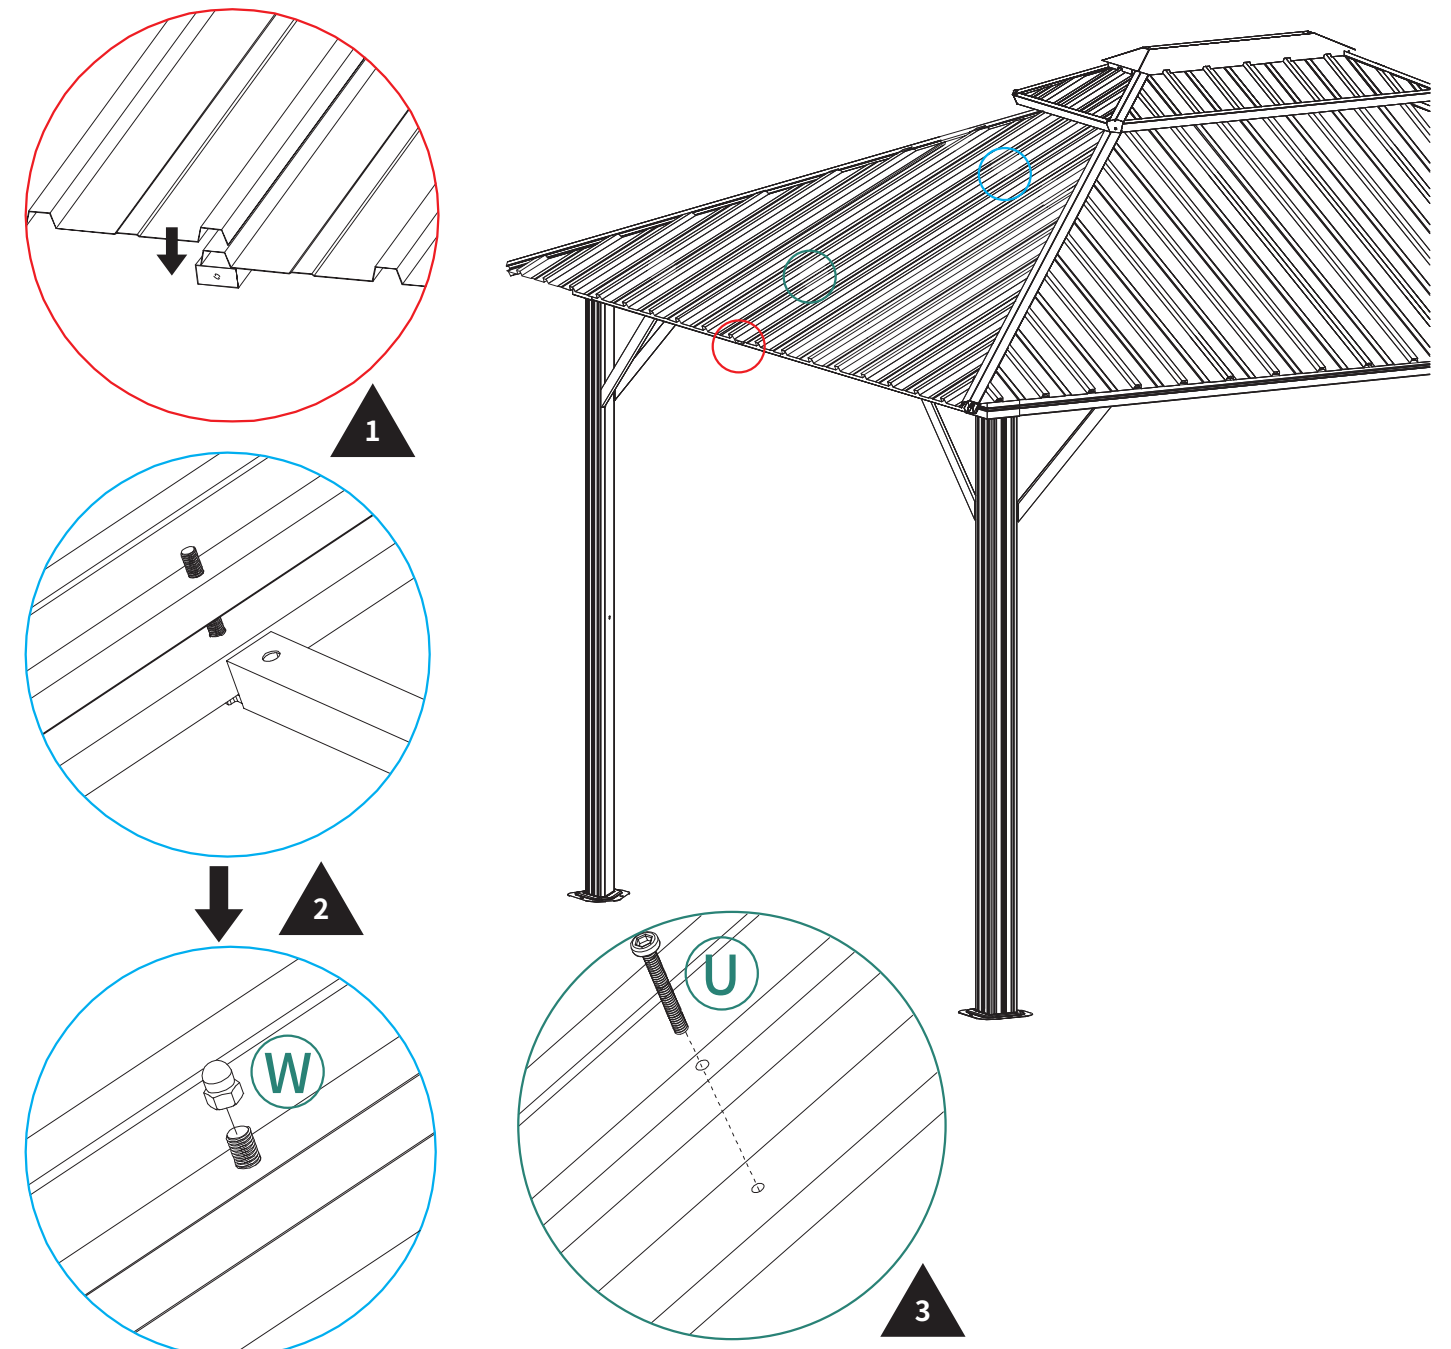

25
X2



Ⓜ5 32pcs




Ⓢ 4pcs




Ⓣ 28pcs


Do not tighten the screws before completing step 25.

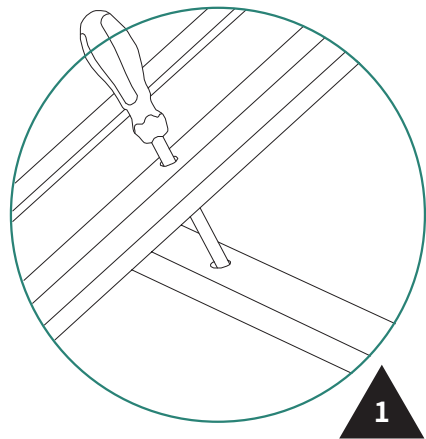

1

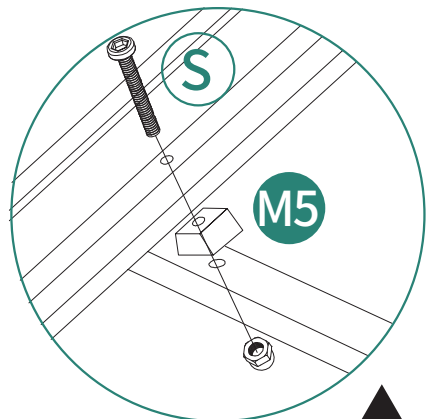

2

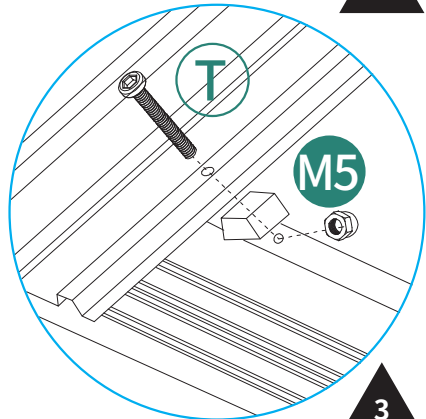


3




26



ⓖ7 2pcs




ⓖ8 2pcs




Ⓤ1 4pcs


Do not tighten the screw U1 before completing step 28.
It's view from the bottom inside gazebo.

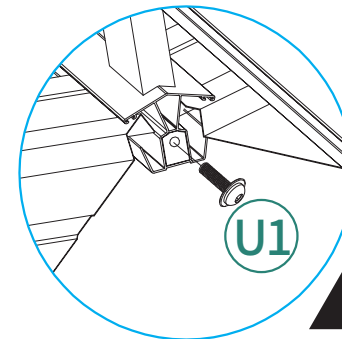


1

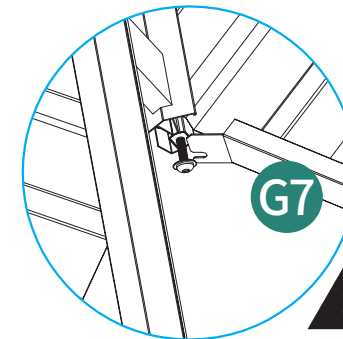

2




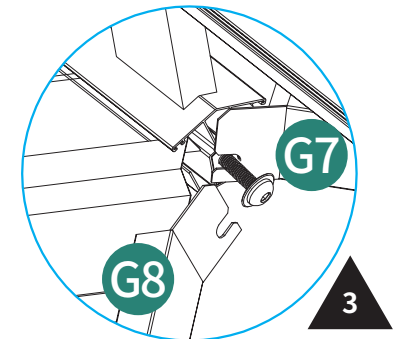


3



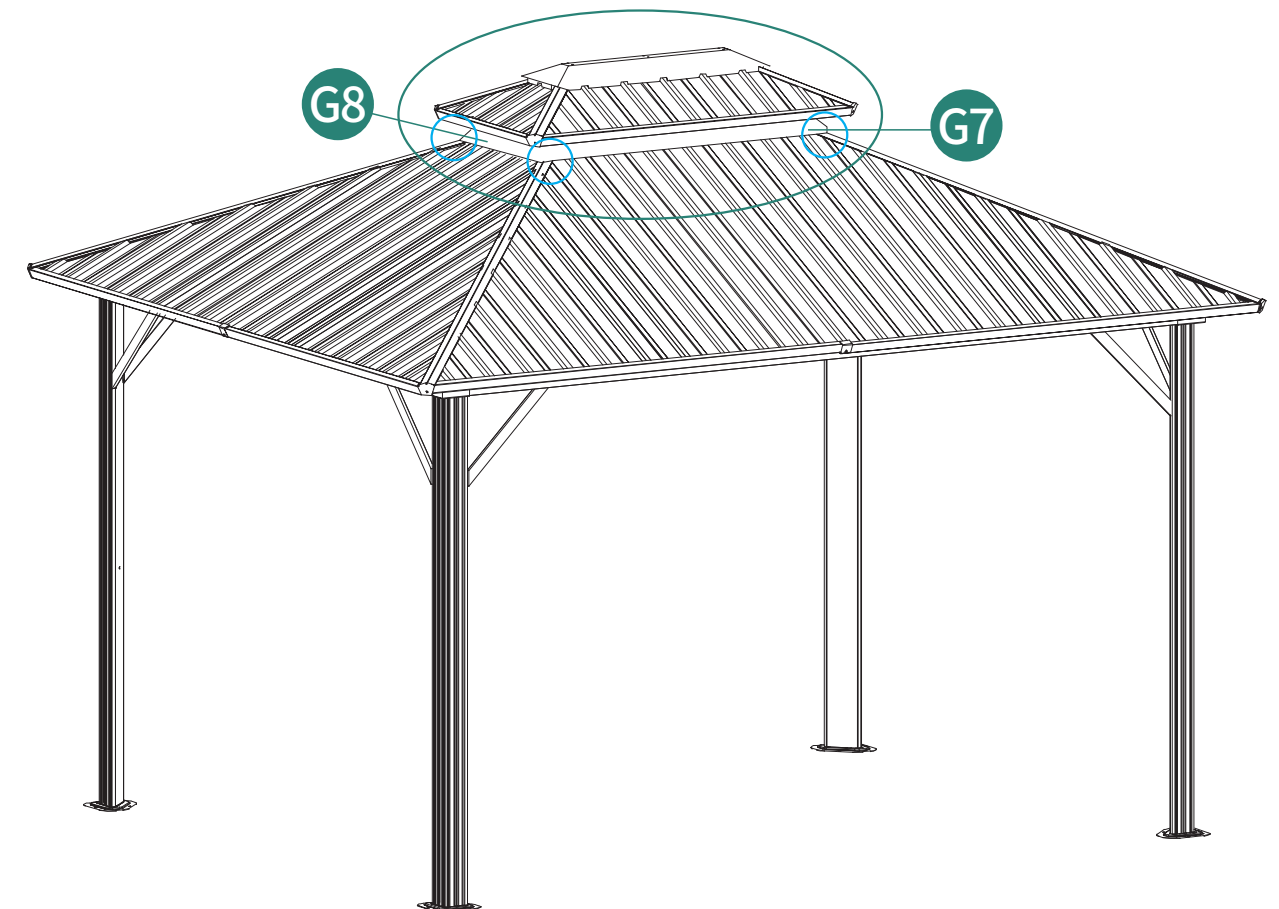





Do not tighten the screw V before completing step 28.
It's view from the bottom inside gazebo.

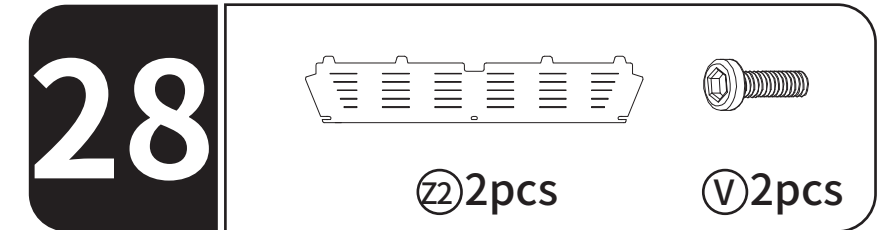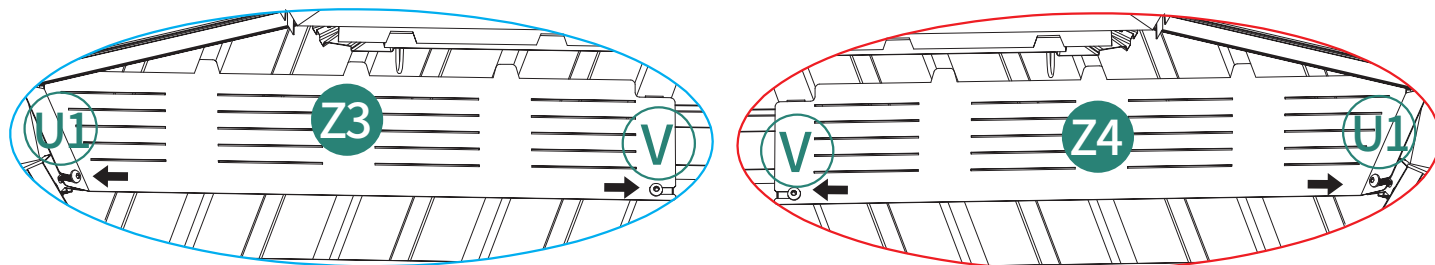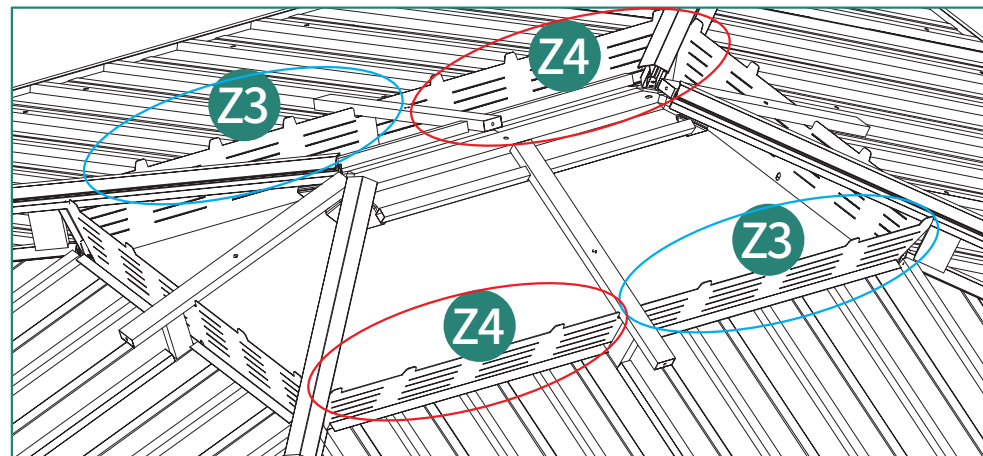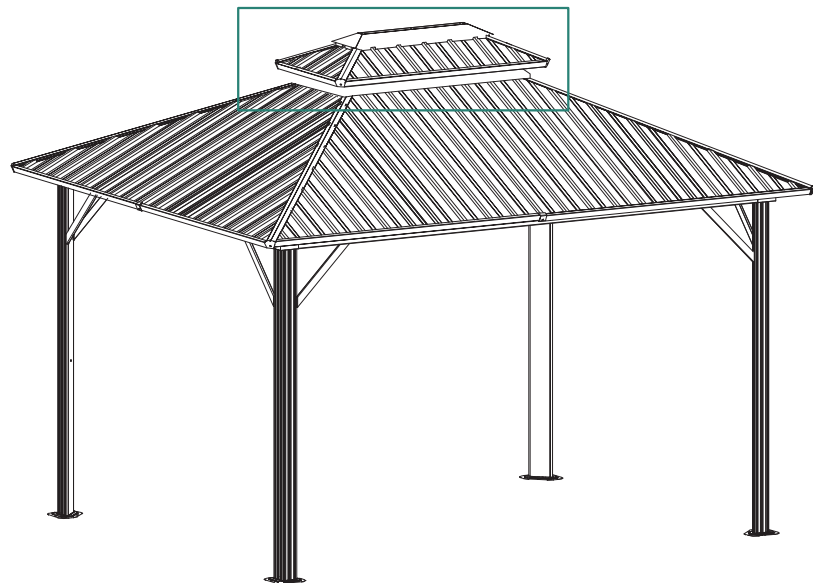


Tighten the screw V after completing Z2.
It's view from the bottom inside gazebo.

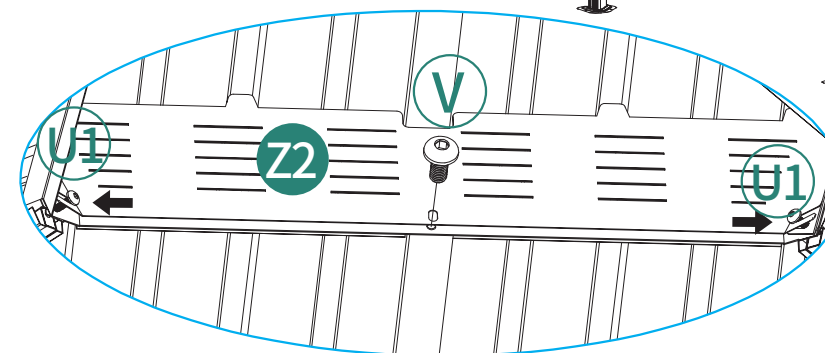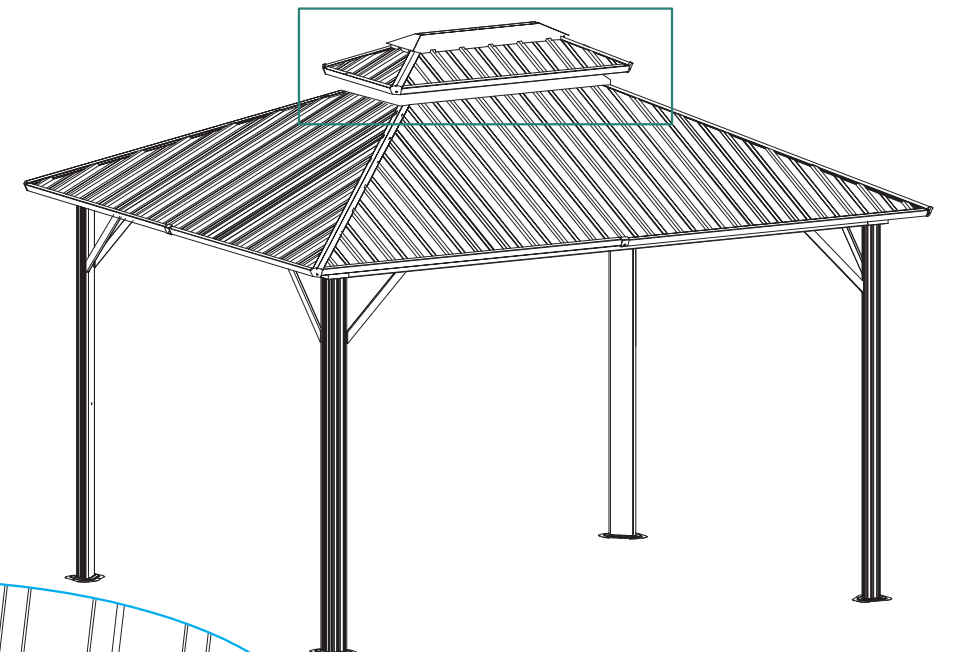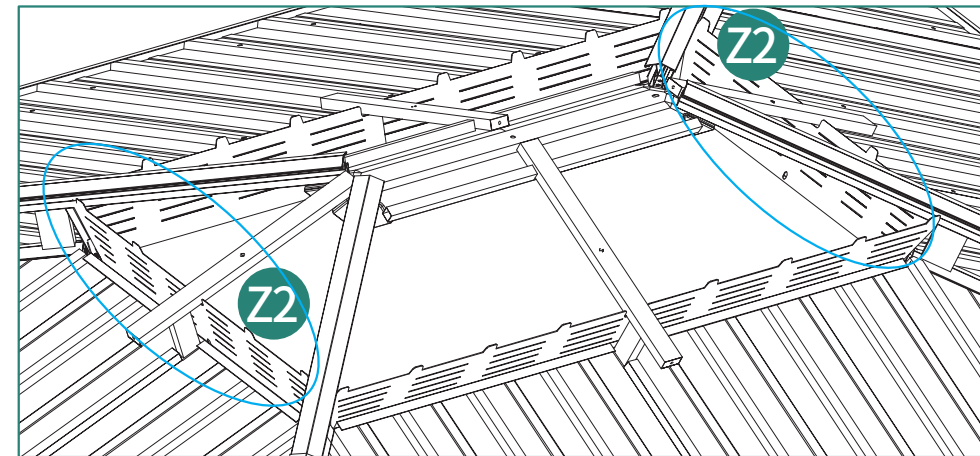

29

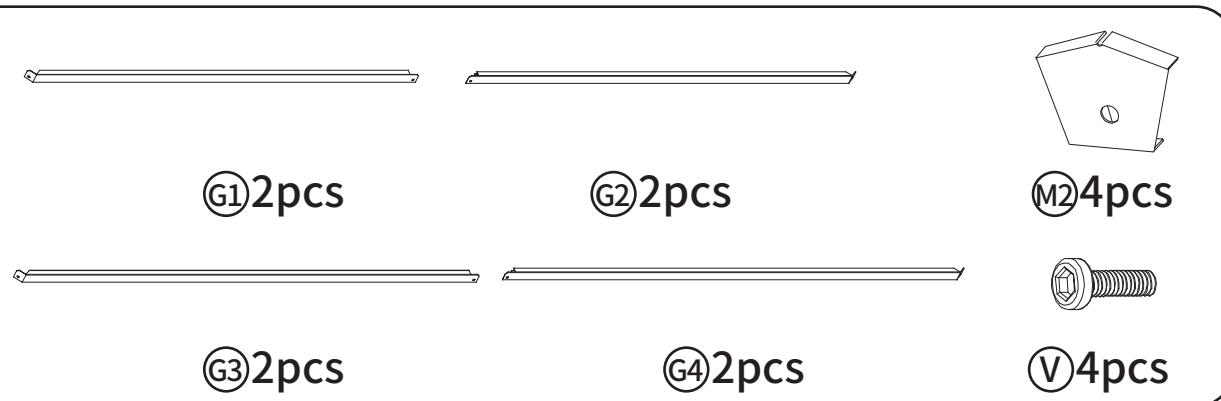


Do not tighten the screw V before completing step 30.

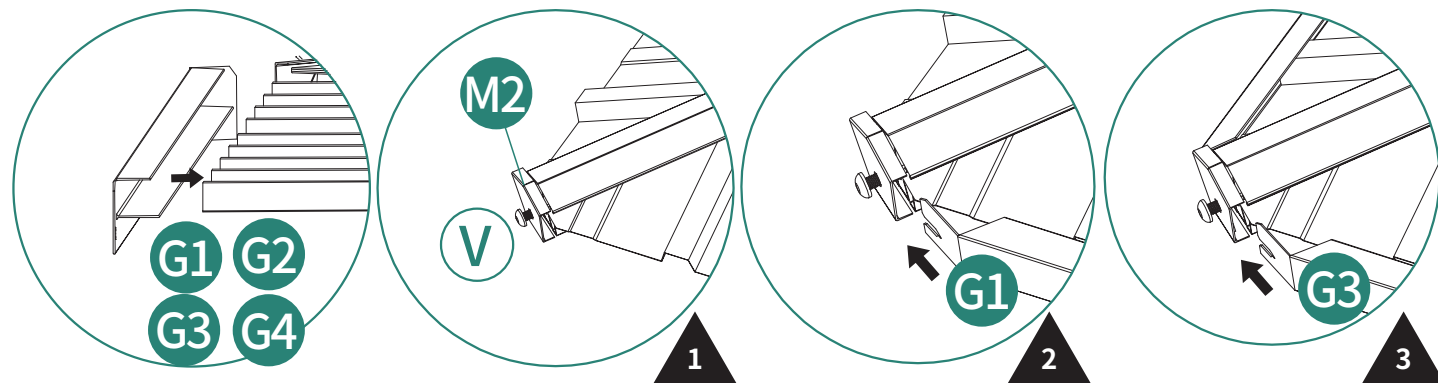


35

30

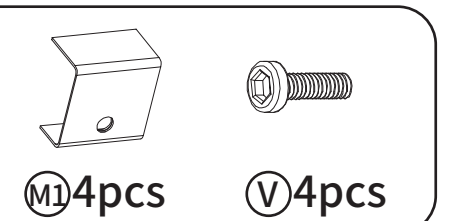


Do not tighten the screw V before completing step 30.

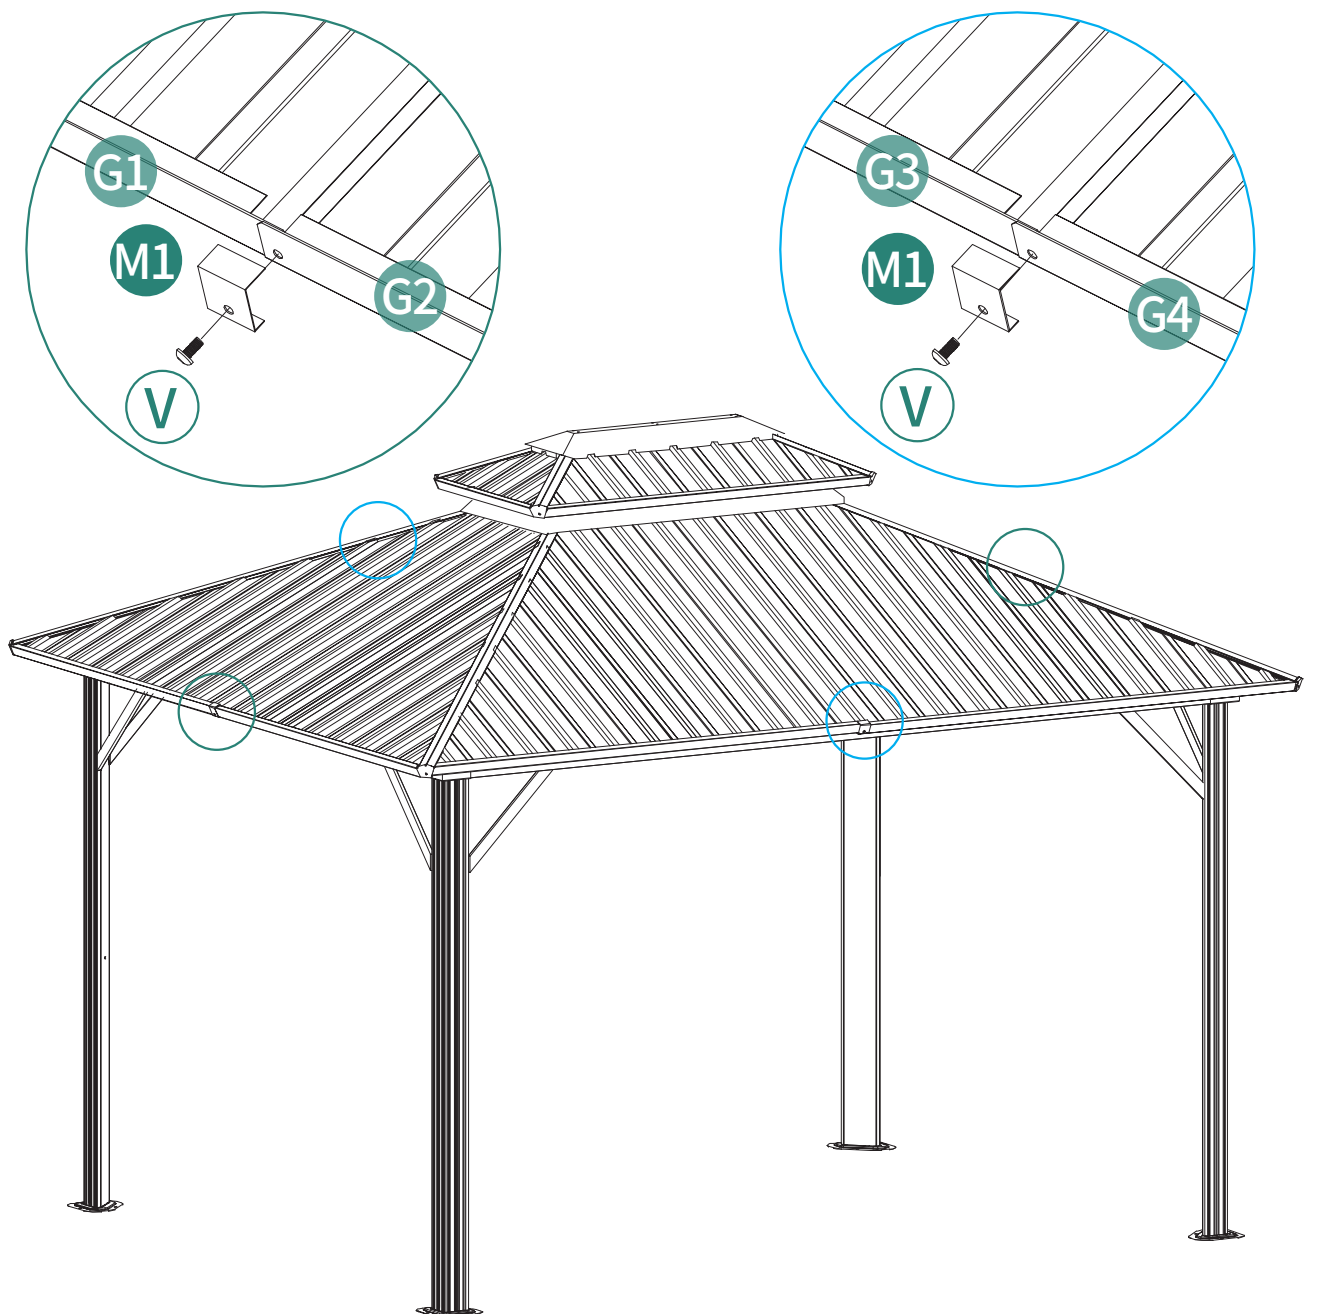

36


31

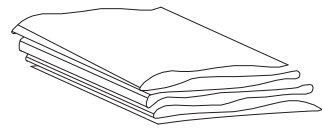

Curtain


1pc

Untie and unzip the curtains, then divide it into 4 parts.

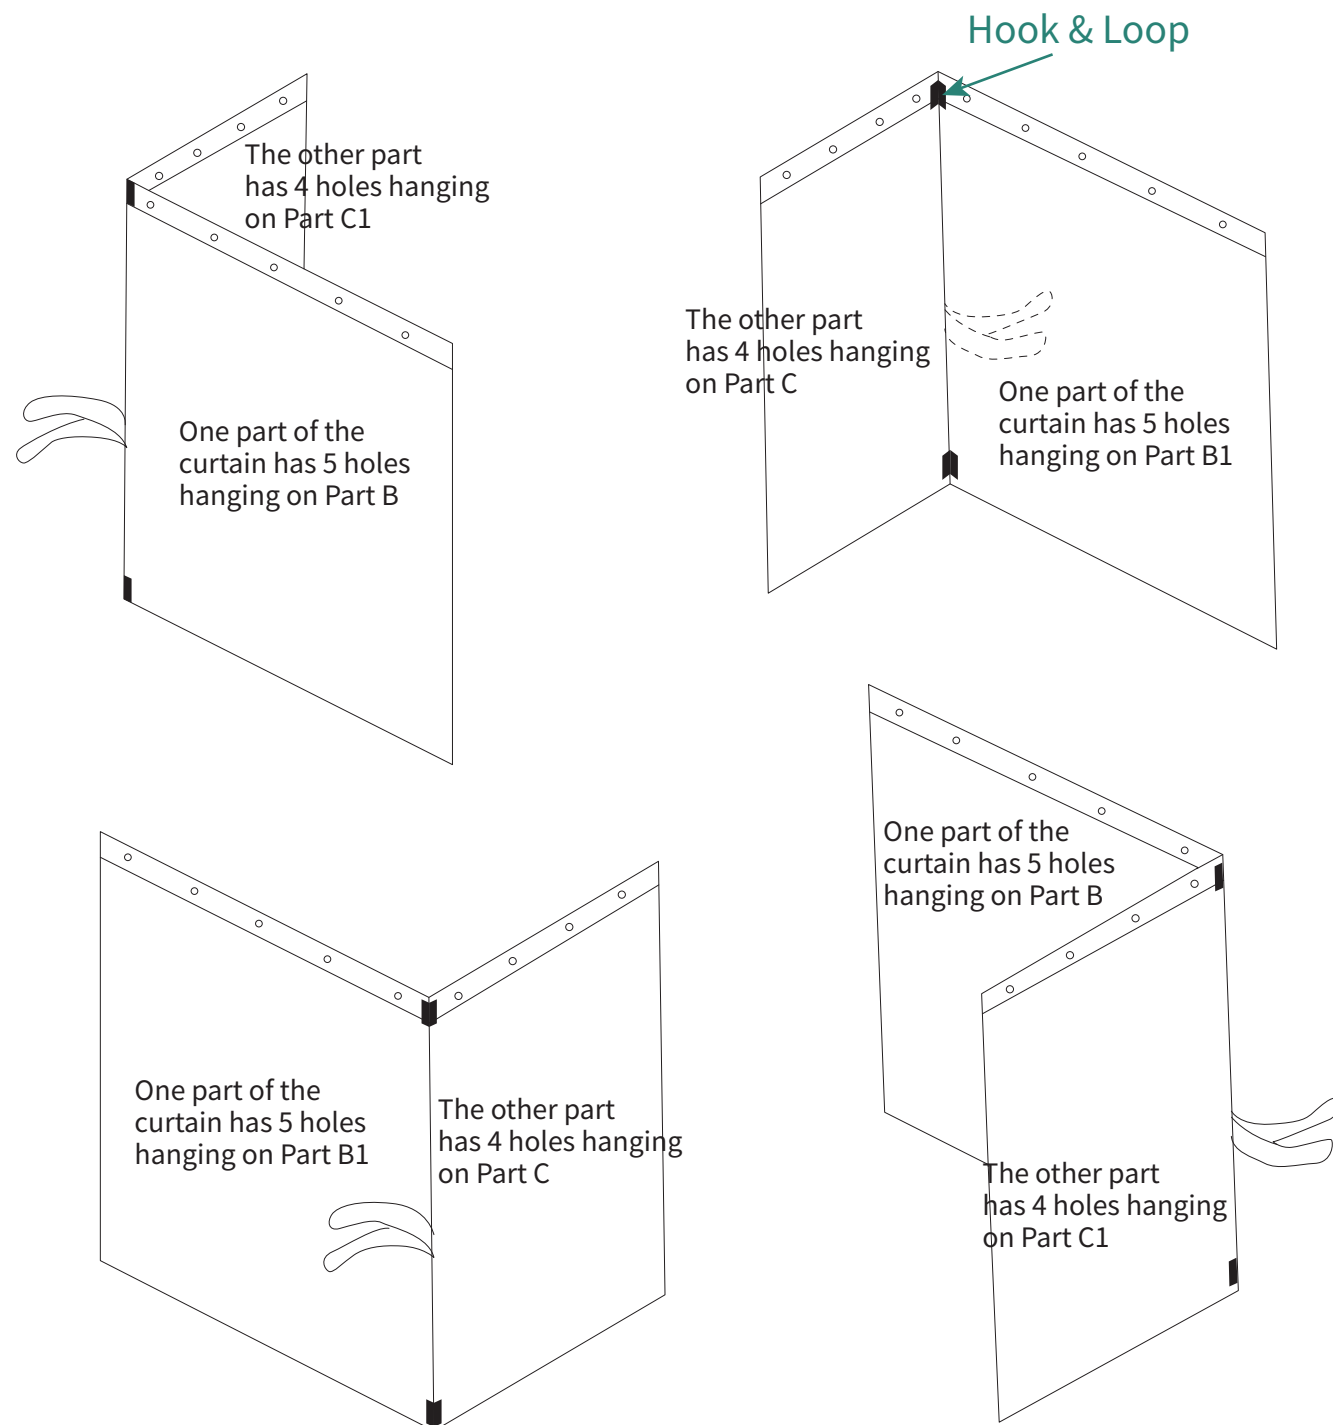


37


32

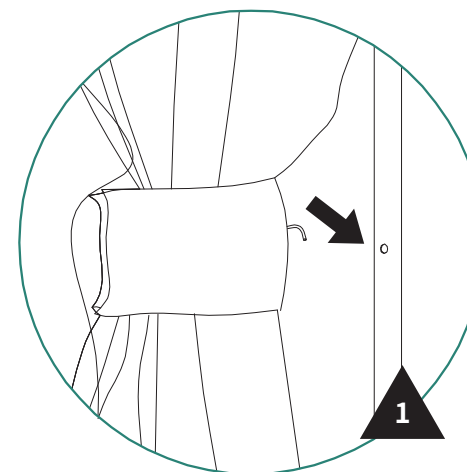

Hang the hook attached to the curtain on Part A

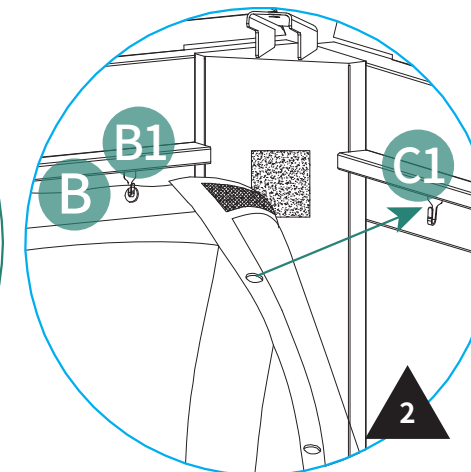


Attach the curtain's hook & loop to part A and attach tie-back after completing installation

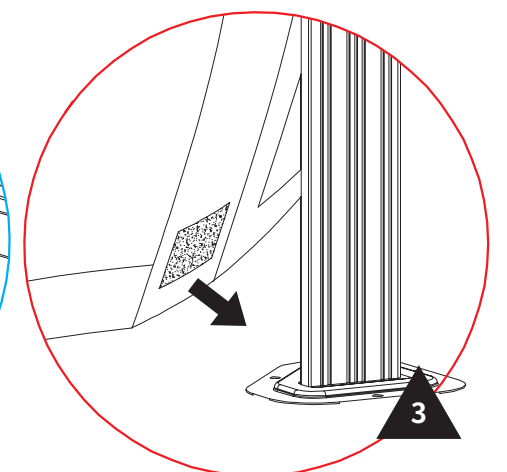


38

33



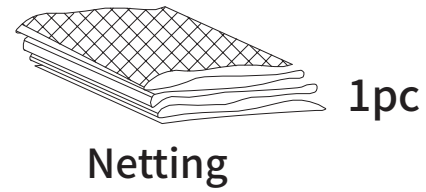


Untie and unzip the netting, then divide it into 4 parts.

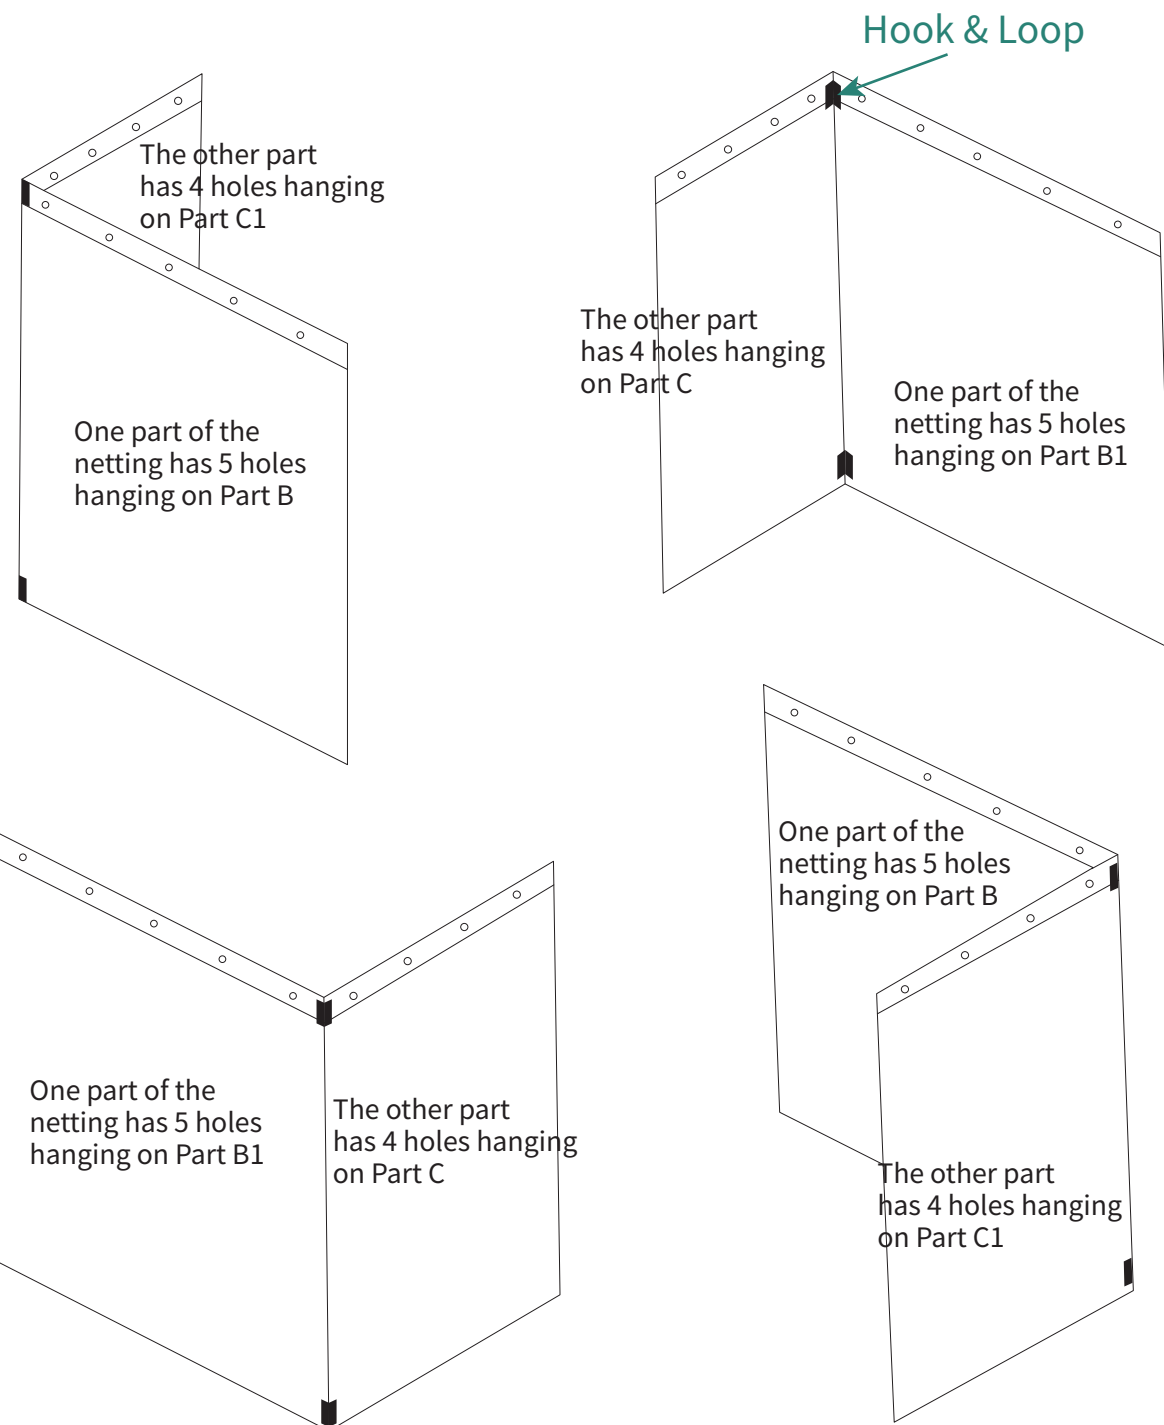

39

34

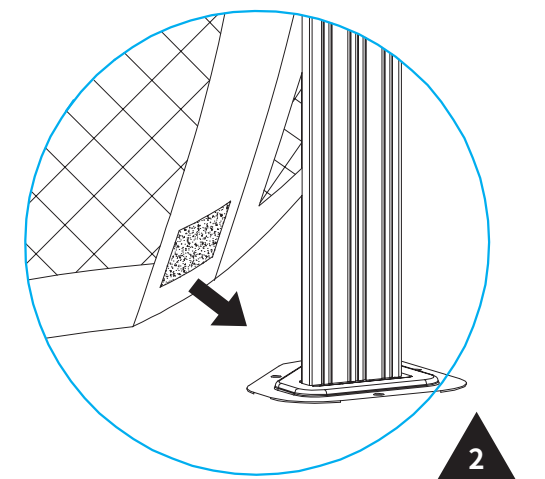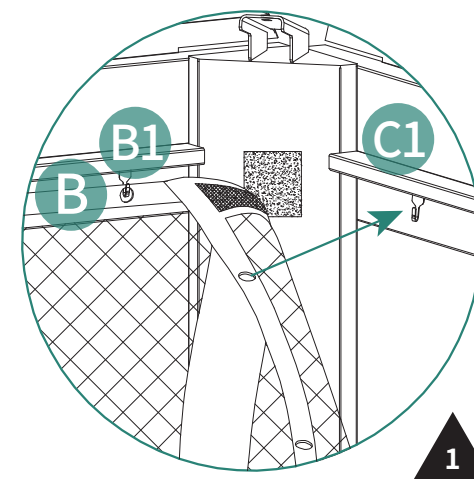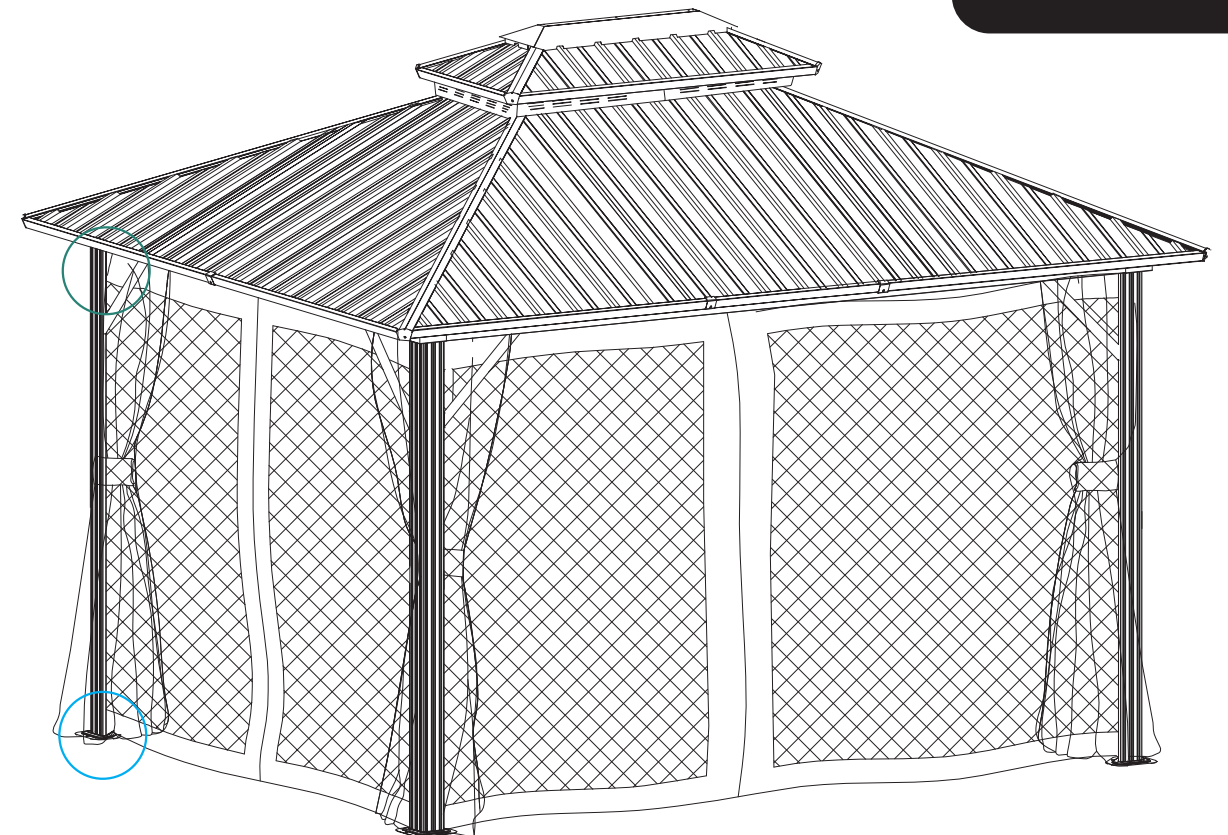

Attach the netting's hook & loop to the curtain after completing installation.


40

35




12pcs

Tent peg

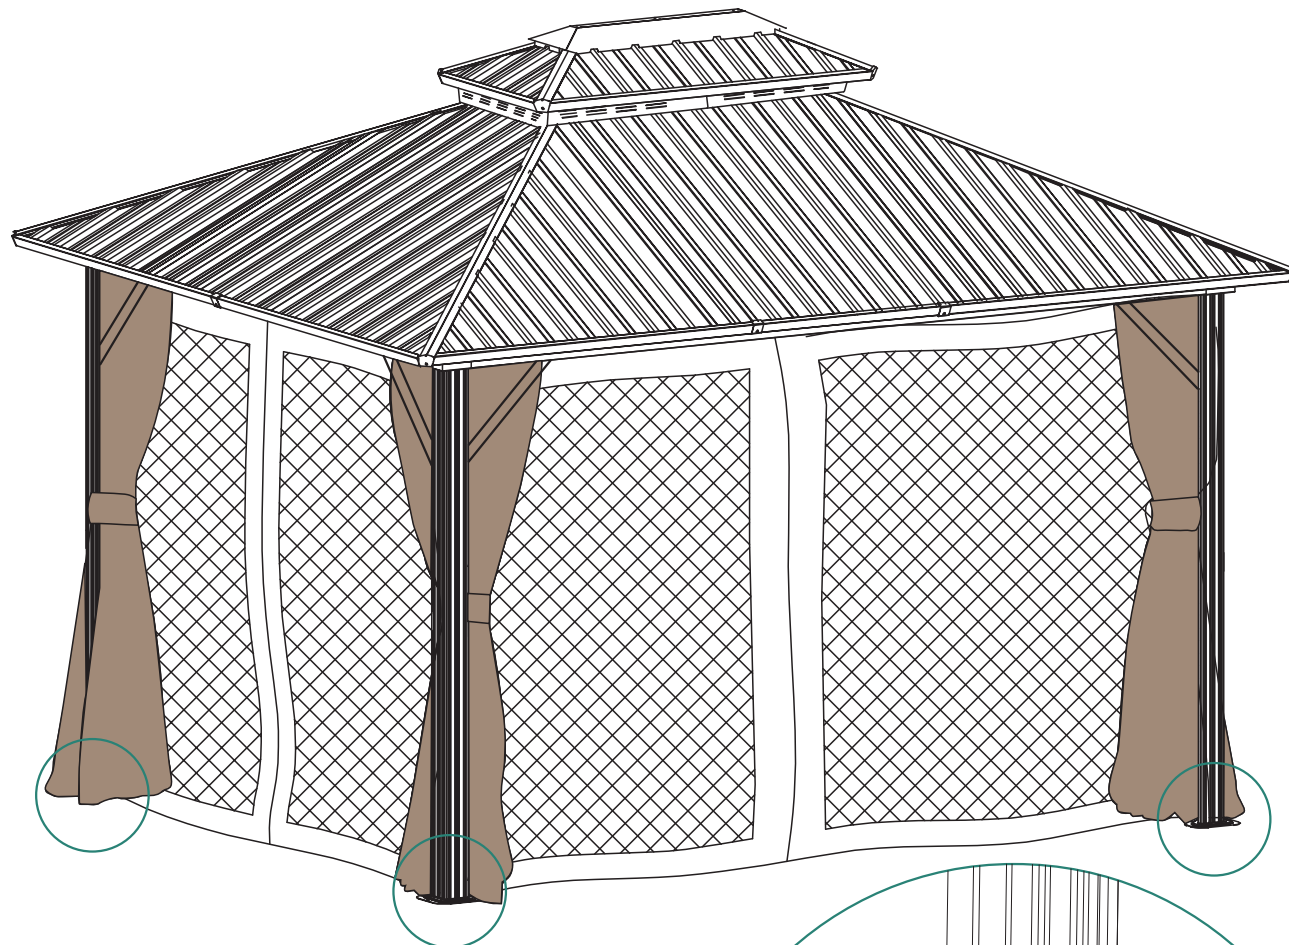


Firmly fixed to the ground

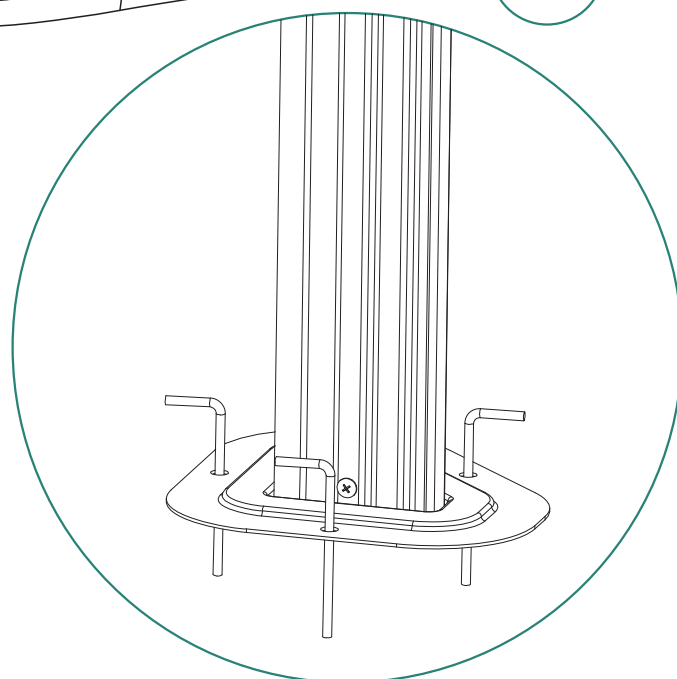

41

36

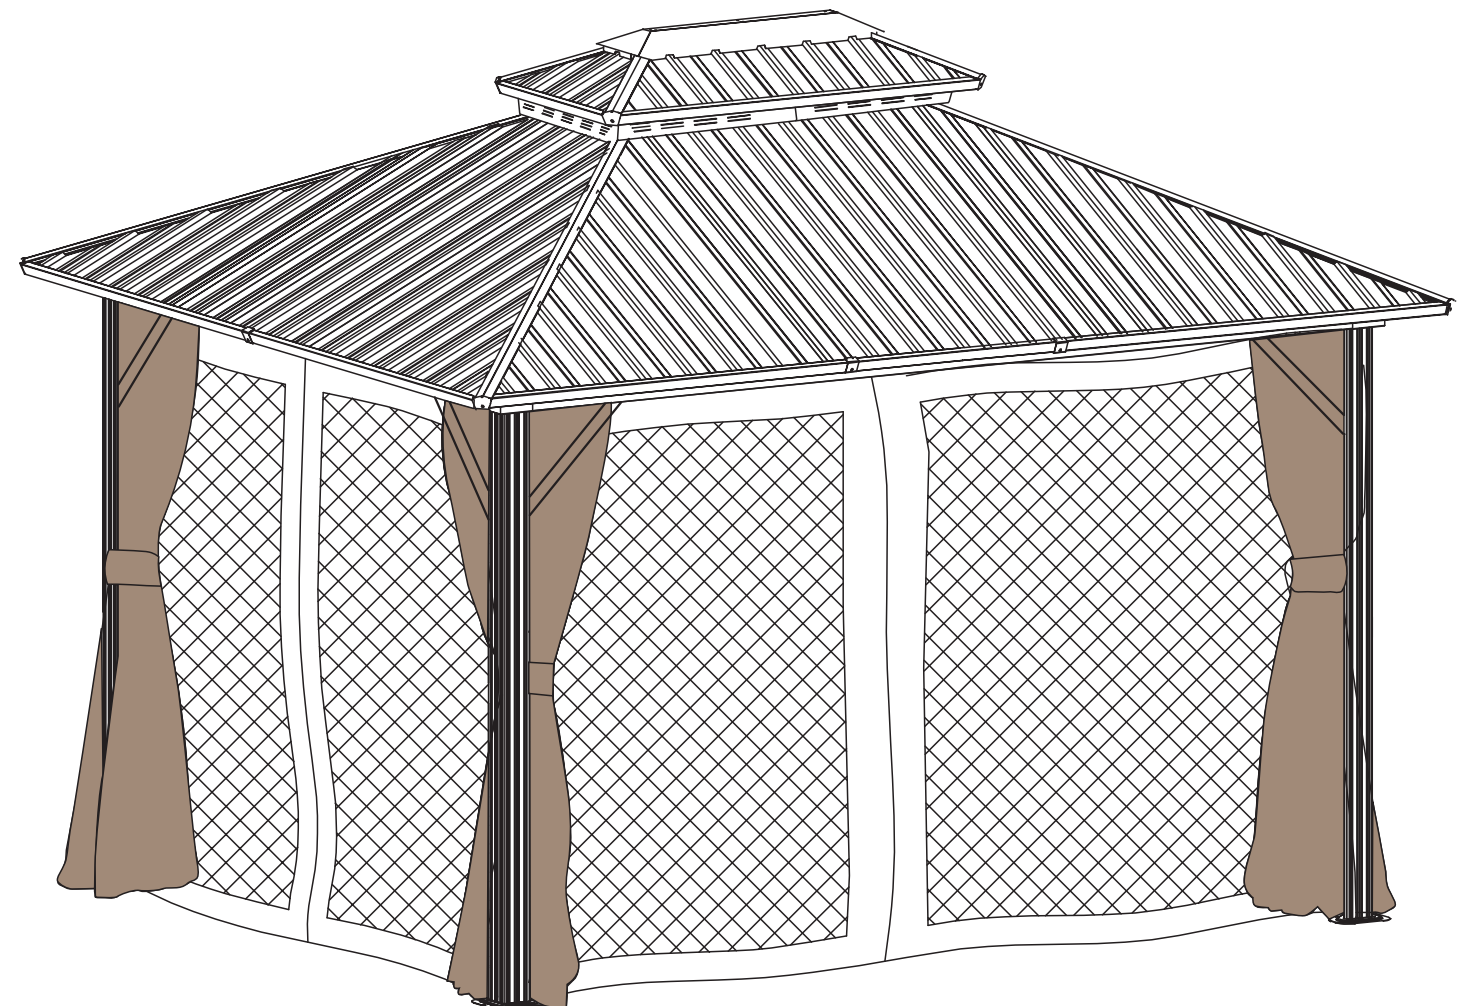

Installation Completed

42