


YSS-V 1

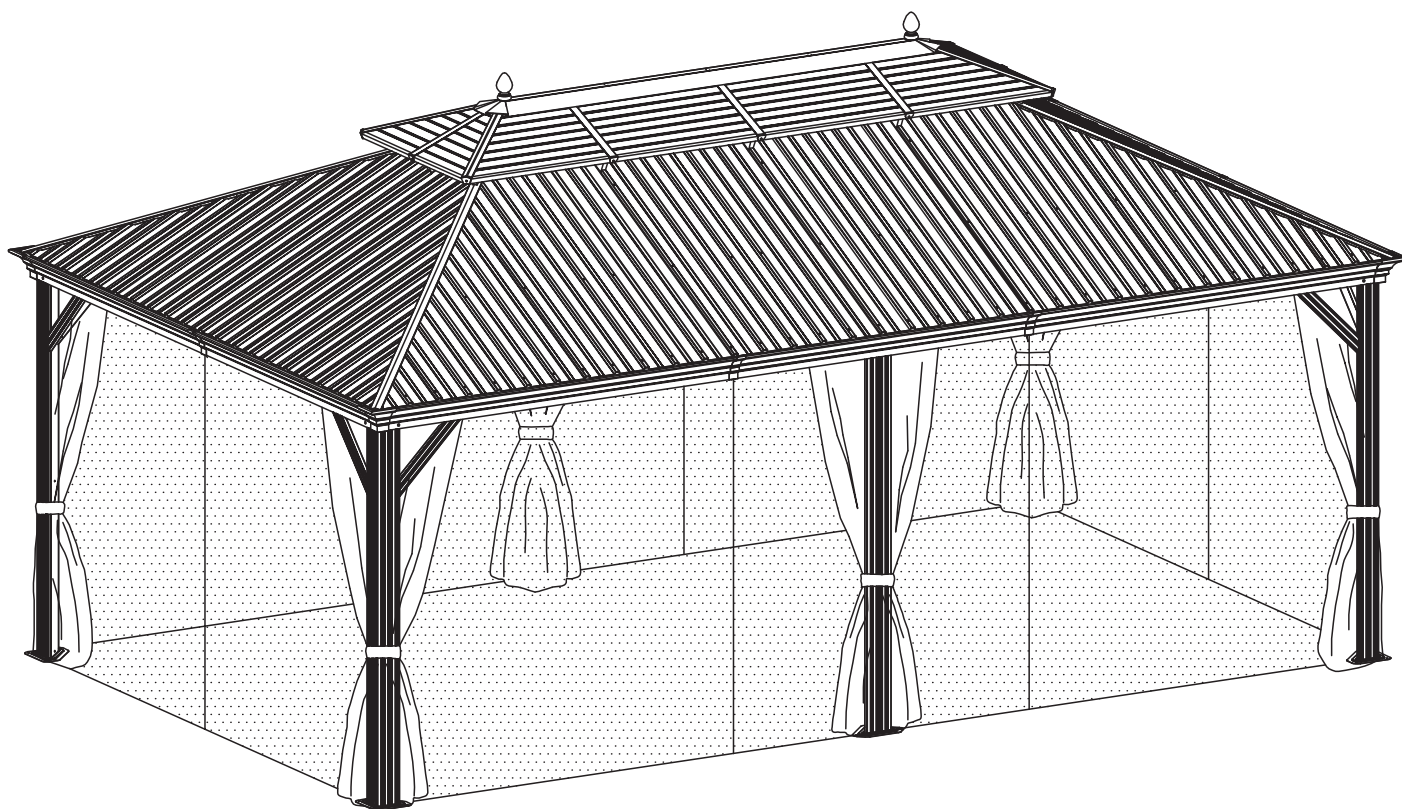












FTPLCG-0060 FTPLCG-0061
FTPLCG-0062 FTPLCG-0063
FTPLCG-0064 FTPLCG-0065
FTPLCG-0066 FTPLCG-0067





























12X20 FT HARDTOP GAZEBO












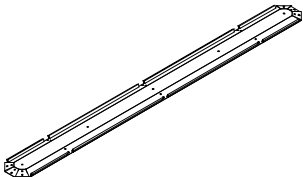
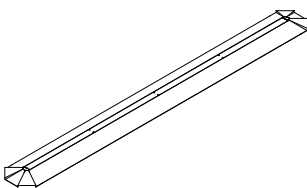


















1. Two or more people are required for assembly.
2. A ladder and electric drill may be necessary.
3. Do not erect the structure in heavy winds or inclement weather.
4. Do not leave up this unit for extended periods of time, as it is not a permanent structure or designed to withstand sustained wind or rain. It is a temporary, portable shelter that shields you from sunlight and rain. The screens also block flying insects.
5. Do not use candles, matches, or any open flames near the tent.
6. To better align the screws for practical situations, do not fully tighten screws initially.
7. Professional installation is highly recommended.






















Item no.	Reference Image	Qty.
A		X4
A1		X2
B		X2
B1		X2
B2		X2
B3		X2
E2		X2
C		X2
C1		X2
C2		X2
C3		X2
F3		X2
F4		X2

Item no.	Reference Image	Qty.
D		X2
D1		X2
D2		X2
D3		X2
D4		X2
D5		X2
E		X4
E1		X8
F		X4
F1		X4
F2		X4
G1		X2

Item no.	Reference Image	Qty.
G2		X2
G5		X2
G6		X2
G3		X2
G4		X2
R		X2
H		X4
H1		X4
H2		X3
J		X6
K		X4
K1		X6
L		X1
M		X1

Item no.	Reference Image	Qty.
N		X4
N3		X4
N4		X8
P		X6
Q1		X2
Q2		X2
Q3		X2
Q4		X2
R1		X2
R2		X2
R3		X2
G		X4
R4		X2
R5		X2
R6		X2

Item no.	Reference Image	Qty.
S1		X2
S2		X2
S3		X2
S4		X2
S		X4
T		4X+2X+6X
T1		4X+2X+1X
U		X152
V		X6
W		X4
W1		X8
Y		X156
Z		X64
Za		X2


Item no.	Reference Image	Qty.
Y1		X18
1	 M6X15mm	X331
2	  M6X23mm	18X+96X
3	 M5X12mm	X6
4	 ST4.8X12mm	X28
5		X3
6	  M6X42mm	X8
7	  M6X47mm	X36
8		X8
9	  M6X50mm	X6
10	    	X18
		X1
		X1

1

X4





Ⓐ 4pcs



ⓐ 4pcs



① 12pcs

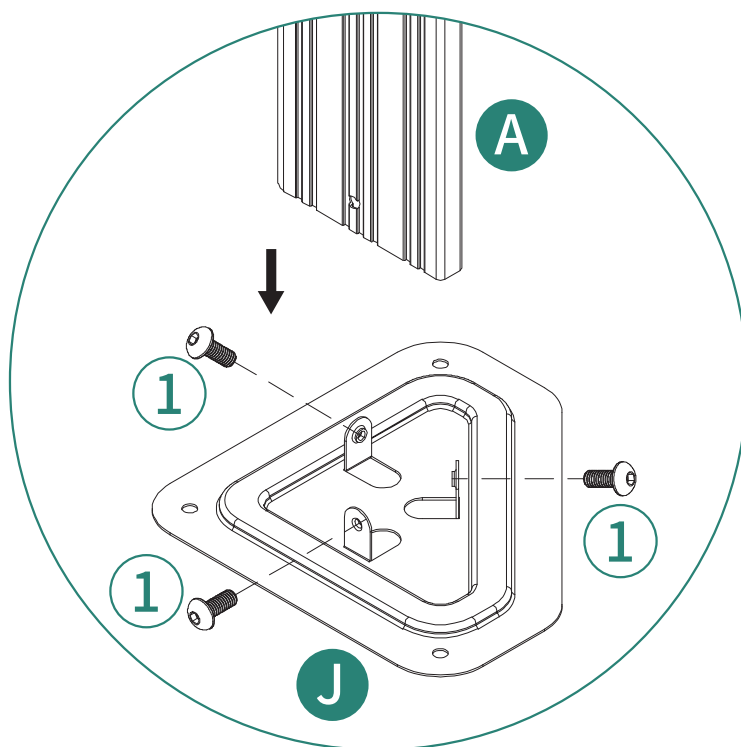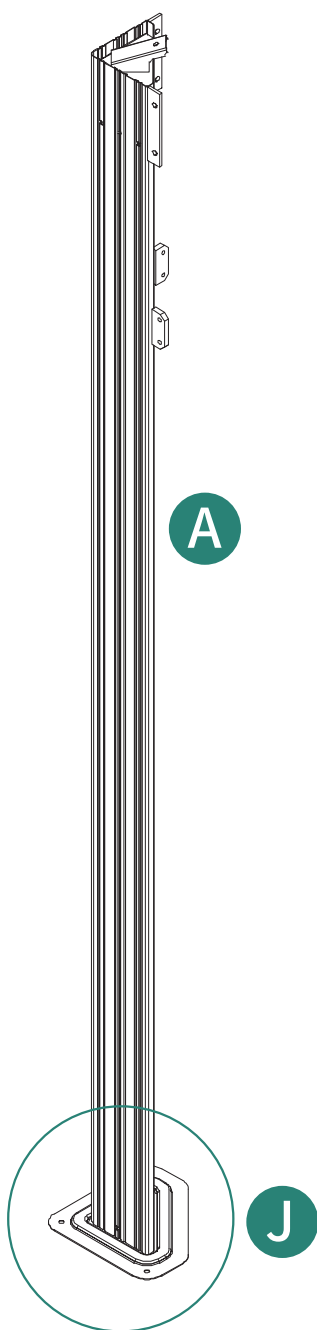


2


X2



Ⓑ 2pcs



Ⓑ1 2pcs





Ⓟ 2pcs



① 8pcs

When connecting B and B1 via P, make sure that 3 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

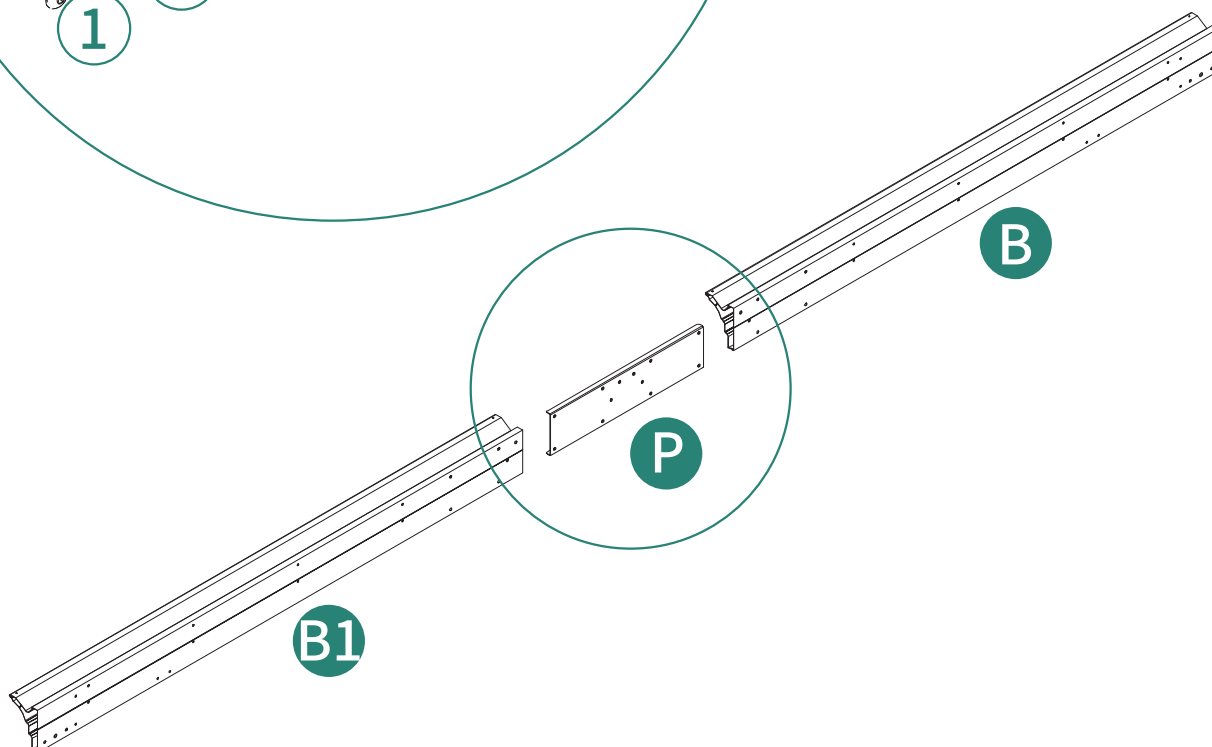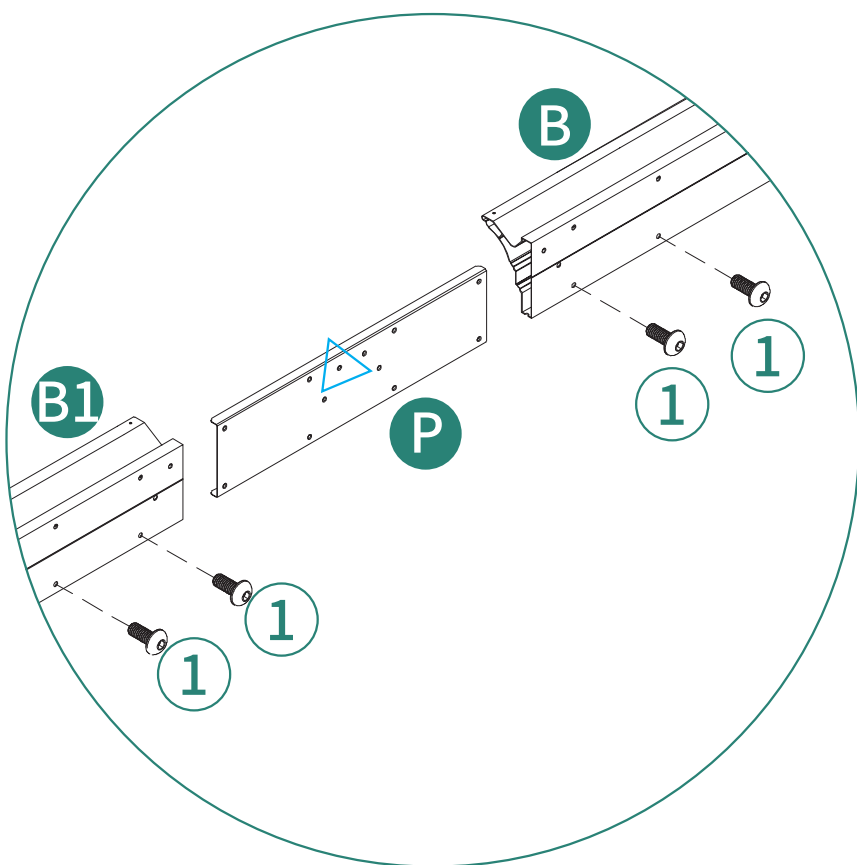

3

X2





Ⓒ2pcs



Ⓒ12pcs



①20pcs

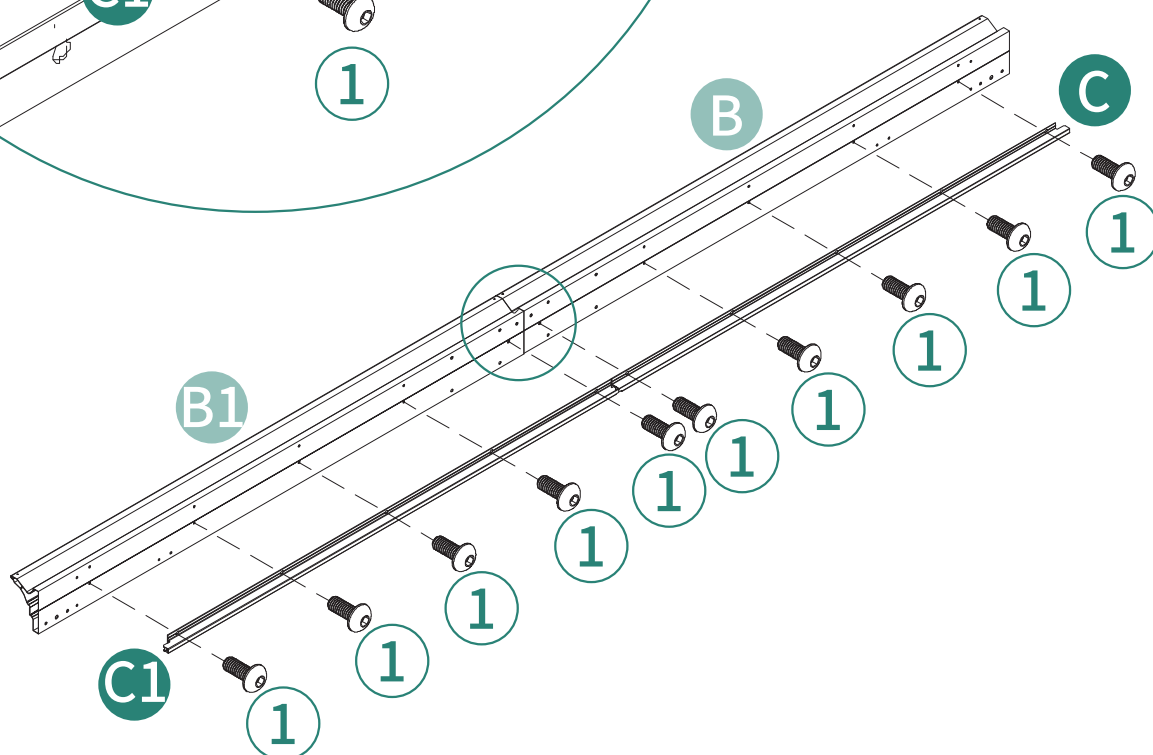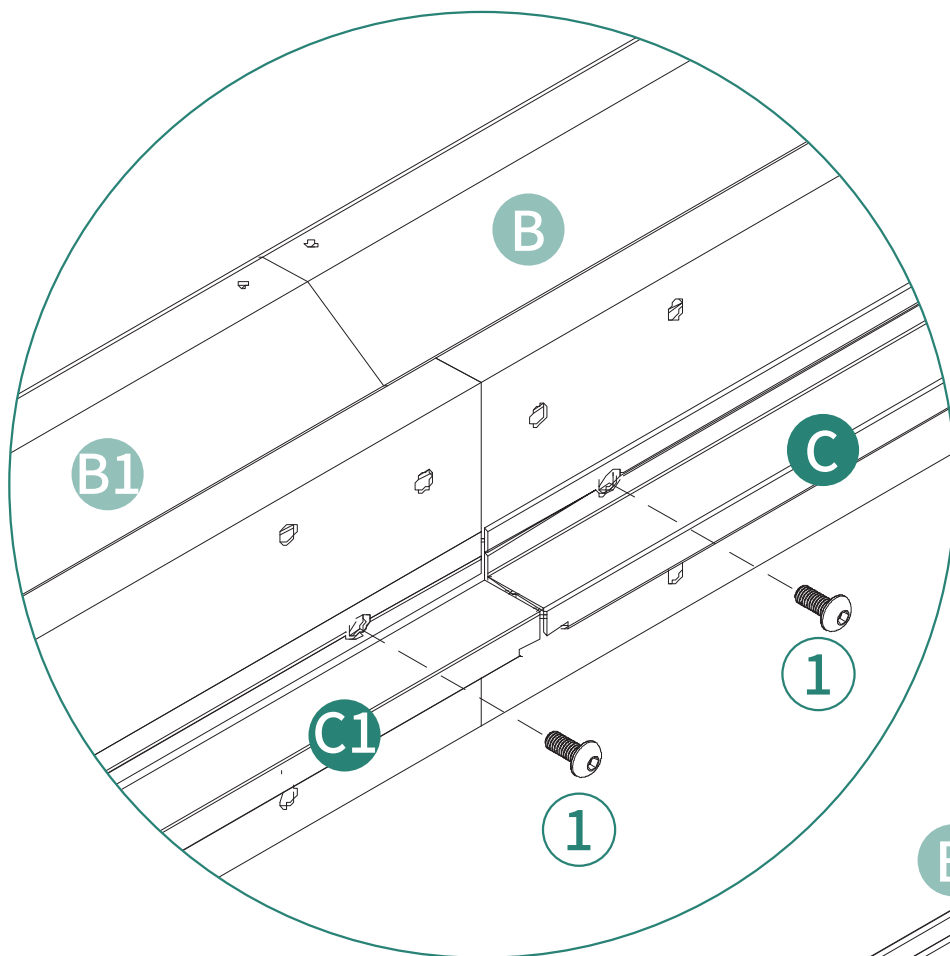



4

X2

Ⓓ2pcs


Ⓓ12pcs

①24pcs

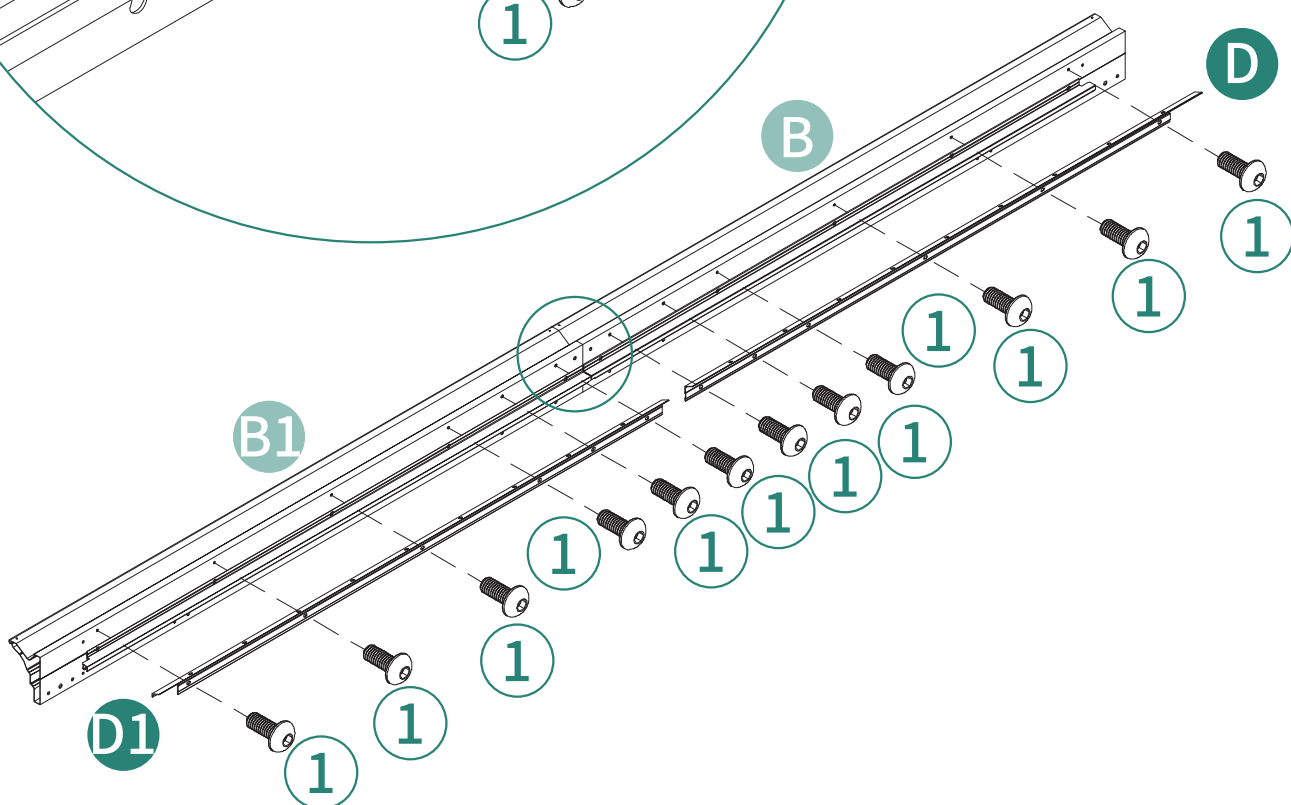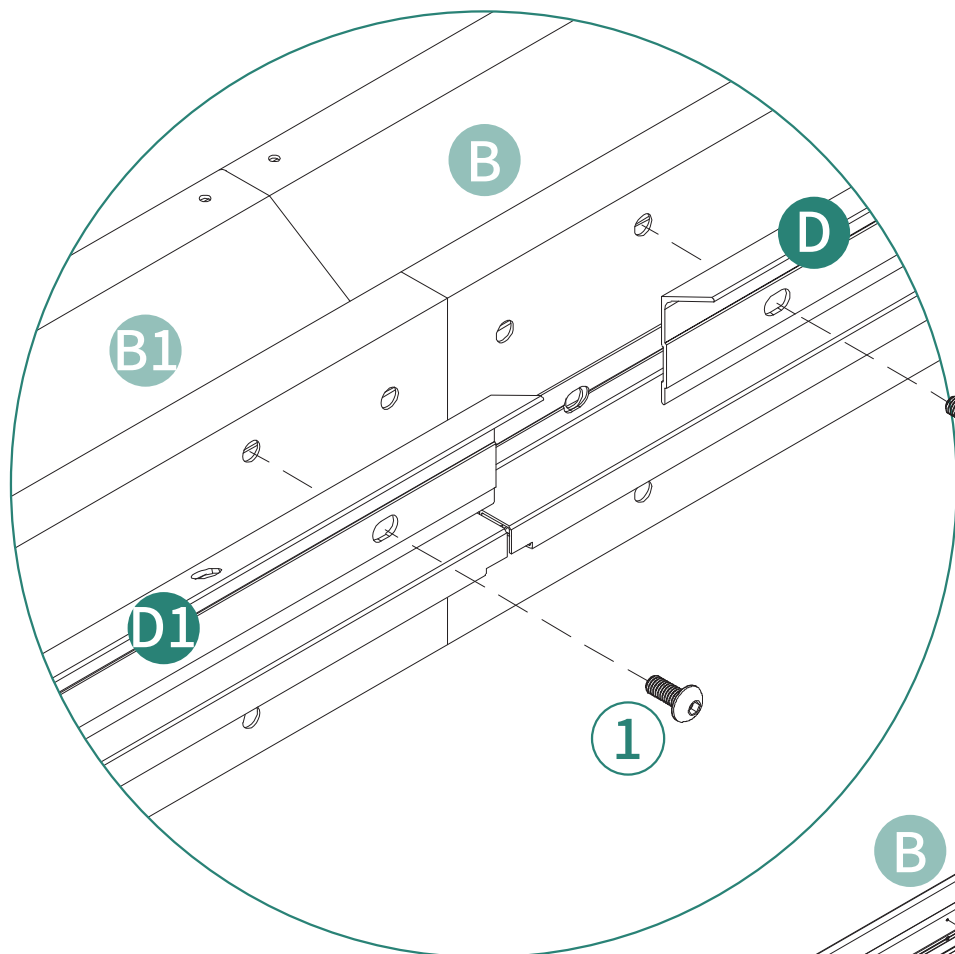


5

X2

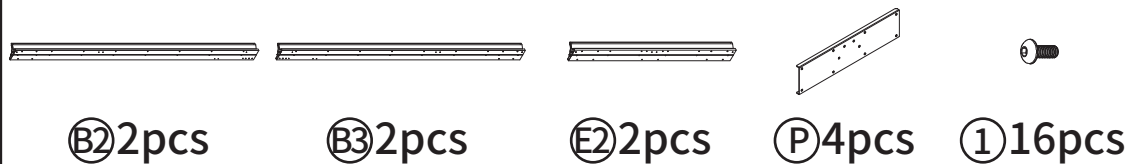

When connecting B3 and E2 via P, E2 and B2 via P, make sure that 3 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

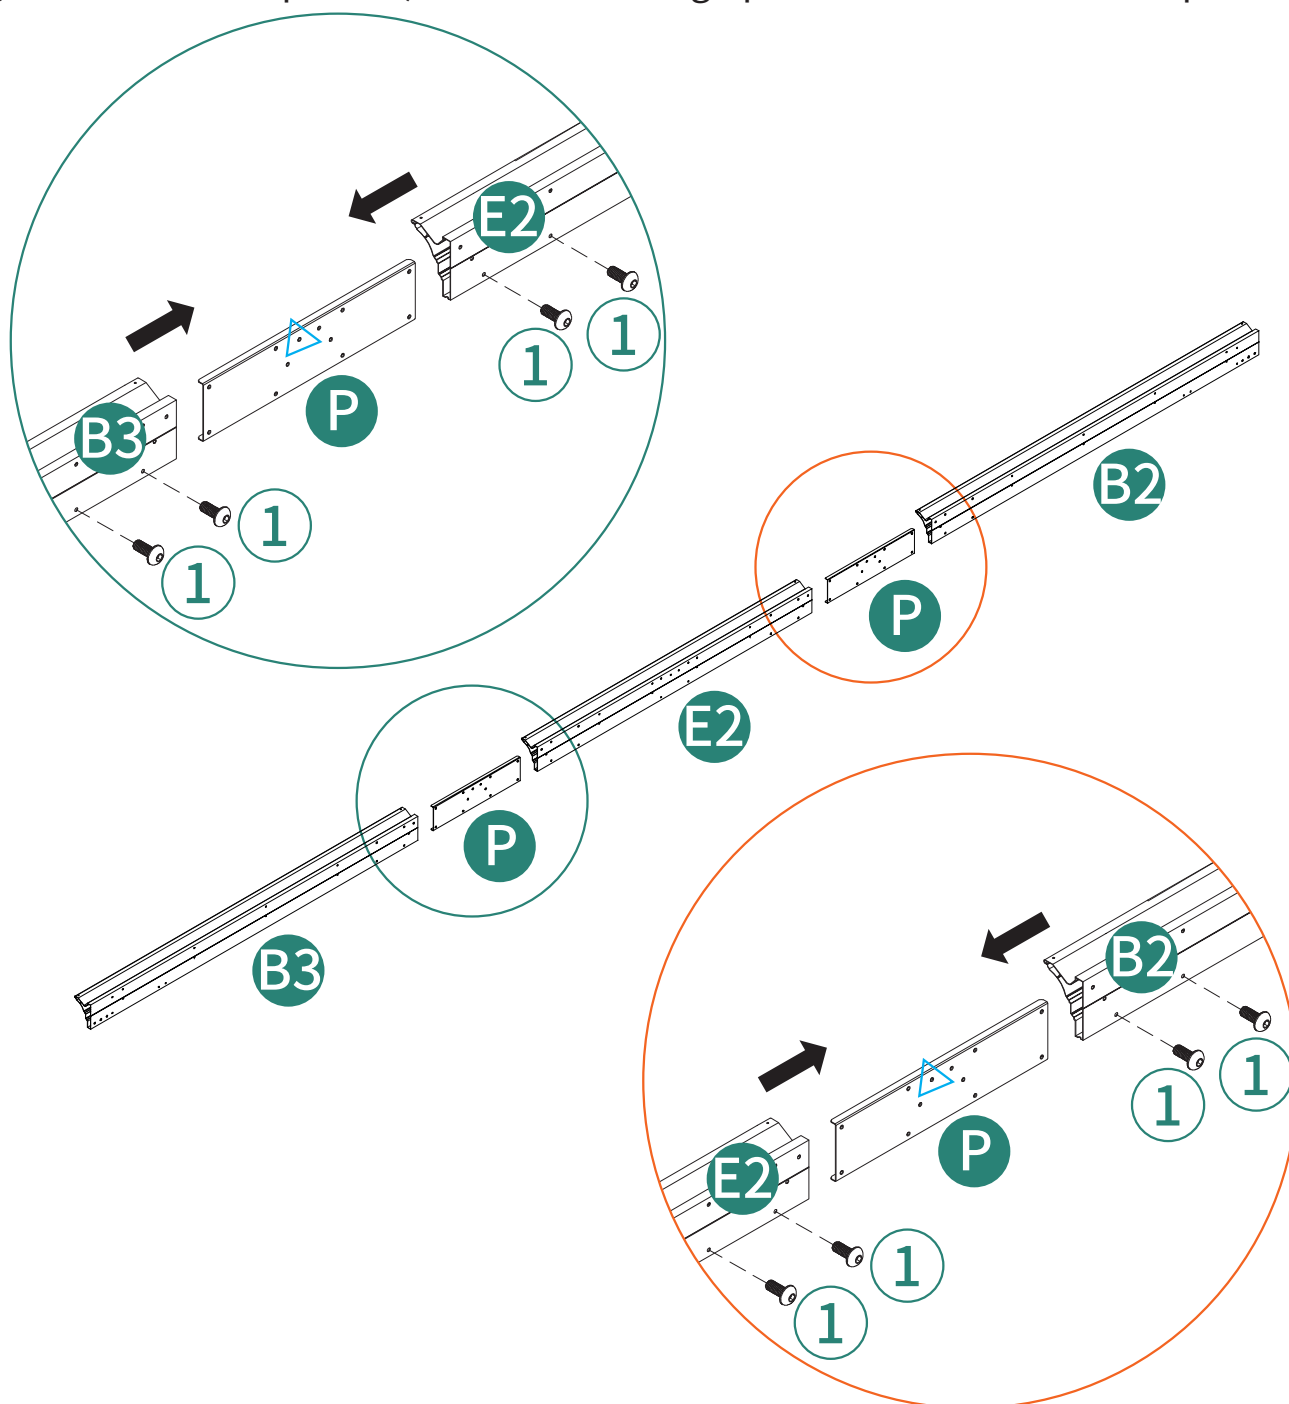

6

X2




Ⓒ2 2pcs

Ⓒ3 2pcs

Ⓕ3 2pcs

Ⓕ4 2pcs

① 32pcs

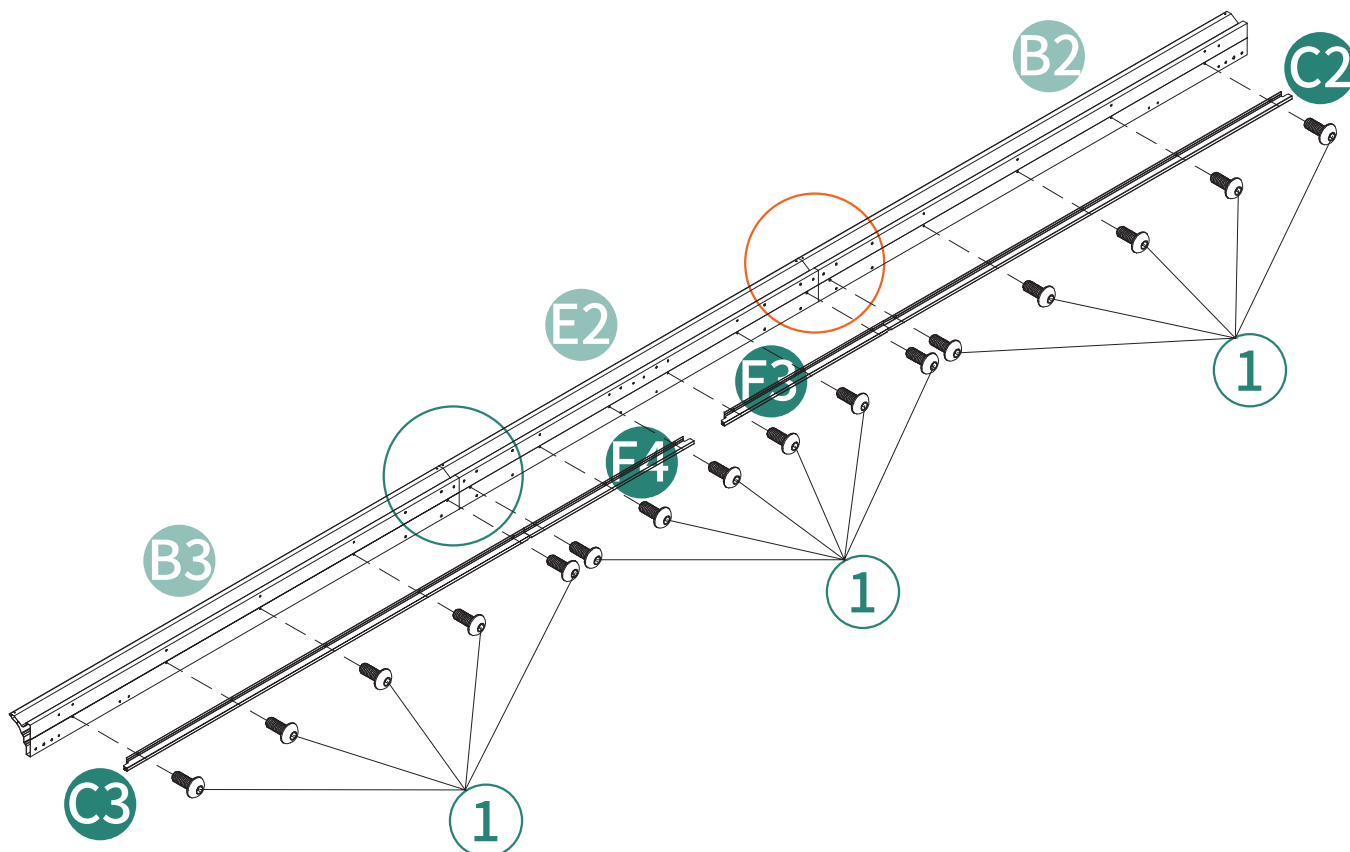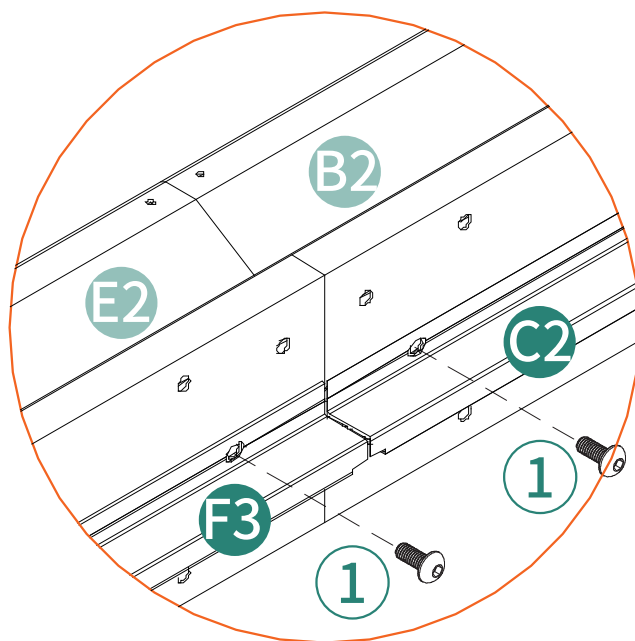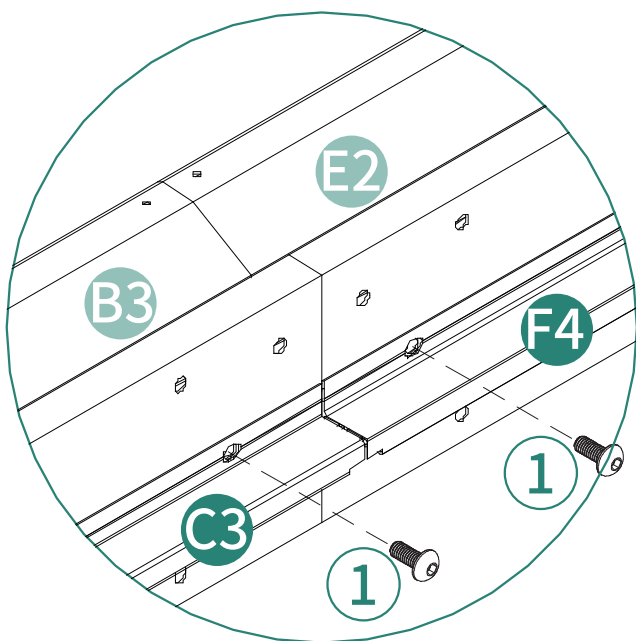

7

X2



Ⓓ2 2pcs



Ⓓ3 2pcs




Ⓓ4 2pcs



Ⓓ5 2pcs






① 40pcs

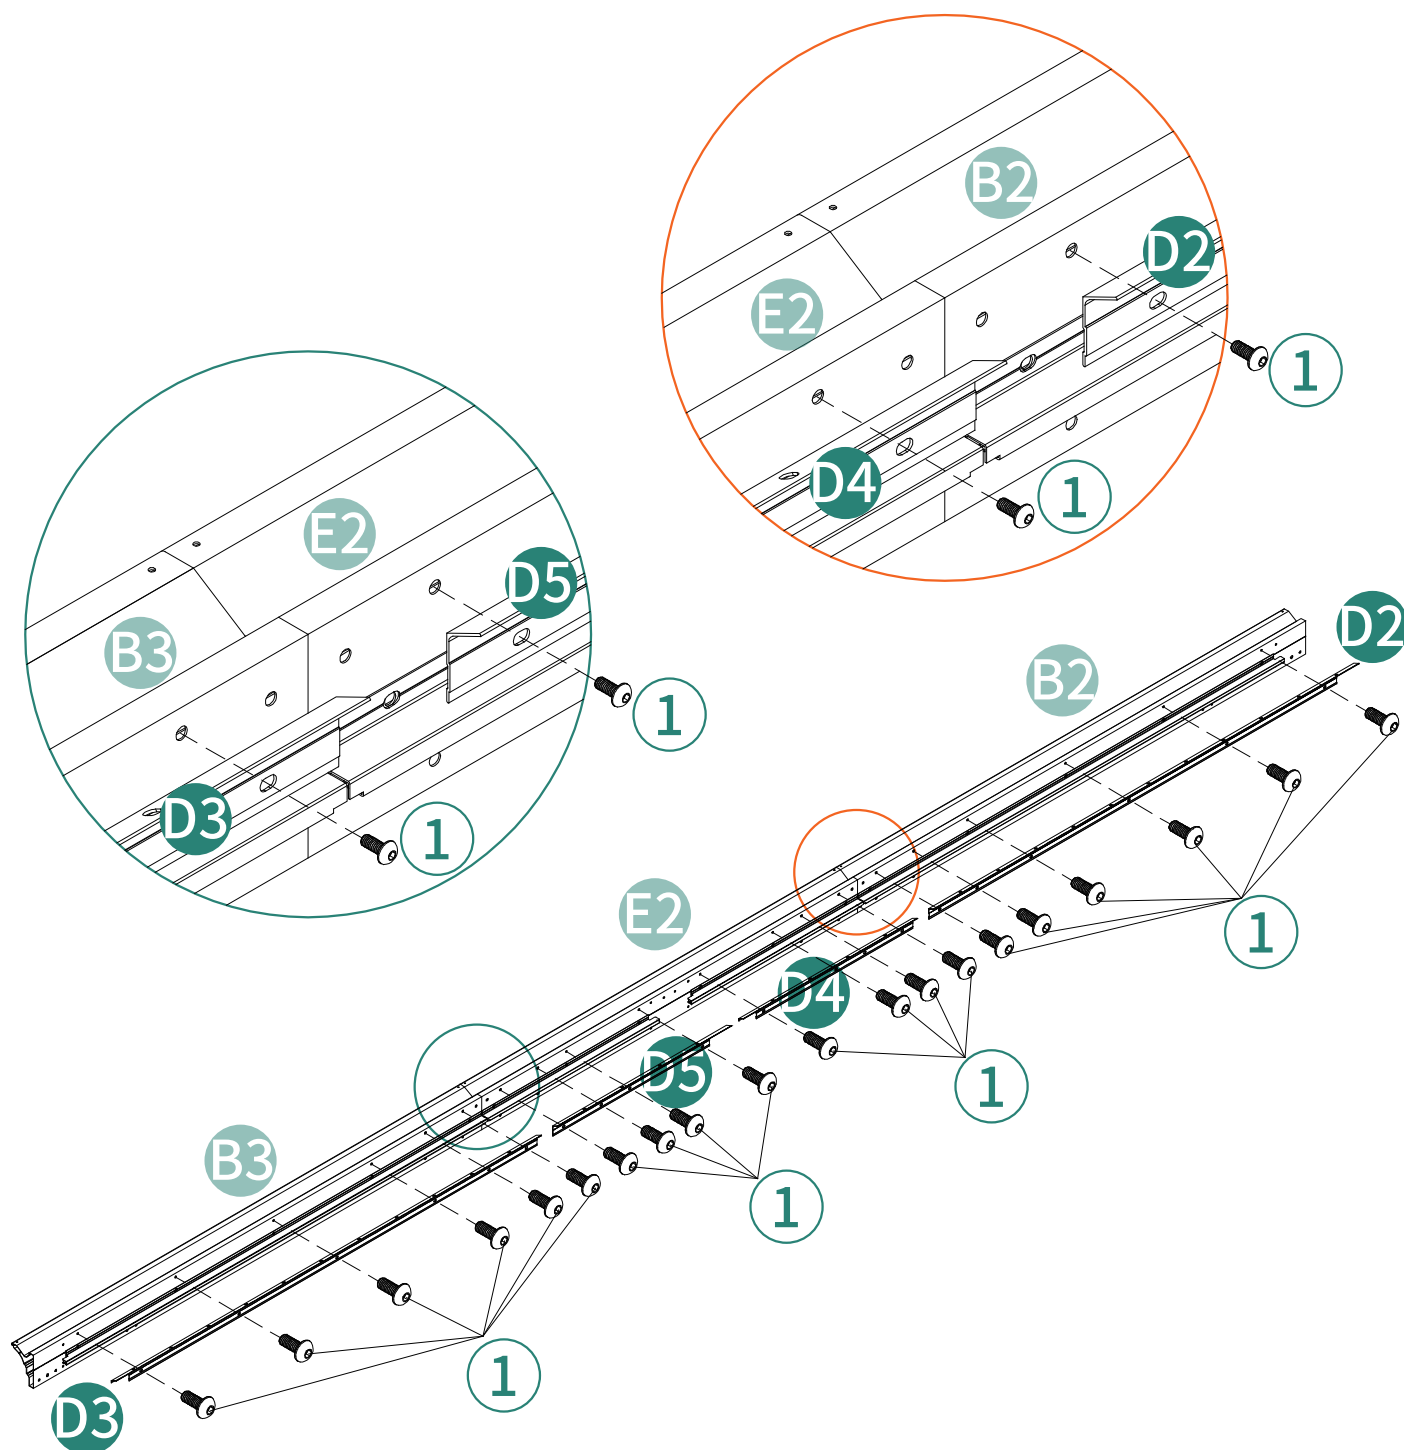

8

① 24pcs ⑧ 8pcs

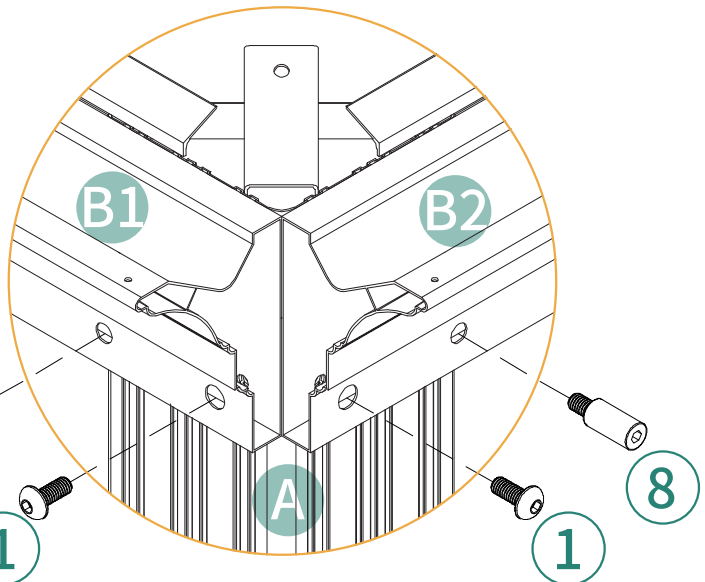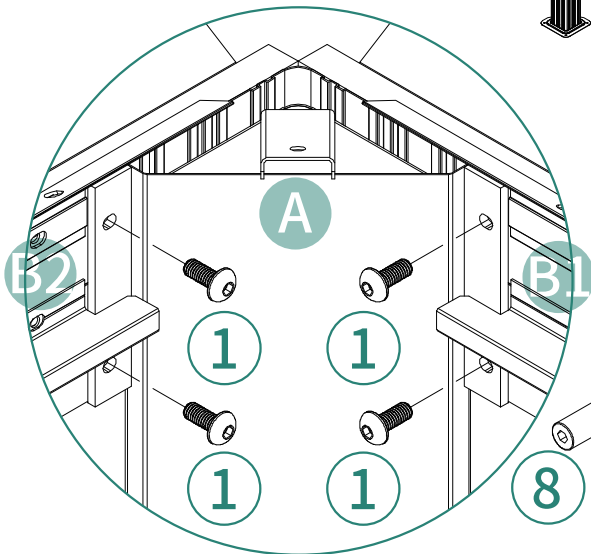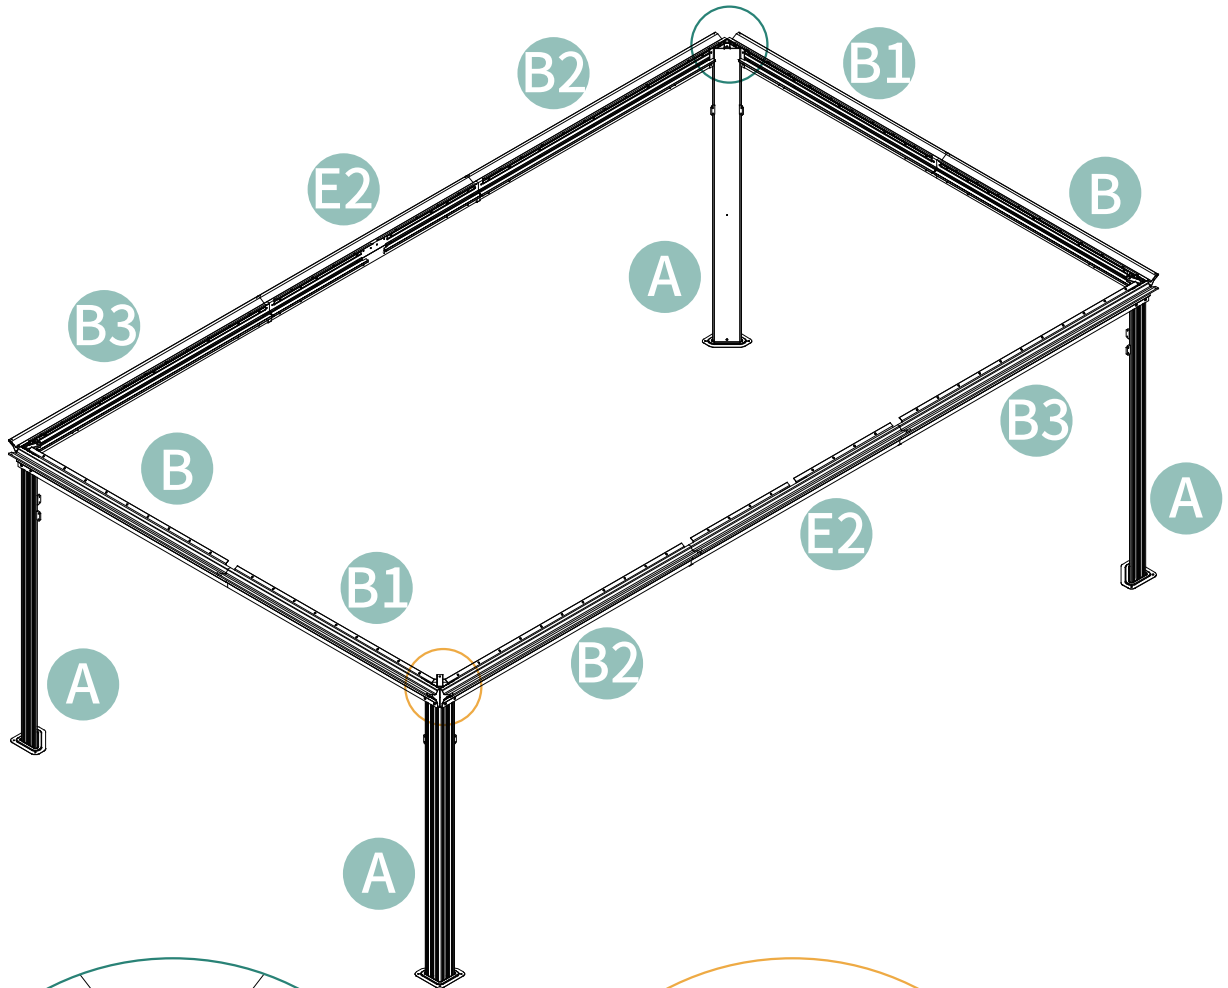

9




Ⓜ4pcs



Ⓜ14pcs



①32pcs

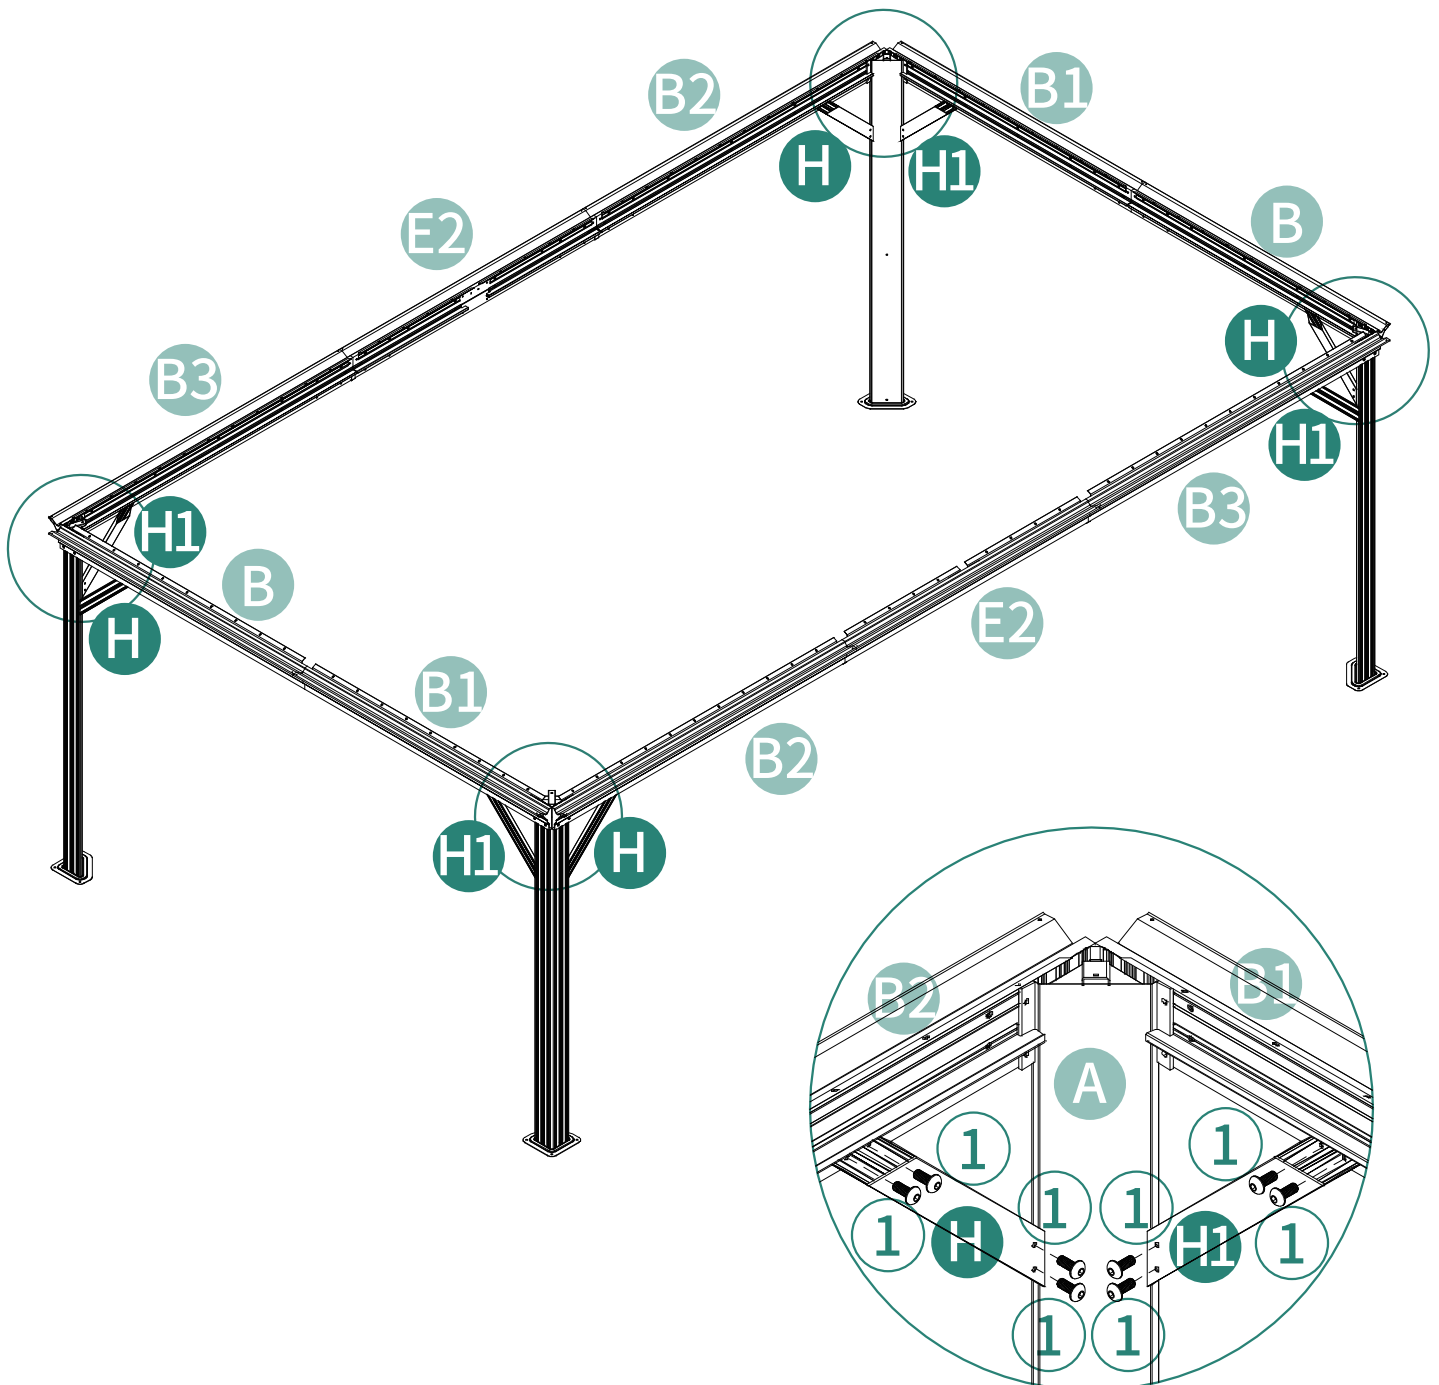


10



Ⓚ4pcs




④16pcs

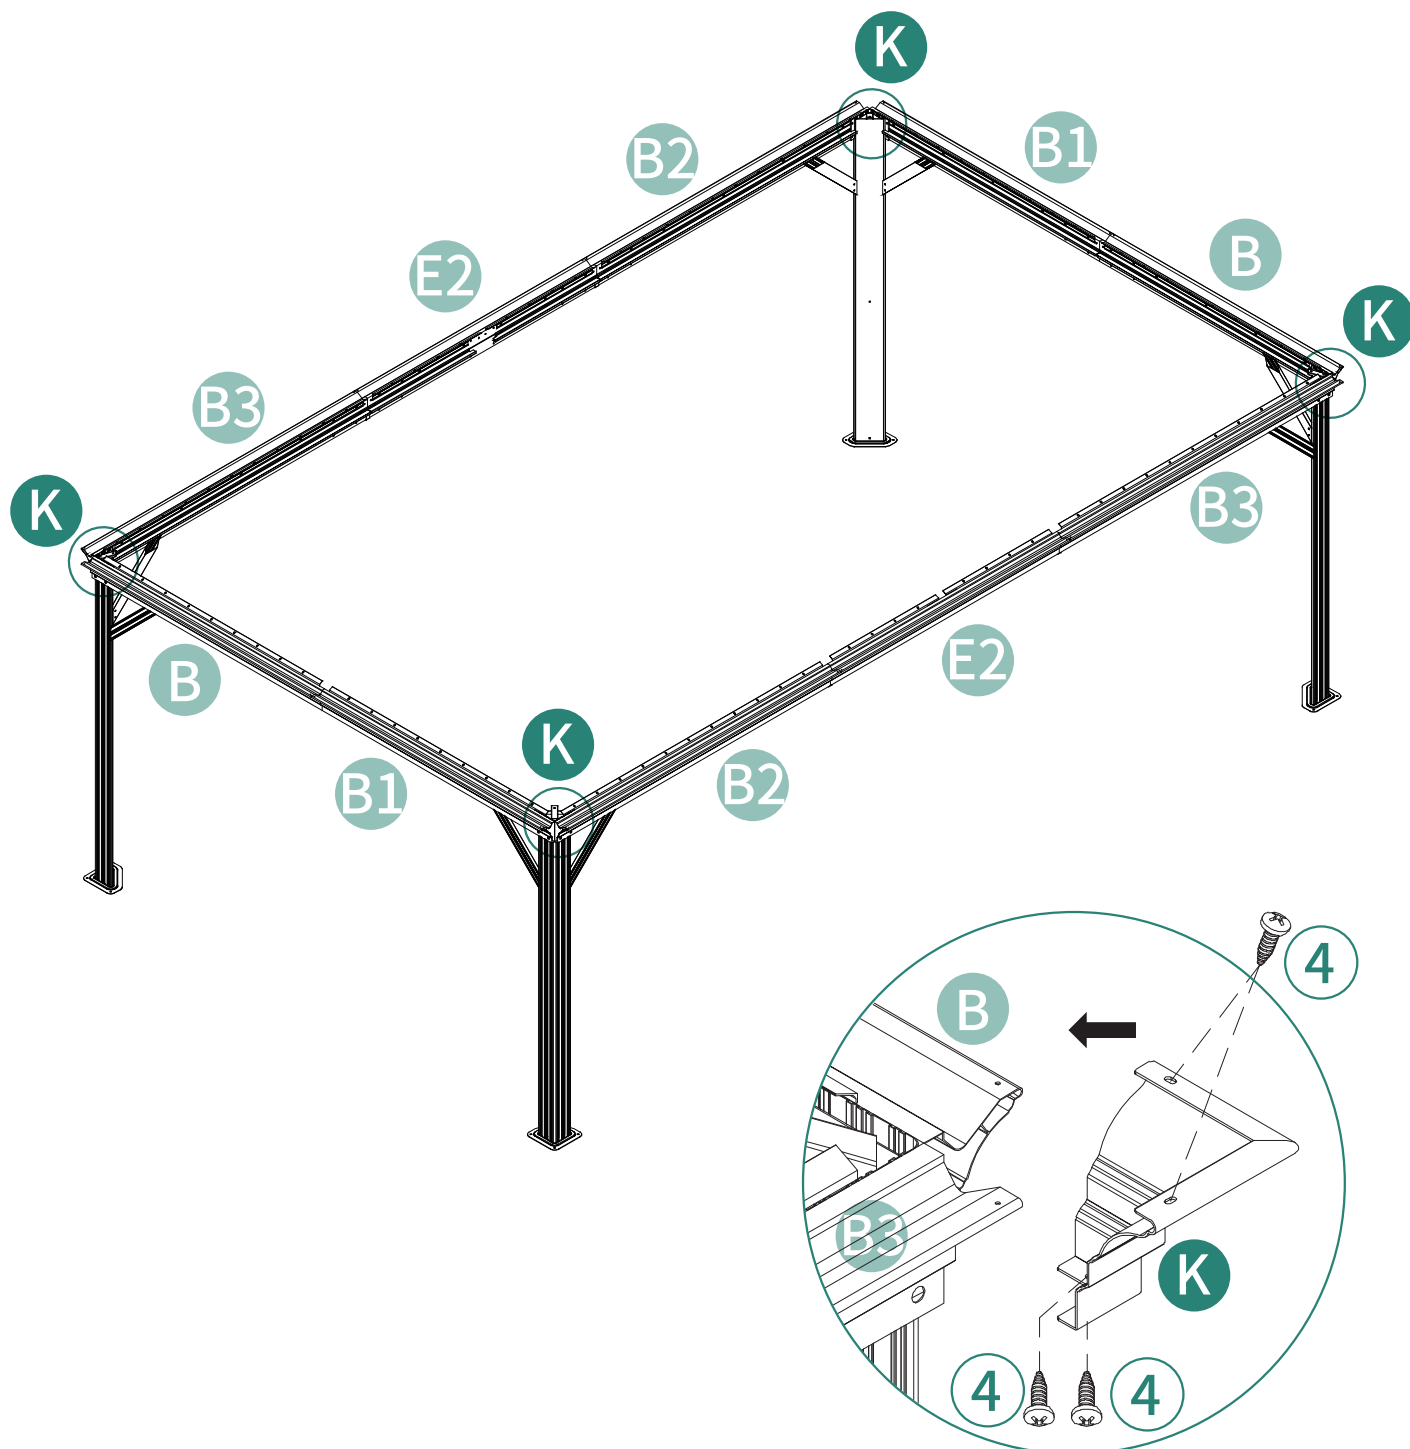



When sliding 8 x hook U onto each rail of parts B2 & B3 & E2, they should face inward. The same for sliding 7 x hook U on rails of parts B and B1.

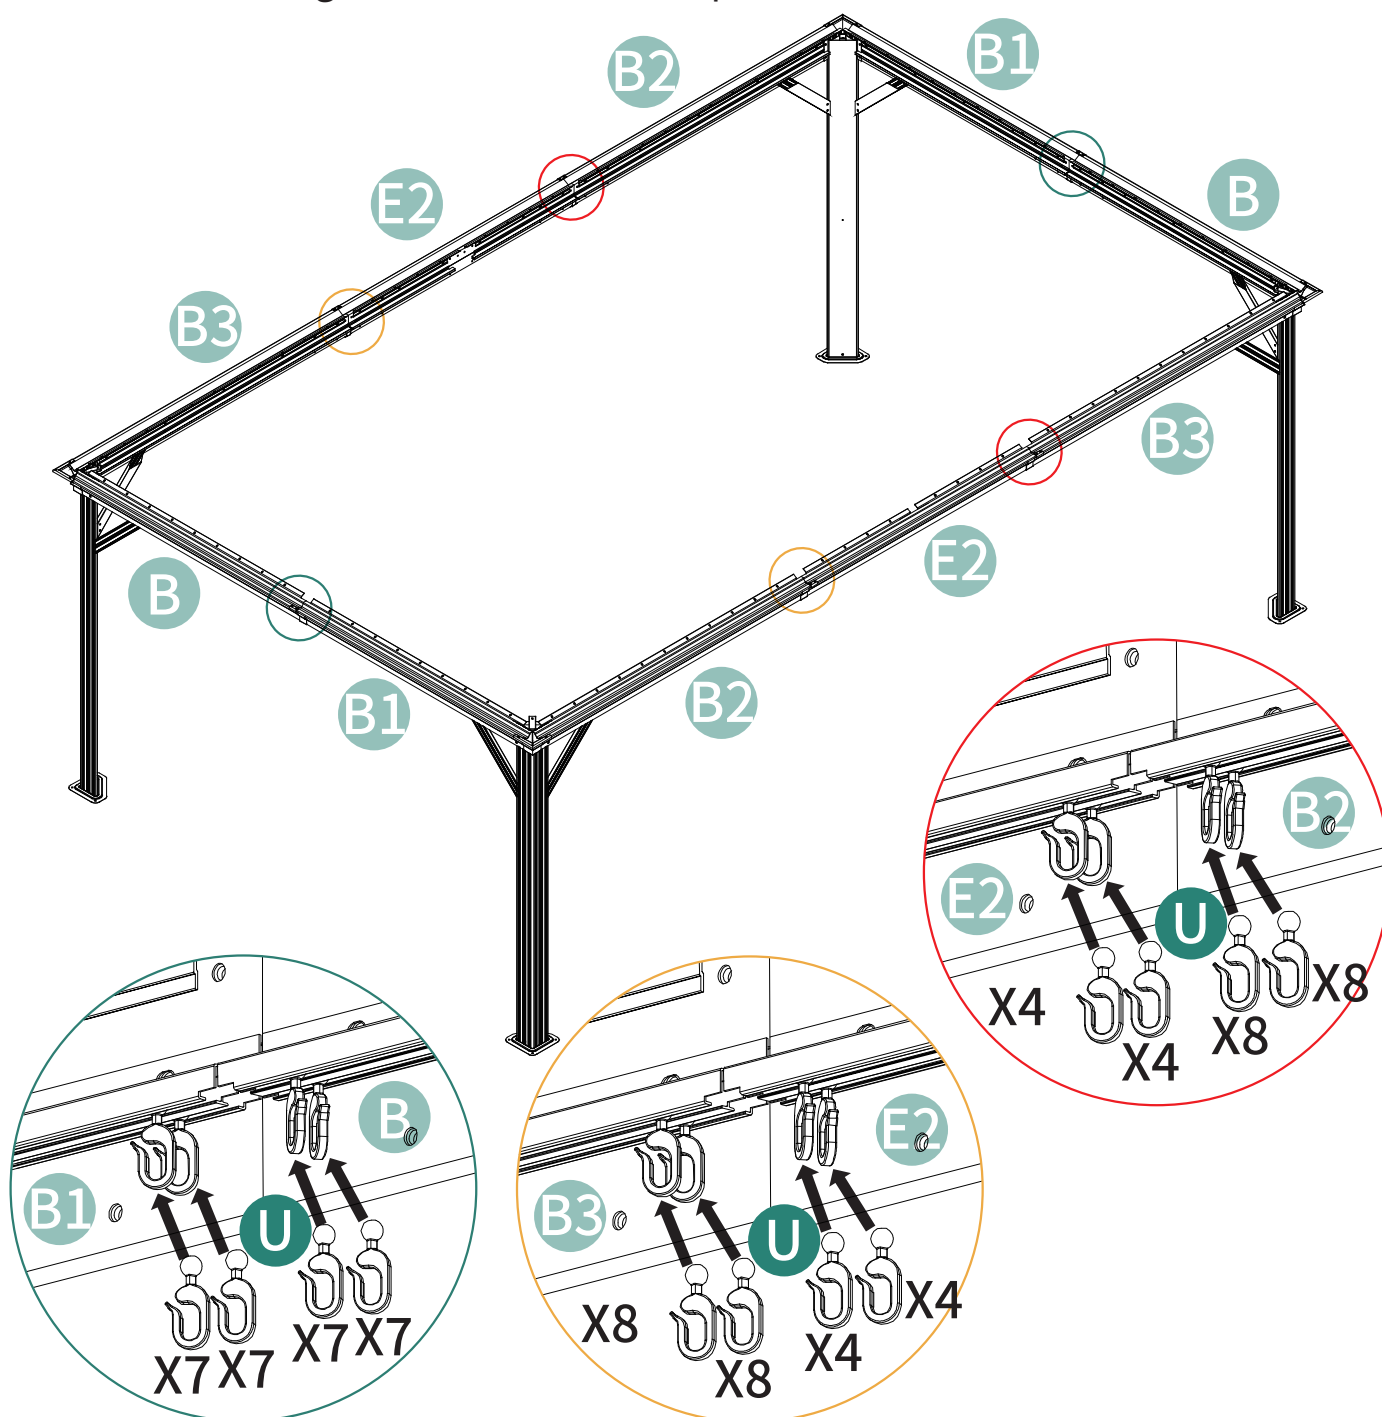

12



Ⓚ16pcs







Ⓥ6pcs






③6pcs



④12pcs

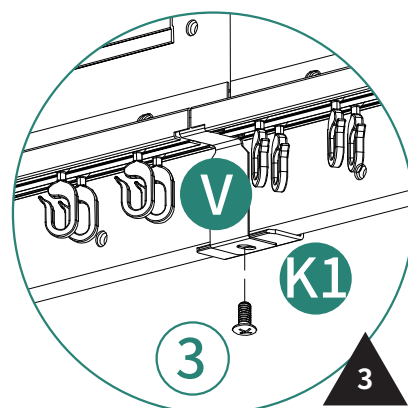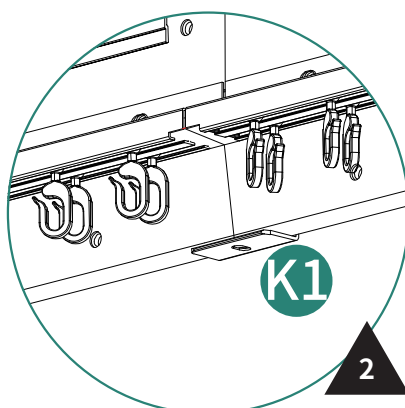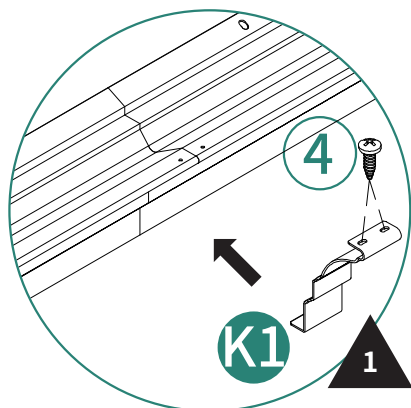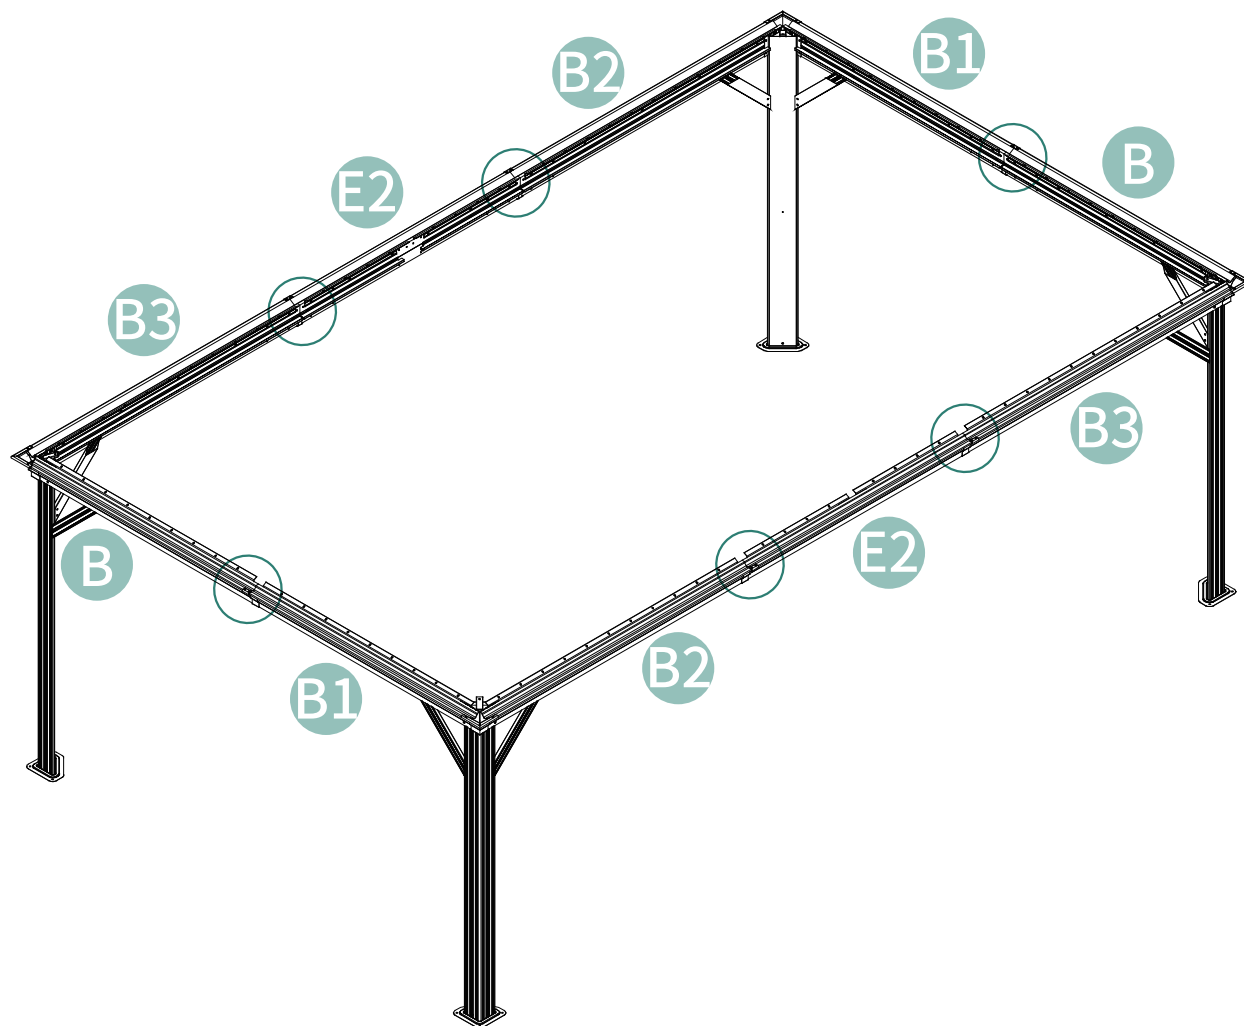


13

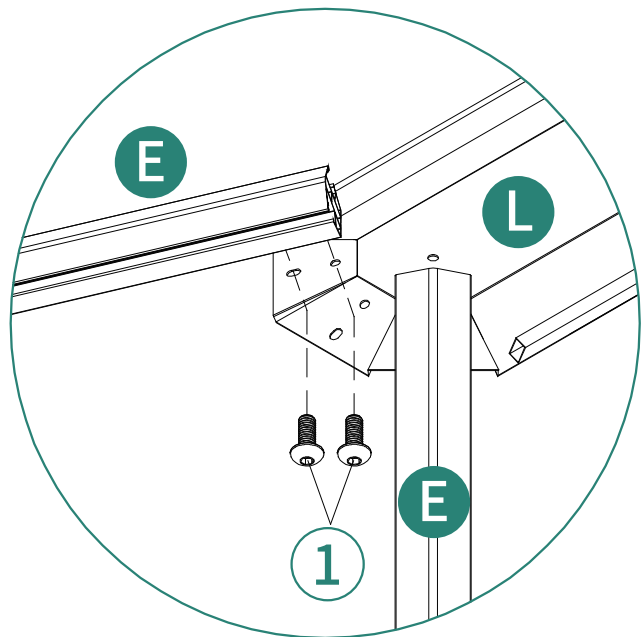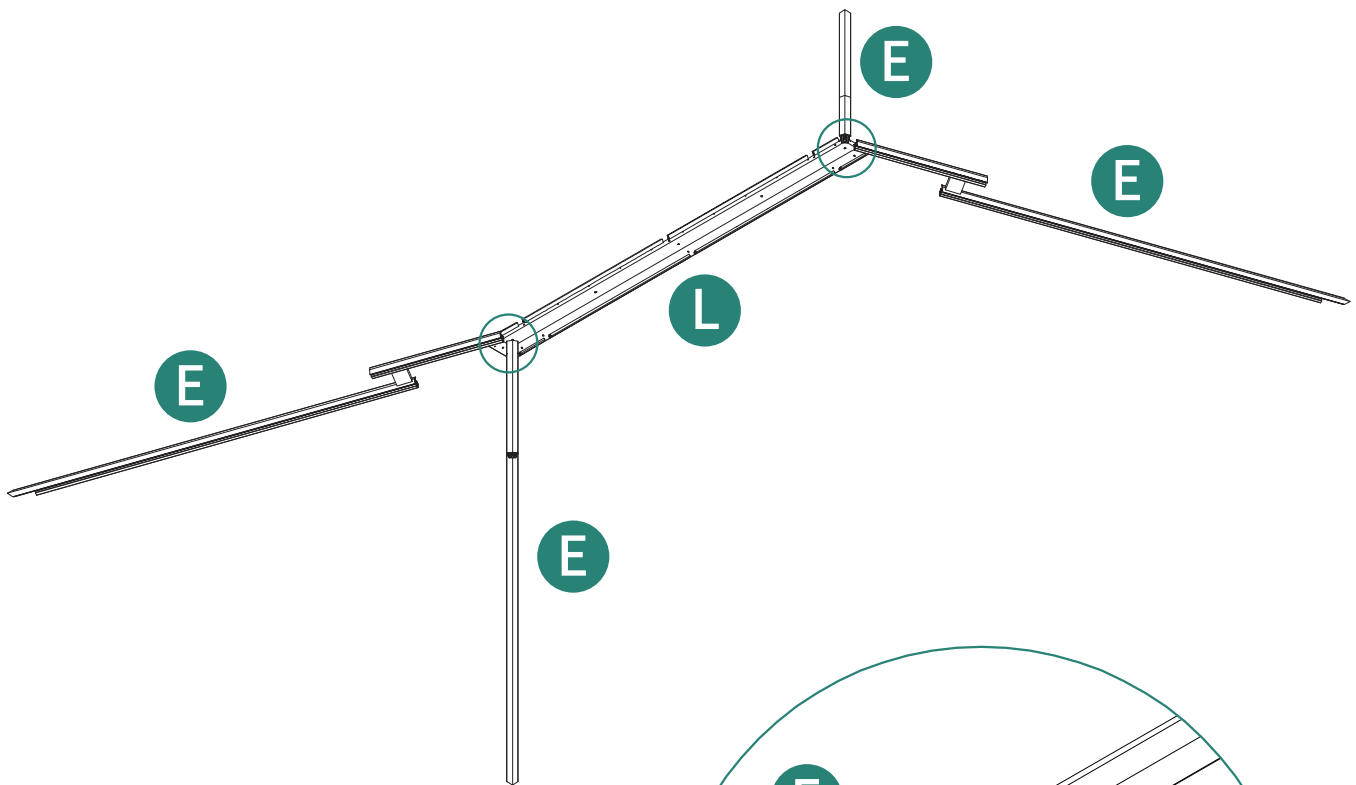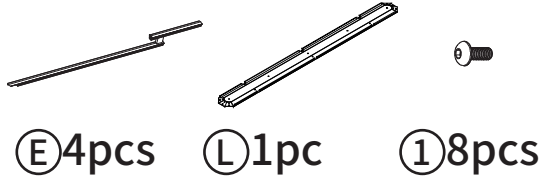

14



① 4pcs

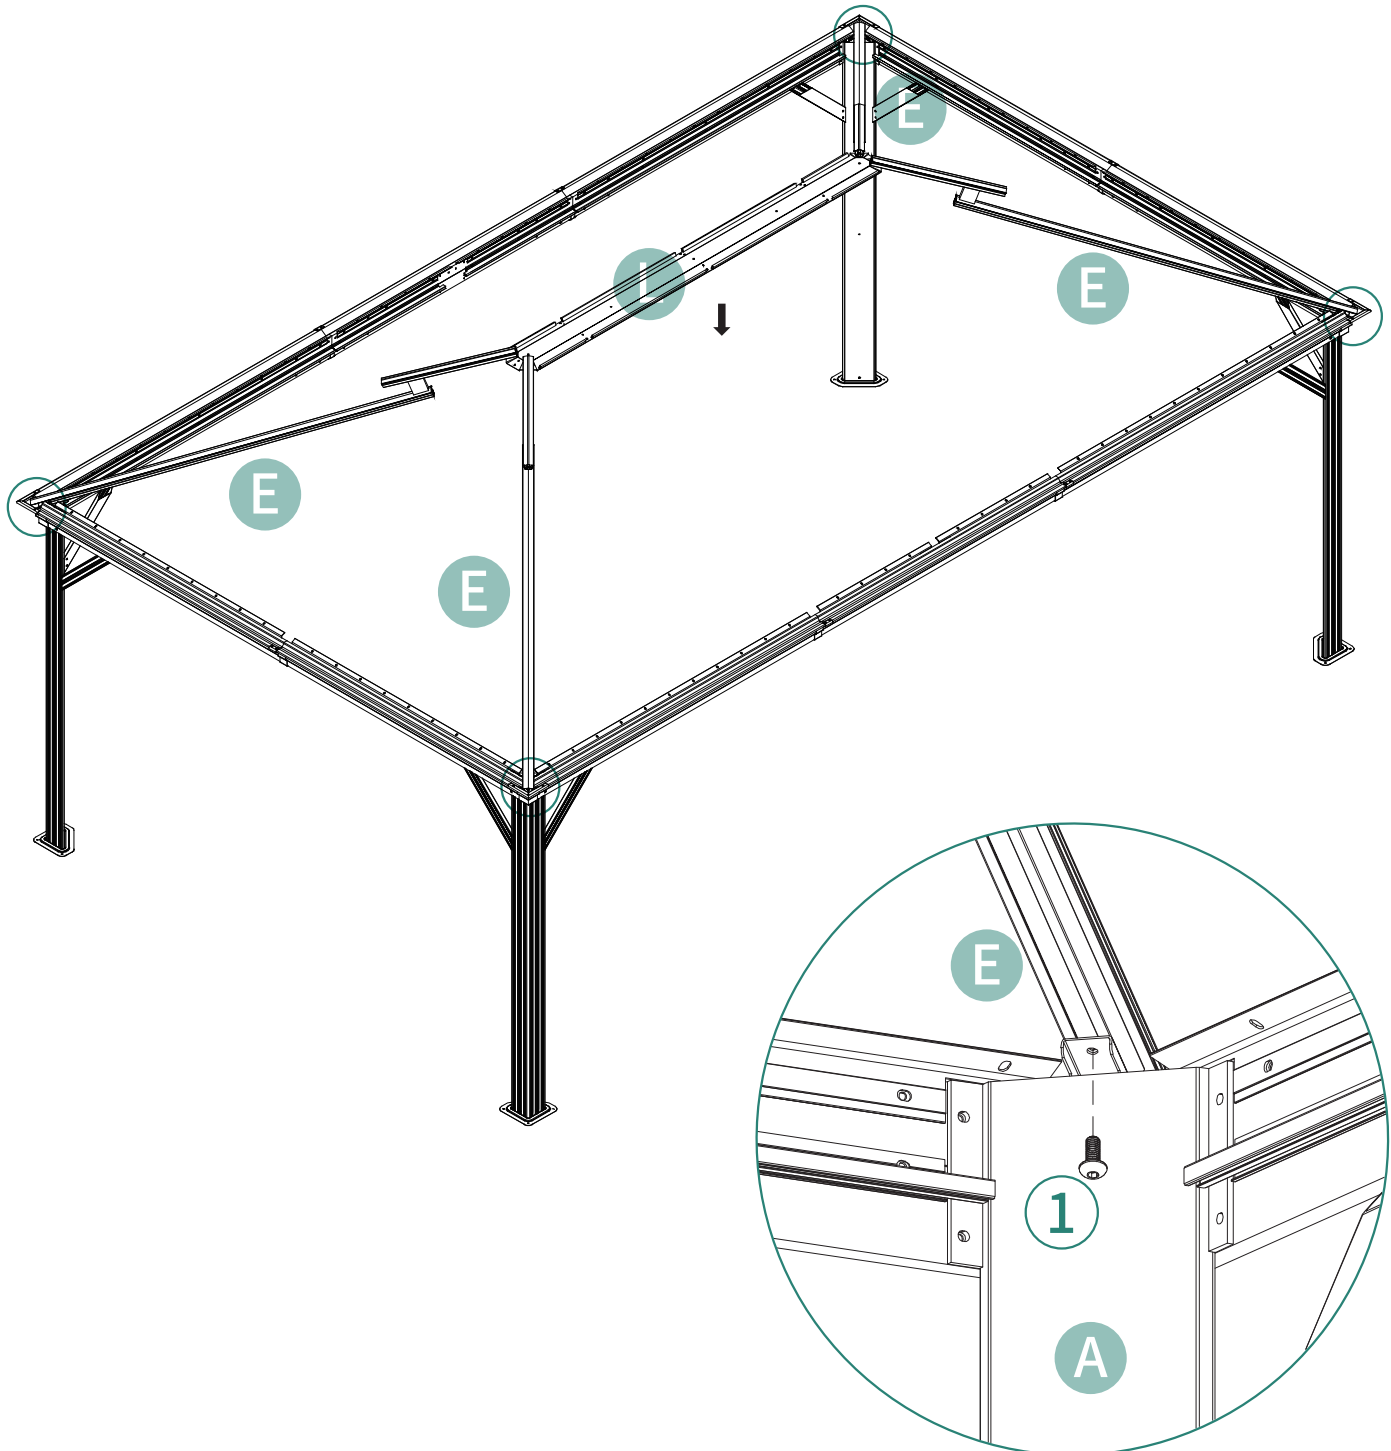




15



ⓔ1 8pcs







① 32pcs

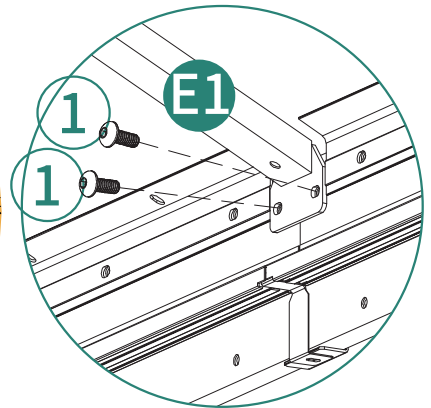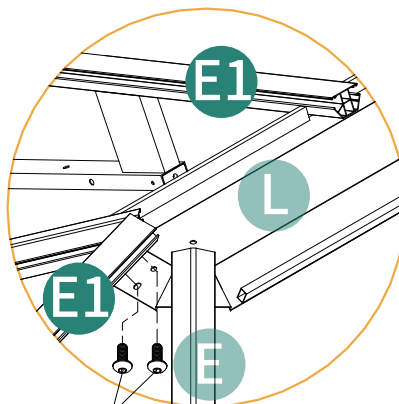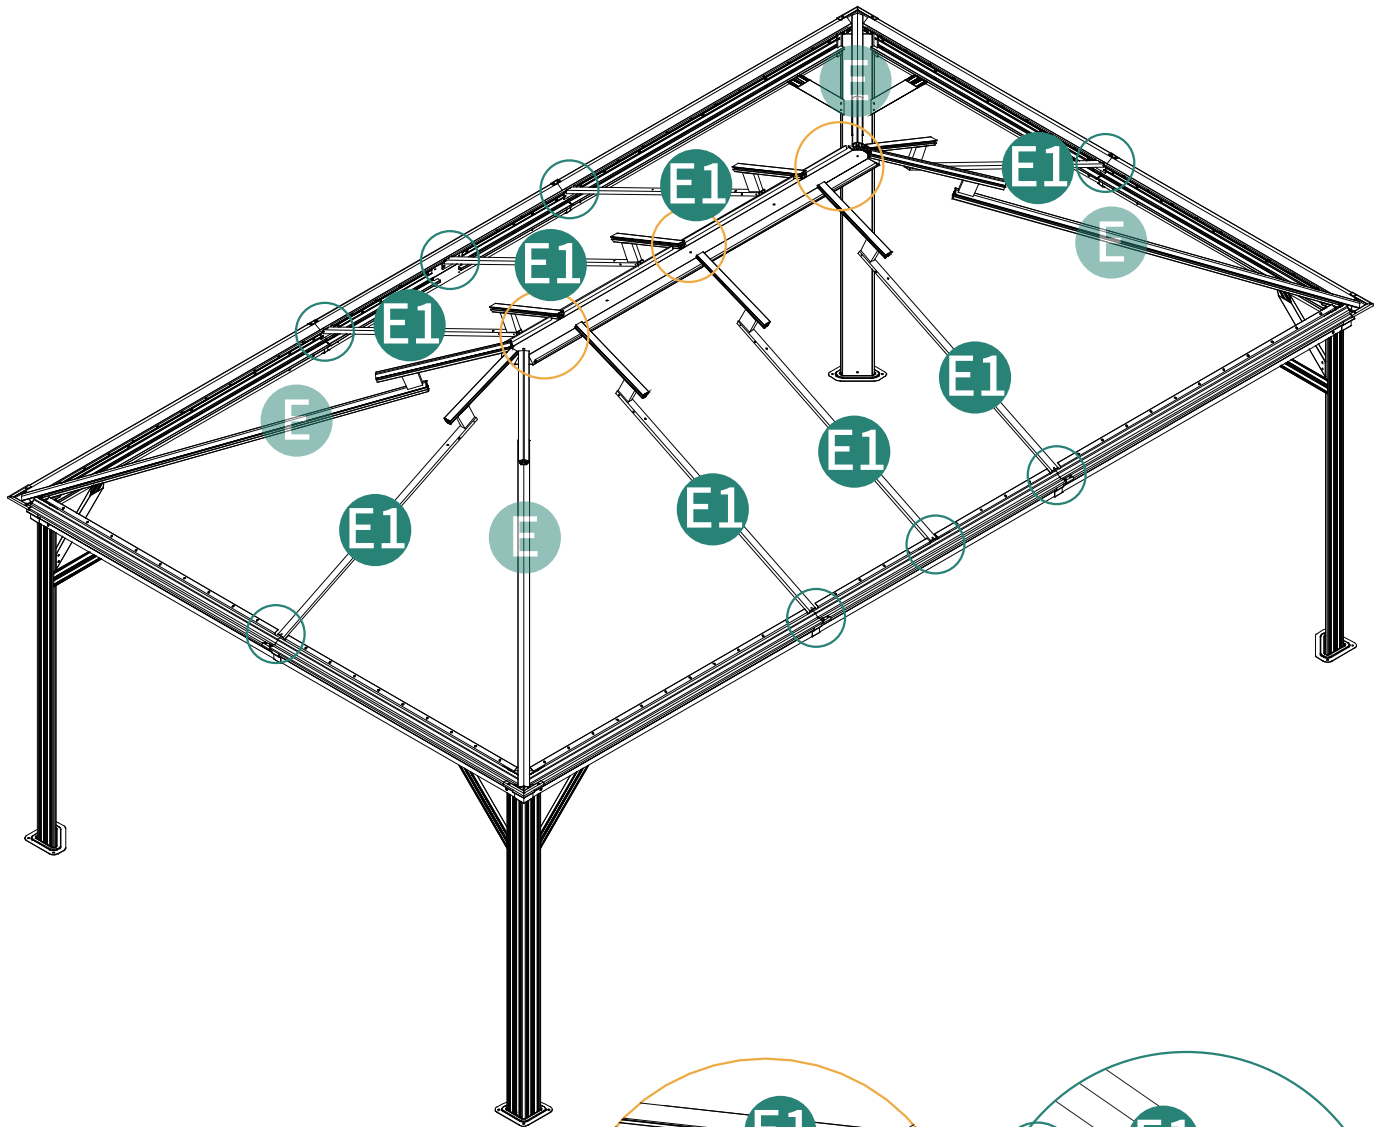

①

16

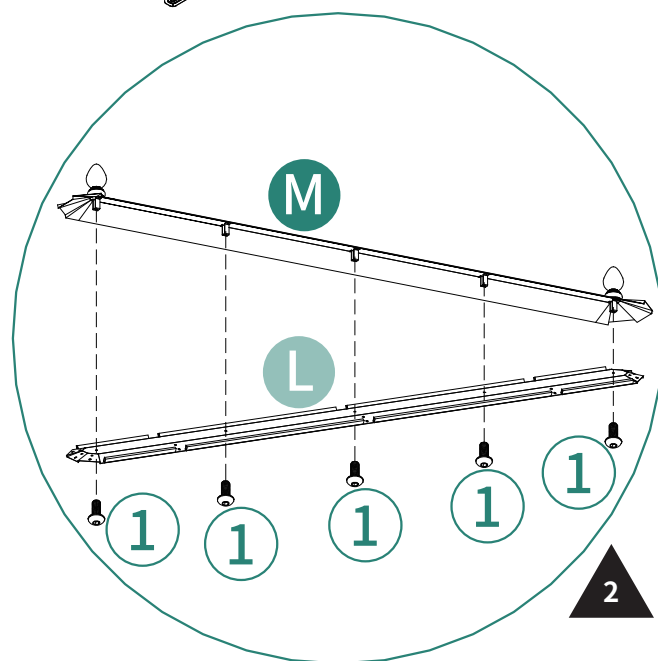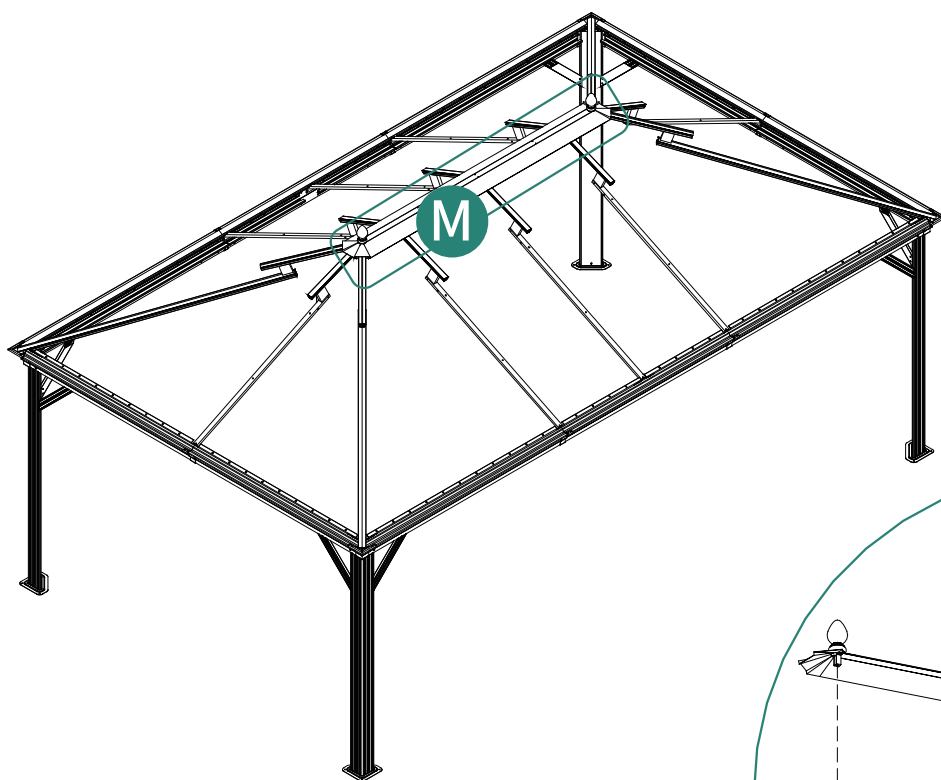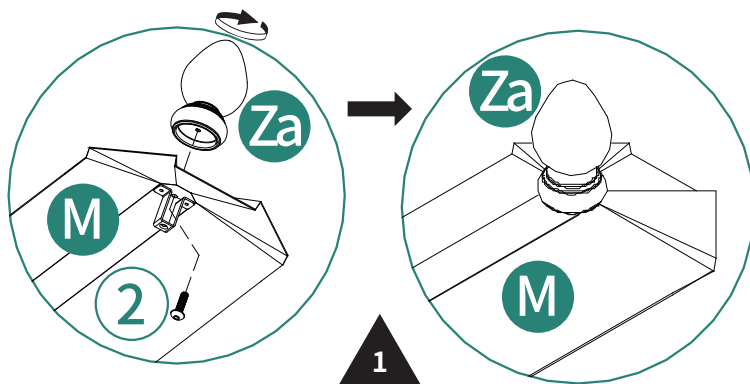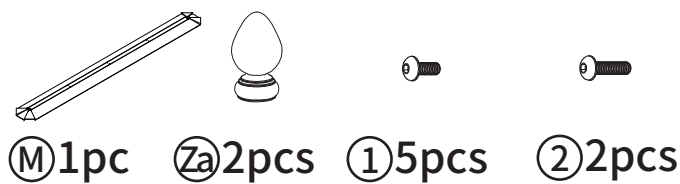


17

X2





Ⓐ1 2pcs



ⓐ 2pcs






① 6pcs

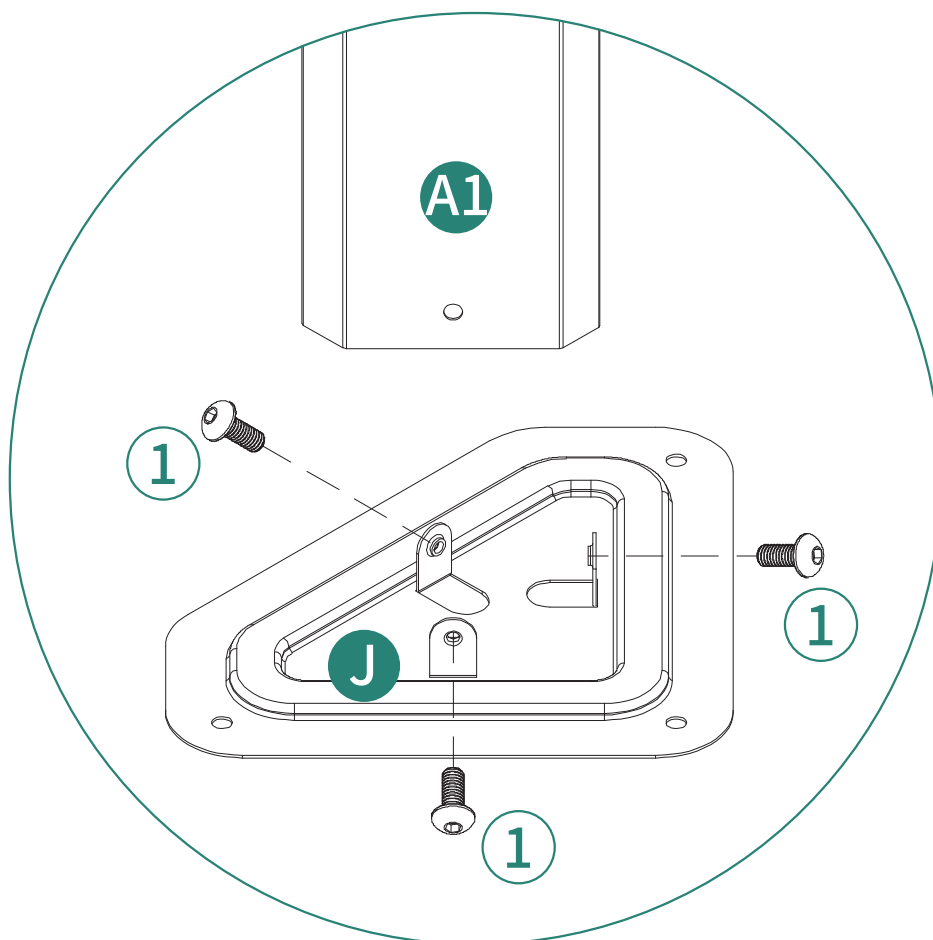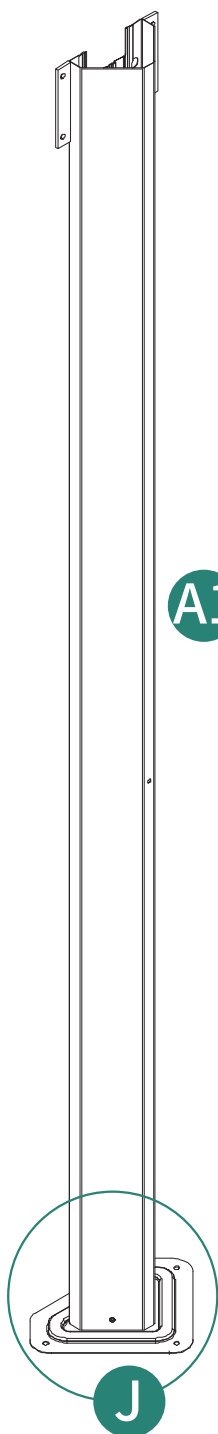

18

① 8pcs

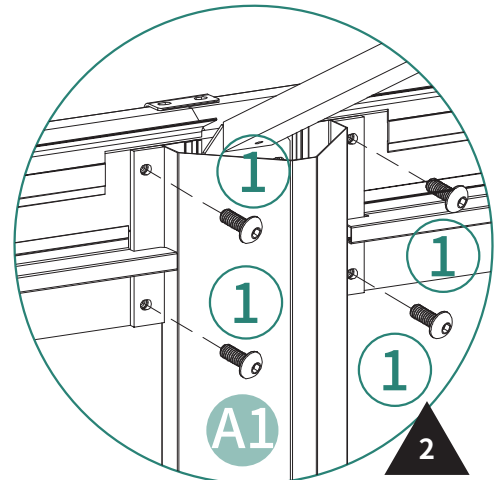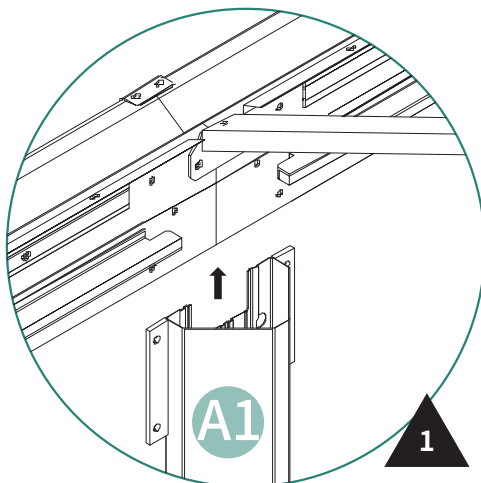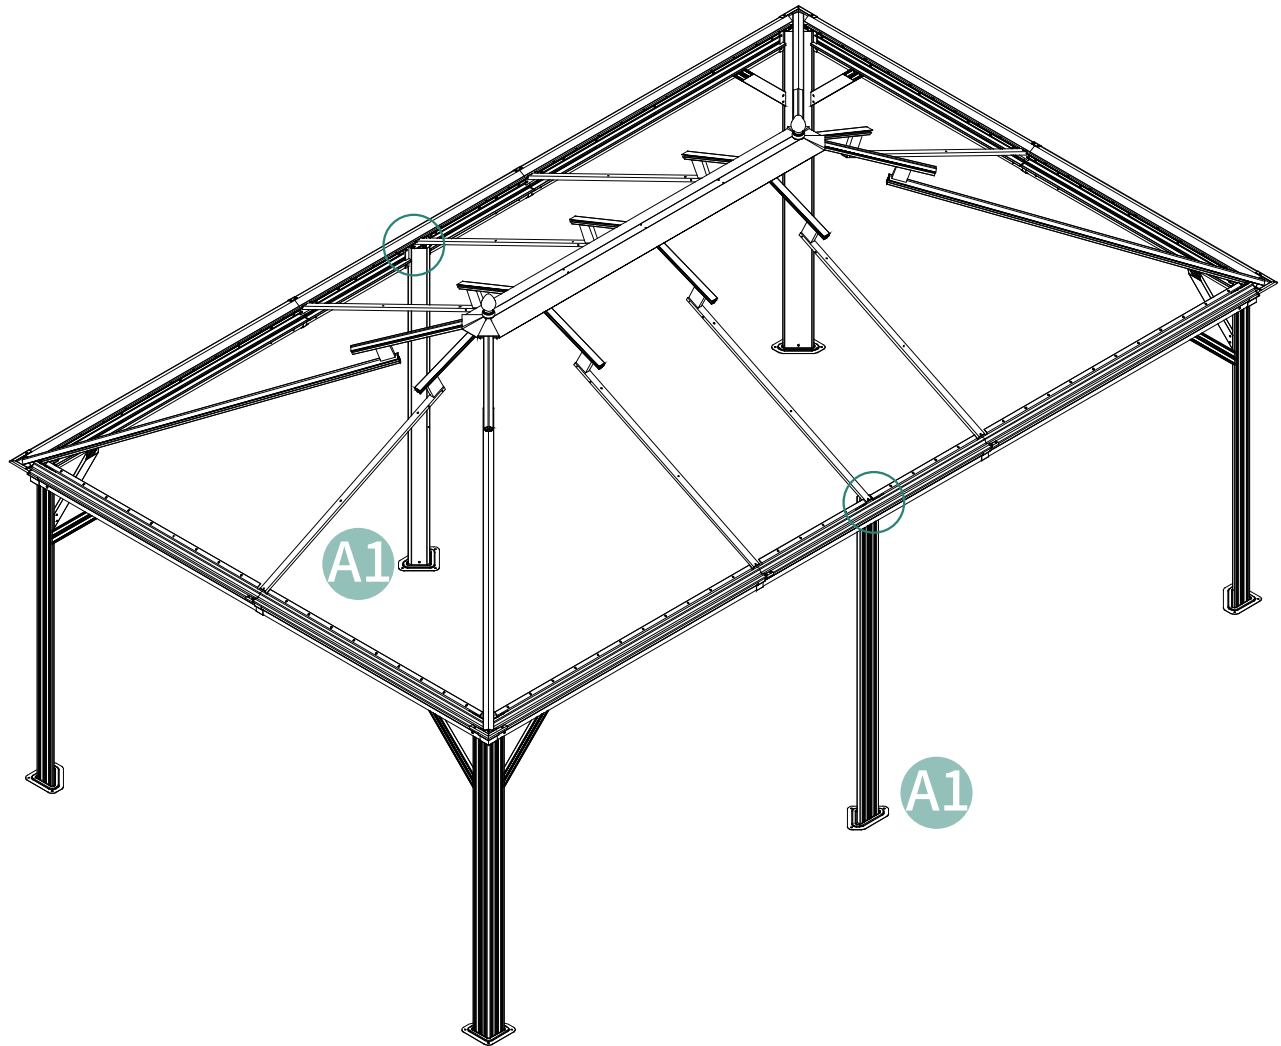






19







G32pcs **G4**2pcs **R**2pcs **N**4pcs **1**12pcs

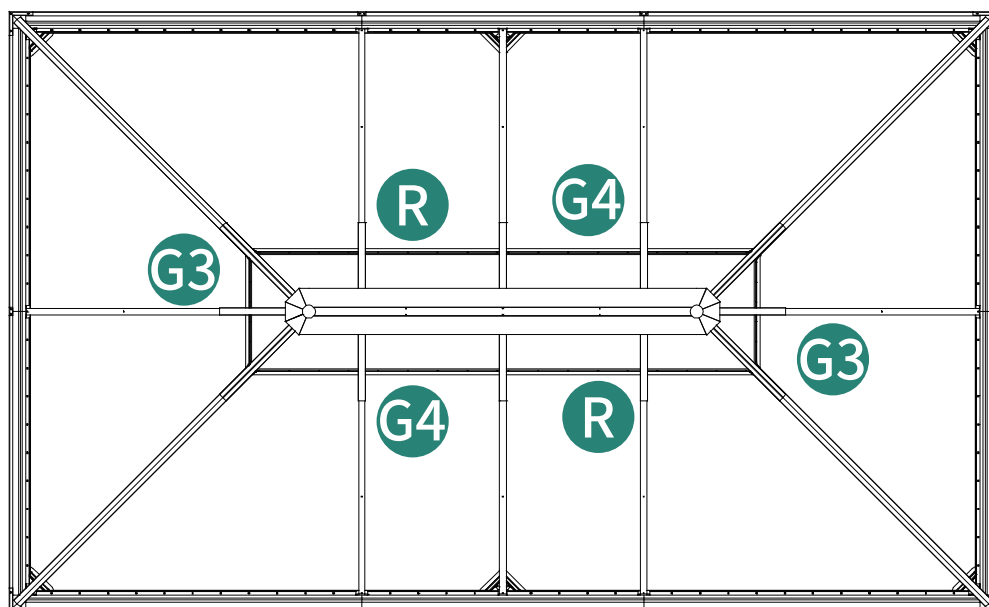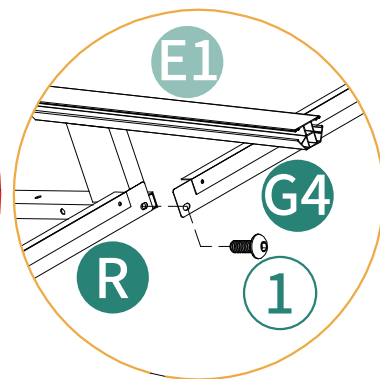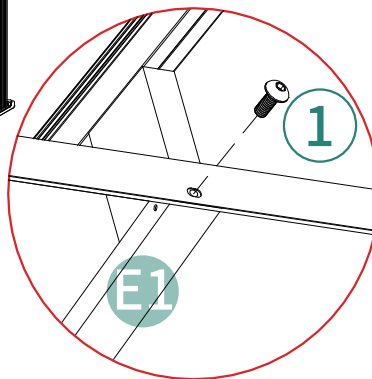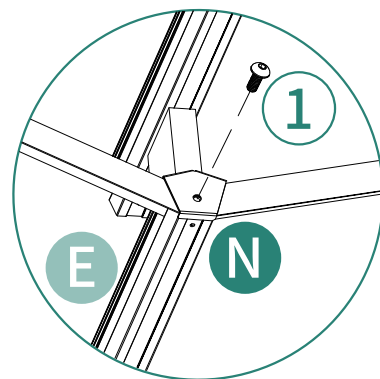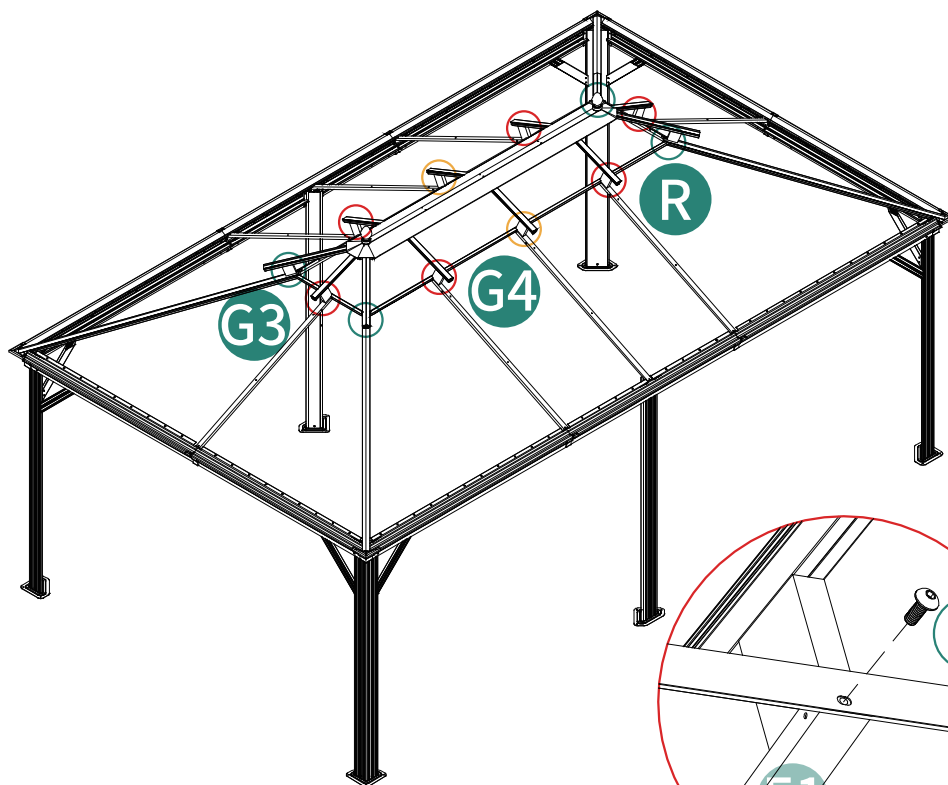

20






H2 3pcs




5 3pcs



9 6pcs

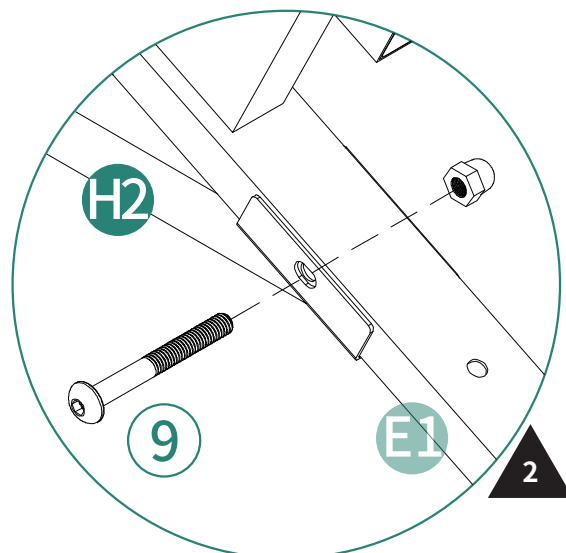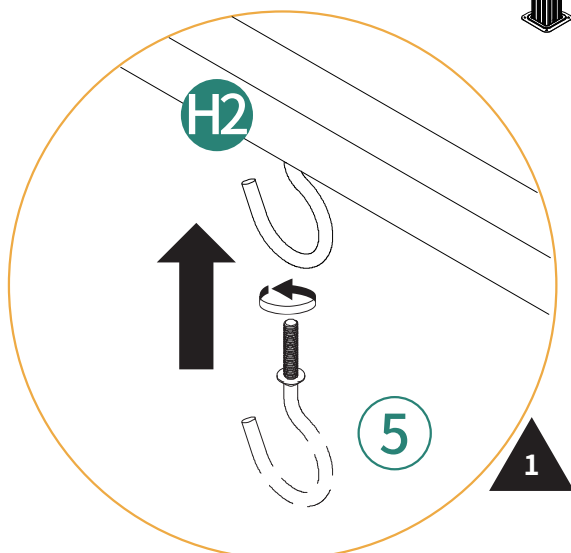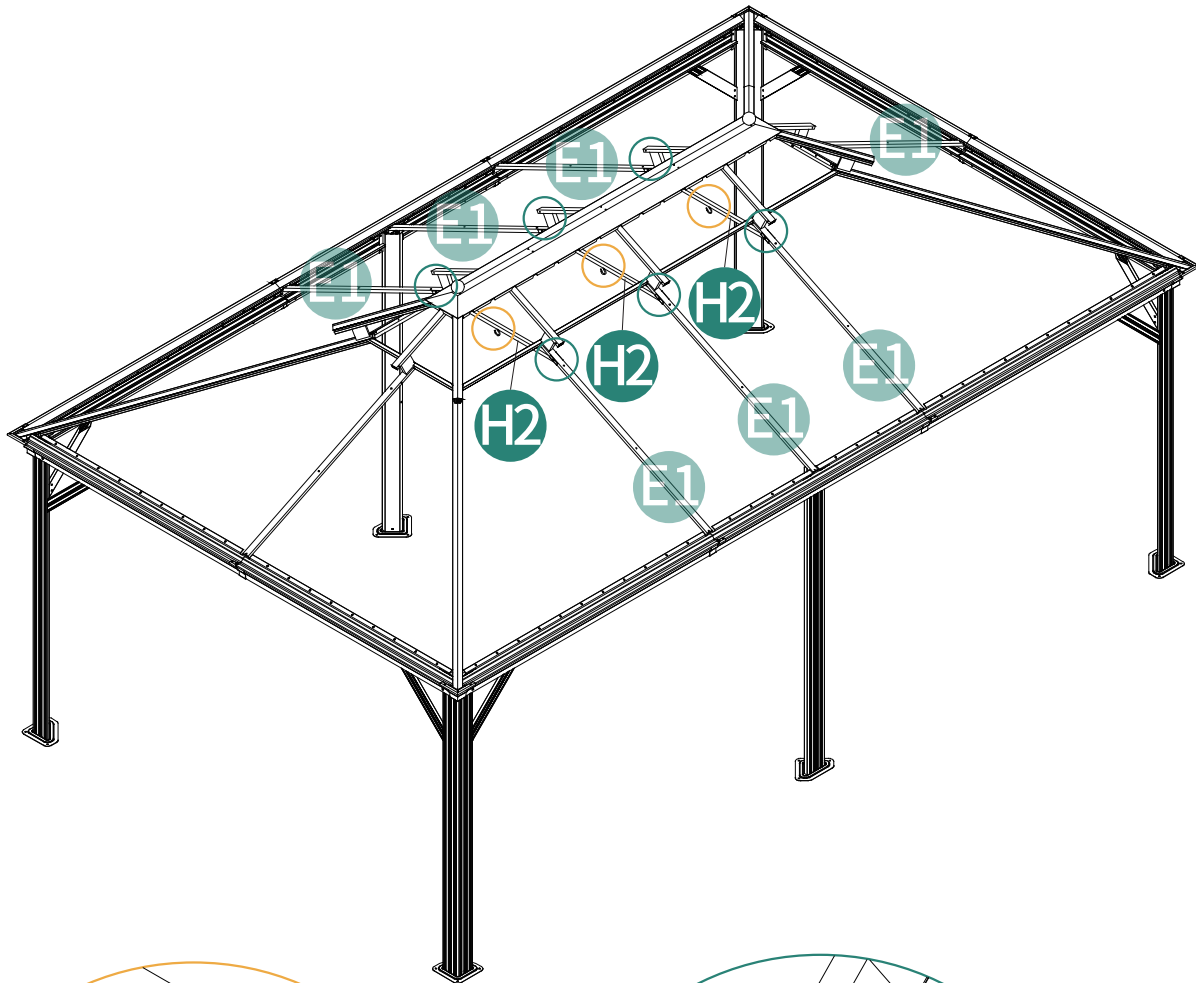

21




Ⓢ4pcs




Ⓢ12pcs






Ⓢ22pcs



Ⓢ32pcs



Ⓢ42pcs

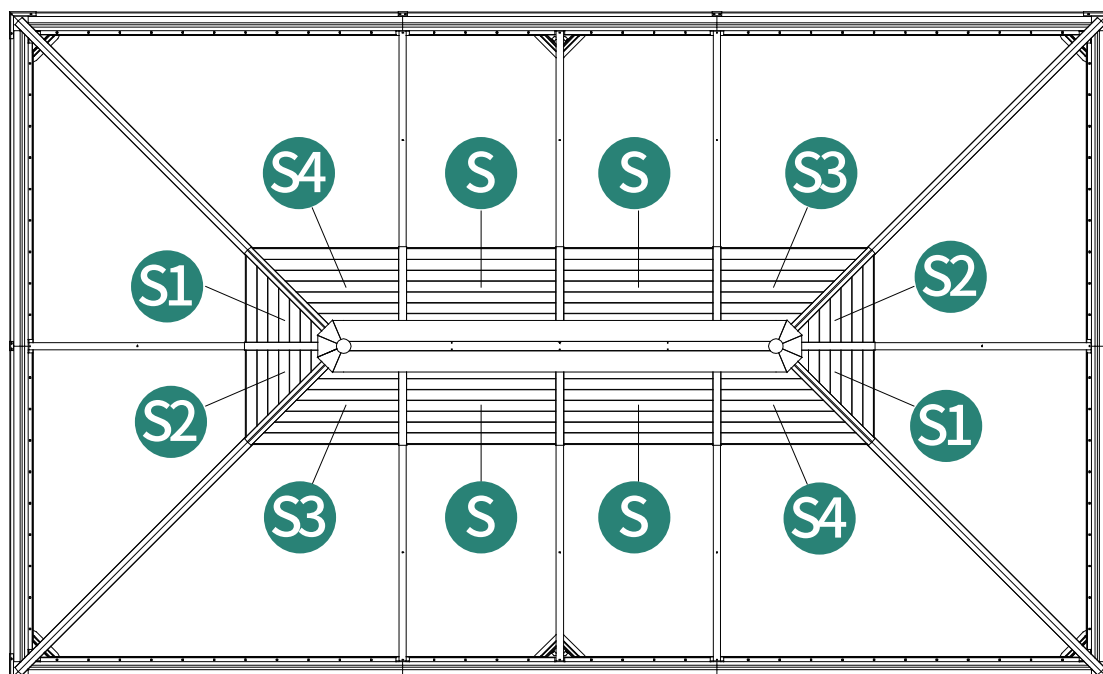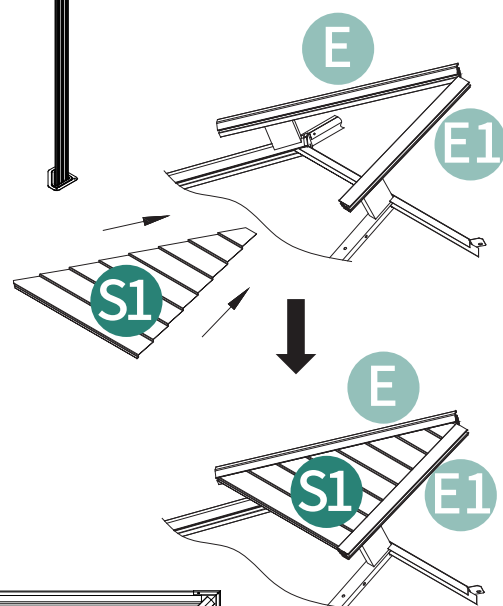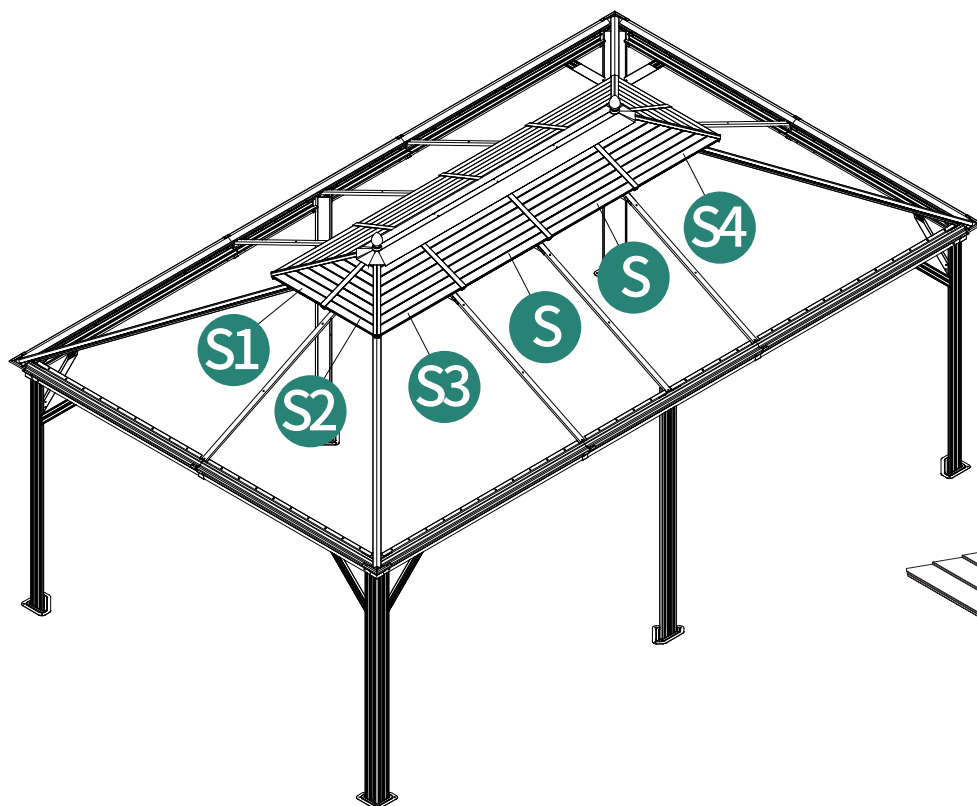

22

G1 2pcs

G2 2pcs






G5 2pcs

G6 2pcs

N3 4pcs

N4 8pcs

1 12pcs

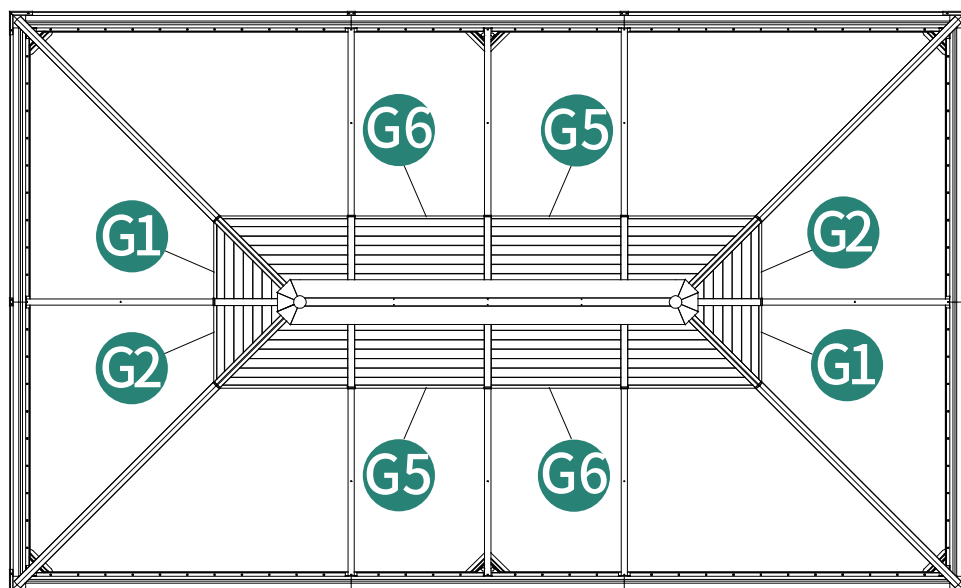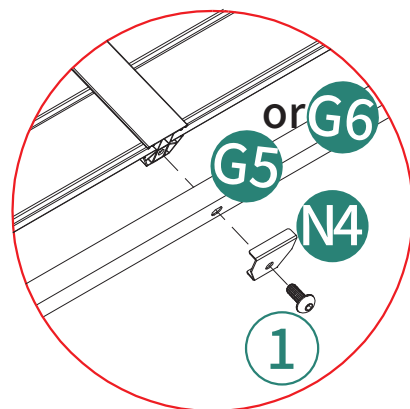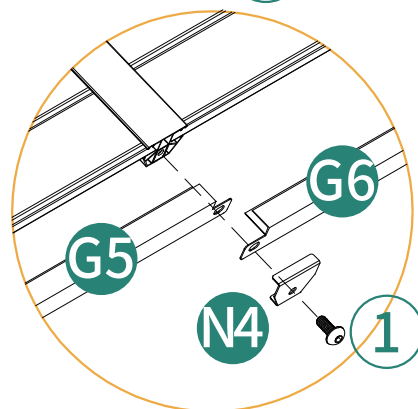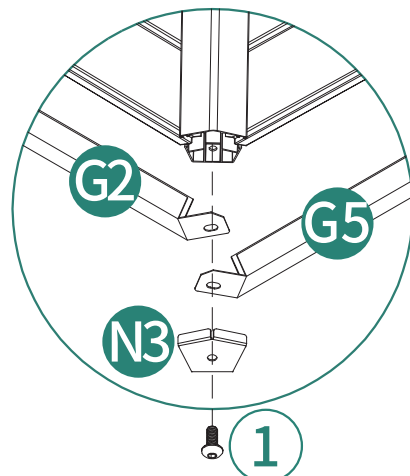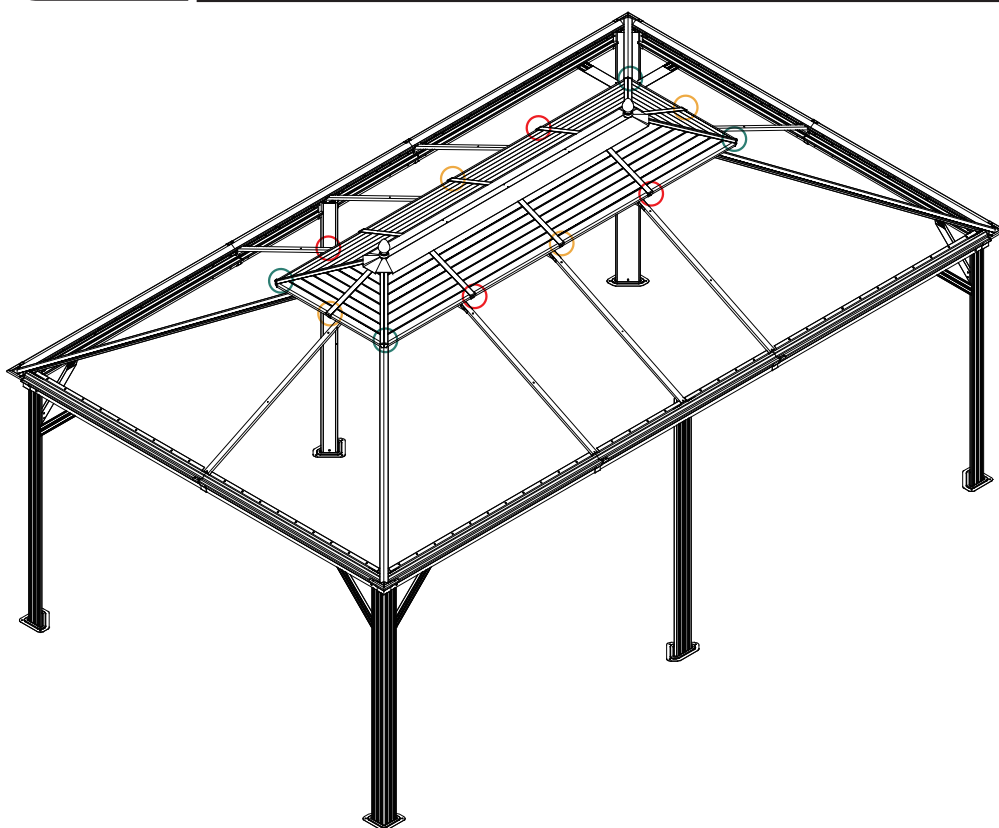

23

X2










(F)4pcs (F1)4pcs (F2)4pcs (W1)8pcs (1)16pcs

When connecting parts F and F2, F1&F1 via parts W1 and ①, make sure the ends marked by triangles are in the same direction to ensure smooth installation.

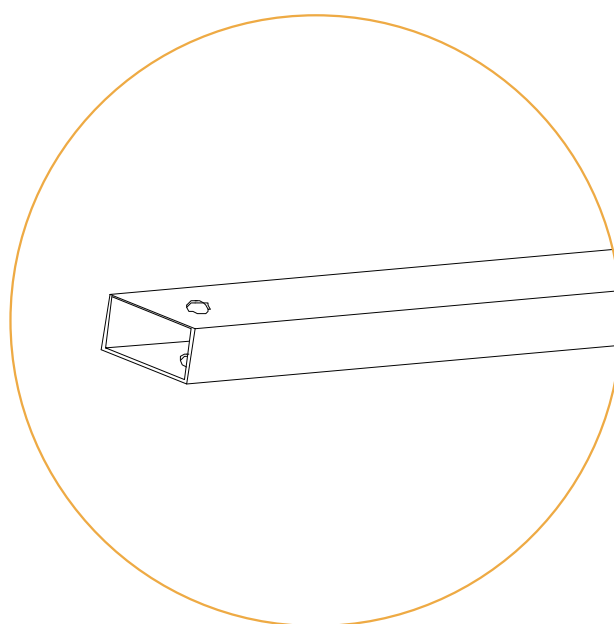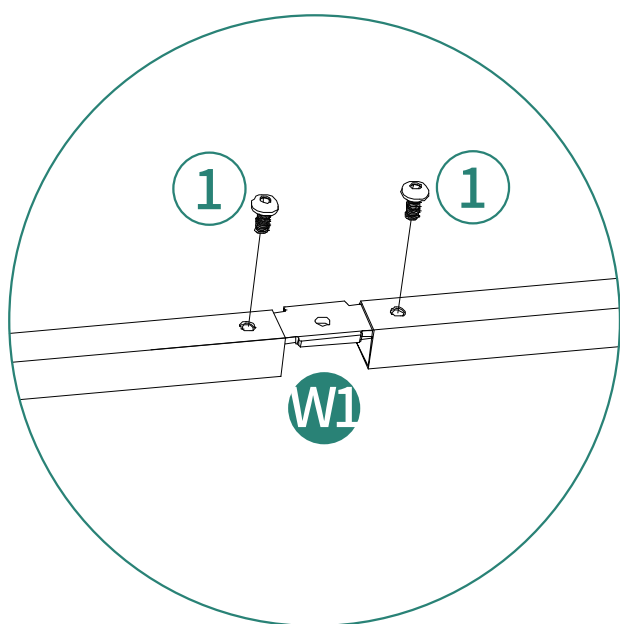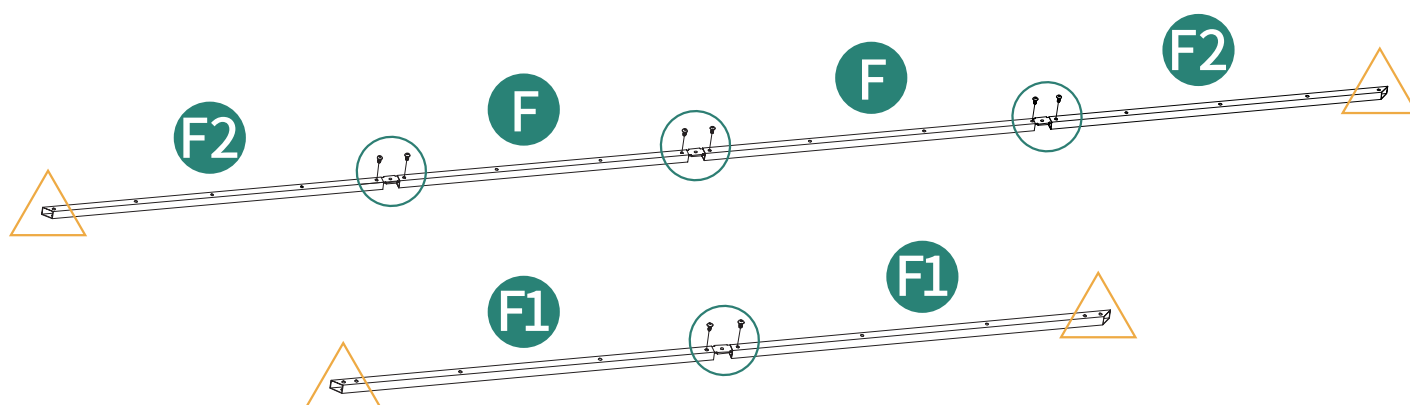





24







Ⓢ4pcs




①20pcs

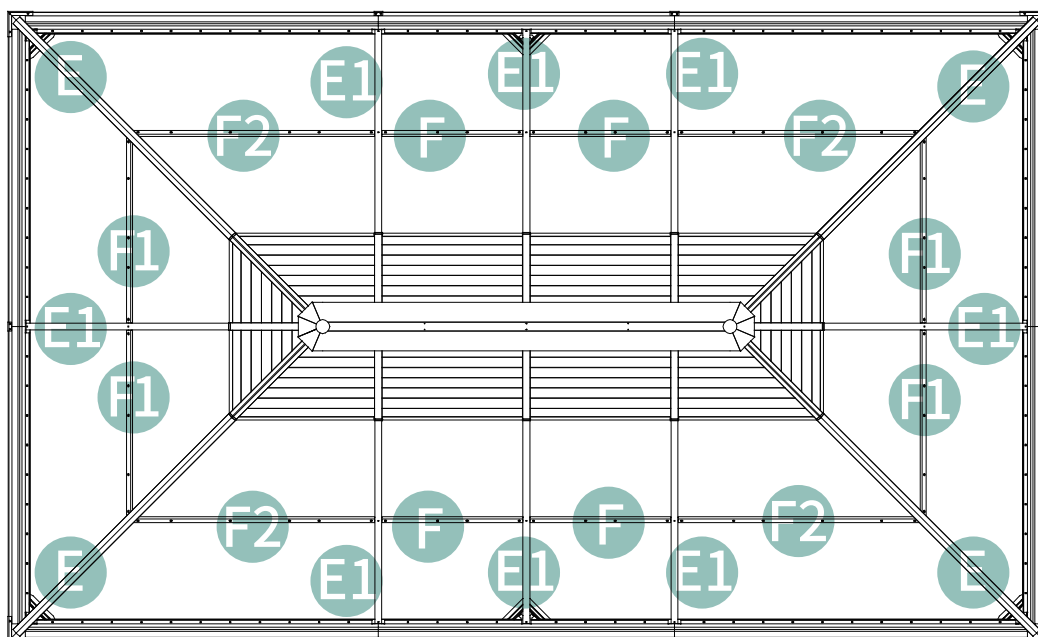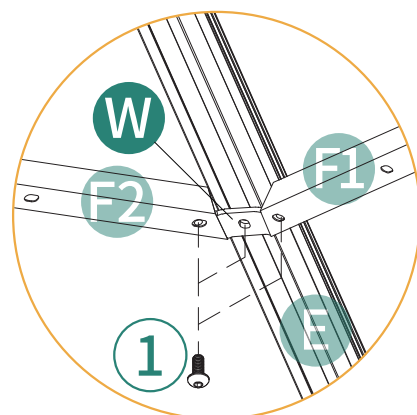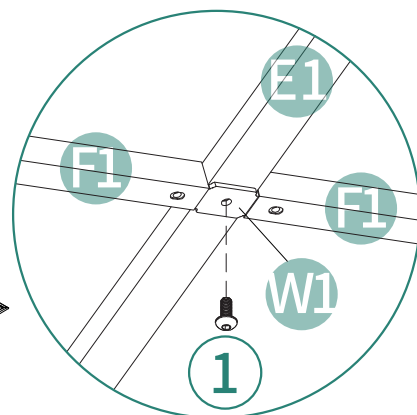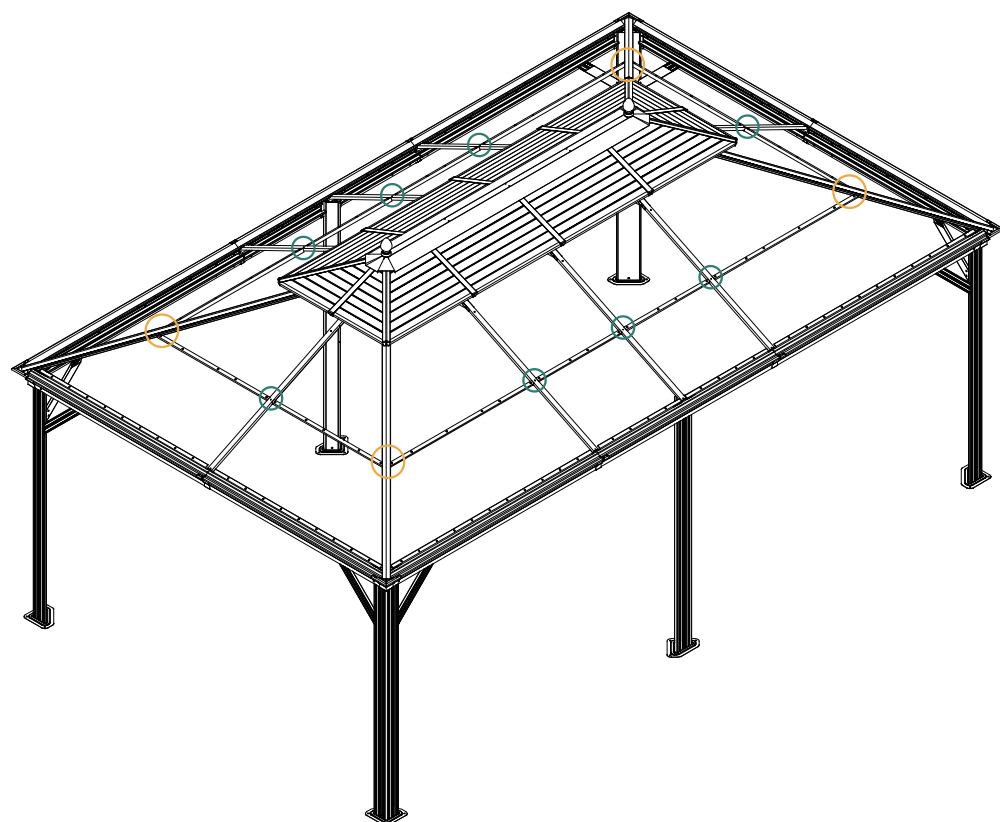


25
X2

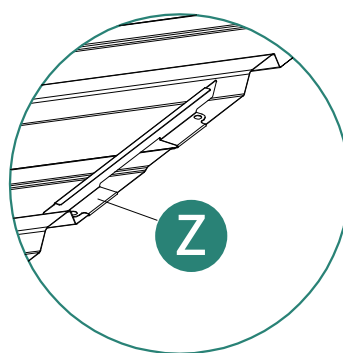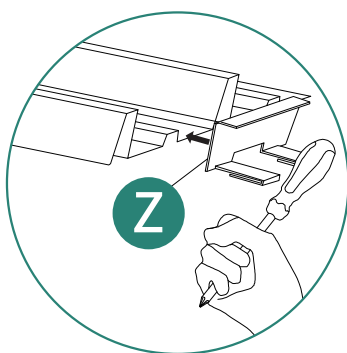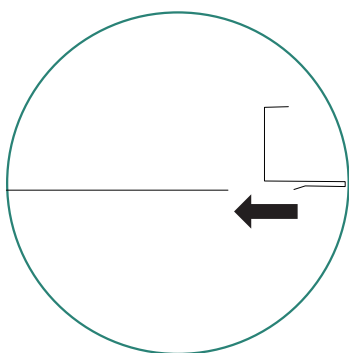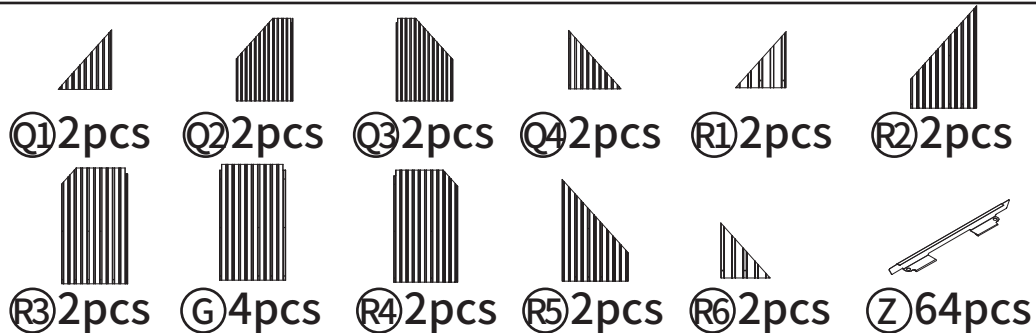


Attach Z by lightly tapping with a screwdriver.

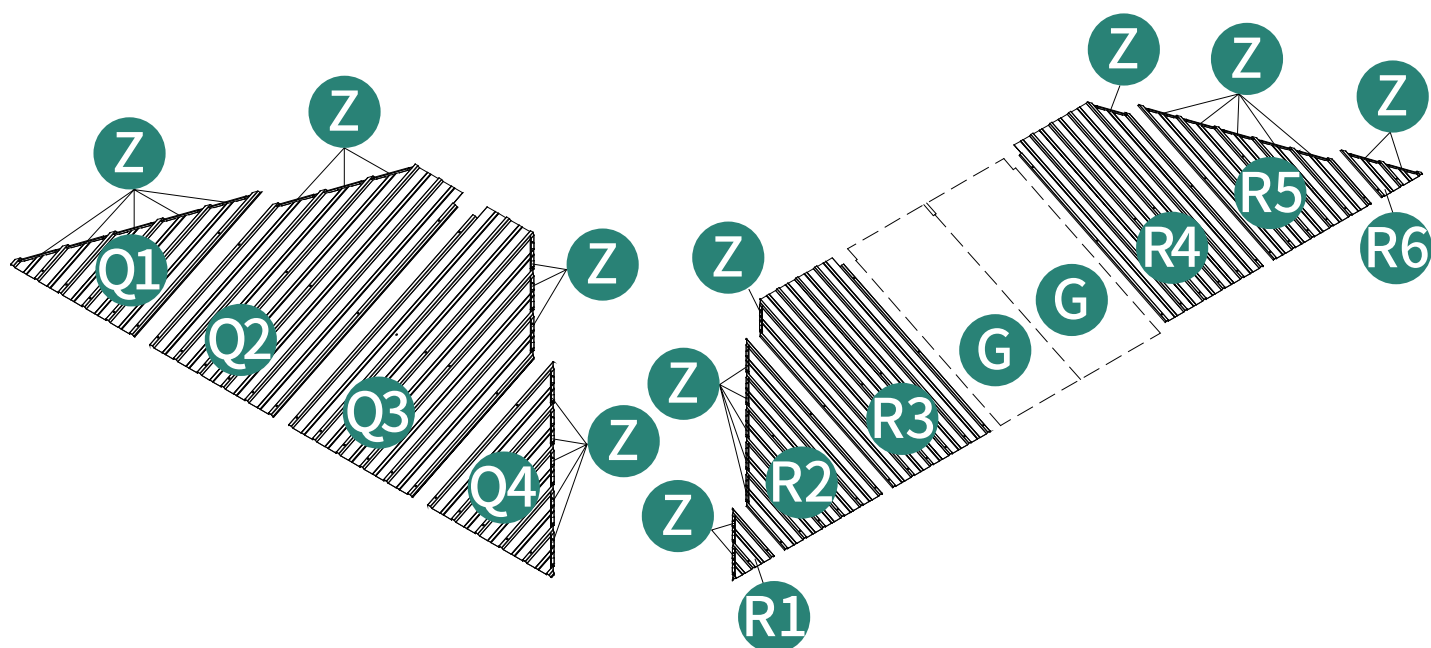


26

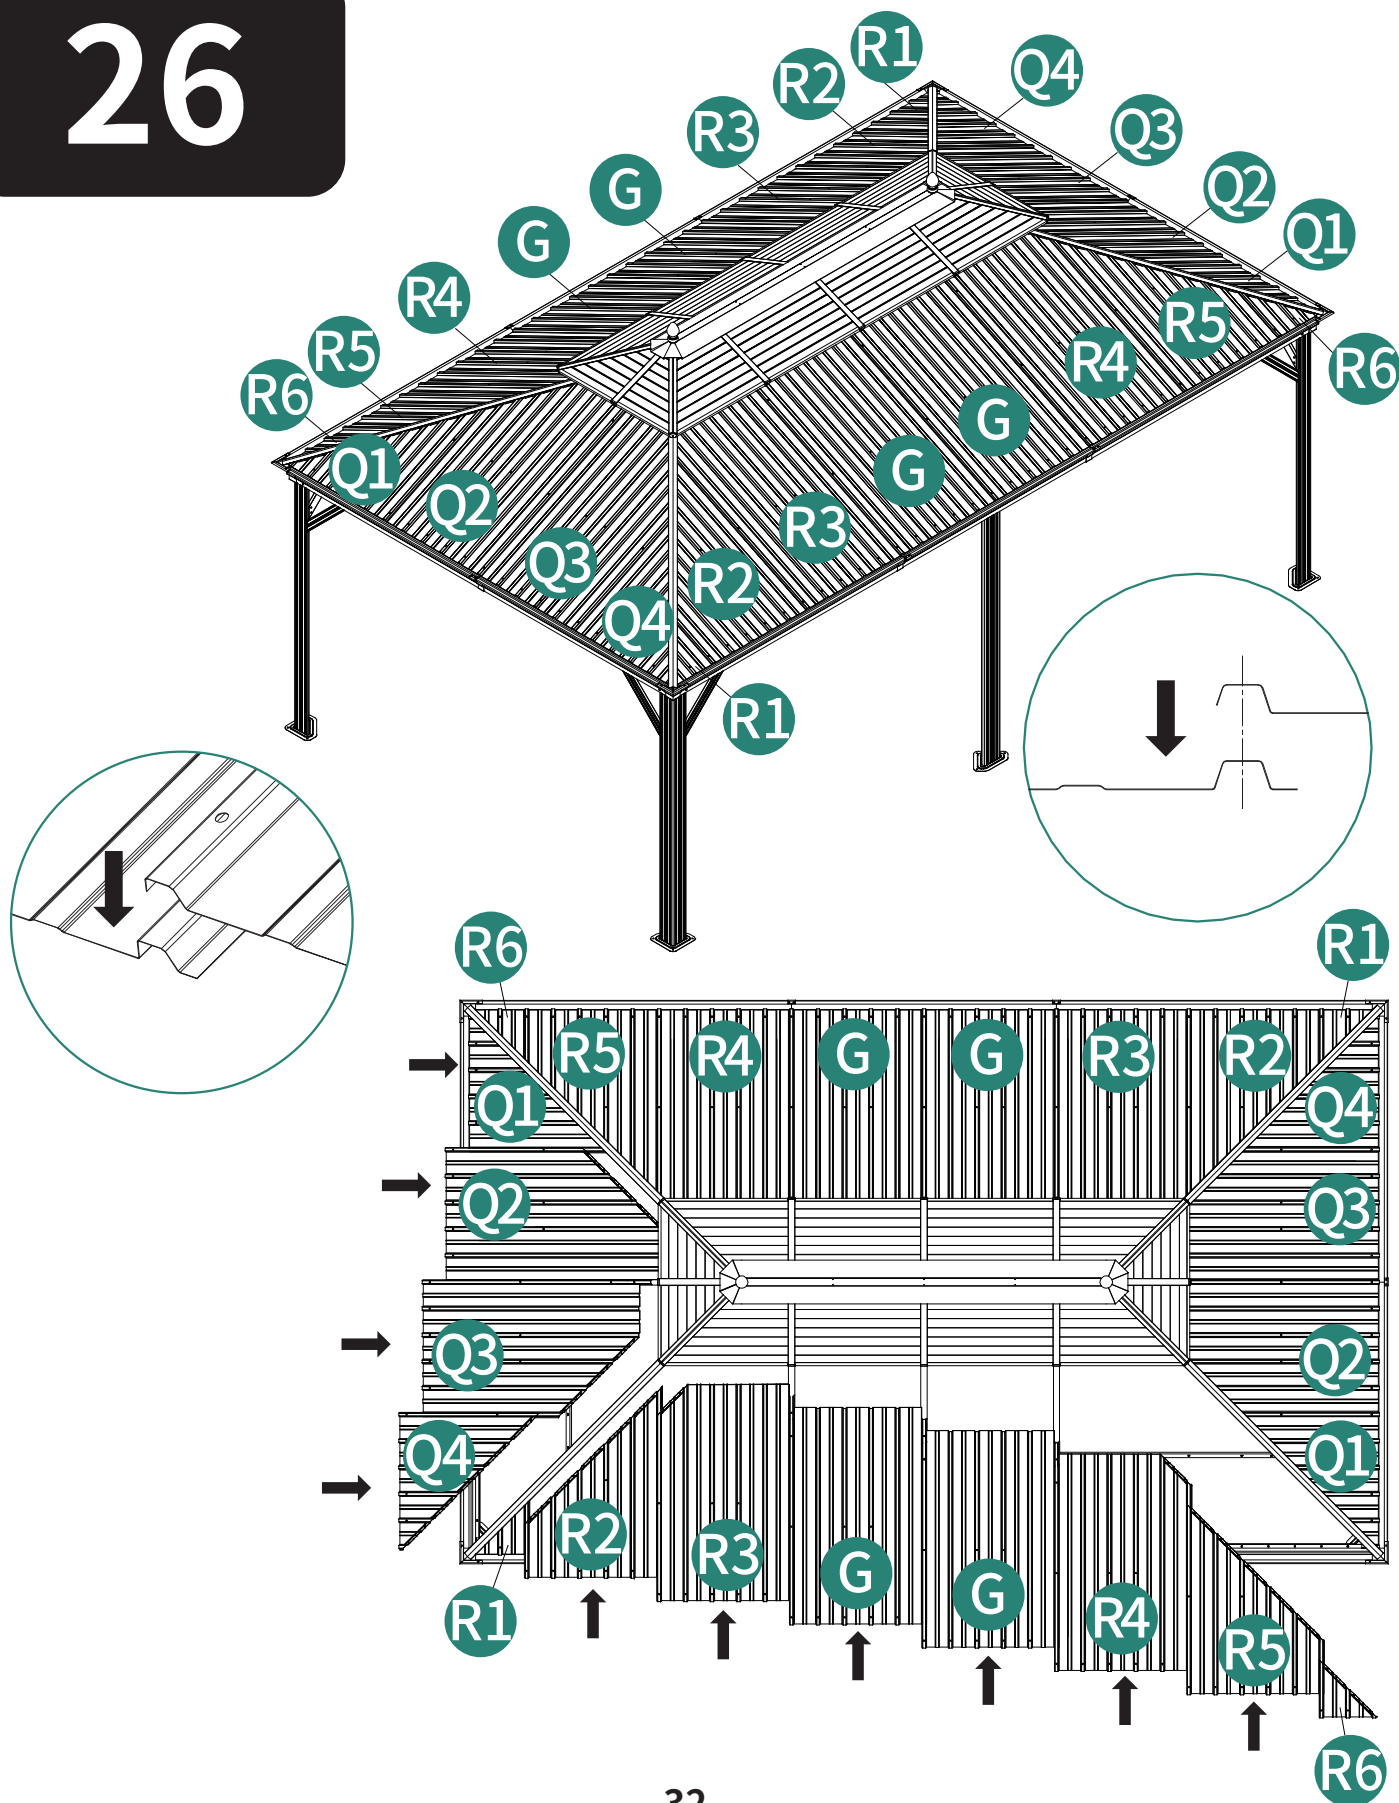

27

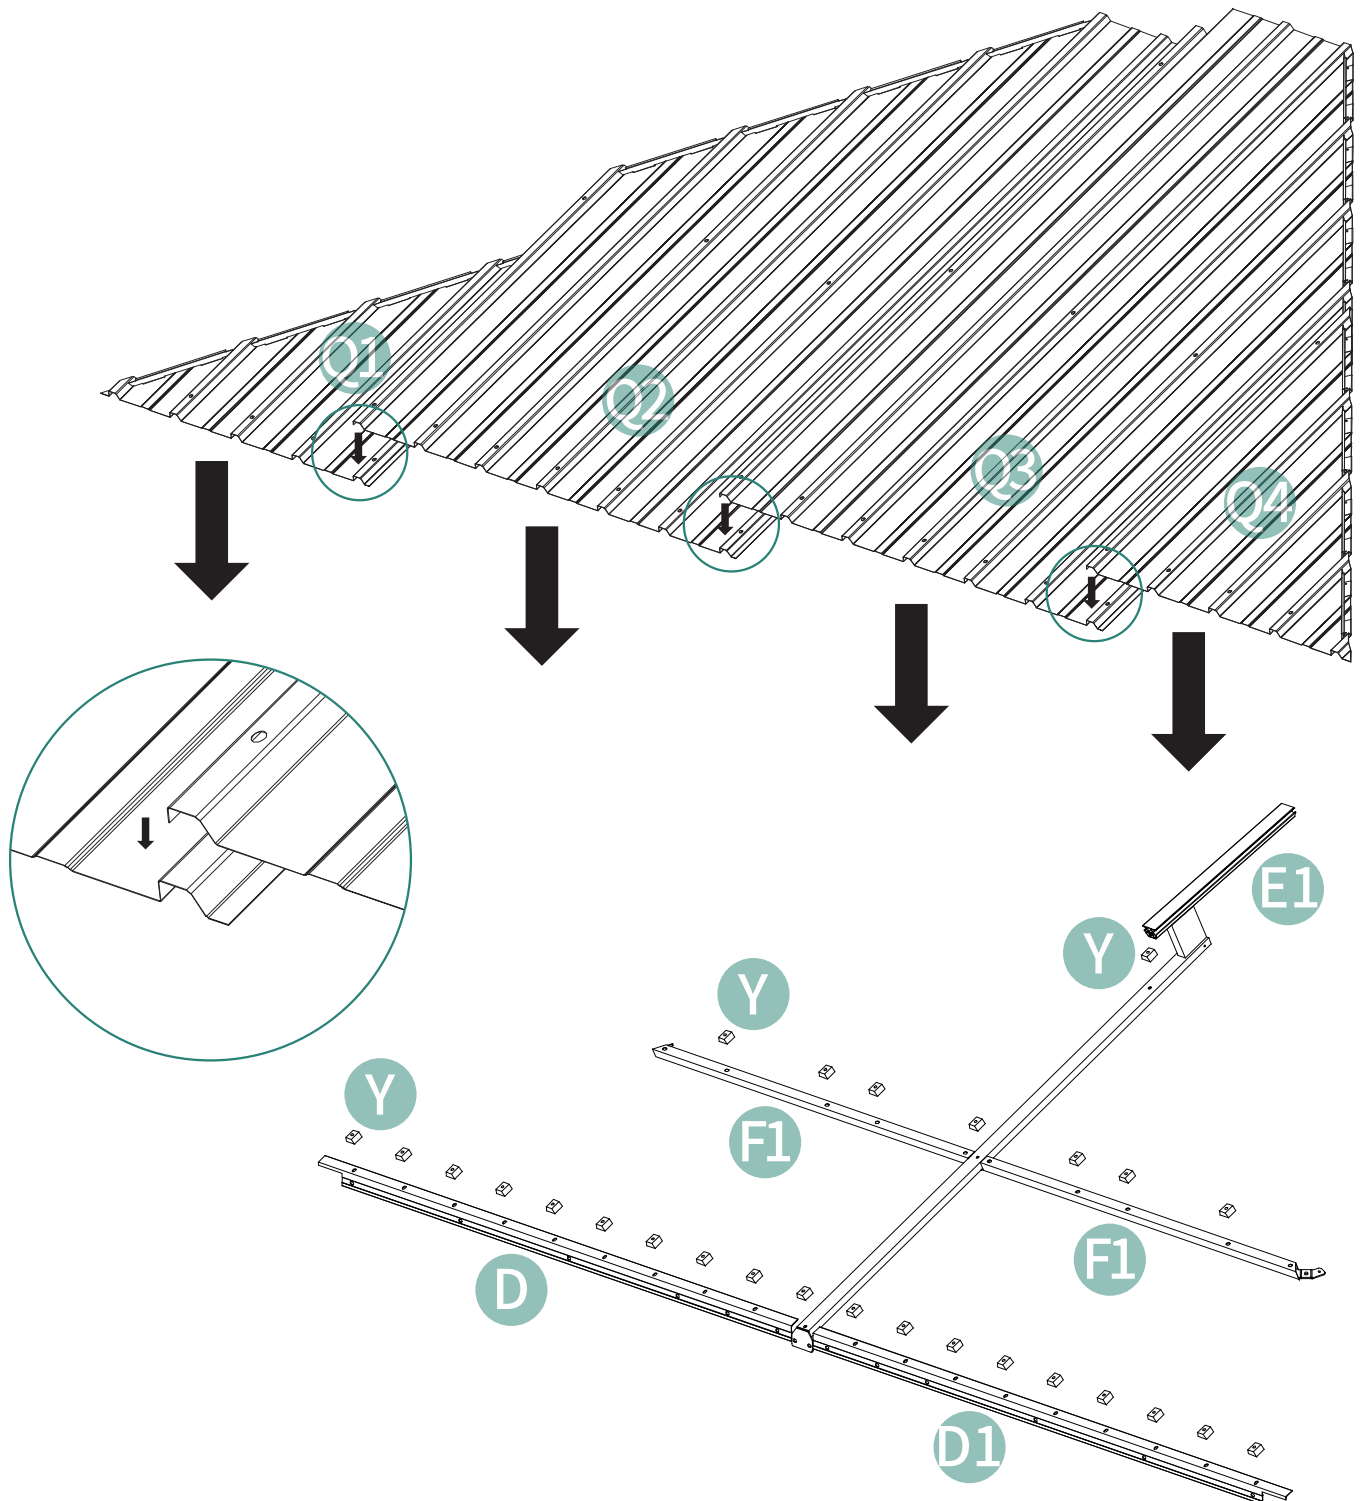

28

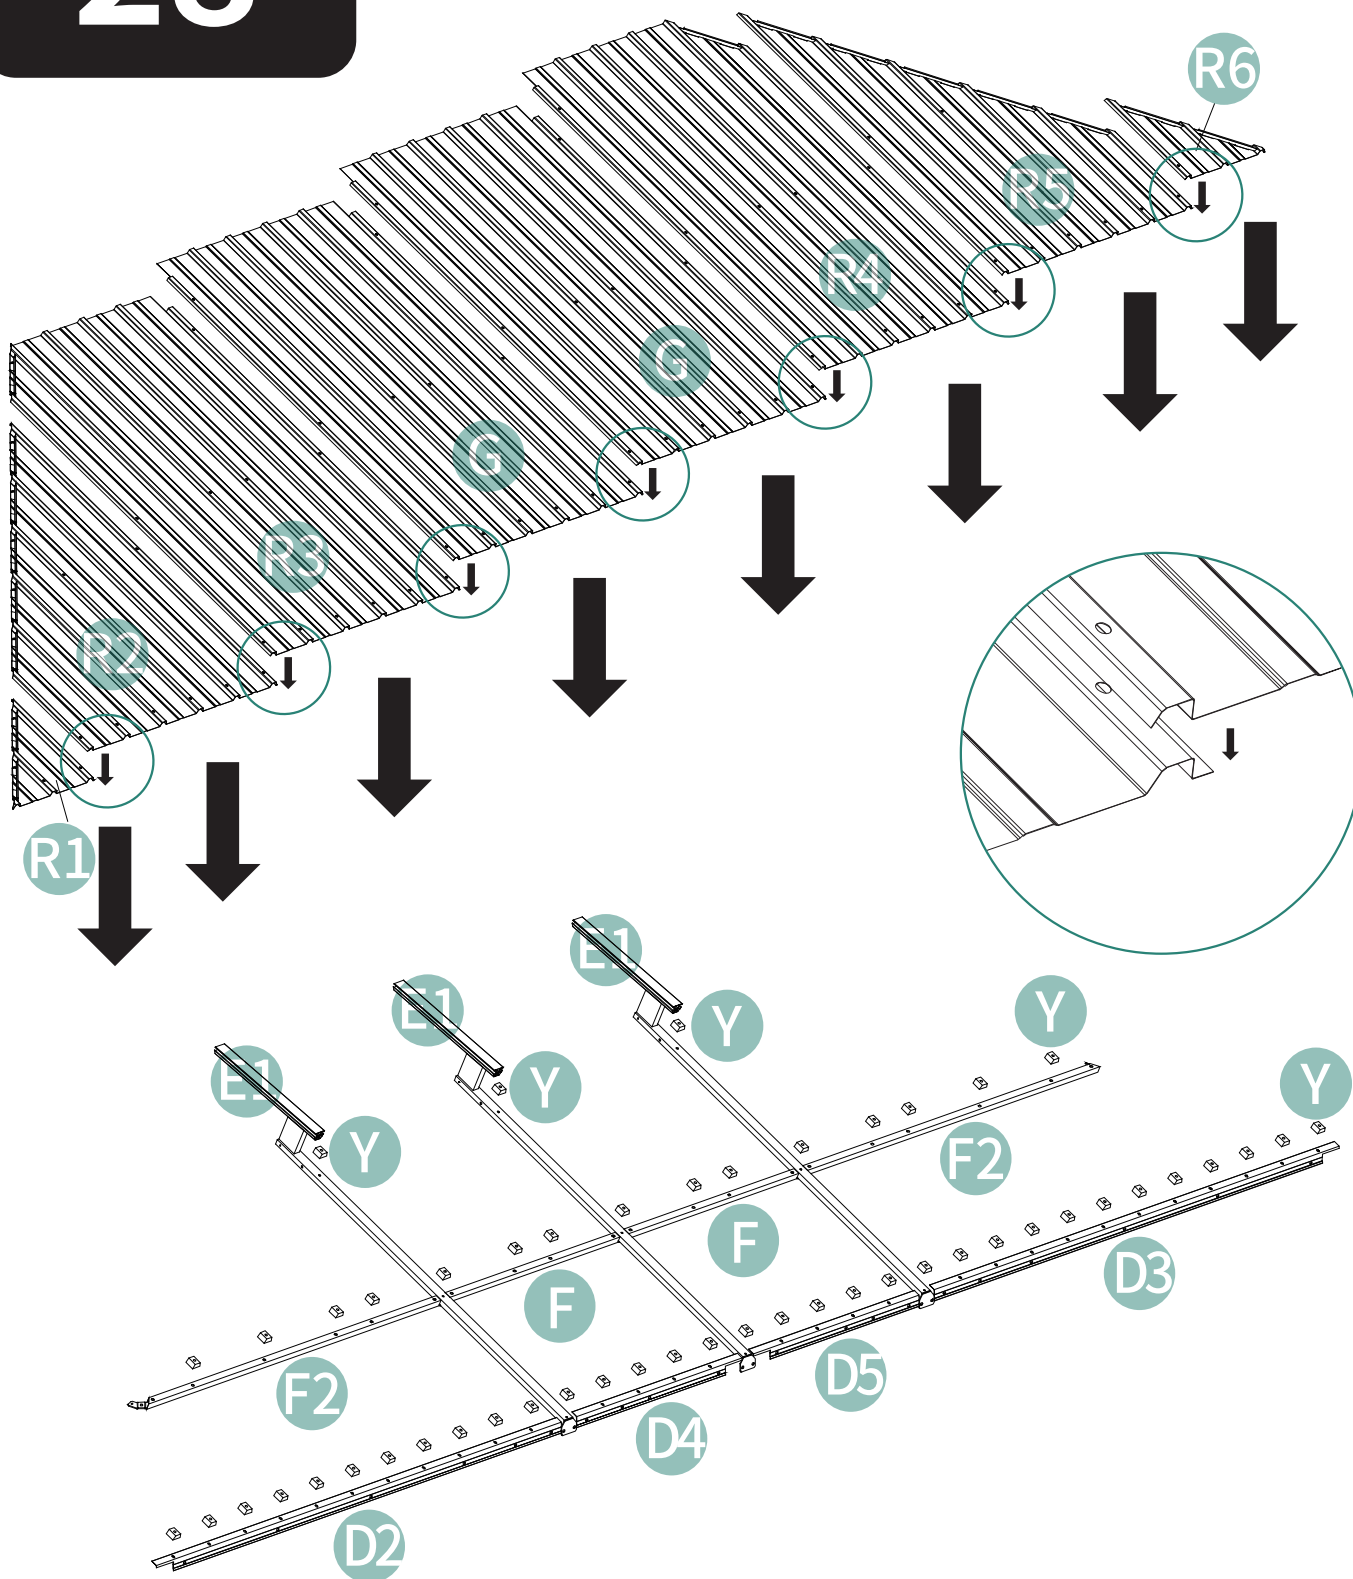


29

X2



① 156pcs




② 16+96pcs



⑥ 8pcs




⑦ 36pcs

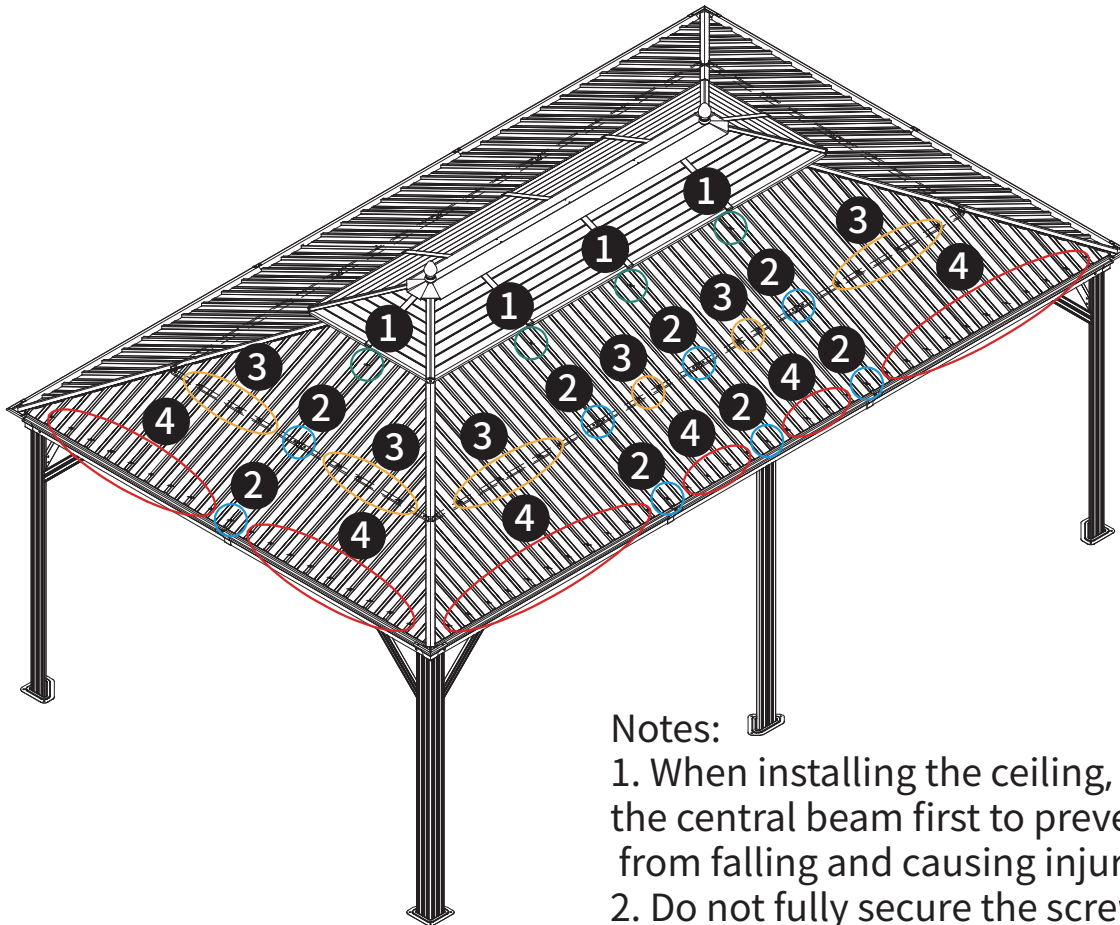


Notes:


1. When installing the ceiling, fix the screws on the central beam first to prevent the iron sheet from falling and causing injury.
2. Do not fully secure the screw until all screws are properly in position.
3. Two persons are needed when installing Part Y. One should secure Part Y's position from inside the gazebo, while the other inserts screws into Part Y from outside the gazebo.

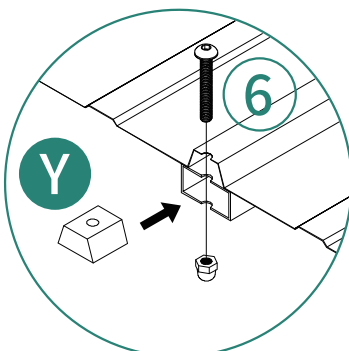


1

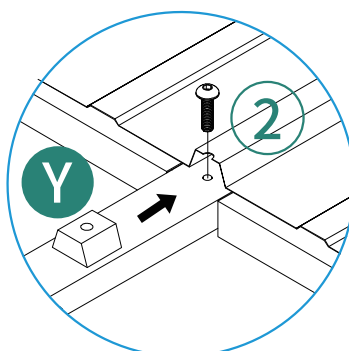

2

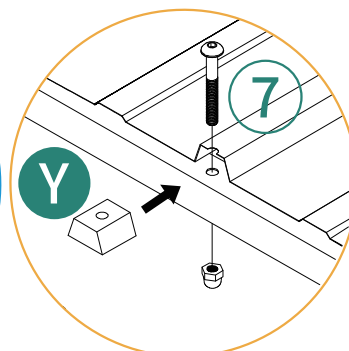


3

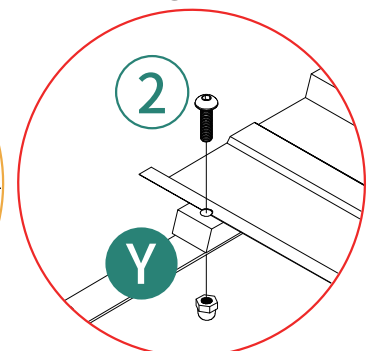


4



30



Ⓣ4+2+6pcs

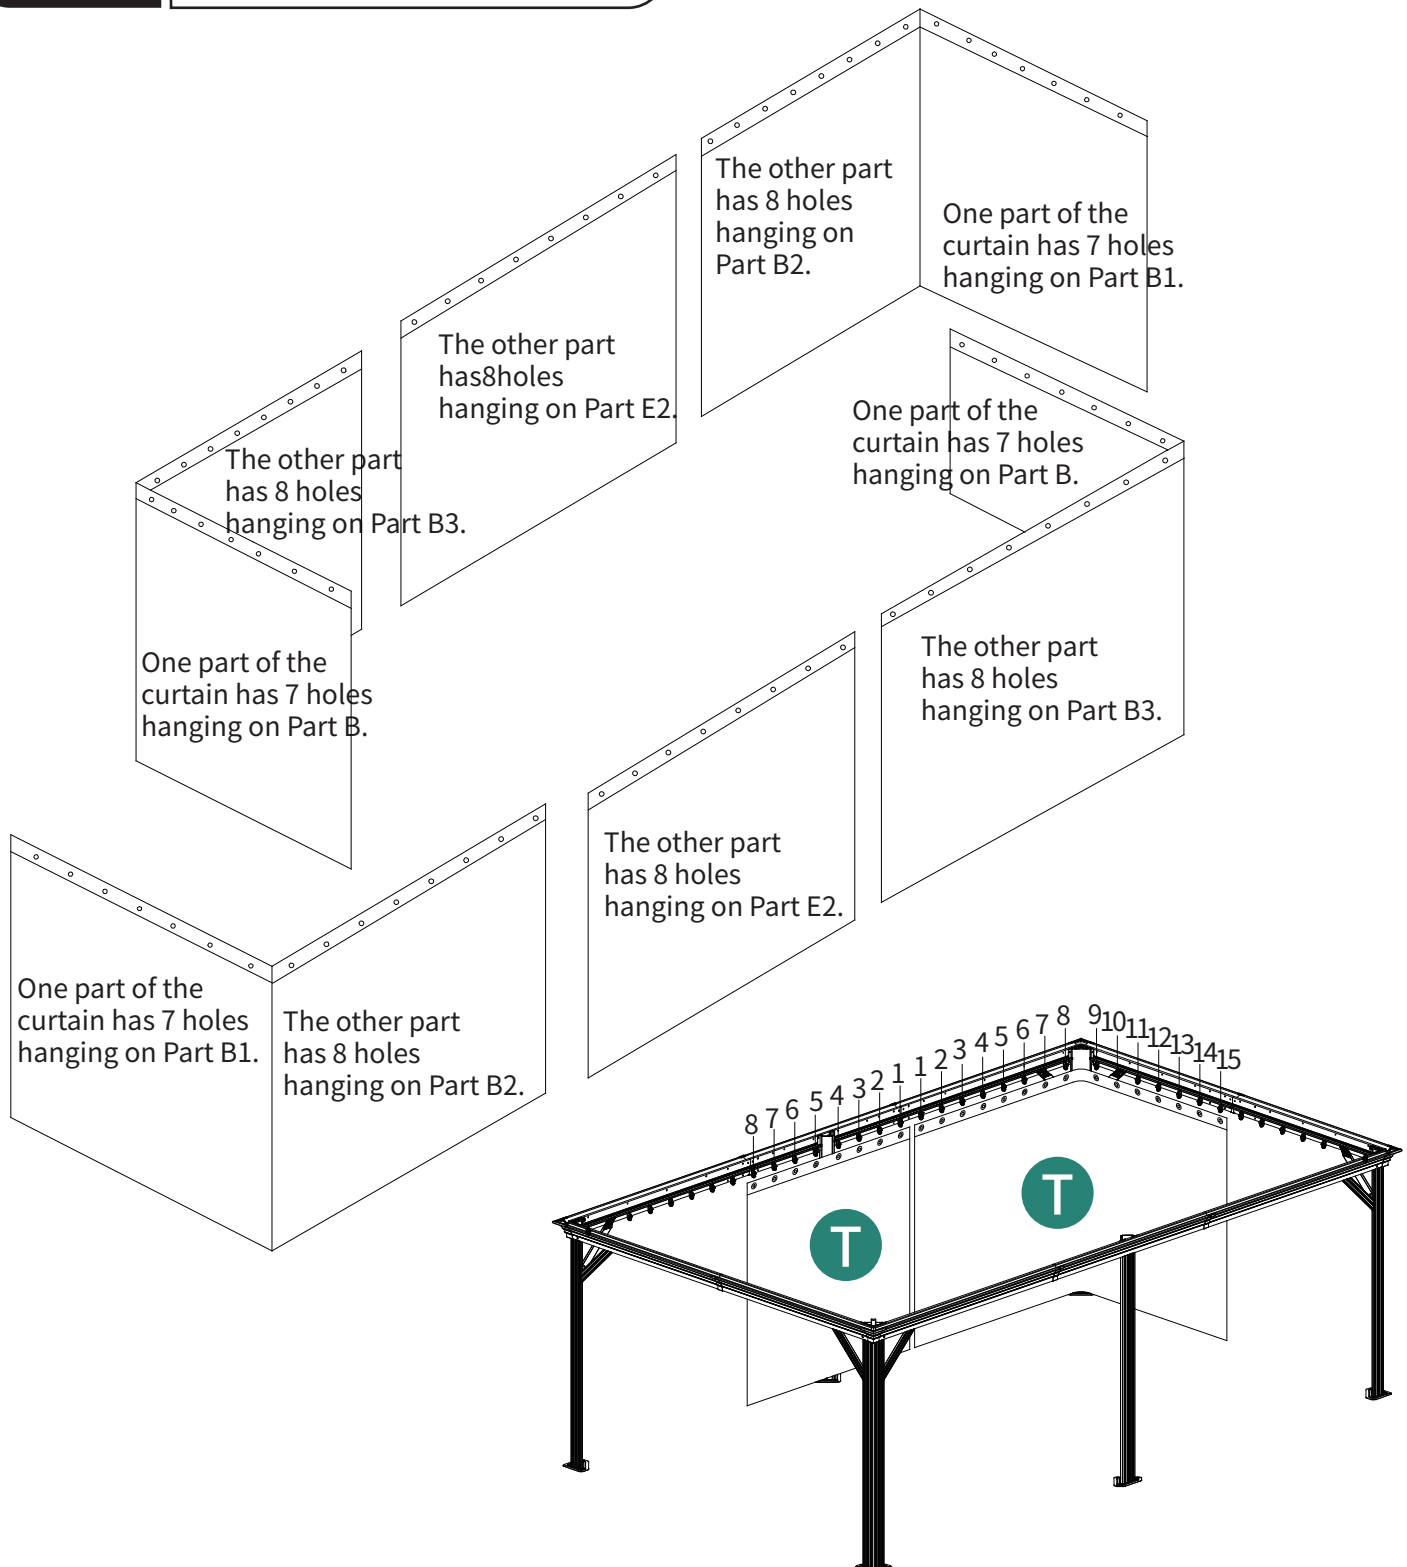


31

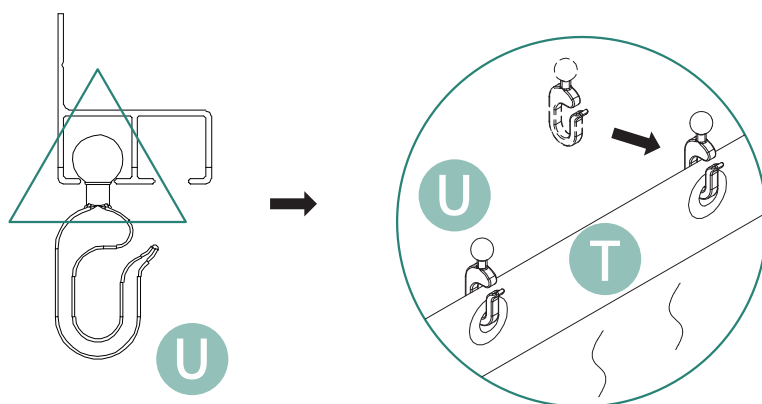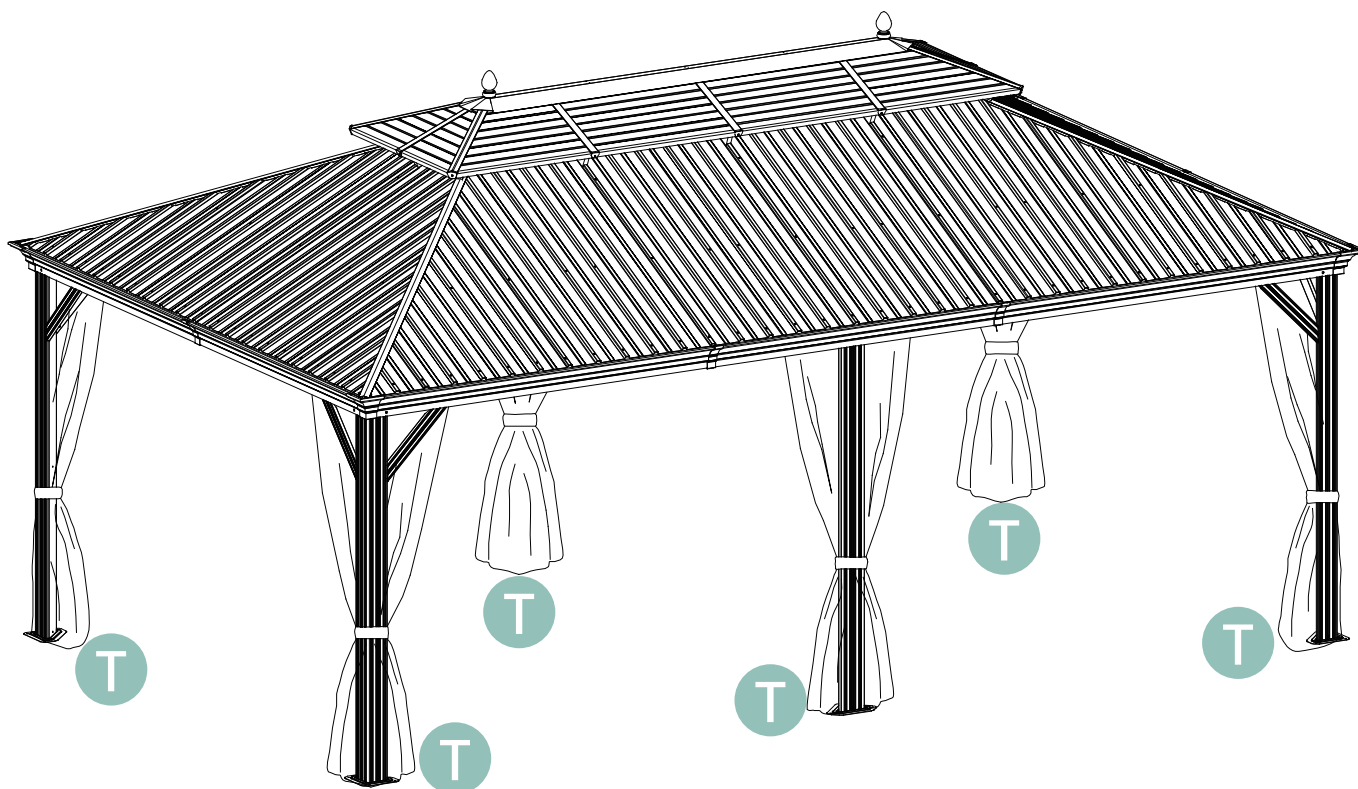


Pay attention to the sidewall curtain's installation position.



32




T1 4+2+1 pcs

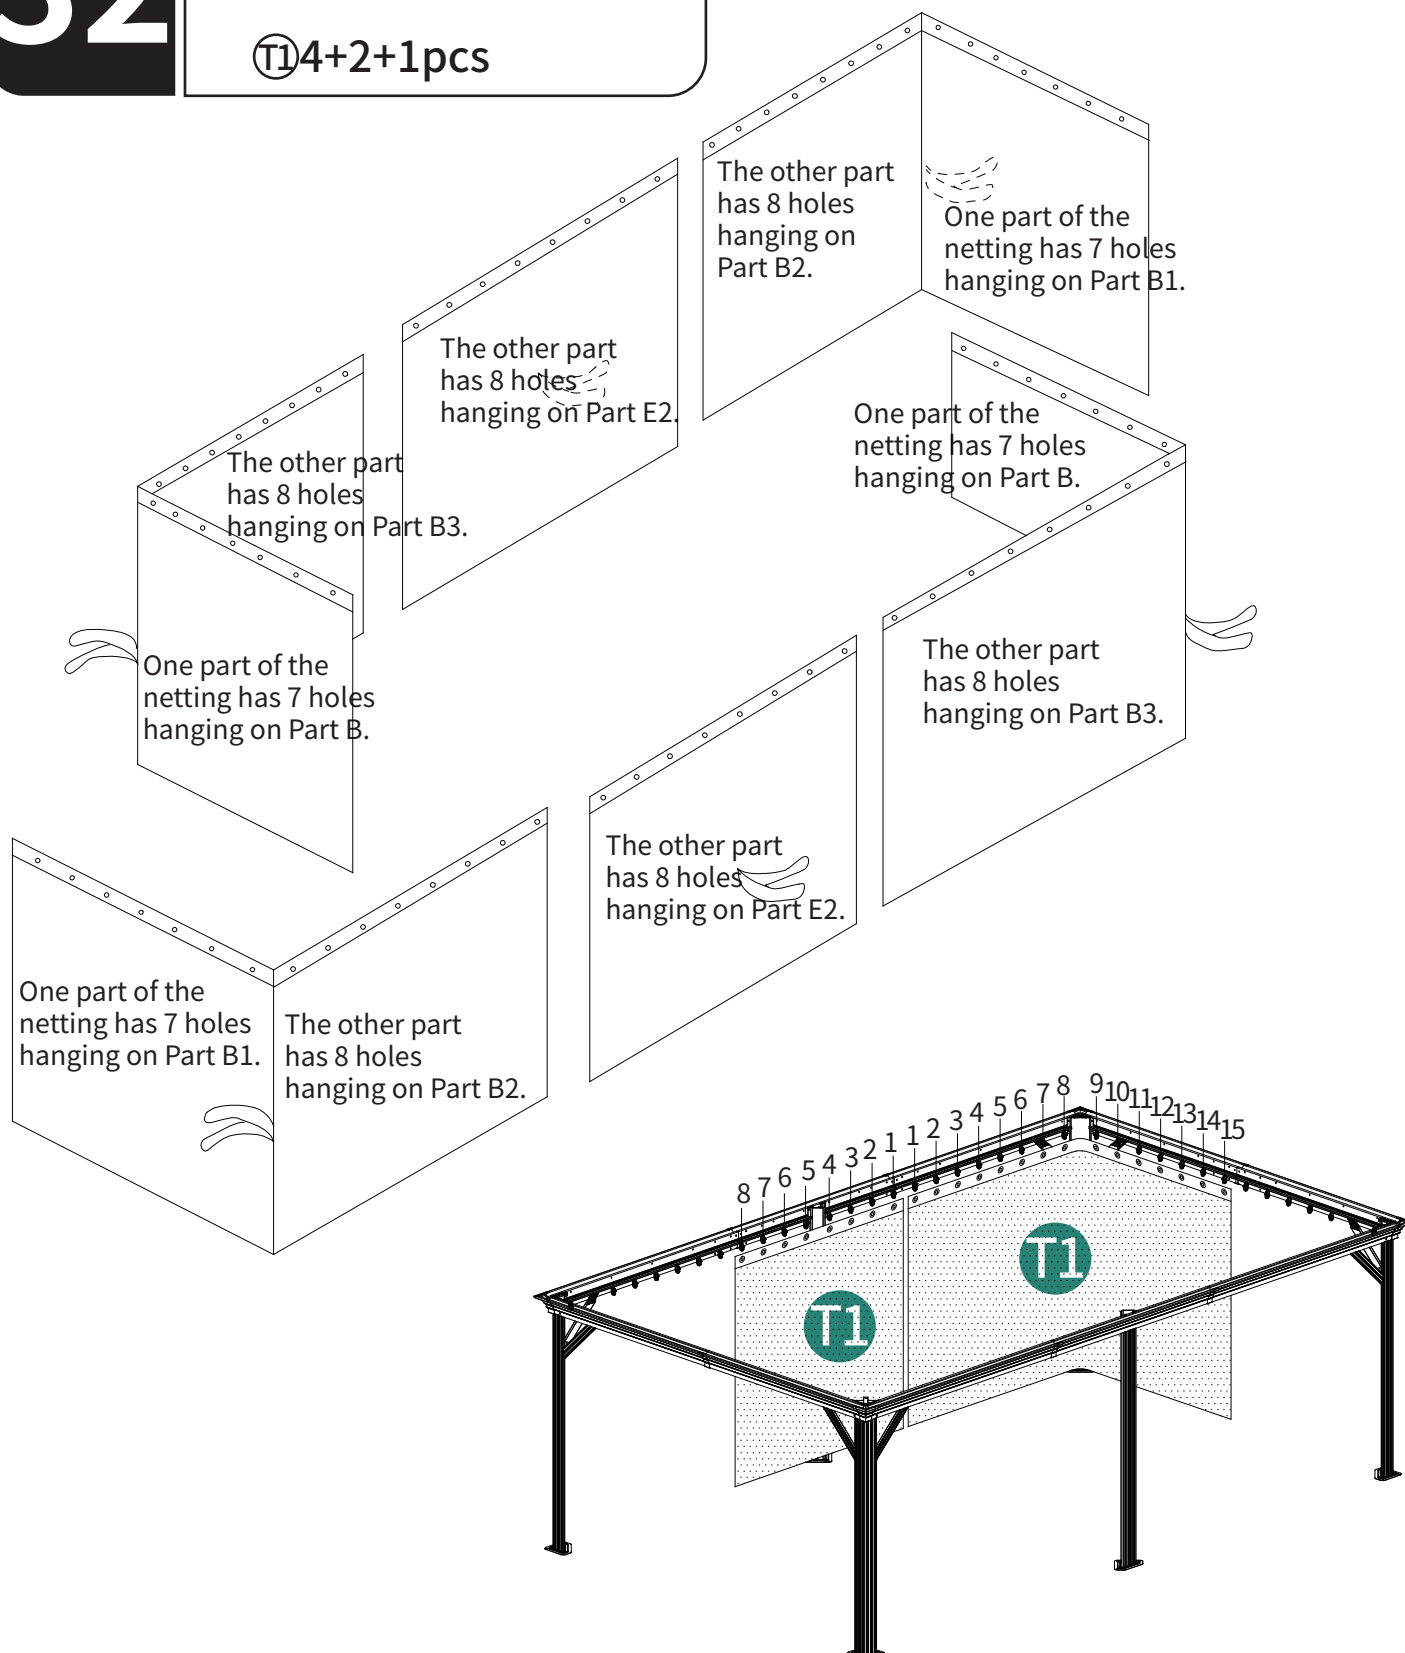


33

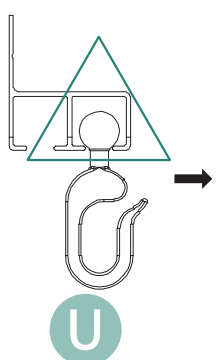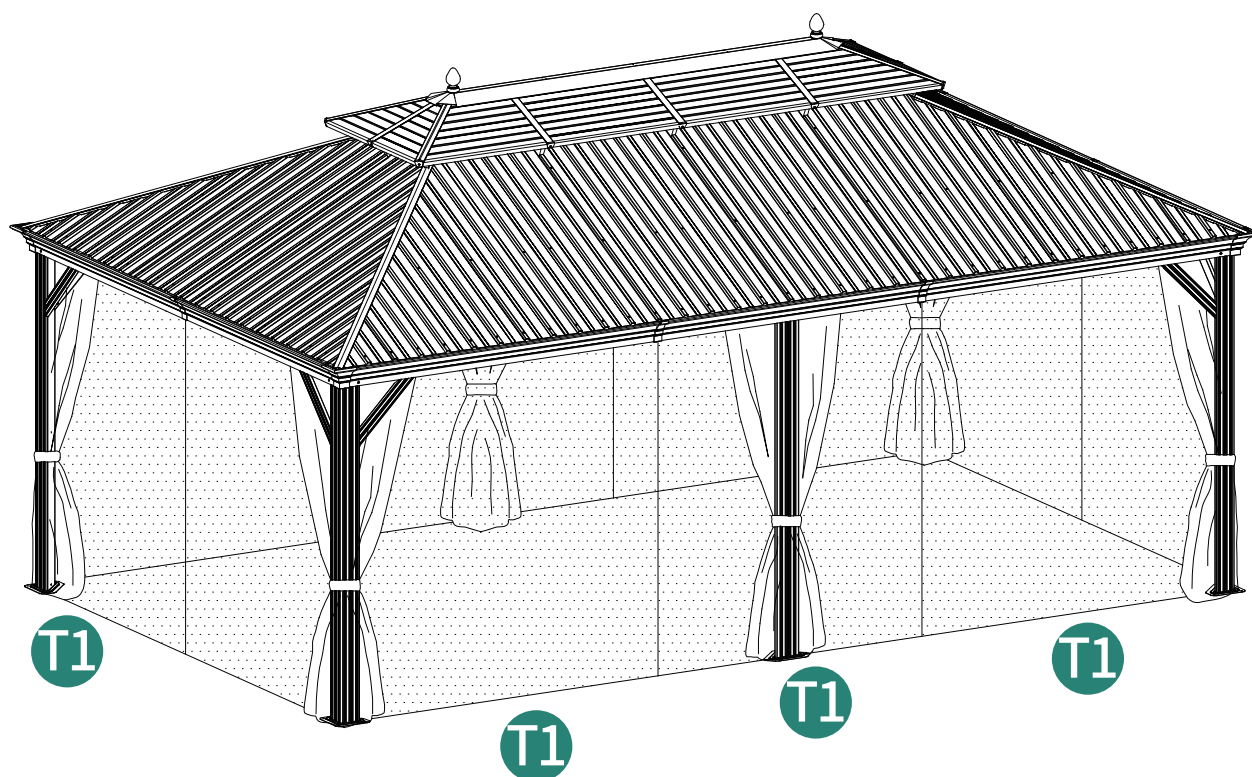


Pay attention to the sidewall netting's installation position.

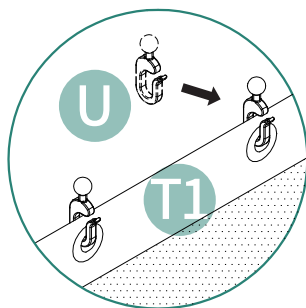

1

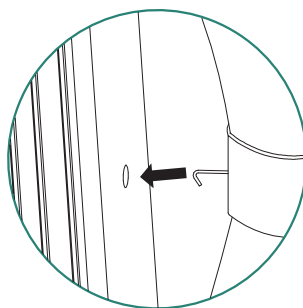

Hang the hook attached to the netting on Part A&A1.

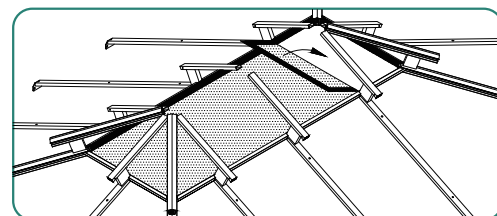

2


34



⑩18pcs







Y118pcs

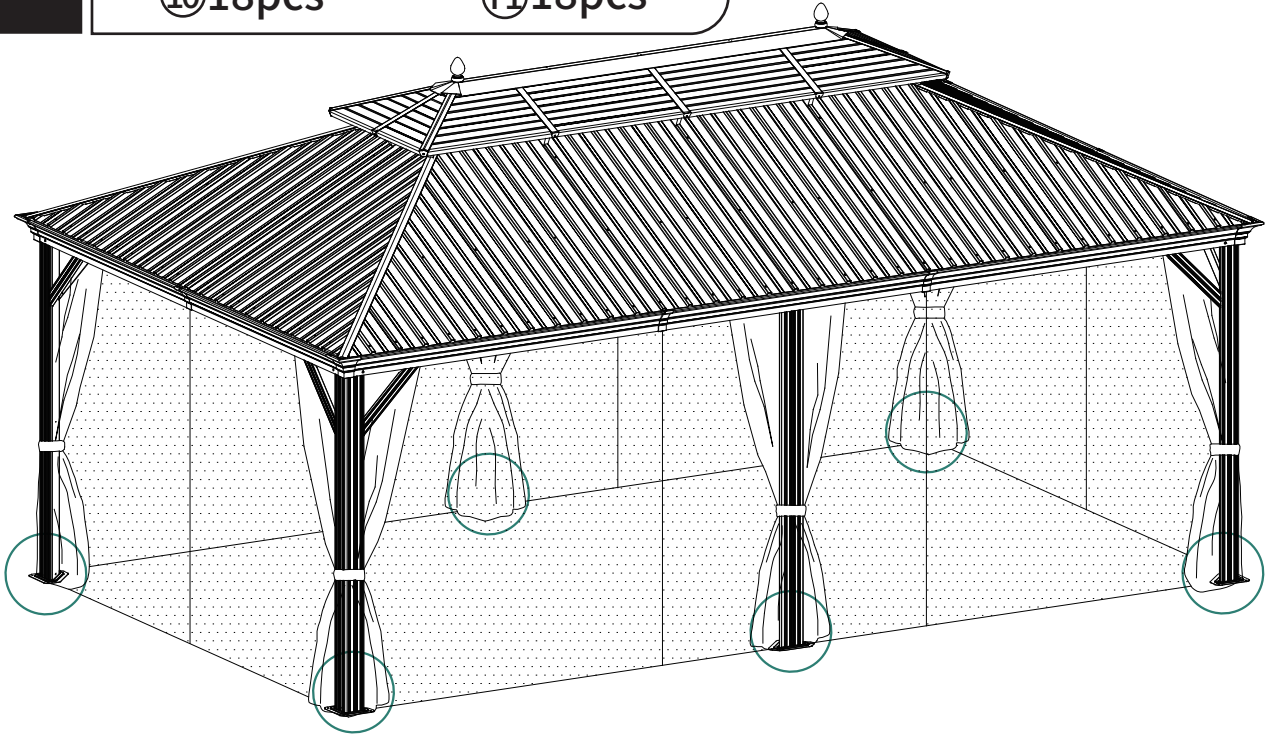


To improve wind resistance, **be sure to complete this installation step. If expansion screws or ground nails are not installed, strong winds may topple the gazebo.**

Expansion screws are essential for stability on cement surfaces, and ground nails are for grassy surfaces. All are included in the accessories package.

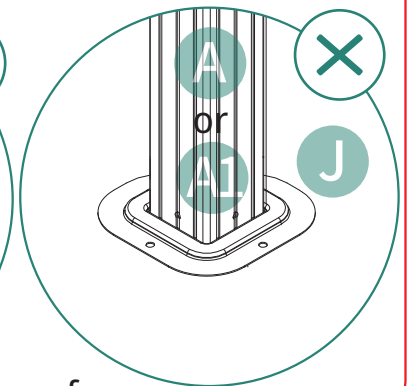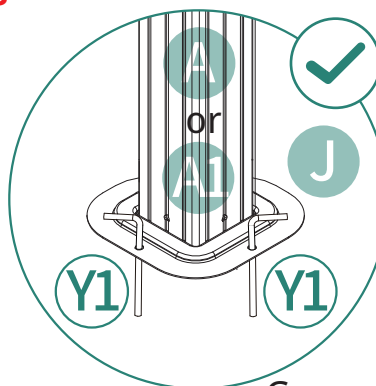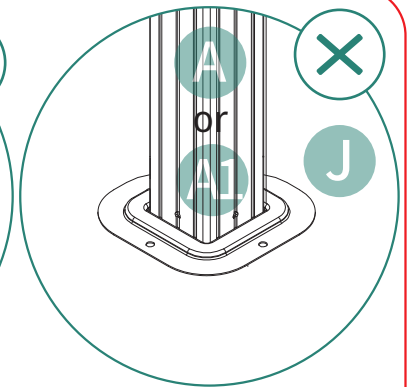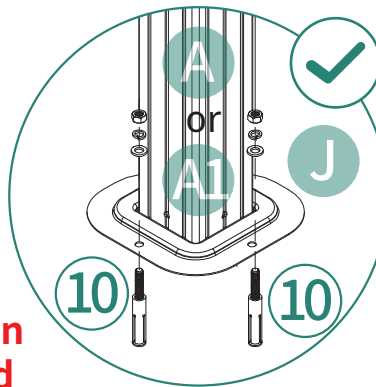

Grassy surfaces

35

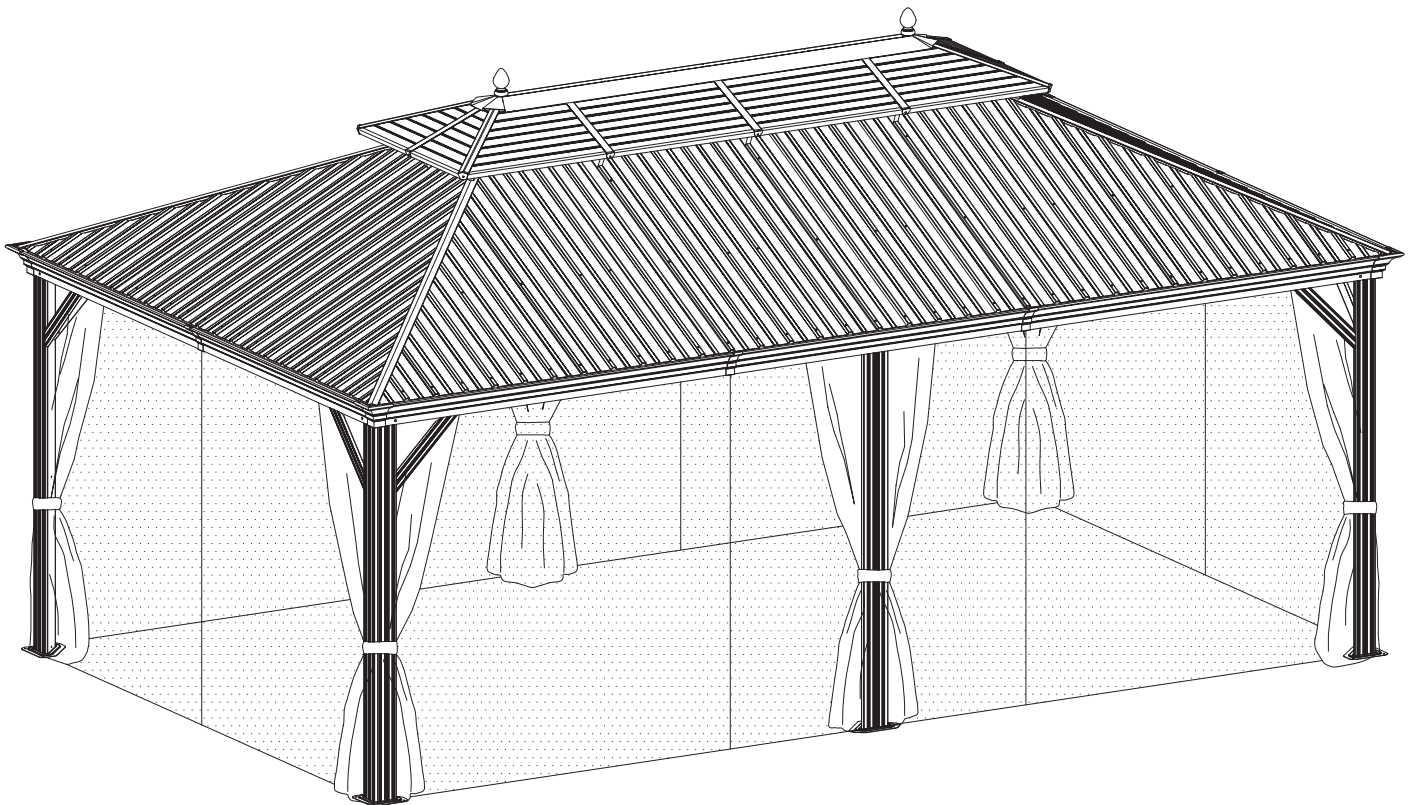

Installation Completed



Pure & Easy

CONTACT US:

If you have any questions about the installation of YITAHOME products, just contact us at +1 (888) 717-8084 from Mon-Fri 8:00 AM-4:30 PM PST / Sat. 8:00 AM-12:00 PM PST or e-mail us at after-sale.cs@hotmail.com

Alternative method to contact us (amazon.com orders only)

1. Log into your Amazon account
2. Go to "Your Orders" and find the purchase
3. Click on "Contact Seller"